

For summary of common operations consult the **KEYPAD OPERATIONS** label inside the FastStor 22 door.

Selected Indicators and Controls

Buttons



Press **MODE** to select operations, or to clear error condition.



Press **NEXT/PREVIOUS** to view options within a selected mode.



Press **SELECT** to execute an operation or to move to next menu level.

LEDs



ALARM LED indicates error condition.



ACTIVITY LED indicates Loader or Drive activity.



POWER LED indicates Power is on.

LCD



DC on LCD indicates compression mode.




WP on LCD indicates write-protected tape.



CT on LCD indicates cleaning tape loaded or drive cleaning required.



FastStor 22 Quick Start Guide

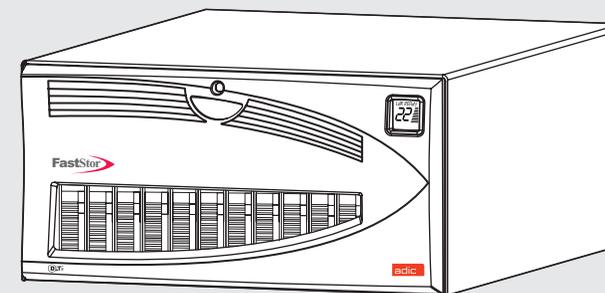

Advanced Digital Information Corporation
Corporate Headquarters
11431 Willows Road NE Redmond, WA 98052
Telephone: (425) 881-8004
Fax: (425) 881-2296

ADIC Europe
ZAC des Basses Auges
1, rue Alfred de Vigny
78112 -Fourqueux, FRANCE
Telephone: 33 (0)1 30 87 53 00
Fax: 33 (0)1 30 87 53 01



World-Wide Web: <http://www.adic.com>
For Customer Assistance:

In the United States and Canada, call ADIC Technical Assistance Center (ATAC) at 1-800-827-3822
In Europe, call ADIC Technical Assistance Center (ATAC) at 00.800.9999.3822


Follow the steps in this guide to quickly get started using your FastStor 22

Note:


The SCSI ID of the FastStor robotics has been factory set to 1 and the drive to 3.

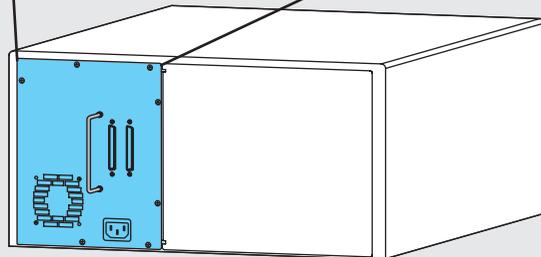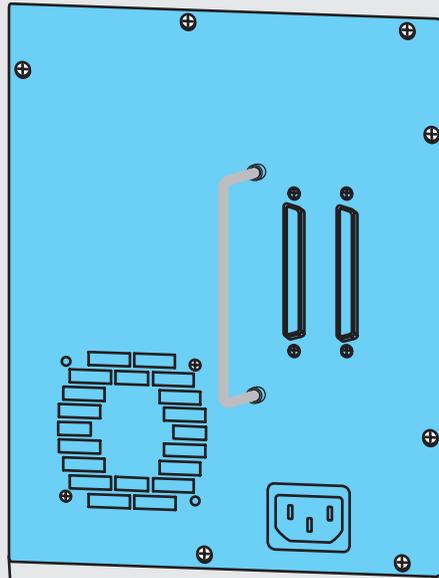


- 1 Connect AC line cord to FastStor 22, then to AC outlet.
- 2 Install SCSI terminator.
- 3 Connect SCSI cable between host computer and FastStor 22.

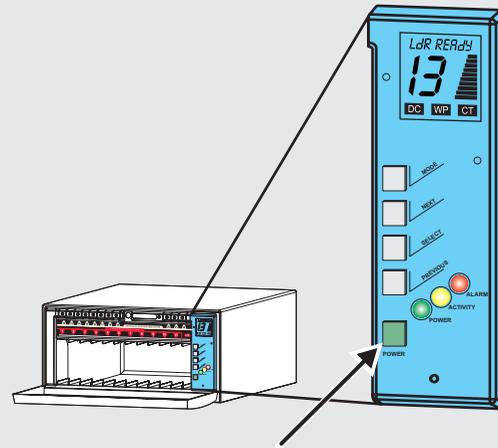

- 4 Press Power button to power up your FastStor 22.

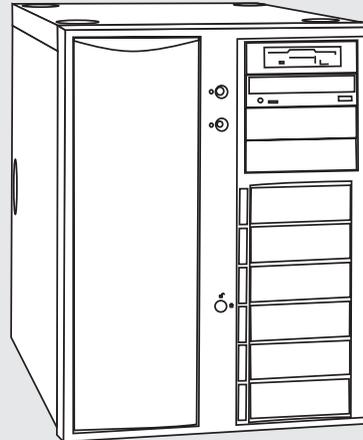


- 5 Power up your Host Computer.

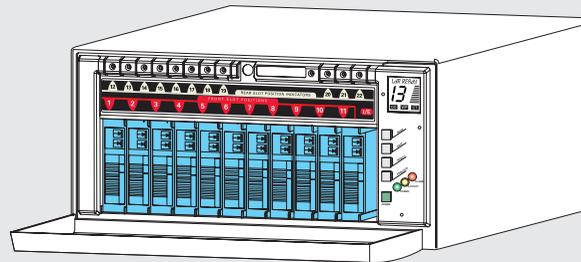

- 6 Install data cartridges into front storage slots 1-11.

- 7 Press **MODE** button until **LOAD SLOT** is displayed on LCD.
- 8 Press **SELECT** button. **SNgL LOAD** is displayed on LCD.
- 9 Press **NEXT** button, **bULK LOAD** is displayed on LCD.
- 10 Press **SELECT** button, tapes in front slots will be moved to rear slots 12-22.

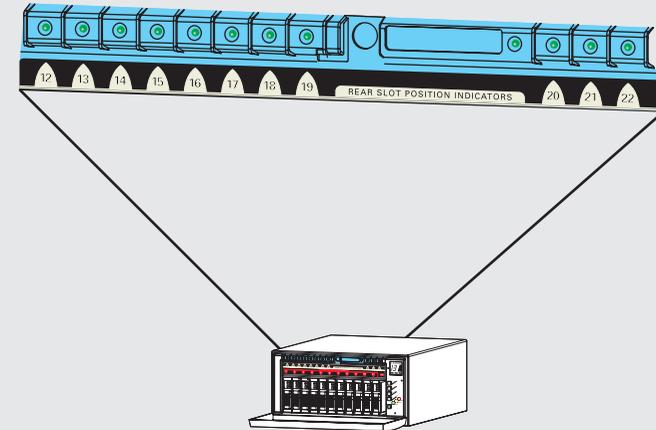

- 11 Rear Slot Indicator LEDs will illuminate indicating cartridge presence.
- 12 Install additional data cartridges in slots 1 - 11.
- 13 Verify your backup software.

Your FastStor 22 is now ready to perform a backup or restore operation via your Host Computer.