


FastStor™ 2 Quick Start Guide

1 Connect the AC power cord (1) to the FastStor 2 and then to the AC outlet.

2 Connect a SCSI cable (2) between the autoloader and the host system.


3 Connect a second SCSI (3) cable or a terminator to the open SCSI port.

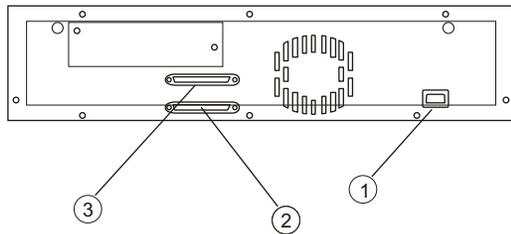

4 To power up the autoloader, use the eraser end of a pencil or something similar to press the left side of the power switch.




5 On the Operator Panel, press **NEXT** or **PREVIOUS** until **COMMANDS** displays on the Operator Panel. Press **ENTER**.

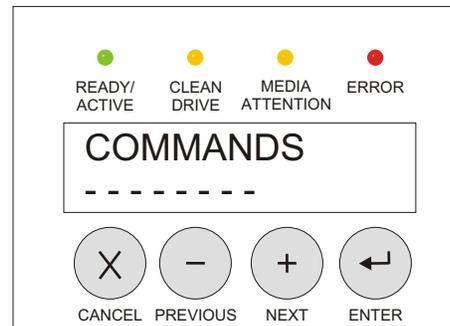

6 Press **NEXT** or **PREVIOUS** until **IMPORT** displays. Press **ENTER**.


7 Press **NEXT** or **PREVIOUS** until the desired target slot number is displayed. Press **ENTER**.

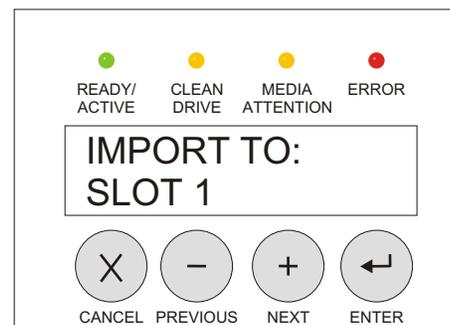

8 When the mail slot opens, insert a cartridge into the mail slot.

9 Repeat until all desired slots are filled.

10 Power up your host system.

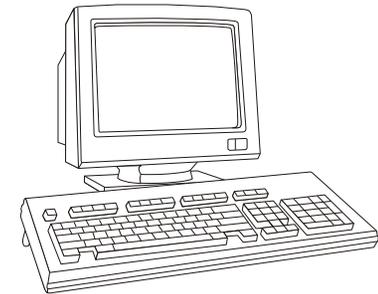

11 Verify your backup software. Note that the default autoloader SCSI ID is 0 and the default drive SCSI ID is 5.

Your FastStor 2 is now ready to perform a backup or restore operation via your host system.



Selected Indicators and Controls

Buttons



CANCEL

Press **CANCEL** to clear operation modes or command execution.



PREVIOUS

Press **PREVIOUS/NEXT** to view options within a selected mode.



NEXT



ENTER

Press **ENTER** to select operations or to clear error conditions.

LEDs



Error



Clean tape drive



Media attention



Ready or active

For a summary of common operations, consult the *FastStor 2 Installation and Operation Guide*.