

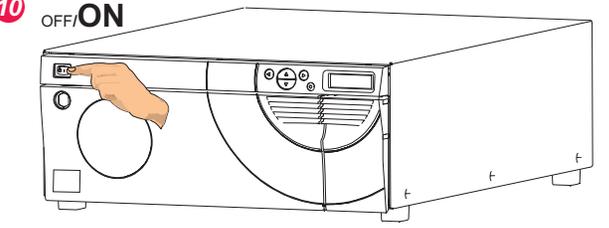
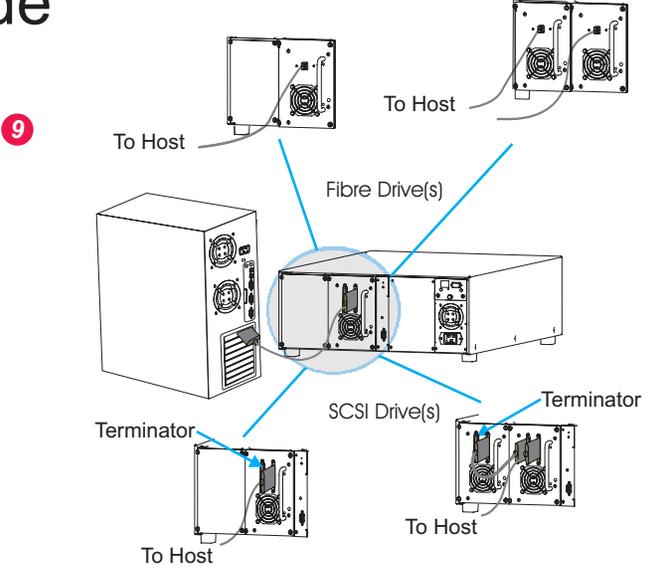
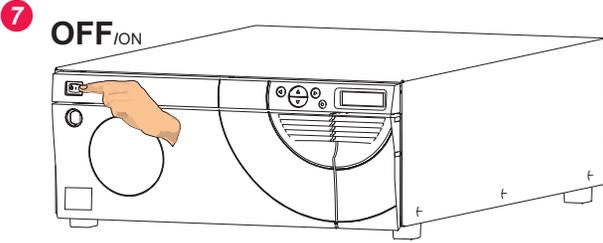
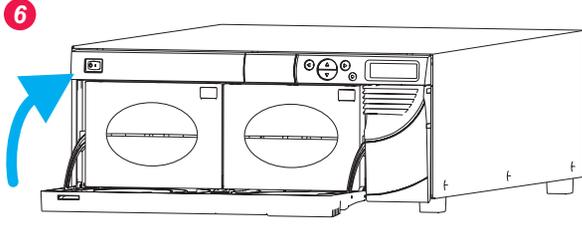
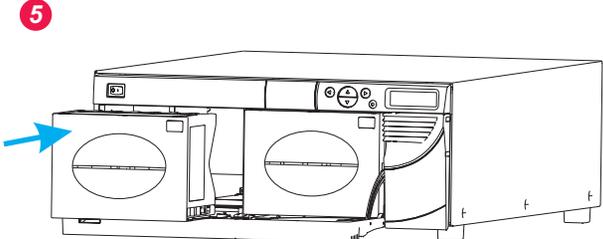
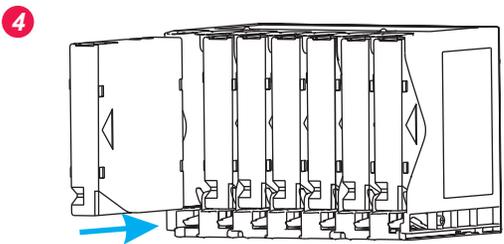
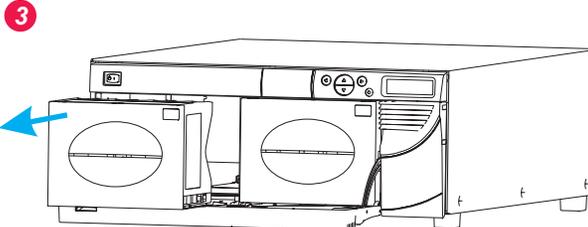
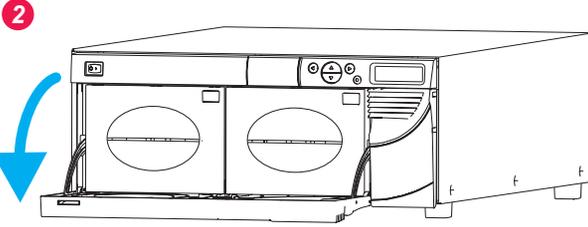


# Scalar 24 Quick Start Guide

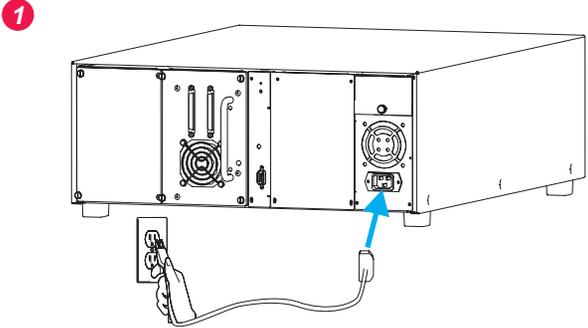

# Selected Indicators and Controls

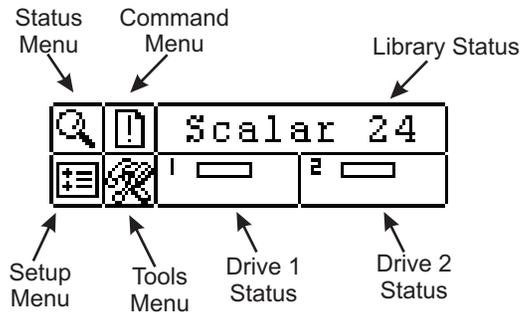

Refer to the Operation section of the *Scalar 24 Installation and Operation Guide* for complete descriptions of special symbols and messages that can be displayed on the Operator Panel.

For the latest OS drivers and patches, visit technical support at [www.adic.com](http://www.adic.com), or call the ADIC Technical Assistance Center (ATAC) at 800.827.3822 (U.S.) or 00.800.9999.3822 (international).

## Keypad



-  Press LEFT arrow to navigate the menu to the left.
-  Press RIGHT arrow to navigate the menu to the right.
-  Press UP arrow to increase a value.  
Press DOWN arrow to decrease a value.
-  Press ACTION key to execute the current menu option.