




Quantum Scalar i500 Power Supply Blank Plate Replacement

Follow the steps in this document to replace a power supply blank plate in your Scalar i500:

To replace the power supply blank plate, refer to the following sections:

- [Installing a Power Supply Blank Plate](#) on page 2
- [Removing a Power Supply Blank Plate](#) on page 2

The image below shows the location of the power supply blank plates:

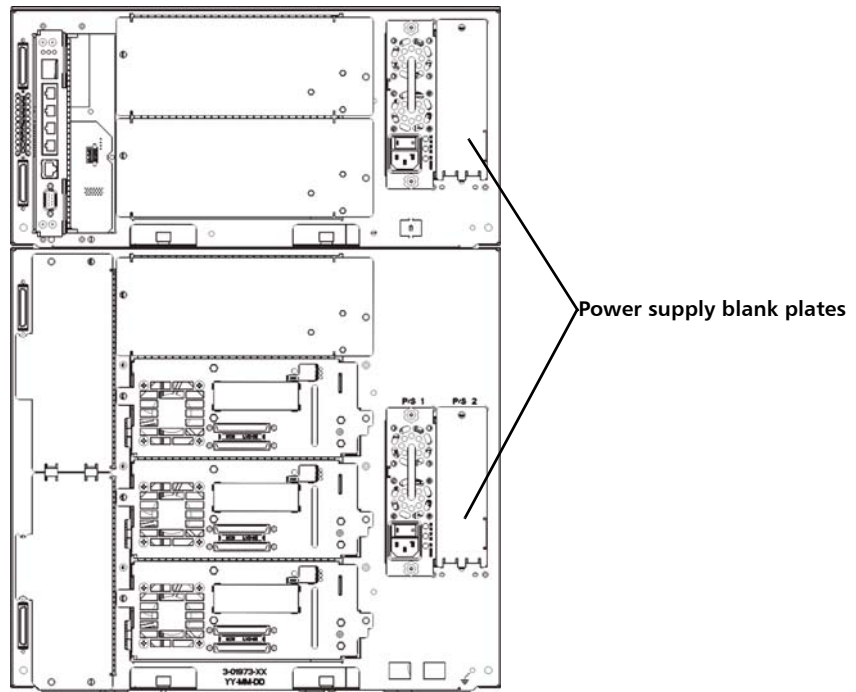

© 2013 Quantum Corporation. All rights reserved. Quantum, the Quantum logo, DLT, DLTape, the DLTape logo, SuperLoader, Scalar, DXi, StorageCare, StorNext, GoProtect, and Vision are registered trademarks of Quantum Corporation and its affiliates in the United States and/or other countries. All other trademarks are the property of their respective owners. Quantum specifications are subject to change.

6-68026-01 Rev A, October 2013



Installing a Power Supply Blank Plate

To install a power supply blank plate:



- 1 Push the two metal tabs of the power supply blank plate downward into the power supply slot. The horizontal metal piece on the power supply blank will rest in the groove on the inside of the drive slot.
- 2 Push the top of the power supply blanking plate toward the chassis, until the thumbscrew mates with the hole in the chassis.
- 3 Tighten the thumbscrew.

Removing a Power Supply Blank Plate

Note: All vacant slots must have a cover plate to ensure proper and safe operation of the library.

To remove a power supply blank plate:

- 1 Unscrew the captive thumbscrew securing the cover plate and pull outward on the plate.
- 2 Retain the blank plate for later use.