



Scalar i40 and Scalar i80: Power Supply Filler Plate Replacement

To maintain proper library cooling, filler plates are required on all empty power supply slots in the rear of the Scalar® i40 or Scalar i80 library.

To remove a power supply filler plate or to replace the power supply with a filler plate, refer to the following sections:


- [Removing a Power Supply Filler Plate](#) on page 1
- [Replacing a Power Supply Filler Plate](#) on page 2

Removing a Power Supply Filler Plate

- 1 Unscrew the two captive thumbscrews (see [Figure 1](#) on page 2).
- 2 Pull out on the thumbscrews so the filler plate is at a slight angle, and the bottom of the filler plate is still attached in the slot.
- 3 Lift the filler plate up to disengage the catch at the bottom, and pull the filler plate out of the slot.



Figure 1 Power Supply Filler Plates

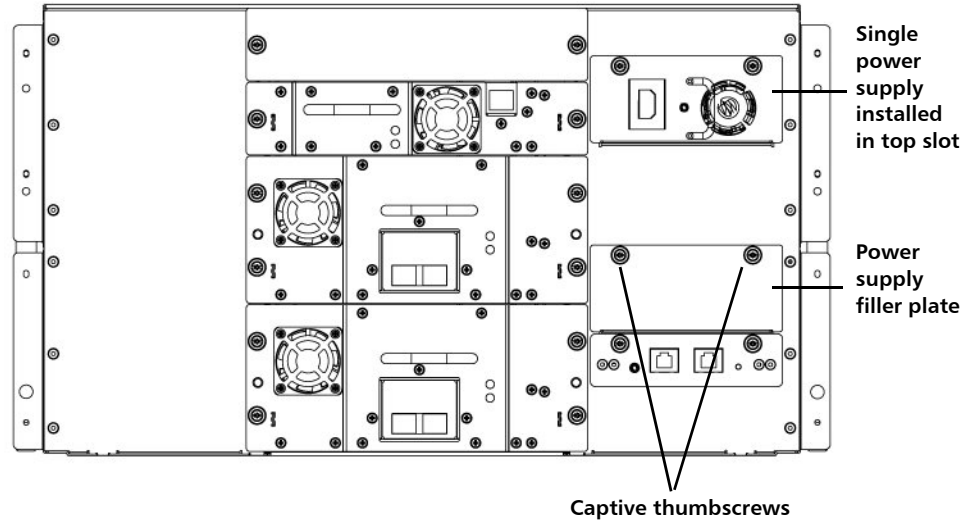

Replacing a Power Supply Filler Plate

- 1 Hold the filler plate with the thumbscrews at the top.
- 2 Insert the bottom edge of the filler plate into the slot, engaging the bottom edge of the filler plate in the bottom of the slot.
- 3 Pivot the filler plate up to fit securely in the hole.
- 4 Tighten the thumbscrews.