



# Quantum Scalar LTFS Appliance: Bezel Replacement

---

To replace the bezel in your Scalar Linear Tape File System (LTFS) Appliance, refer to the following sections:

- [Removing the Bezel](#) on page 2
- [Replacing the Bezel](#) on page 2



---


## Removing the Bezel

To remove the bezel, complete the following steps:

- 1 Unlock the key lock at the left end of the bezel (see [Figure 1](#)).
- 2 Lift the release latch next to the key lock.
- 3 Rotate the left end of the bezel away from the front panel.
- 4 Unhook the right end of the bezel and pull the bezel away from the chassis of the top Scalar LTFS Appliance.

---

Figure 1 Removing the Bezel

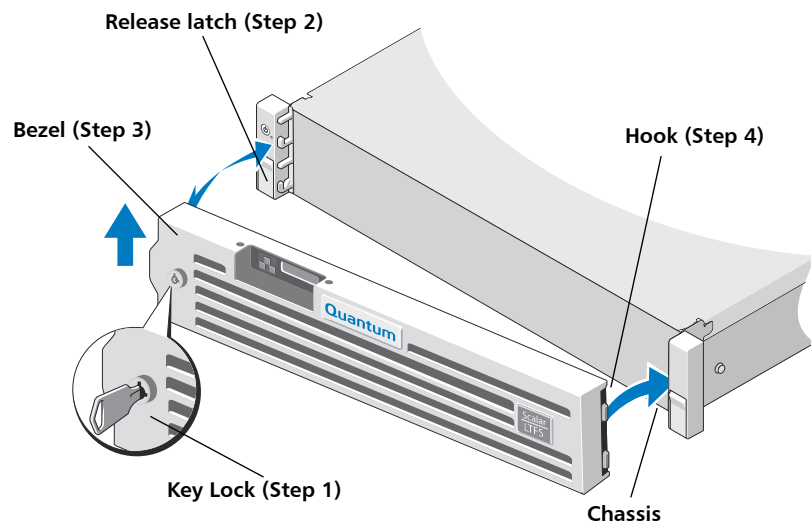

---

## Replacing the Bezel

To replace the bezel, complete the following steps:

- 1 Hook the right end of the bezel onto the chassis of the top Scalar LTFS Appliance.
- 2 Fit the free end of the bezel onto the chassis.
- 3 Secure the bezel with the key lock.