



Quantum SuperLoader 3 Center Bezel Replacement

Follow the steps in the document to replace a center bezel in SuperLoader 3:

- [Removing the Magazines](#) on page 1
- [Removing and Replacing the Center Bezel](#) on page 3

Removing the Magazines

Removing the Magazines with the System Powered On

To remove the magazines with the system powered on:

- 1 From the main menu, scroll to **Commands**, and then press **Enter**.
- 2 From the **Commands** sub-menu, scroll to **Eject**, and then press **Enter**.
- 3 On the **Eject** sub-menu, scroll to **Right Magazine** or **Left Magazine**, and then press **Enter**.

You will hear a distinctive popping sound as the appropriate magazine is ejected from the autoloader. Left magazine has been ejected or Right magazine has been ejected displays on the LCD.

Note: To prevent damage to the autoloader or the magazine, use both hands when removing the magazine from the autoloader supporting the entire length of the magazine.

- 4 Grasp the magazine by the handle with one hand and slide it out, supporting it underneath with the other hand.

Note: If there is only one magazine, you must remove the magazine blank.




Removing and Replacing the Center Bezel

- 1 Remove the old bezel by pushing in on the two plastic tabs and pulling the bezel toward you (see [Figure 1](#)). The bezel will slip off the sheet metal frame.



Note: The top cover has been removed for clarity in the photo below. **DO NOT REMOVE THE TOP COVER.**

Figure 1 Removing the Center Bezel

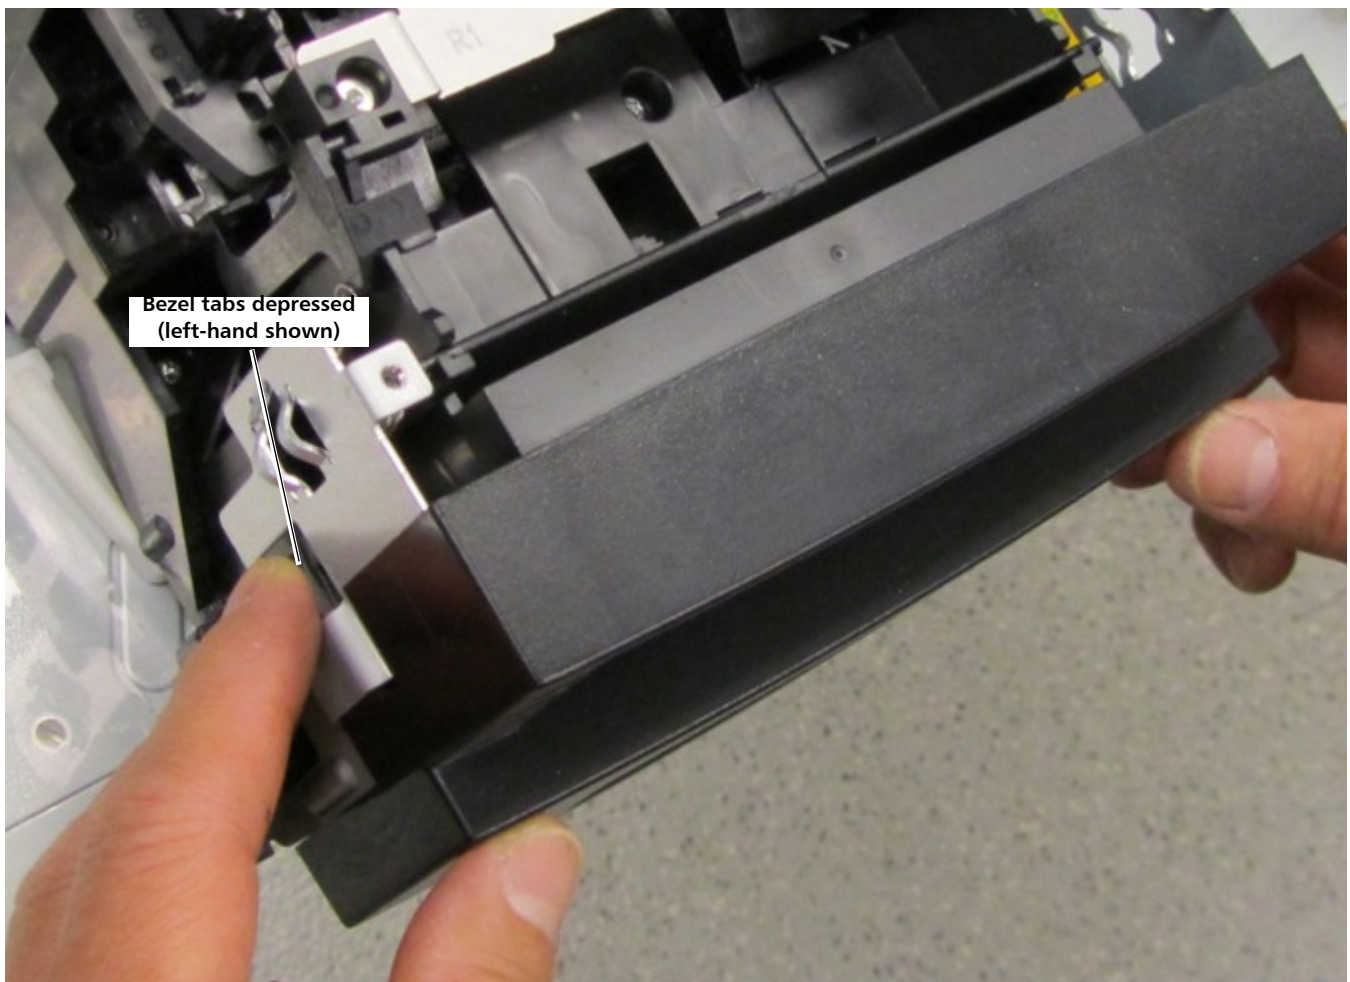

- 2 Place the new bezel over the sheet metal frame aligning the two plastic tabs into the two sheet metal slots (see [Figure 2](#)). A small amount of adjustment up and down may be necessary to lock the tabs. The upper sheet metal frame may need to be pushed in slightly to get the new bezel to seat properly.

Figure 2 Installing the Replacement Center Bezel

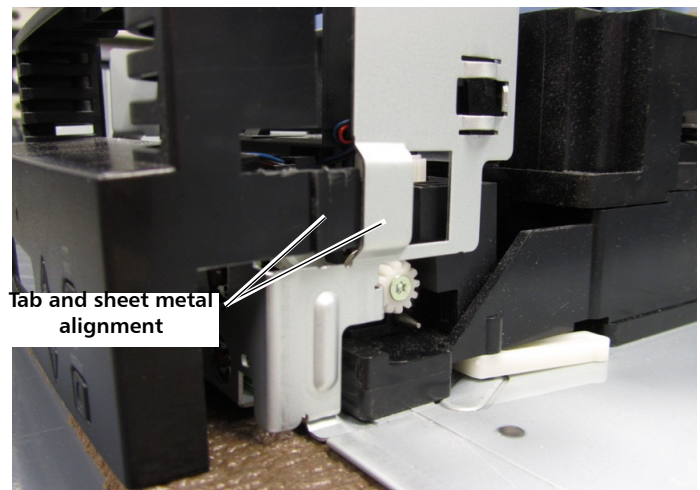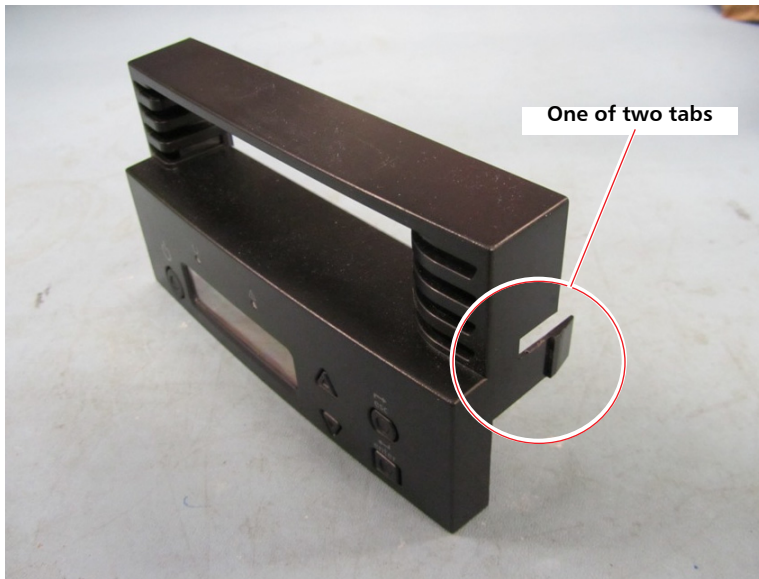

- 3 By pulling the bezel toward you while gripping the lower section you can check for that the bezel is latched into place.
 - 4 Replace the magazines previously removed.
- The center bezel replacement procedure is complete.

