

# Quantum<sup>®</sup>

## User's Guide

# Quantum DXi4700

with DXi 3.1.x Software



Quantum DXi4700 User's Guide, 6-68106-03 Rev A, February 2015, Product of USA.

This document is for DXi 3.1.x Software.

Quantum Corporation provides this publication "as is" without warranty of any kind, either express or implied, including but not limited to the implied warranties of merchantability or fitness for a particular purpose. Quantum Corporation may revise this publication from time to time without notice.

## **COPYRIGHT STATEMENT**

© 2015 Quantum Corporation. All rights reserved.


Your right to copy this manual is limited by copyright law. Making copies or adaptations without prior written authorization of Quantum Corporation is prohibited by law and constitutes a punishable violation of the law.

## **TRADEMARK STATEMENT**

Quantum, the Quantum Logo, Backup. Recovery. Archive. It's What We Do., Be Certain, Be Quantum Certain, DLT, the DLT Logo, DLTSage, DLTtape, the DLTtape Logo, DXi, DXi Accent, Dynamic Powerdown, FastSense, FlexLink, GoProtect, GoVault, iLayer, Lattus, MediaShield, Optyon, Pocket-sized., Well-armed., Preserving the World's Most Important Data. Yours., Q-Cloud, Quantum Certain, Quantum Certainty, Quantum vmPRO, Scalar, SDLT, SiteCare, SmartVerify, StorageCare, StorNext, Super DLTtape, SuperLoader, and Vision are either registered trademarks or trademarks of Quantum Corporation and its affiliates in the United States and/or other countries. All other trademarks are the property of their respective owners.

Products mentioned herein are for identification purposes only and may be registered trademarks or trademarks of their respective companies. All other brand names or trademarks are the property of their respective owners.

Quantum specifications are subject to change.

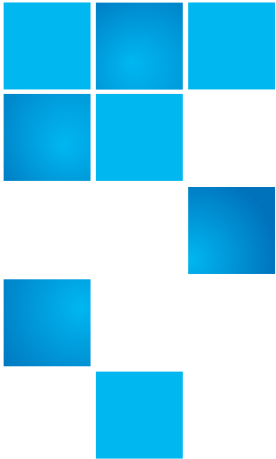

# Contents

---

---

<b>Preface</b>		<b>xxiii</b>
	Comments .....	xxviii
<hr/>		
<b>Chapter 1</b>	<b>DXi4700 System Description</b>	<b>1</b>
	Overview .....	2
	Features and Benefits .....	3
	What's New in DXi 3.0 Software .....	5
	Data Reduction .....	5
	Data Deduplication .....	6
	Compression .....	6
	Space Reclamation .....	7
	Remote Replication .....	8
	DXi4700 System .....	9
	Hard Drive Storage .....	10
	HDDs .....	11
	Virtual Tape Storage .....	13
	Network Attached Storage (NAS) .....	15
	OpenStorage (OST) .....	16
	Supported RAID Configurations .....	18

DXi Advanced Reporting . . . . .	19
Network Configuration . . . . .	19
Best Practices. . . . .	20
Licensing. . . . .	20
Virtual Media—How Many and What Size? . . . . .	25

---

**Chapter 2                      DXi4700 Basic Operations                      27**

DXi4700 Node. . . . .	27
DXi4700 Node Front Panel Features and Indicators . . . . .	28
DXi4700 Node Rear Panel Features. . . . .	32
DXi4700 Node 1GbE Ethernet. . . . .	34
DXi4700 Node 10GbE Ethernet Port Indicators. . . . .	35
DXi4700 Node 10 GBase-T Ethernet Port Indicators . . . . .	35
DXi4700 Node Power Supply Indicators . . . . .	36
DXi4700 Expansion Module . . . . .	37
DXi4700 Expansion Module Front Panel Features and Indicators . . . . .	38
DXi4700 Expansion Module Rear Panel Features . . . . .	40
DXi4700 Expansion Module EMM Features and Indicators. . . . .	40
DXi4700 Expansion Module Power Supply Indicators. . . . .	42
DXi4700 Hard Drive Carrier Indicators. . . . .	43
Turning On and Shutting Down the DXi4700 . . . . .	45
Turning On the DXi4700. . . . .	45
Turning Off the DXi4700. . . . .	46
Locating DXi4700 Serial Numbers . . . . .	47

---

**Chapter 3                      DXi4700 Remote Management                      49**

Accessing Remote Management . . . . .	50
Supported Browsers . . . . .	50
Logging On to the DXi4700 . . . . .	51
Logging Off of the DXi4700 . . . . .	53
The Remote Management Console . . . . .	53
System Banner . . . . .	53
Main Menu . . . . .	58
DXi4700 Management Pages . . . . .	59



<b>Chapter 4</b>	<b>DXi4700 Configuration Wizards</b>	<b>63</b>
	NAS Wizard . . . . .	65
	Step 1: About . . . . .	65
	Step 2: Protocol . . . . .	66
	Step 3: Windows . . . . .	67
	Step 4: Share Access . . . . .	68
	Step 5: Add Share . . . . .	70
	Step 6: Confirm . . . . .	71
	VTL Wizard . . . . .	72
	Step 1: About . . . . .	73
	Step 2: Add Partition . . . . .	73
	Step 3: Add Media . . . . .	76
	Step 4: Discover Remote Hosts . . . . .	77
	Step 5: Map Remote Hosts . . . . .	78
	Step 6: Confirm . . . . .	80
	OST Wizard . . . . .	81
	Step 1: About . . . . .	82
	Step 2: Add Storage Servers . . . . .	82
	Step 3: Add LSUs . . . . .	84
	Step 4: Add Users . . . . .	85
	Step 5: Confirm . . . . .	86
	Step 6: Download OST Client Plug-In . . . . .	87
	Replication Wizard . . . . .	88
	Step 1: About . . . . .	89
	Step 2: System . . . . .	89
	Step 3: NAS Shares . . . . .	92
	Step 3: VTL Partition . . . . .	94
	Step 4: Confirm . . . . .	96
	Email Alerts Wizard . . . . .	97
	Step 1: About . . . . .	97
	Step 2: Server . . . . .	98
	Step 3: Recipients . . . . .	99
	Step 4: Confirm . . . . .	101
	Support Wizard . . . . .	102
	Step 1: About . . . . .	102
	Step 2: Registration . . . . .	103
	Step 3: Guardian . . . . .	104
	Step 4: System Log . . . . .	105
	Step 5: Licensed Features . . . . .	106

<b>Chapter 5</b>	<b>DXi4700 Home Page</b>	<b>109</b>
	DXi4700 System Overview . . . . .	110
	Disk Usage Overview . . . . .	111
	Data Reduction Statistics Overview . . . . .	113
	Replication Overview . . . . .	114
	Send Settings & Cumulative Statistics . . . . .	115
	Receive Settings & Cumulative Statistics . . . . .	116
	Current Activity Overview . . . . .	117
<b>Chapter 6</b>	<b>DXi4700 Replication</b>	<b>121</b>
	Understanding Data Replication . . . . .	122
	Replication . . . . .	122
	Directory/File or Cartridge Based Replication. . . . .	123
	OST Optimized Duplication. . . . .	124
	Multiple Target Replication. . . . .	125
	Performing Data Replication . . . . .	125
	Task Overview: Setting Up and Performing Replication. . . . .	126
	Task Overview: Setting Up and Performing Directory/File or Cartridge Based Replication . . . . .	128
	Task Overview: Recovering a Replicated Share or Partition . . . . .	129
	Task Overview: Performing a Share or Partition Failback. . . . .	130
	Replication Send . . . . .	130
	Replication Jobs List . . . . .	132
	Enabling Replication For a Share or Partition . . . . .	134
	Configuring Directory/File or Cartridge Based Replication. . . . .	135
	Replicating a Share or Partition. . . . .	138
	Synchronizing a Share or Partition . . . . .	138
	Directory/File or Cartridge Based Replication Queue . . . . .	139
	Scheduling a Share or Partition For Replication . . . . .	141
	Target DXis List . . . . .	142
	Receive NAS. . . . .	142
	Received Snapshots. . . . .	142
	Recovery Jobs . . . . .	148
	Failback Jobs. . . . .	149
	Directory/File Based. . . . .	150
	Receive VTL . . . . .	154

Received Snapshots . . . . .	155
Recovery Jobs . . . . .	162
Failback Jobs . . . . .	163
Cartridge Based . . . . .	164
Actions . . . . .	168
Replication Service . . . . .	169
Replication State . . . . .	170
Replication Performance . . . . .	171
Reports . . . . .	171

---

## Chapter 7

<b>DXi4700 Status</b>	<b>173</b>
Hardware . . . . .	174
Summary . . . . .	174
Details . . . . .	175
Firmware Version . . . . .	180
Performance . . . . .	182
Inline . . . . .	182
Ethernet . . . . .	183
RAID . . . . .	185
Fibre Channel . . . . .	186
CPU . . . . .	187
Disk Usage . . . . .	188
Available . . . . .	189
Used . . . . .	189
Data Before Reduction . . . . .	189
Data After Reduction . . . . .	190
VTL Status . . . . .	191
Physical View . . . . .	191
Logical View . . . . .	193
Performance View . . . . .	194
OST Status . . . . .	196
Activity Log . . . . .	197
Viewing Logged Activities . . . . .	198
Enabling or Disabling Activity Logging . . . . .	200
Deleting Logged Activities . . . . .	200
Downloading the Activity Log . . . . .	200

<b>Chapter 8</b>	<b>DXi4700 Alerts</b>	<b>201</b>
	Admin Alerts . . . . .	201
	Service Tickets . . . . .	203
	Service Ticket Priority . . . . .	203
	Recommended Actions . . . . .	204
	Working With Service Tickets . . . . .	204
<b>Chapter 9</b>	<b>DXi4700 Configuration</b>	<b>211</b>
	NAS . . . . .	212
	NAS Summary . . . . .	212
	Windows Domain . . . . .	219
	Share Access . . . . .	222
	Advanced Setting . . . . .	228
	VTL . . . . .	229
	Partitions . . . . .	229
	Media . . . . .	239
	Remote Host Access . . . . .	248
	Replication Configuration . . . . .	258
	Target DXis List . . . . .	260
	Adding a Replication Target . . . . .	261
	Editing a Replication Target . . . . .	263
	Deleting a Replication Target . . . . .	265
	Pausing or Resuming Replication to a Target . . . . .	265
	Enabling System Throttling . . . . .	265
	Source DXis List . . . . .	267
	Adding a Replication Source . . . . .	267
	Deleting a Replication Source . . . . .	268
	Changing the Maximum Number of Snapshots . . . . .	269
	OST . . . . .	269
	Replicating OST Data . . . . .	270
	Storage Servers . . . . .	273
	LSU . . . . .	282
	Manage Users . . . . .	288
	Manage Remote Users . . . . .	292
	Target IP Mapping . . . . .	295
	DXi Accent . . . . .	298
	OST Client Plug-In . . . . .	300

PTT .....	300
Physical Device Discovery .....	301
Backup Application Specific .....	303
Scheduler .....	307
System .....	317
Network .....	317
Date & Time .....	333
Security .....	335
FC Initiators and Targets .....	350
Notifications .....	352
Email .....	352
SNMP .....	363
Contacts .....	374
Company .....	374
Primary and Secondary .....	375

**Chapter 10**

<b>DXi4700 Utilities</b>	<b>377</b>
Diagnostics .....	378
System Diag File .....	378
Storage Array Diag File .....	379
DSET .....	380
Healthchecks .....	382
Analyzer .....	385
Network .....	386
Disk .....	388
Space Reclamation .....	389
License Keys .....	392
License Key Information .....	393
Adding a License Key .....	394
Licensing Data-at-Rest Encryption .....	396
Secure Shred .....	397
Software Upgrades .....	400
Checking For Software Upgrades .....	400
Uploading a Software Upgrade File .....	405
Reboot & Shutdown .....	408

---

<b>Appendix A</b>	<b>DXi4700 System Specifications</b>	<b>411</b>
	DXi4700 Physical Characteristics . . . . .	411
	DXi4700 Environmental Specifications . . . . .	417

---

<b>Appendix B</b>	<b>Troubleshooting</b>	<b>419</b>
	DXi4700 Status and Problem Reporting . . . . .	419
	General Troubleshooting Actions . . . . .	420
	Viewing Service Tickets . . . . .	420
	Checking Hardware Status . . . . .	421
	Downloading a System Diagnostics File . . . . .	421
	Common Problems and Solutions . . . . .	421
	Start-up Problems . . . . .	421
	Hardware Problems . . . . .	422
	Ethernet Network Problems . . . . .	423
	Replication Problems . . . . .	425
	Temperature Problems . . . . .	426

---

<b>Glossary</b>		<b>429</b>
-----------------	--	------------



# Figures

---

<b>Figure 1</b>	DXi4700 System . . . . .	10
<b>Figure 2</b>	DXi4700 Node Drive Slot Numbering . . . . .	12
<b>Figure 3</b>	DXi4700 Expansion Module Drive Slot Numbering . . . . .	12
<b>Figure 4</b>	DXi4700 Drive Carrier . . . . .	13
<b>Figure 5</b>	VTL Example . . . . .	14
<b>Figure 6</b>	NAS Backup using CIFS and NFS . . . . .	16
<b>Figure 7</b>	OpenStorage (OST) Example . . . . .	17
<b>Figure 8</b>	DXi4700 Node RAID Sets . . . . .	18
<b>Figure 9</b>	DXi4700 Expansion Module RAID Sets . . . . .	19
<b>Figure 10</b>	DXi4700 Node - Front View . . . . .	29
<b>Figure 11</b>	DXi4700 Node - Rear View . . . . .	32
<b>Figure 12</b>	DXi4700 Node - 1 GbE Ethernet Port LEDs . . . . .	34
<b>Figure 13</b>	DXi4700 Node - Optional 10 GbE Port LEDs (Optical or Twinax) . . . . .	35
<b>Figure 14</b>	DXi4700 Node - 10 GBase-T Ethernet Port LEDs . . . . .	36
<b>Figure 15</b>	DXi4700 Node - Power Supply LED . . . . .	37
<b>Figure 16</b>	DXi4700 Expansion Module - Front View . . . . .	38
<b>Figure 17</b>	DXi4700 Expansion Module - Rear View . . . . .	40

<b>Figure 18</b>	DXi4700 Expansion Module EMM - Rear View . . . . .	41
<b>Figure 19</b>	DXi4700 Expansion Module - Power Supply LED Indicators . . . . .	43
<b>Figure 20</b>	DXi4700 Hard Drive Carrier LEDs . . . . .	44
<b>Figure 21</b>	DXi4700 Expansion Module Power Switches . . . . .	45
<b>Figure 22</b>	DXi4700 Node Power Button . . . . .	46
<b>Figure 23</b>	DXi4700 Node Information Tag . . . . .	48
<b>Figure 24</b>	Login Window . . . . .	51
<b>Figure 25</b>	Home Page . . . . .	52
<b>Figure 26</b>	System Banner . . . . .	54
<b>Figure 27</b>	Main Menu . . . . .	59
<b>Figure 28</b>	Remote Management Pages Map . . . . .	61
<b>Figure 29</b>	Wizards Menu . . . . .	64
<b>Figure 30</b>	NAS Wizard: About . . . . .	66
<b>Figure 31</b>	NAS Wizard: Protocol . . . . .	67
<b>Figure 32</b>	NAS Wizard: Windows . . . . .	68
<b>Figure 33</b>	NAS Wizard: Share Access . . . . .	70
<b>Figure 34</b>	NAS Wizard: Add Share . . . . .	71
<b>Figure 35</b>	NAS Wizard: Confirm . . . . .	72
<b>Figure 36</b>	VTL Wizard: About . . . . .	73
<b>Figure 37</b>	VTL Wizard: Add Partition . . . . .	75
<b>Figure 38</b>	VTL Wizard: Add Media . . . . .	77
<b>Figure 39</b>	VTL Wizard: Discover Remote Hosts . . . . .	78
<b>Figure 40</b>	VTL Wizard: Map Remote Hosts . . . . .	80
<b>Figure 41</b>	VTL Wizard: Confirm . . . . .	81
<b>Figure 42</b>	OST Wizard: About . . . . .	82
<b>Figure 43</b>	OST Wizard: Add Storage Servers . . . . .	84
<b>Figure 44</b>	OST Wizard: Add LSUs . . . . .	85
<b>Figure 45</b>	OST Wizard: Add Users . . . . .	86



**Figure 46** OST Wizard: Confirm . . . . . 87

**Figure 47** OST Wizard: Download OST Client Plug-in . . . . . 88

**Figure 48** Replication Wizard: About . . . . . 89

**Figure 49** Replication Wizard: System . . . . . 92

**Figure 50** Replication Wizard: NAS Shares . . . . . 94

**Figure 51** Replication Wizard: VTL Partitions . . . . . 96

**Figure 52** Replication Wizard: Confirm . . . . . 97

**Figure 53** Email Alerts Wizard: About . . . . . 98

**Figure 54** Email Alerts Wizard: Server . . . . . 99

**Figure 55** Email Alerts Wizard: Recipients . . . . . 101

**Figure 56** Email Alerts Wizard: Confirm . . . . . 102

**Figure 57** Support Wizard: About . . . . . 103

**Figure 58** Support Wizard: Registration . . . . . 104

**Figure 59** Support Wizard: Guardian . . . . . 105

**Figure 60** Support Wizard: System Log . . . . . 106

**Figure 61** Support Wizard: Licensed Features . . . . . 107

**Figure 62** Home Page . . . . . 110

**Figure 63** DXi4700 System Overview . . . . . 111

**Figure 64** Disk Usage Overview . . . . . 113

**Figure 65** Data Reduction Statistics Overview . . . . . 114

**Figure 66** Replication Overview . . . . . 117

**Figure 67** Current Activity Overview . . . . . 119

**Figure 68** Replication Send Page . . . . . 131

**Figure 69** Share or Partition Configure Window . . . . . 134

**Figure 70** Share or Partition Configure Window . . . . . 136

**Figure 71** Directory/File or Cartridge Based Replication Queue . . . . 140

**Figure 72** Scheduler Window . . . . . 141

**Figure 73** Received Snapshots Page . . . . . 143

**Figure 74** Recovered Share Name Page . . . . . 145

<b>Figure 75</b>	Failback Target Page . . . . .	146
<b>Figure 76</b>	Recovery Jobs Page . . . . .	149
<b>Figure 77</b>	Failback Jobs Page . . . . .	150
<b>Figure 78</b>	Directory/File Based Page . . . . .	151
<b>Figure 79</b>	Edit Share Settings Page . . . . .	153
<b>Figure 80</b>	Unpack Queue . . . . .	154
<b>Figure 81</b>	Received Snapshots Page . . . . .	156
<b>Figure 82</b>	Recovered Partition Name Page . . . . .	158
<b>Figure 83</b>	Failback Target Page . . . . .	160
<b>Figure 84</b>	Recovery Jobs Page . . . . .	162
<b>Figure 85</b>	Failback Jobs Page . . . . .	163
<b>Figure 86</b>	Cartridge Based Page . . . . .	165
<b>Figure 87</b>	Edit Partition Settings Page . . . . .	166
<b>Figure 88</b>	Unpack Queue . . . . .	168
<b>Figure 89</b>	Actions Page . . . . .	169
<b>Figure 90</b>	Reports Page . . . . .	172
<b>Figure 91</b>	Hardware Summary Page . . . . .	175
<b>Figure 92</b>	System Board Page . . . . .	176
<b>Figure 93</b>	Host Bus Adapters Page . . . . .	177
<b>Figure 94</b>	Network Ports Page . . . . .	178
<b>Figure 95</b>	Storage Arrays Page . . . . .	179
<b>Figure 96</b>	Firmware Version Page . . . . .	181
<b>Figure 97</b>	Inline Page . . . . .	183
<b>Figure 98</b>	Ethernet Page . . . . .	184
<b>Figure 99</b>	RAID Page . . . . .	185
<b>Figure 100</b>	Fibre Channel Page . . . . .	186
<b>Figure 101</b>	CPU Page . . . . .	187
<b>Figure 102</b>	Disk Usage Page . . . . .	188
<b>Figure 103</b>	Physical View Page . . . . .	192

**Figure 104** Logical View Page . . . . . 194

**Figure 105** Performance View Page . . . . . 195

**Figure 106** OST Status Page . . . . . 196

**Figure 107** Activity Log Page . . . . . 198

**Figure 108** Activity Log View Controls . . . . . 199

**Figure 109** Activity Log View Controls . . . . . 200

**Figure 110** Admin Alerts Page . . . . . 202

**Figure 111** Service Tickets Page . . . . . 204

**Figure 112** Ticket Details . . . . . 206

**Figure 113** Recommended Actions . . . . . 207

**Figure 114** Ticket Analysis . . . . . 208

**Figure 115** Email Ticket Information . . . . . 209

**Figure 116** NAS Summary Page . . . . . 213

**Figure 117** Add NAS Share Page . . . . . 215

**Figure 118** Edit NAS Share & Replication Settings Page . . . . . 217

**Figure 119** Windows Domain Page . . . . . 219

**Figure 120** Share Access Page (Windows Workgroup) . . . . . 222

**Figure 121** Share Access Page (Active Directory) . . . . . 223

**Figure 122** Add Workgroup User Page . . . . . 224

**Figure 123** Add Share Administrator Page . . . . . 225

**Figure 124** Edit Workgroup User Page . . . . . 226

**Figure 125** Advanced Setting Page . . . . . 228

**Figure 126** Partitions Summary Page . . . . . 230

**Figure 127** Add VTL Partition & Replication Settings Page . . . . . 233

**Figure 128** Edit VTL Partition & Replication Settings Page . . . . . 236

**Figure 129** Partitions General Page . . . . . 239

**Figure 130** Media Add Page . . . . . 240

**Figure 131** Media Actions Page . . . . . 242

**Figure 132** Media Move Page . . . . . 245

<b>Figure 133</b>	Media Unload Page . . . . .	247
<b>Figure 134</b>	Remote Host Mapping Page . . . . .	249
<b>Figure 135</b>	Map Remote Hosts, Define Groups Page . . . . .	251
<b>Figure 136</b>	Edit Remote Host Mapping Page . . . . .	253
<b>Figure 137</b>	Remote Hosts Page . . . . .	255
<b>Figure 138</b>	Targets Page . . . . .	256
<b>Figure 139</b>	Target Usage Page . . . . .	257
<b>Figure 140</b>	Replication Configuration Page . . . . .	259
<b>Figure 141</b>	Add Target Host. . . . .	261
<b>Figure 142</b>	Edit Target Host. . . . .	263
<b>Figure 143</b>	Replication Throttle . . . . .	266
<b>Figure 144</b>	Add Allowed Source . . . . .	268
<b>Figure 145</b>	Setting Up OST Automatic Image Replication . . . . .	273
<b>Figure 146</b>	Storage Servers Page . . . . .	274
<b>Figure 147</b>	Add Storage Server Page . . . . .	276
<b>Figure 148</b>	Edit Storage Server Page . . . . .	280
<b>Figure 149</b>	LSU Page . . . . .	282
<b>Figure 150</b>	Add Logical Storage Unit Page . . . . .	284
<b>Figure 151</b>	Edit Logical Storage Unit Page . . . . .	286
<b>Figure 152</b>	Manage Users Page . . . . .	289
<b>Figure 153</b>	Add User Credential. . . . .	290
<b>Figure 154</b>	Edit User Credentials . . . . .	291
<b>Figure 155</b>	Manage Remote Users Page . . . . .	292
<b>Figure 156</b>	Add Remote AIR Credential . . . . .	293
<b>Figure 157</b>	Edit Remote Credentials. . . . .	294
<b>Figure 158</b>	Target IP Mapping Page. . . . .	296
<b>Figure 159</b>	Add Target Data IP Mapping . . . . .	297
<b>Figure 160</b>	Edit Target Data IP Mapping . . . . .	298
<b>Figure 161</b>	Accent Page. . . . .	299

**Figure 162** Physical Device Discovery Page . . . . . 301

**Figure 163** Backup Application Specific Page . . . . . 304

**Figure 164** Add Backup Application Specific User Page . . . . . 305

**Figure 165** Edit Backup Application Specific User Page . . . . . 306

**Figure 166** Scheduler Page . . . . . 307

**Figure 167** Scheduler Toolbar . . . . . 309

**Figure 168** Adding a New Event . . . . . 310

**Figure 169** Network Configuration . . . . . 318

**Figure 170** Network Page: General . . . . . 320

**Figure 171** Network Page: Bonding Details . . . . . 321

**Figure 172** Network Page: Interface Details. . . . . 323

**Figure 173** Network Page: IP Address Table. . . . . 324

**Figure 174** Network Page: Routing Details . . . . . 327

**Figure 175** Interface Routing: Example 1 . . . . . 330

**Figure 176** Interface Routing: Example 2 . . . . . 331

**Figure 177** Interface Routing: Example 3 . . . . . 332

**Figure 178** Network Page: Backpanel Locations. . . . . 333

**Figure 179** Date & Time Page . . . . . 334

**Figure 180** Web & CLI Passwords Page . . . . . 336

**Figure 181** SSL Page . . . . . 339

**Figure 182** Install New Certificate Page . . . . . 341

**Figure 183** Data Encryption Page . . . . . 342

**Figure 184** Login Session Page . . . . . 344

**Figure 185** Security Notice Page . . . . . 345

**Figure 186** Data-at-Rest Page . . . . . 346

**Figure 187** FC Initiators and Targets Page . . . . . 350

**Figure 188** Recipients Page . . . . . 353

**Figure 189** Add Email Recipient Page . . . . . 354

**Figure 190** Edit Email Recipient Page. . . . . 356

<b>Figure 191</b>	Server Page . . . . .	358
<b>Figure 192</b>	Email Test Page . . . . .	359
<b>Figure 193</b>	Recipients Page . . . . .	361
<b>Figure 194</b>	On Demand Page. . . . .	362
<b>Figure 195</b>	Destinations Page . . . . .	364
<b>Figure 196</b>	Add Trap Destination Page . . . . .	365
<b>Figure 197</b>	Edit Trap Destination Page. . . . .	366
<b>Figure 198</b>	Community Page . . . . .	368
<b>Figure 199</b>	Add SNMP Community Page . . . . .	369
<b>Figure 200</b>	Edit SNMP Community Page . . . . .	371
<b>Figure 201</b>	SNMP Test Page. . . . .	373
<b>Figure 202</b>	Company Page. . . . .	374
<b>Figure 203</b>	Primary and Secondary Pages . . . . .	375
<b>Figure 204</b>	System Diag File Page . . . . .	379
<b>Figure 205</b>	Storage Array Diag File Page . . . . .	380
<b>Figure 206</b>	DSET Page . . . . .	381
<b>Figure 207</b>	General Page . . . . .	382
<b>Figure 208</b>	Status Page . . . . .	384
<b>Figure 209</b>	Edit Healthcheck Page . . . . .	385
<b>Figure 210</b>	Performance Page . . . . .	386
<b>Figure 211</b>	Settings Page. . . . .	387
<b>Figure 212</b>	Disk Analyzer Page. . . . .	388
<b>Figure 213</b>	Space Reclamation Page . . . . .	390
<b>Figure 214</b>	License Keys Page . . . . .	392
<b>Figure 215</b>	License Key Management Page . . . . .	395
<b>Figure 216</b>	Secure Shred Page. . . . .	398
<b>Figure 217</b>	Secure Shred Mode Interface. . . . .	399
<b>Figure 218</b>	Software Upgrade Utility . . . . .	401
<b>Figure 219</b>	Home Page - Software Upgrade Available . . . . .	402

**Figure 220** Software Upgrade Utility - Software Upgrade Downloaded ..... 403

**Figure 221** Software Upgrade Page ..... 405


**Figure 222** Software Upgrade Page - Software Upgrade File Uploaded. .... 406

**Figure 223** Software Upgrade Utility - Software Upgrade File Uploaded ..... 407

**Figure 224** Reboot & Shutdown Page ..... 409





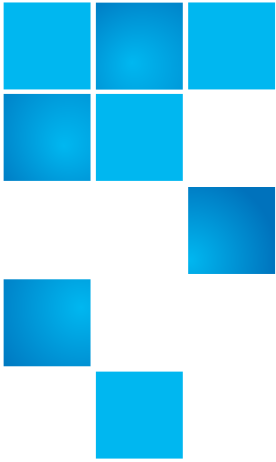

# Tables

---

<b>Table 1</b>	Supported Tape Libraries in Backup Application Specific . . . .	23
<b>Table 2</b>	Supported Tape Drives in Backup Application Specific . . . . .	24
<b>Table 3</b>	DXi4700 Node - Front Panel LED Indicators, Buttons, and Connectors . . . . .	29
<b>Table 4</b>	DXi4700 Node - Diagnostic Indicators . . . . .	31
<b>Table 5</b>	DXi4700 Node - Rear Panel Connectors . . . . .	32
<b>Table 6</b>	DXi4700 Expansion Module - Front Panel LED Indicators, Buttons, and Connectors. . . . .	39
<b>Table 7</b>	DXi4700 Expansion Module - Rear Panel Features . . . . .	40
<b>Table 8</b>	DXi4700 Expansion Module EMM - Rear Panel Indicators and Connectors . . . . .	41
<b>Table 9</b>	DXi4700 Model Number . . . . .	56
<b>Table 10</b>	Low Space States . . . . .	57
<b>Table 11</b>	DXi4700 Physical Characteristics . . . . .	412
<b>Table 12</b>	DXi4700 Storage Capacity . . . . .	412
<b>Table 13</b>	DXi4700 Cable Drops. . . . .	413
<b>Table 14</b>	DXi4700 Interfaces . . . . .	414
<b>Table 15</b>	DXi4700 Power Requirements . . . . .	415
<b>Table 16</b>	DXi4700 Environmental Specifications. . . . .	417

## Tables

<b>Table 17</b> Start-up Problems . . . . .	422
<b>Table 18</b> Hardware Problems . . . . .	422
<b>Table 19</b> Ethernet Network Problems . . . . .	424
<b>Table 20</b> Replication Problems . . . . .	425



# Preface

---

This manual introduces the Quantum DXi4700 disk backup solution and discusses:

- System operations
- Configuration
- Web interface
- Basic troubleshooting

---

## Audience

---

This manual is written for DXi4700 operators and administrators.

---

**Note:** It is useful for the audience to have a basic understanding of Windows, Linux, and UNIX® as well as backup/recovery systems.

---

---

## Document Organization

---

Following is a brief description of chapter contents.

- [Chapter 1, DXi4700 System Description](#) provides an overview of the DXi4700.
- [Chapter 2, DXi4700 Basic Operations](#) provides basic operating instructions for the DXi4700.

- [Chapter 3, DXi4700 Remote Management](#) discusses using the DXi4700 remote management console to control the system remotely.
- [Chapter 4, DXi4700 Configuration Wizards](#) discusses the wizards that provide guidance for setting up the DXi4700.
- [Chapter 5, DXi4700 Home Page](#) discusses the information that appears on the **Home** page of the remote management console.
- [Chapter 6, DXi4700 Replication](#) discusses the remote replication capabilities of the DXi4700.
- [Chapter 7, DXi4700 Status](#) discusses DXi4700 status information.
- [Chapter 8, DXi4700 Alerts](#) discusses DXi4700 alert information and service tickets.
- [Chapter 9, DXi4700 Configuration](#) discusses configuration of the DXi4700.
- [Chapter 10, DXi4700 Utilities](#) discusses DXi4700 utilities such as diagnostic tools and rebooting the system.
- [Appendix A, DXi4700 System Specifications](#) provides system specifications for the DXi4700.
- [Appendix B, Troubleshooting](#) discusses problems you may encounter during the setup and operation of the DXi4700.
- [Glossary](#) provides definitions of terms used in this guide.

## **Notational Conventions**

This manual uses the following conventions:

---

**Note:** Note emphasizes important information related to the main topic.

---

---

---

**Caution:** Caution indicates potential hazards to equipment or data.

---

---

---

---

**WARNING:** Warning indicates potential hazards to personal safety.

---

---

- Right side of the system - Refers to the right side as you face the component being described.

- Left side of the system - Refers to the left side as you face the component being described.
- Data sizes are reported in base 1000 rather than base 1024. For example:
  - 1 MB = 1,000,000 bytes
  - 1 GB = 1,000,000,000 bytes
  - 1 TB = 1,000,000,000,000 bytes

---

## Product Safety Statements

---

Quantum will not be held liable for damage arising from unauthorized use of the product. The user assumes all risk in this aspect.

This unit is engineered and manufactured to meet all safety and regulatory requirements. Be aware that improper use may result in bodily injury, damage to the equipment, or interference with other equipment.

---

**WARNING:** Before operating this product, read all instructions and warnings in this document and in the system, safety, and regulatory guide.

---



---

**警告** 在使用本产品之前，请先阅读本文档及系统、安全和法规信息指南中所有的说明和警告信息。

---



---

**警告** 操作本产品前，请先閱讀本文件及系統、安全與法規資訊指南中的指示與警告說明。

---



---

**ADVERSAL** Læs alle instruktioner og advarsler i dette dokument og i *Vejledning om system-sikkerheds- og lovgivningsoplysninger*, før produktet betjenes.

---



---

**AVERTISSEMENT** Avant d'utiliser ce produit, lisez la totalité des instructions et avertissements de ce document et du *Guide d'informations sur le système, la sécurité et la réglementation*.

---

---

**HINWEIS** Lesen Sie vor der Verwendung dieses Produkts alle Anweisungen und Warnhinweise in diesem Dokument und im System, Safety, and Regulatory Information Guide (Info-Handbuch: System, Sicherheit und Richtlinien).

---

---

**אזהרה** לפני ההפעלה של מוצר זה, קרא את כל ההוראות והאזהרות הכלולות במסמך זה וכן במדריך מידע בנושאי מערכת, בטיחות ותקינה

---

---

**警告** この製品を使用する前に、本文書、および『システム、安全、規制に関する情報ガイド』に記載しているすべての警告と指示をお読みください。

---

---

**경고** 이 제품을 작동하기 전에 이 문서 및 시스템, 안전, 및 규제 정보 안내서에 수록된 모든 지침과 경고 표지를 숙지하십시오.

---

---

**ПРЕДУПРЕЖДЕНИЕ** Перед началом эксплуатации данного устройства ознакомьтесь во всеми инструкциями и предупреждениями, приведенными в данном документе и в *Справочном руководстве по устройству, технике безопасности и действующим нормативам*.

---

---

**ADVERTENCIA** Antes de utilizar este producto, lea todas las instrucciones y advertencias en este documento y en la Guía informativa sobre sistema, seguridad y normas.

---

---

**VARNING** Läs alla anvisningar och varningar i detta dokument och i *System, säkerhet och krav från myndigheter - Informationshandbok* innan denna produkt tas i bruk.

---

## Related Documents

The following Quantum documents are also available for the DXi4700:

Document No.	Document Title	Document Description
6-00618	<i>System Safety and Regulatory Information - Quantum Products</i>	Lists all safety and regulatory information for all Quantum products.
6-67960	<i>DXi4700 Site Planning Guide</i>	Provides site planning information for the DXi4700.
6-67079	<i>DXi-Series NetBackup and Backup Exec OST Configuration Guide</i>	Provides information for setting up the DXi4700 for OST operation with NetBackup and Backup Exec.
6-67081	<i>DXi-Series Command Line Interface (CLI) Guide</i>	Provides information on the DXi4700 command line interface.
6-67353	<i>DXi Advanced Reporting User's Guide</i>	Provides information about using DXi Advanced Reporting features.

For the most up-to-date documentation for the DXi4700, go to:

<http://www.quantum.com/ServiceandSupport/Index.aspx>

## Contacts

For information about contacting Quantum, including Quantum office locations, go to:

<http://www.quantum.com/aboutus/contactus/index.aspx>

---

## Comments

---

To provide comments or feedback about this document, or about other Quantum technical publications, send e-mail to:

[doc-comments@quantum.com](mailto:doc-comments@quantum.com)

---

## Getting More Information or Help

---

StorageCare™, Quantum's comprehensive service approach, leverages advanced data access and diagnostics technologies with cross-environment, multi-vendor expertise to resolve backup issues faster and at lower cost.

Accelerate service issue resolution with these exclusive Quantum StorageCare services:

## Quantum. Global Services

- **Service and Support Web site** - Register products, license software, browse Quantum Learning courses, check backup software and operating system support, and locate manuals, FAQs, software downloads, product updates and more in one convenient location. Benefit today at:

<http://www.quantum.com/ServiceandSupport/Index.aspx>

- **eSupport** - Submit online service requests, update contact information, add attachments, and receive status updates via e-mail. Online Service accounts are free from Quantum. That account can also be used to access Quantum's Knowledge Base, a comprehensive repository of product support information. Sign up today at:

<http://www.quantum.com/osr>

For further assistance, or if training is desired, contact the Quantum Customer Support Center:

<b>United States</b>	1-800-284-5101 (toll free) +1-720-249-5700
<b>EMEA</b>	+800-7826-8888 (toll free) +49-6131-3241-1164
<b>APAC</b>	+800-7826-8887 (toll free) +603-7953-3010

For worldwide support:

<http://www.quantum.com/ServiceandSupport/Index.aspx>

---



---

**Worldwide End-User  
Product Warranty**

---

For more information on the Quantum Worldwide End-User Standard Limited Product Warranty:

<http://www.quantum.com/serviceandsupport/warrantyinformation/index.aspx>





## Chapter 1

# **DXi4700 System Description**

This chapter describes the DXi4700 system and its components and includes the following sections:

- [Overview](#)
- [Features and Benefits](#)
- [What's New in DXi 3.0 Software](#)
- [Data Reduction](#)
- [Space Reclamation](#)
- [Remote Replication](#)
- [DXi4700 System](#)
- [Hard Drive Storage](#)
- [Supported RAID Configurations](#)
- [DXi Advanced Reporting](#)
- [Network Configuration](#)
- [Best Practices](#)

## Overview

The DXi4700 is Quantum's entry level and midrange disk backup solution that integrates data deduplication and replication technology to connect backup and DR (disaster recovery) protection across distributed corporate environments. The DXi4700 disk-based backup appliance uses Quantum's patented data deduplication technology to increase disk capacities by 10 to 50 times, and make WAN replication a practical, cost-effective part of disaster recovery planning. With Capacity-on-Demand scalability from 5 TB up to 135 TB, the DXi4700 is designed for departmental and medium business customers.

### Advanced Data Deduplication Increasing Disk Retention for Backup Data

The DXi4700 leverages Quantum's patented data deduplication technology (U.S. Pat. No. 5,990,810) to dramatically increase the role that disk can play in the protection of critical data. With the DXi4700 solution, users can retain 10 to 50 times more backup data on fast recovery disk than with conventional arrays.

### Remote Replication of Backup Data Providing Automated Disaster Recovery Protection

With the DXi4700, users can transmit backup data from a remote site to a central, secure location to reduce or eliminate media handling. DXi™-Series replication is asynchronous, automated, and operates as a background process.

### Enterprise Features Provide Secure Repository

The DXi4700 features Capacity-on-Demand scalability from 5 TB up to 135 TB. The DXi4700 offers three options for storage presentation:

- **DXi4700 NAS Configuration** - Presents storage as NAS shares (CIFS and NFS) or OST storage servers.
- **DXi4700 VTL Configuration** - Presents storage as VTL (virtual tape library) partitions.

- **DXi4700 Multi-Protocol Configuration** - Ability to present storage as NAS shares (CIFS and NFS), OST storage servers, and VTL (virtual tape library) partitions.

DXi Accent distributes deduplication between the DXi4700 and the backup server to accelerate backups over bandwidth-constrained networks. Compatibility with Quantum's vmPRO software provides consolidated support for backup of physical and virtual servers.

In addition, DXi4700 systems optionally support Data-at-Rest Encryption to secure all data stored on the DXi4700. Data-at-Rest Encryption ensures that a hard drive that is physically removed from the DXi4700 cannot be read using another system or device

## Features and Benefits

The DXi4700 system provides the following features and benefits:

- New, inline data flow provides leading deduplication with an optimal combination of total system performance, manageability, and value.
- Choice of either VTL (virtual tape library), NAS (network attached storage), and OST (OpenStorage) presentation layers
- 10 source to one target LAN/WAN replication compatible with DXi2500-D, DXi4000 family, DXi6000 family, DXi7500, and DXi8500 models.
- Common monitoring and management interface for multiple DXi™ units and Quantum tape libraries through Quantum Vision™.
- (NAS and Multi-Protocol configurations only) OST Optimized Duplication support with Symantec NetBackup 7.1.x or later or Backup Exec 2010 R3 or later.
- (Multi-Protocol configurations only) Path to tape (PTT) capability that writes data from virtual cartridges directly to a tape library to create removable media for long term retention. It is supported by:
  - Symantec™ NetBackup™ (under VTL and OST implementations)
  - Symantec Backup Exec

- Oracle® Secure Backup
- ASG-Time Navigator™
- EMC® Networker® (versions prior to 8.1)

---

**Note:** When the path to tape feature is enabled and configured, backup data can be moved directly from the DXi4700 system to a tape library. For a list of supported tape libraries and tape drives, see [Table 1](#) on page 23 and [Table 2](#) on page 24.

---

- (Multi-Protocol configurations only) OST direct path to tape support with Symantec NetBackup™ 7.1.x or later.
- (VTL and Multi-Protocol configurations only) Tape Drives Emulated:
  - Quantum DLT-S4, SDLT600, SDLT320, or DLT7000
  - Certance LTO-2 and LTO-3
  - IBM LTO-1, LTO-2, LTO-3, LTO-4, or LTO-5
  - HP LTO-1, LTO-2, LTO-3, LTO-4, or LTO-5
- (VTL and Multi-Protocol configurations only) Libraries Emulated:
  - Quantum DXi7500
  - ADIC Scalar 100, ADIC Scalar i2000, or ADIC Scalar i500
  - ADIC Pathlight VX
  - Quantum Scalar i40/i80 or Quantum Scalar i6000
  - Quantum DXi6700, Quantum DXi6800, Quantum DXi4700, Quantum DXi4601, QuantumDXi4500, or Quantum DXi8500
  - Quantum DX3000 or Quantum DX5000
  - Quantum PX500 or Quantum PX720
  - ATL M2500, ATL P1000, or ATL P7000
- Supported by every major backup software vendor.
- Rack space requirements: 2U for Node and 2U for each Expansion module (JBOD), up to a system maximum of 8U.
- Installs in a standard four-post EIA 19" server rack.

---

**Note:** Quantum recommends installing the DXi4700 system in a controlled or restricted area and using strong, private passwords to prevent access by untrained personnel. In addition, Quantum recommends that system installation be performed only by qualified IT personnel with strong networking experience.

---

## What's New in DXi 3.0 Software

DXi 3.0 Software include the following significant enhancements:

- **StorNext 5 File System** - The StorNext 5 file system provides the foundation for DXi 3.0 Software. Completely re-designed for low-latency and high throughput, StorNext File System 5 delivers rapid file access in heterogeneous environments. Learn more about StorNext 5 at: <http://www.stornext.com>
- **CentOS 6 Base Operating System** - DXi 3.0 Software runs on the widely-adopted, enterprise-class CentOS 6 operating system. With numerous enhancements, CentOS 6 provides a platform for future DXi hardware and software innovation.

## Data Reduction

Data reduction is the process of reducing the amount of storage capacity required to store your data. The DXi4700 systems provide two techniques to optimize the storage space required on your system:

- [Data Deduplication](#)
- [Compression](#)

---

## Data Deduplication

---

The DXi-Series disk backup and replication systems use Quantum's patented data deduplication technology to dramatically increase the role that disk can play in data protection. With DXi-Series solutions, users can retain 10 to 50 times more backup data on fast recovery disk than with conventional arrays. This advantage allows IT departments to cost-effectively retain months of backup data on disk for faster, more reliable restores and more data recovery points. Quantum's innovative implementation of this core technology means that users do not have to compromise on performance to take advantage of extended retention capability. Inline data flow provides streamlined deduplication that offers a maximum combination of total system performance, manageability, and value.

Quantum's deduplication technology uses a sub-file, variable-length approach to identify redundant blocks in a data stream—blocks that have appeared before in the same dataset or in datasets processed at an earlier time. When a block appears that has already been stored, the DXi system inserts a reference pointer to the earlier instance of the data segment instead of storing another copy. The result is a dramatic reduction in the storage capacity needed to store the data set, and a similar reduction in the bandwidth needed to replicate deduplicated data sets over a network. For more information on enabling data deduplication, see [NAS Summary](#) on page 212.

---

## Compression

---

The DXi4700 systems use compression technology after duplicate blocks have been identified and replaced as part of the deduplication process. With compression, unique data that has been through the data deduplication process can be compressed at a typical ratio of approximately 2:1. This enables you to maximize the storage capacity of your system.



## Space Reclamation

The space reclamation process performs multiple functions on the DXi4700.

When data is deduplicated it is stored in a block pool—a pool of all unique data blocks that were captured during the data deduplication cycle. When subsequent backup jobs occur, the data deduplication engine searches for new data entering the DXi and uses a variable length compression algorithm to compare new data to existing data in the block pool. Unique blocks are added to the block pool and known blocks are indexed.

The space reclamation function searches the blockpool for data blocks that are not referenced by any pointers (that is, the files associated with the block have been expired and removed). Once such a data block is identified, the block is removed to make the space reusable.

For correct system operation, space reclamation *must* be run at regular intervals (at least once a week). Quantum recommends creating a schedule to automatically run space reclamation (see [Scheduling Space Reclamation](#) on page 315).

It may be beneficial to schedule space reclamation for a time when other operations are not normally being carried out. Therefore it is important to know when to schedule the space reclamation process. As best practice it is recommended that this process commences at least two hours after your backup job has completed on a daily basis. It is far more efficient to process a day's worth of new data than a week's worth.

## Remote Replication

Today most backup occurs on isolated devices, making it difficult to deploy disk backup when disaster recovery protection is required. DXi-Series solutions use data deduplication and replication to decrease by up to 50 times the bandwidth required to move backup data over networks and between sites. This dramatic gain makes it practical and cost-effective for users to replicate backup data over WANs for secure, network-based disaster recovery protection, and it lets users combine rapid, local restores with sound disaster recovery protection.

With DXi-Series replication, users can transmit data from a single site or multiple sites to a central location using any DXi model. DXi-Series replication is an asynchronous, automated background process that includes encryption of data in transit. This model for protecting the distributed enterprise allows users to combine disk, replication, and tape for an optimal combination of performance, simplicity, and security.

For more information on implementing a replication plan, see [Chapter 6, DXi4700 Replication](#).

---

**Note:** A DXi4700 can only replicate data to a DXi that supports the same protocol as the DXi4700 (NAS or VTL). That is, a DXi4700 NAS system can only replicate data to a DXi that supports NAS. Similarly, a DXi4700 VTL system can only replicate data to a DXi that supports VTL.

---

## DXi4700 System

The DXi4700 (see [Figure 1](#)) includes the following features:


- 1 Node (NAS, VTL, or Multi-Protocol)
- 0 to 3 Expansion modules (JBODs)
- H710 RAID controller
- H810 RAID controller (configurations with Expansion modules only)
- 3 x 1 GbE Ethernet ports
- 2 x 8 Gb Fibre Channel ports for VTL (VTL and Multi-Protocol configurations only)
- 2 x 8 Gb Fibre Channel ports for PTT (Multi-Protocol configurations only)
- (Optional) Additional network adapter providing 2 x 10GbE (SFP+) Ethernet ports or 2 x 10 GBase-T Ethernet ports.
- 5–135 TB usable for data storage

---

**Note:** Usable storage capacity can be upgraded at any time after purchase by adding a storage capacity upgrade license to enable installed hardware capacity, or by adding additional hardware capacity to the system. For information about upgrade options, see the *DXi4700 Capacity Upgrade Guide* (6-68107), or contact your Quantum sales representative.

---

Figure 1 DXi4700 System

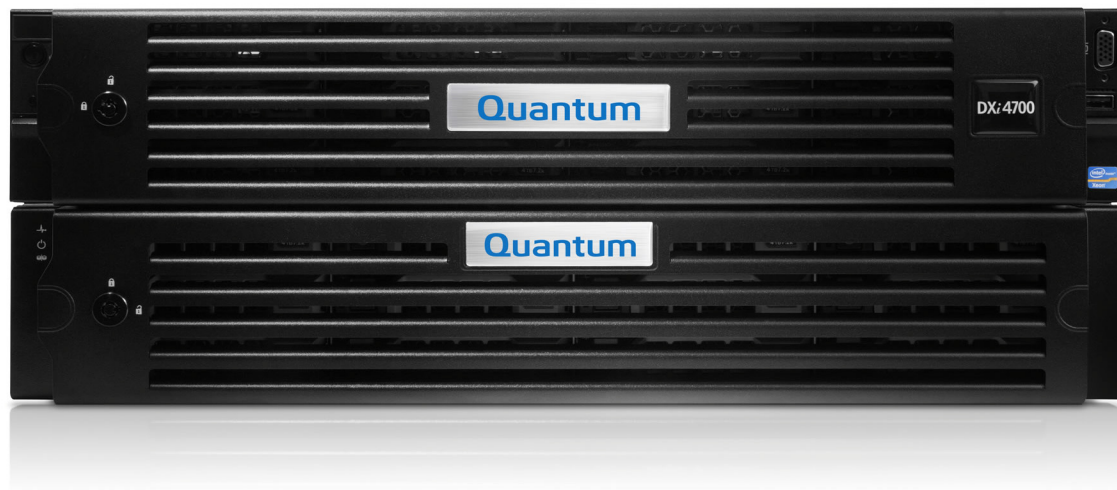

## Hard Drive Storage

The DXi4700 system is based upon high speed disk drives instead of tape drives (see [HDDs](#) on page 11). The usable capacity is 5–135 TB.

- DXi4700 VTL configurations present the drive storage area as VTL partitions (see [Virtual Tape Storage](#) on page 13).
- DXi4700 NAS configurations present the drives storage area as NAS shares or OST LSUs (Logical Storage Units) (see [Network Attached Storage \(NAS\)](#) on page 15 or [OpenStorage \(OST\)](#) on page 16).
- DXi4700 Multi-Protocol configurations present the drive storage area as VTL partitions (see [Virtual Tape Storage](#) on page 13), NAS shares, or OST LSUs (Logical Storage Units) (see [Network Attached Storage \(NAS\)](#) on page 15 or [OpenStorage \(OST\)](#) on page 16).

By making use of high speed drives, the DXi4700 greatly reduces the time required for backup/restore functions and improves confidence in completing the backup in the time allowed.

## DXi Usage Scenarios

DXi storage presentations are optimized for backup usage rather than file sharing. Backup application usage is typically characterized by:

- Aggregated name spaces and file contents.
- Limited direct, active file access.
- Limited browsing, scanning, or staging.
- Limited metadata manipulation (including rename).

Usage diverging from these characteristics must be qualified to ensure acceptable behavior with respect to functionality, performance, replication, and recovery.

---

**Note:** Using Backup Exec with GRT (Granular Recovery Technology) over CIFS is not recommended usage. GRT requires frequently overwriting portions of and appending data to existing files, which is inconsistent with the DXi usage scenarios. Instead, Quantum recommends using OST.

---

---

## HDDs

---

Depending on the configuration, the DXi4700 Node supports 6 or 12 high capacity (4 TB) hard disk drives (HDDs) (see [Figure 2](#)). The Node hard drives are used for the operating system, system software, and indexes needed for data deduplication, replication, space reclamation.

The DXi4700 Expansion modules (JBODs) each support 12 high capacity (4 TB) hard disk drives (see [Figure 3](#)). The Expansion module hard drives are used for data storage.

All hard disk drives are mounted and pre-assembled in drive carriers (see [Figure 4](#)). All drives are hot swappable.

Figure 2 DXi4700 Node Drive Slot Numbering




HDD Slot 0	HDD Slot 3	HDD Slot 6	HDD Slot 9
HDD Slot 1	HDD Slot 4	HDD Slot 7	HDD Slot 10
HDD Slot 2	HDD Slot 5	HDD Slot 8	HDD Slot 11

Figure 3 DXi4700 Expansion Module Drive Slot Numbering



HDD Slot 0	HDD Slot 3	HDD Slot 6	HDD Slot 9
HDD Slot 1	HDD Slot 4	HDD Slot 7	HDD Slot 10
HDD Slot 2	HDD Slot 5	HDD Slot 8	HDD Slot 11


Figure 4 DXi4700 Drive Carrier

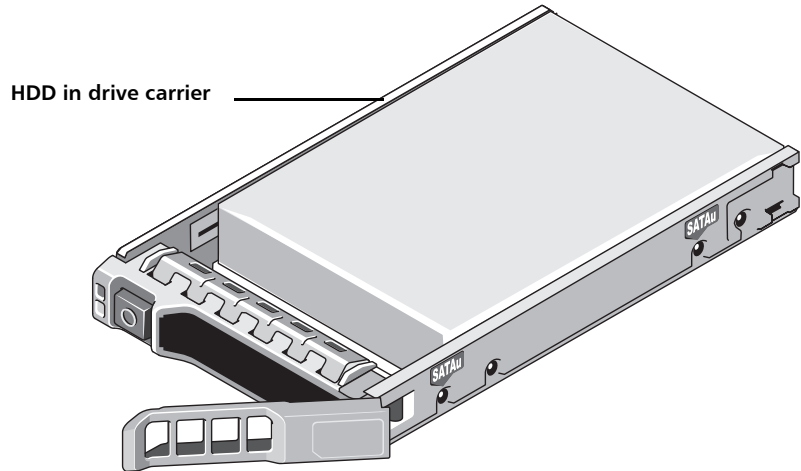

## Virtual Tape Storage

A virtual tape storage or virtual tape library (VTL) presentation allows the storage space on these hard drives to appear to the backup application as tape cartridges (DLT or LTO). Data is stored on the hard drives through an interface that appears as a tape library, with virtual cartridges, virtual drives, and a virtual changer mechanism. A DXi4700 with a VTL or Multi-Protocol configuration can be configured to present multiple VTL interfaces of different sizes and types at once. This allows backup applications to recognize and integrate a DXi series system into a data center environment just like one or more physical tape libraries.

Figure 5 VTL Example

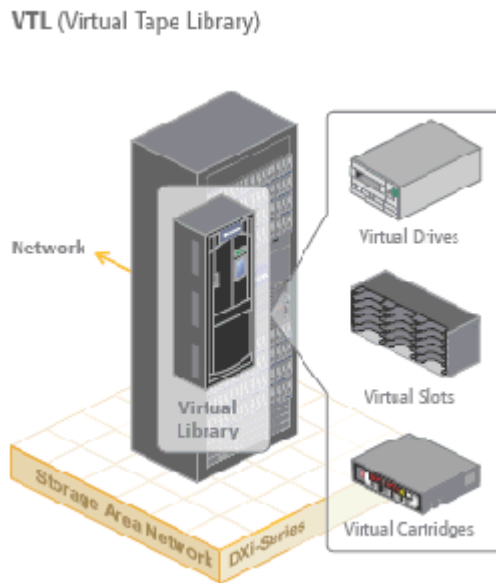

### Virtual Media—How Many and What Size?

There is no correct answer to this question as it really depends on your backup regime and the backup application in use. A DXi system does not preallocate disk space when a virtual tape cartridge is created, there can be an inclination to create a lot of large virtual tape cartridges, greater than the amount that is actually required. While this has no initial bearing on the DXi's capacity utilization, it can cause issues down the track.

Regarding the quantity of virtual media you need to create, as long as there is sufficient media to hold the amount of backup data for the required retention period, the quantity does not really matter. However, it is extremely important, as mentioned earlier, that the aging and expiry rules of the media pool are defined early. If these rules are not defined, the virtual tape cartridges will never enter the scratch pool resulting in you running out of virtual media, and in turn space on the DXi system. As a rule of thumb, more is better than less; as long as expiry rules are defined.

Although there is no perfect size when it comes to creating virtual tape cartridges, there are a few factors to consider. If a virtual tape cartridge



is created at 200 GB, then it will be presented as storing 200 GB of native data.

Creating smaller sized media is preferred, for example 50 GB or 100 GB, as it allows a virtual tape cartridge to be completely filled even when backing up smaller data sets. Smaller sized media also aids the transfer of data from virtual to physical tape platforms. Once again, virtual tape cartridge size will depend on the backup application in use.

It is important to note that the design of the DXi will not allow a virtual tape cartridge to be written to it if its size is larger than the amount of free space available on the DXi. For example, if you have a virtual tape cartridge size of 400 GB but only 300 GB of free space is available on the DXi, the backup will fail when attempting to write data to the virtual tape cartridge. As a result, smaller virtual tape cartridge sizes are better.

Remember, the DXi system is always cautious of being filled up so that the integrity of stored data is not compromised.

---

## Network Attached Storage (NAS)

---

The DXi4700 system has the ability to serve as a NAS backup system (see [Figure 6](#)) where the following protocols are supported:

- [CIFS Protocol](#)
- [NFS Protocol](#)

### CIFS Protocol

The CIFS (Common Internet File System) protocol defines a standard for remote file access from many computers at a time in Windows environments.

### Active Directory Support

The DXi4700 supports ADS (Active Directory Services) as well as ACLs (Access Control Lists). This provides the following benefits:

- **Compatibility with CIFS domains** - NAS shares are able to join CIFS domains and use domain authentication.
- **Precise control of file system permissions** - Administrators can specify which users and groups can perform what actions.
- **Robust administrative support** - Administrators have the same implicit permissions as they do in Windows operating systems.

---

**Note:** Windows 2003, Windows 2003 R2, Windows 2008, Windows 2008 R2, and Windows 2012 R2 are supported for Active Directory domain membership.

---

**Note:** When you create a CIFS share, the initial permissions are the same as the default permissions for a Windows 2003 share with the addition of an ACE (Access Control Entry) that permits full access to the share for all authenticated users. Administrators can choose to remove this full access ACE, set up custom permissions, or leave the ACL (Access Control List) as is if the server is set up in a fully trusted environment.


---

## NFS Protocol

The NFS (Network File System) protocol allows network users to access shared files stored on computers of different types. NFS provides access to shared files through an interface called the Virtual File System (VFS) that runs on top of TCP/IP. With NFS, computers connected to a network operate as clients while accessing remote files, and as servers while providing remote users access to local shared files. This protocol is used with UNIX and Linux networks. It can also be used with Windows networks.

---

Figure 6 NAS Backup using CIFS and NFS

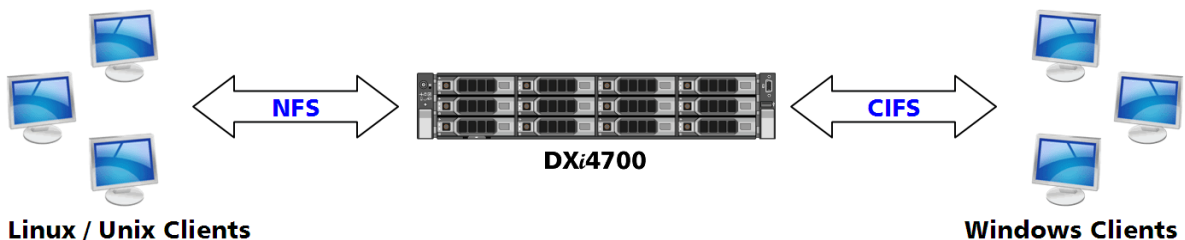

---

## OpenStorage (OST)

---

With the OST presentation, the DXi system presents storage servers to a Symantec NetBackup or Backup Exec media server through a specific Symantec protocol. A storage server consists of logical storage units

(LSUs), which are similar to directories in a NAS file system or tape cartridges in a VTL partition.

The OST presentation requires the Symantec NetBackup (7.1.x or later) or Backup Exec 2010 R3 or later host application and the OST Plug-in client installation on the media server.


---

**Note:** Windows 2012 64-bit requires Symantec NetBackup (7.6 or later) or Backup Exec 2014 or later.

---

Plug-in clients are host-OS dependent and are supplied by Quantum. To use the DXi in OST mode, you must configure an OST storage server and LSUs on the DXi. You must also map the LSUs on the NetBackup server so that NetBackup can perform backups and restore from them. Additionally, policies for optimized duplication (OST replication) and OST direct to tape may need to be set on the NetBackup server.

Figure 7 OpenStorage (OST)  
Example

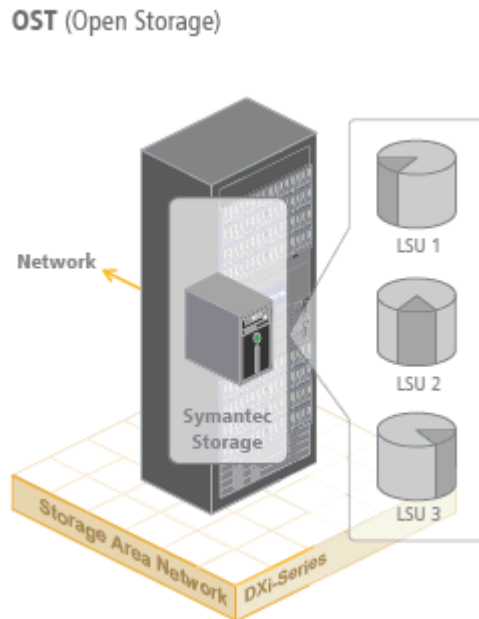

## Supported RAID Configurations

RAID is short for Redundant Array of Independent (or Inexpensive) Disks, which is a category of storage that employs two or more drives in combination for fault tolerance and performance. There are a number of RAID levels in use today such as 0, 1, 3, 5, 6 and 10. The DXi4700 uses RAID 6.

### RAID 6 Configuration

RAID 6 uses block-level striping with two parity blocks distributed across all member disks. Dual parity provided by a RAID 6 configuration ensures that your data retains full integrity even in the event of two hard drive failures. Since single parity RAID levels are vulnerable to data loss until the failed drive is rebuilt: the larger the hard drive, the longer the rebuild will take and the longer the system is vulnerable to possible data loss.

The DXi4700 Node and Expansion modules (JBODs) use RAID 6 volumes for data storage (see [Figure 8](#) and [Figure 9](#)):

- **DATA** - HDD slots 1–11 (data storage)
- **Hot Spare** - HDD slot 0

---

**Note:** The hot spare drive is initially located in slot 0. If a hard drive is replaced, the replacement drive becomes the new hot spare.

---

Figure 8 DXi4700 Node RAID Sets



HDD Slot 0	HDD Slot 3	HDD Slot 6	HDD Slot 9
HDD Slot 1	HDD Slot 4	HDD Slot 7	HDD Slot 10
HDD Slot 2	HDD Slot 5	HDD Slot 8	HDD Slot 11

Figure 9 DXi4700 Expansion  
Module RAID Sets



HDD Slot 0	HDD Slot 3	HDD Slot 6	HDD Slot 9
HDD Slot 1	HDD Slot 4	HDD Slot 7	HDD Slot 10
HDD Slot 2	HDD Slot 5	HDD Slot 8	HDD Slot 11

## DXi Advanced Reporting

Quantum DXi Advanced Reporting works with all DXi-Series disk backup systems. DXi Advanced Reporting combines comprehensive performance data logging with powerful visual reporting and analysis tools to help you identify potential problems and optimize system operation. For more information, refer to the *DXi Advanced Reporting User's Guide* (6-67353).

## Network Configuration

During network configuration, each individual interface on the DXi4700 can be configured as a subnet with its own network settings. Each physical Ethernet port can be configured as an interface. In addition, you can also create bonded interfaces (logical ports) consisting of two or more physical ports.

Keep in mind that any traffic can pass through any of the configured Ethernet ports. This means that the routing of different traffic types, as well as firewall capability, must be controlled using the network infrastructure (routers and switches) that the DXi4700 is connected to.

For more information about configuration network settings, see [Network](#) on page 317.

---

**Note:** Each configured network interface requires its own set of network settings (IP address, network mask, and gateway).

---

---

**Caution:** For effective bonded network use, a properly configured network switch is required. (A network switch is not supplied with the DXi4700.) The DXi4700 bonding settings must match the switch settings. If the switch settings and the DXi4700 settings do not match, your system may become inaccessible through the switch.

---

## Best Practices

There are several items that should be considered when installing and configuring your DXi4700 system. By reviewing this information, you can help shorten the installation and configuration time for your system.

- [Licensing](#)
- [Virtual Media—How Many and What Size?](#)

---

### Licensing

---

The features of the DXi4700 are enabled through licensing options, which are available through the remote management console (see [License Keys](#) on page 389).

Licenses are either factory-installed on the DXi4700, or they are available through a license certificate, which is included with the system.

#### Factory-Installed Licenses

The following DXi4700 licenses are factory-installed:

- [NAS](#) (NAS and Multi-Protocol configurations only)
- [VTL](#) (VTL and Multi-Protocol configurations only)
- [Backup Application Specific \(Path to Tape\)](#) (Multi-Protocol configurations only)
- [Data Deduplication](#)
- [Replication](#)
- [Storage Capacity](#)
- [OST](#) (NAS and Multi-Protocol configurations only)
- [Data-in-Flight Encryption](#)

## NAS


The *Network Attached Storage (NAS)* license allows NAS shares to be exposed to backup hosts and applications. (License key is pre-installed on all DXi4700 NAS and Multi-Protocol systems.)

## VTL

The *Virtual Tape Library (VTL)* license allows virtual devices such as the media changer and tape drive to be exposed to the attached Fibre Channel hosts. (License key for 160 VTDs is pre-installed on all DXi4700 VTL and Multi-Protocol systems.)

## Backup Application Specific (Path to Tape)

The *Backup Application Specific* license allows you to export virtual media directly to a maximum of 3 attached physical tape libraries using Backup Application Specific NDMP or OST Direct to Tape. (License key is pre-installed on all DXi4700 Multi-Protocol systems.)

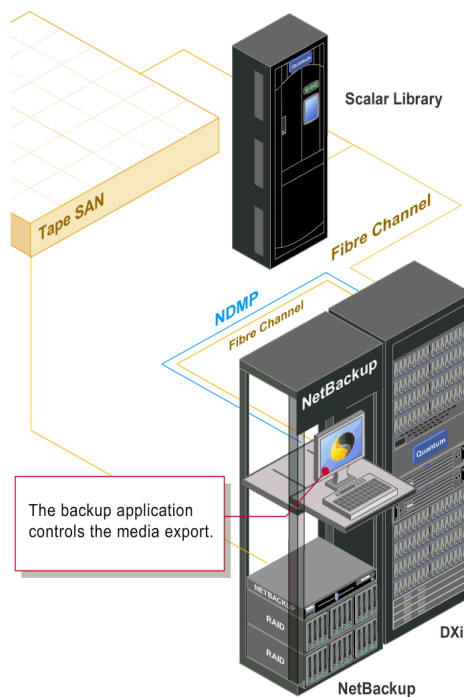



The Backup Application Specific option works with the following backup applications:

- Symantec NetBackup 7.1.x and higher — direct-to-tape feature
- Symantec Backup Exec 2010 R3 and higher
- EMC NetWorker

---

**Note:** EMC NetWorker 8.1 and later do not support Backup Application Specific Path to Tape.

---

- Oracle Secure Backup 10.3
- ASG-Time Navigator

---

**Note:** For more information, see the *DXi-Series Backup Application Specific Path to Tape Configuration Guide* (6-67211).

---

When the Path to Tape feature is enabled and configured, backup data can be moved directly from the DXi4700 system to a tape library. For a list of supported tape libraries and tape drives for Backup Application Specific, see [Table 1](#) and [Table 2](#).

Table 1 Supported Tape Libraries in Backup Application Specific

Vendor	Tape Library
Quantum	Scalar i40 and i80
	Scalar i500
	Scalar i2000 and i6000
	Scalar 24
	Scalar 50 (PX502)
	PX500
	PX720
Dell	PV132T
	PVT136T
	ML6000

Vendor	Tape Library
HP	ESL E Series
	EML Series
IBM	TS3500
Oracle/STK	L180 (FC only)
	L700 (FC only)
	SL500 (FC only)
	SL3000 (FC only)

Table 2 Supported Tape Drives  
in Backup Application Specific

Vendor	Tape Drive
Quantum	SDLT320, SDLT600, DLT-S4, LTO-2, and LTO-3
HP	LTO-2, LTO-3, LTO-4, LTO-5, and LTO-6
IBM	LTO-2, LTO-3, LTO-4, LTO-5, and LTO-6

### Data Deduplication

The *Data Deduplication* license allows the DXi4700 to reduce the size of data stored on the system through the deduplication process (see [Data Reduction](#) on page 5). (License key is pre-installed on all DXi4700 systems.)

### Replication

The *Replication* license allows the DXi4700 to replicate data to up to two target systems and received replicated data from up to ten source systems. (License key is pre-installed on all DXi4700 systems.)

### Storage Capacity

The *Storage Capacity* license is factory-installed for the installed capacity. Additional capacity requires a certificate license that comes with each Expansion module. This license allows the storage capacity of the DXi4700 to be increased. (License key is pre-installed on all DXi4700 systems.)

## OST

The *OST* license, when enabled, allows a Open Storage Technology (OST) connection. For Symantec users with specific versions of the software, another replication option is available for DXi4700 models through the Symantec OpenStorage (OST) API. (License Certificate is included with all DXi4700 NAS and Multi-Protocol systems.)

---

**Note:** For more information, see the *DXi-Series NetBackup and Backup Exec OST Configuration Guide (6-67079)*.

---

## Data-in-Flight Encryption

The *Data-in-Flight Encryption* license enables use of AES encryption (128-bit or 256-bit) when sending data to another system. (Not available in all regions.)

---

## Virtual Media—How Many and What Size?

---

There is no correct answer to this question as it really depends on your backup regime and the backup application in use. A DXi system does not preallocate disk space when a virtual tape cartridge is created, there can be an inclination to create a lot of large virtual tape cartridges, greater than the amount that is actually required. While this has no initial bearing on the DXi's capacity utilization, it can cause issues down the track.

Regarding the quantity of virtual media you need to create, as long as there is sufficient media to hold the amount of backup data for the required retention period, the quantity does not really matter. However, it is extremely important, as mentioned earlier, that the aging and expiry rules of the media pool are defined early. If these rules are not defined, the virtual tape cartridges will never enter the scratch pool resulting in you running out of virtual media, and in turn space on the DXi system. As a rule of thumb, more is better than less; as long as expiry rules are defined.


Although there is no perfect size when it comes to creating virtual tape cartridges, there are a few factors to consider. If a virtual tape cartridge is created at 200 GB, then it will be presented as storing 200 GB of native data.

Creating smaller sized media is preferred, for example 50 GB or 100 GB, as it allows a virtual tape cartridge to be completely filled even when backing up smaller data sets. Smaller sized media also aids the transfer

of data from virtual to physical tape platforms. Once again, virtual tape cartridge size will depend on the backup application in use.

It is important to note that the design of the DXi will not allow a virtual tape cartridge to be written to it if its size is larger than the amount of free space available on the DXi. For example, if you have a virtual tape cartridge size of 400 GB but only 300 GB of free space is available on the DXi, the backup will fail when attempting to write data to the virtual tape cartridge. As a result, smaller virtual tape cartridge sizes are better.

Remember, the DXi system is always cautious of being filled up so that the integrity of stored data is not compromised.

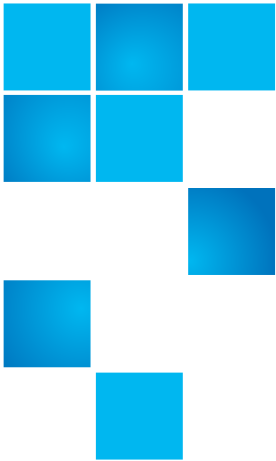

## Chapter 2

# DXi4700 Basic Operations

---

This chapter describes the hardware features and basic operation of DXi4700 systems and includes the following sections:

- [DXi4700 Node](#)
- [DXi4700 Expansion Module](#)
- [DXi4700 Hard Drive Carrier Indicators](#)
- [Turning On and Shutting Down the DXi4700](#)
- [Locating DXi4700 Serial Numbers](#)

---

## DXi4700 Node

All DXi4700 systems include one Node. The DXi4700 Node is a computer server that provides control for the DXi software (host OS and software applications). The Node also stores support data for the DXi4700 system, such as metadata and indexes, and provides data storage. Depending on the configuration, the Node contains 6 or 12 hard drive carriers. In addition, all network connections are made on the Node.

---

**Note:** Usable storage capacity can be upgraded at any time after purchase by adding a storage capacity upgrade license to enable installed hardware capacity, or by adding additional hardware capacity to the system. For information about upgrade options, see the *DXi4700 Capacity Upgrade Guide* (6-68107), or contact your Quantum sales representative.

---

The DXi4700 Node has a series of LED indicators and buttons located on the front and back of each component:

- [DXi4700 Node Front Panel Features and Indicators](#)
- [DXi4700 Node Rear Panel Features](#)
- [DXi4700 Node 1GbE Ethernet](#)
- [DXi4700 Node 10GbE Ethernet Port Indicators](#)
- [DXi4700 Node 10 GBase-T Ethernet Port Indicators](#)
- [DXi4700 Node Power Supply Indicators](#)

---

## DXi4700 Node Front Panel Features and Indicators

---

[Figure 10](#) shows the controls, indicators, and connectors located behind the optional rack bezel on the front panel of the DXi4700 Node. [Table 3](#) describes each item.

Figure 10 DXi4700 Node -  
Front View

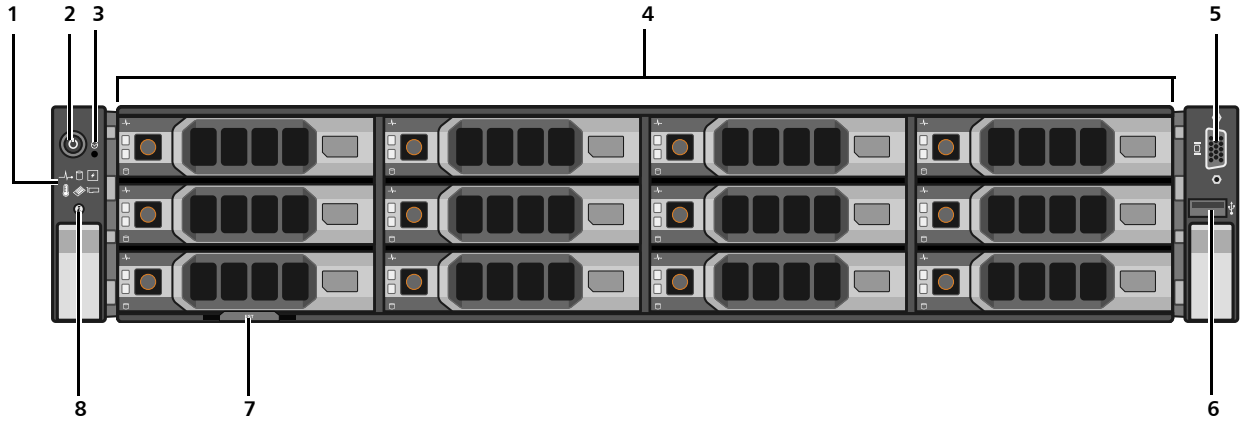






Table 3 DXi4700 Node - Front  
Panel LED Indicators, Buttons,  
and Connectors

Item	Indicator, Button, or Connector	Icon	Description
1	Diagnostic Indicators		The diagnostic indicators light up to display error statuses. For a description of possible statuses, see <a href="#">Table 4</a> on page 31. <b>Note:</b> The diagnostic indicators display error statuses during system startup.

Item	Indicator, Button, or Connector	Icon	Description
2	Power-on indicator, power button		<p>The power-on indicator lights when the system power is on. The power button controls the power supply output to the system.</p> <p><b>Warning:</b> Turning off the power removes the main power but keeps standby power supplied to the Node. Because of this, you must unplug the Node before servicing.</p> <p><b>Caution:</b> Turning off the power without properly shutting down the system may result in loss of data (see <a href="#">Turning On and Shutting Down the DXi4700</a> on page 45).</p> <p><b>Note:</b> To shut down the Node in the event of an emergency, press and hold the power button for 4 seconds. <b>Warning:</b> This may result in data loss and may cause a delay on next startup due to a blockpool verify operation.</p>
3	NMI button		Not used.
4	Hard drives		Six or twelve 3.5 inch hot-swappable hard drives (4 TB each).
5	VGA connector		<b>Caution:</b> Use of connected peripheral devices, such as a USB keyboard and mouse or a VGA display, is <i>not</i> supported and may cause incorrect system operation.
6	USB 2.0 connector		<b>Caution:</b> Use of connected peripheral devices, such as a USB keyboard and mouse or a VGA display, is <i>not</i> supported and may cause incorrect system operation.
7	Information tag		A slide-out label panel which displays the system serial number.










Item	Indicator, Button, or Connector	Icon	Description
8	System identification button		Press to toggle the system ID on and off. The identification buttons on the front and rear panels can be used to locate a particular system within a rack. When one of these buttons is pressed, the system status indicator on the rear flashes until one of the buttons is pressed again.

Table 4 DXi4700 Node -  
Diagnostic Indicators

Indicator	Icon	Condition	Recommended Action
Health		<b>Solid blue</b> - The system is on and in good health. <b>Blinking amber</b> - The system is on and an error exists.	See <a href="#">General Troubleshooting Actions</a> on page 420.
Hard drive		<b>Blinking amber</b> - A hard drive error has occurred	See <a href="#">Hardware Problems</a> on page 422.
Electrical		<b>Blinking amber</b> - An electrical error has occurred.	See <a href="#">Hardware Problems</a> on page 422.
Temperature		<b>Blinking amber</b> - A thermal error has occurred.	See <a href="#">Temperature Problems</a> on page 426.
Memory		<b>Blinking amber</b> - A memory error has occurred.	See <a href="#">General Troubleshooting Actions</a> on page 420.
PCIe		<b>Blinking amber</b> - A PCIe card error has occurred.	See <a href="#">General Troubleshooting Actions</a> on page 420.

## DXi4700 Node Rear Panel Features

Figure 11 shows the connectors located on the rear panel of the DXi4700 Node. Table 5 describes each item.

**Note:** Refer to the port numbering label on the rear of the system to help you determine the correct port connections.

Figure 11 DXi4700 Node - Rear View







 



Table 5 DXi4700 Node - Rear Panel Connectors

Item	Indicator, Button, or Connector	Icon	Description
1	System identification button		Press to toggle the system ID on and off. The identification buttons on the front and rear panels can be used to locate a particular system within a rack. When one of these buttons is pressed, the system status indicator on the rear flashes until one of the buttons is pressed again.
2	System identification connector		Not used.

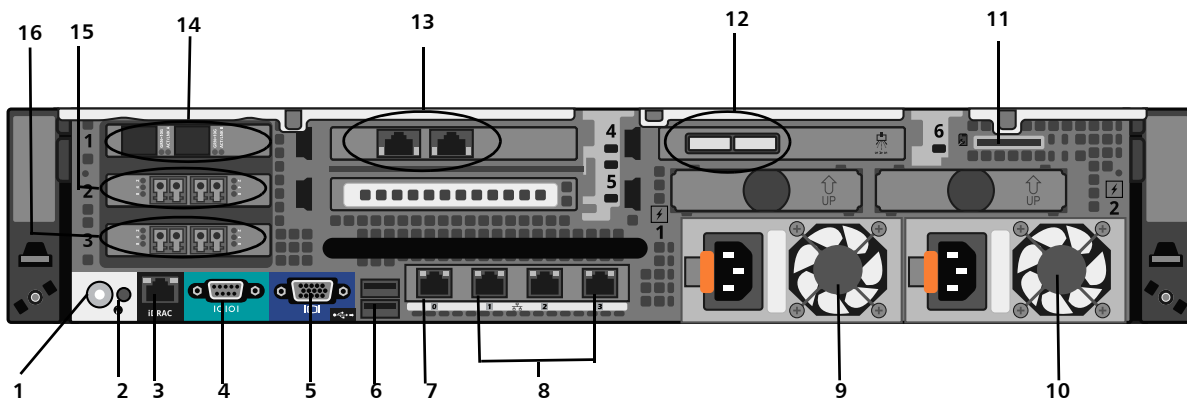Item	Indicator, Button, or Connector	Icon	Description
3	iDRAC port		Not used.
4	Serial connector		Allows you to connect a serial device to the system.
5	VGA connector		<b>Caution:</b> Use of connected peripheral devices, such as a USB keyboard and mouse or a VGA display, is <i>not</i> supported and may cause incorrect system operation.
6	USB 2.0 connectors (2)		<b>Caution:</b> Use of connected peripheral devices, such as a USB keyboard and mouse or a VGA display, is <i>not</i> supported and may cause incorrect system operation.
7	Service port		For Quantum use only.
8	3 x 1 GbE Ethernet ports		For data ingest/read.
9	Power supply (PSU1)		750 watt hot-swappable power supply.
10	Power supply (PSU2)		750 watt hot-swappable power supply.
11	vFlash media card slot		Not used.
12	(Configurations with Expansion modules only) 2 x 6 Gb SAS ports		For connection to Expansion modules (JBODs).
13	(Optional) 2 x 10 GBase-T Ethernet ports.		For data ingest/read. Cannot be used with 2 x 10 GbE Ethernet ports (14).
14	(Optional) 2 x 10 GbE Ethernet ports		For data ingest/read. Cannot be used with 2 x 10 GBase-T Ethernet ports (13).


Item	Indicator, Button, or Connector	Icon	Description
15	(Multi-Protocol configurations only) 2 x 8 Gb Fibre Channel ports		For PTT ingest/read.
16	(VTL and Multi-Protocol configurations only) 2 x 8 Gb Fibre Channel ports		For VTL ingest/read.

## DXi4700 Node 1GbE Ethernet

Each 1 GbE Ethernet port on the DXi4700 Node rear panel has two LED indicators (see [Figure 12](#)):

- **Link indicator**
  - **Off** - Indicates the port is not connected to the network.
  - **Green** - Indicates the port is connected to the network at maximum speed (1Gbps).
  - **Amber** - Indicates the port is connected to the network at less than its maximum port speed.
- **Activity Indicator**
  - **Blinking green** - Indicates network data is being sent or received.

Figure 12 DXi4700 Node -  
1 GbE Ethernet Port LEDs

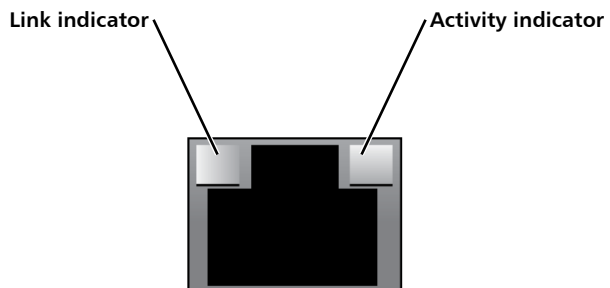


## DXi4700 Node 10GbE Ethernet Port Indicators

Depending on the configuration, Quantum DXi4700 systems include a 10 GbE adapter card (dual optical or Twinax ports).

The 10 GbE adapter with dual optical or Twinax ports has two LED indicators for each 10 GbE port (see [Figure 13](#)):

- **Link indicator**
  - **Off** - Indicates the port is not connected to the network.
  - **Green** - Indicates the port is connected to the network at 10Gbps speed.
  - **Yellow** - Indicates the port is connected to the network at 1 Gbps speed.
- **Activity Indicator**
  - **Blinking** - Indicates network data is being sent or received.

Figure 13 DXi4700 Node - Optional 10 GbE Port LEDs (Optical or Twinax)

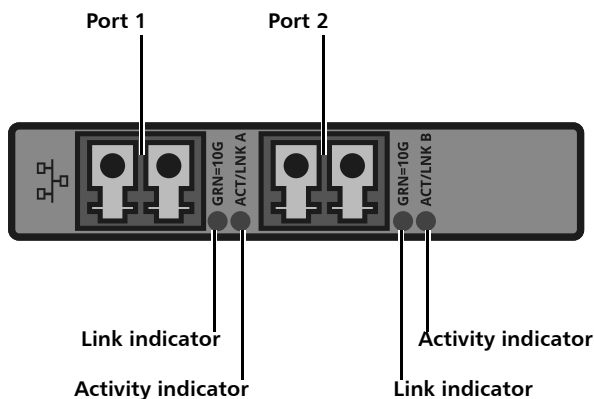

## DXi4700 Node 10 GBase-T Ethernet Port Indicators


Each 10 GBase-T port on the DXi4700 Node rear panel has two LED indicators (see [Figure 12](#)):

- **Link indicator**
  - **Off** - Indicates the port is not connected to the network.
  - **Green** - Indicates the port is connected to the network at maximum speed (10 Gbps).

- **Amber** - Indicates the port is connected to the network at less than its maximum port speed.
- **Activity Indicator**
  - **Blinking green** - Indicates network data is being sent or received.

---

Figure 14 DXi4700 Node - 10 GBase-T Ethernet Port LEDs

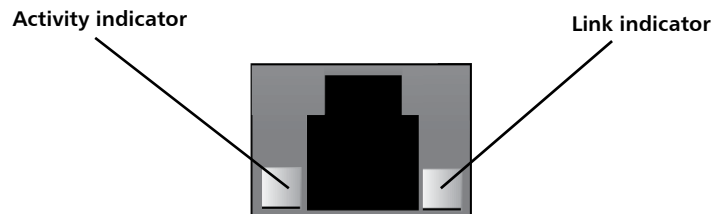

---

## DXi4700 Node Power Supply Indicators

---

Each DXi4700 Node power supply has an illuminated translucent handle that serves as an indicator to show whether power is present or whether a power fault has occurred (see [Figure 15](#)):


- **Not lit** - Indicates power is not connected.
- **Green** - Indicates a valid power source is connected to the power supply and that the power supply is operational.
- **Flashing amber** - Indicates a problem with the power supply.
- **Flashing green** - When hot-adding a power supply, this indicates that the power supply is mismatched with the other power supply. Replace the power supply that has the flashing indicator with a power supply that matches the capacity of the other installed power supply.

---

**Caution:** All power supplies are hot swappable. When replacing power supplies, never remove more than one power supply at a time from the system. Also, before you remove one power supply, make sure the other power supply is operating correctly (indicator handle is green).

---

Figure 15 DXi4700 Node -  
Power Supply LED

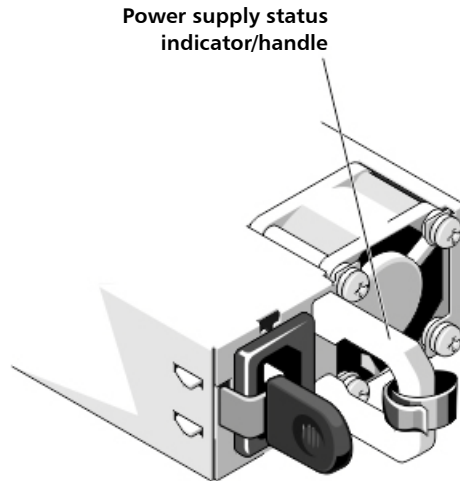

## DXi4700 Expansion Module

The DXi4700 Expansion modules (JBODs) are used to provide additional capacity (backup data storage) for the DXi4700 system. Each Expansion module contains 12 hard drive carriers and provides 36 TB of licensable storage.

---

**Note:** Usable storage capacity can be upgraded at any time after purchase by adding a storage capacity upgrade license to enable installed hardware capacity, or by adding additional hardware capacity to the system. For information about upgrade options, see the *DXi4700 Capacity Upgrade Guide* (6-68107), or contact your Quantum sales representative.

---

The DXi4700 Expansion modules have a series of LED indicators and buttons located on the front and back of each component:

- [DXi4700 Expansion Module Front Panel Features and Indicators](#)
- [DXi4700 Expansion Module Rear Panel Features](#)
- [DXi4700 Expansion Module EMM Features and Indicators](#)

- [DXi4700 Expansion Module Power Supply Indicators](#)

## DXi4700 Expansion Module Front Panel Features and Indicators

Figure 16 shows the controls, indicators, and connectors located behind the optional rack bezel on the front panel of the DXi4700 Expansion Module. Table 6 describes each item.

Figure 16 DXi4700 Expansion Module - Front View

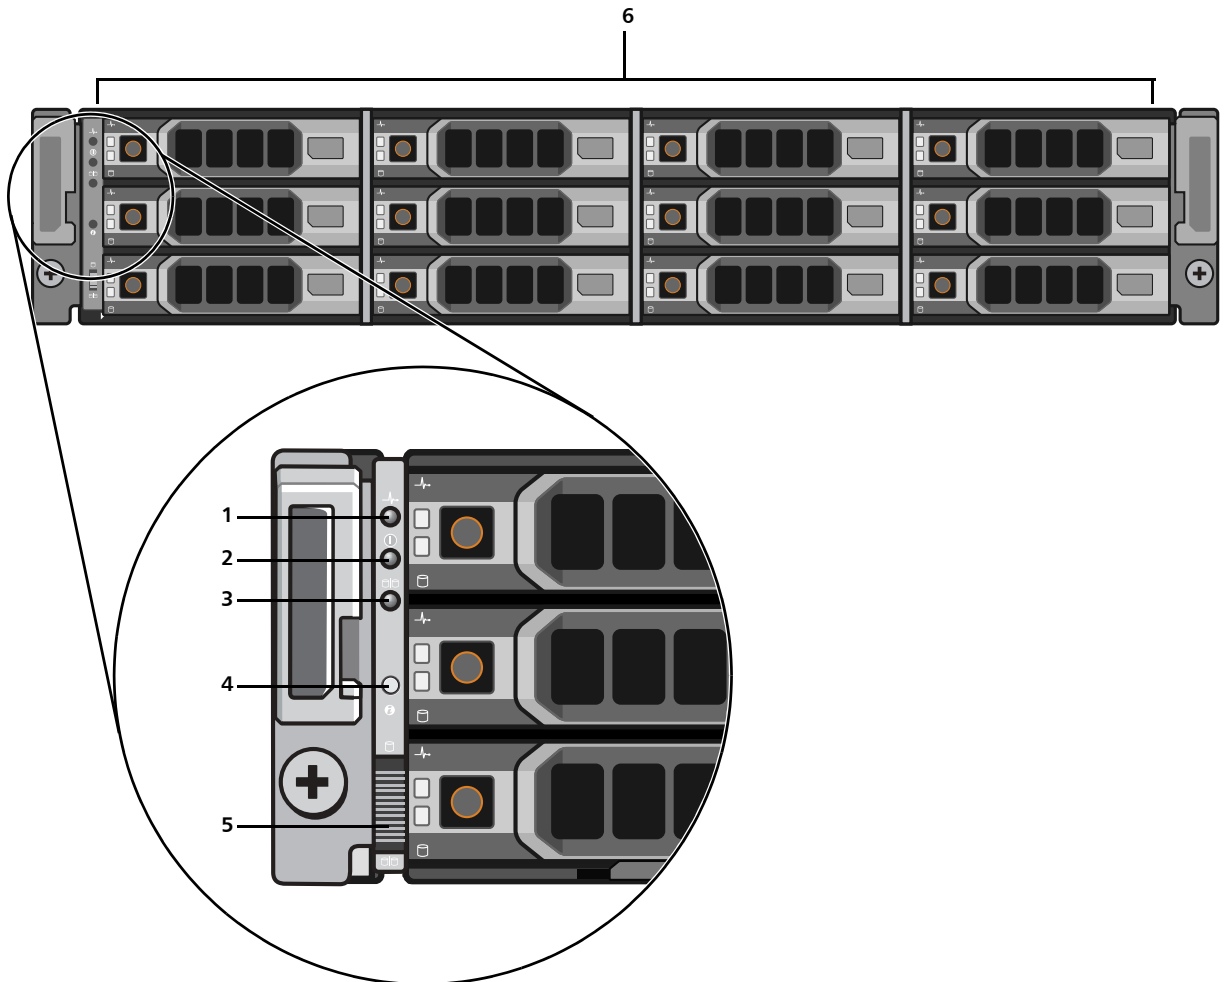









Table 6 DXi4700 Expansion  
Module - Front Panel LED  
Indicators, Buttons, and  
Connectors

Item	Indicator, Button, or Connector	Icon	Description
1	Enclosure status LED		<p>The enclosure status LED lights when the enclosure power is on:</p> <ul style="list-style-type: none"> <li>• Lights blue during normal operation and when the host server is identifying the enclosure.</li> <li>• Blinks blue when a host server is identifying the enclosure or when the system identification button is pressed.</li> <li>• Lights amber when the enclosure is turned on or is reset.</li> <li>• Blinks amber when the enclosure is in the fault state (see <a href="#">General Troubleshooting Actions</a> on page 420.).</li> </ul>
2	Power LED		The power LED lights when at least one power supply is supplying power to the enclosure.
3	Split mode LED		Not used.
4	System identification button		<p>Press to toggle the system ID on and off.</p> <p>The system identification button on the front control panel can be used to locate a particular enclosure within a rack. When the button is pushed, the system status indicators on the control panel and the EMM blinks blue until the button is pushed again.</p>
5	Enclosure mode switch		Not used.
6	Hard drives		Twelve 3.5 inch hot-swappable hard drives (4 TB each).

## DXi4700 Expansion Module Rear Panel Features

[Figure 17](#) shows the connectors located on the rear panel of the DXi4700 Expansion module. [Table 7](#) describes each item.

Figure 17 DXi4700 Expansion Module - Rear View

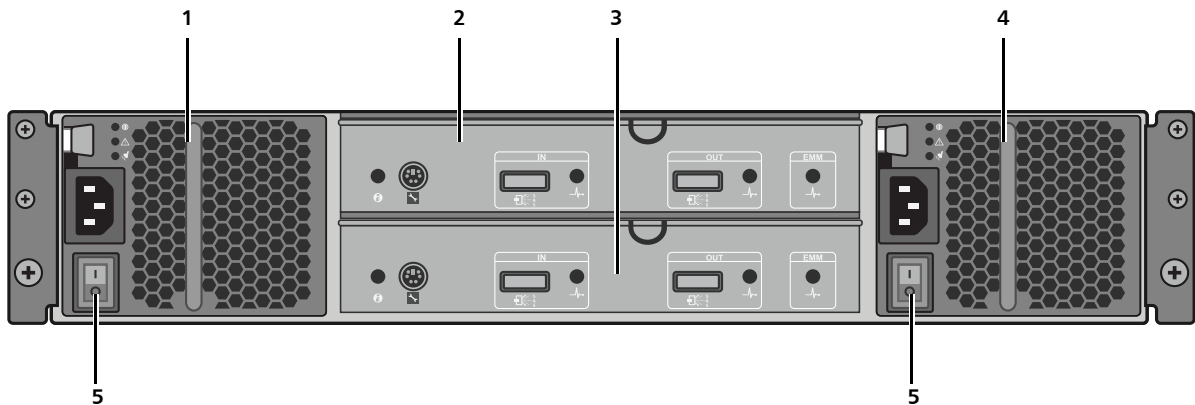


Table 7 DXi4700 Expansion Module - Rear Panel Features

Item	Description
1	600 watt hot-swappable power supply (PSU 1).
2	Primary enclosure management module (EMM 0)
3	Secondary enclosure management module (EMM 1)
4	600 watt hot-swappable power supply (PSU 1).
5	Power switches (2)

## DXi4700 Expansion Module EMM Features and Indicators

Each DXi4700 Expansion module contains two enclosure management modules (EMMs). [Figure 18](#) shows the connectors located on the rear panel of the EMM. [Table 8](#) describes each item.

Figure 18 DXi4700 Expansion Module EMM - Rear View

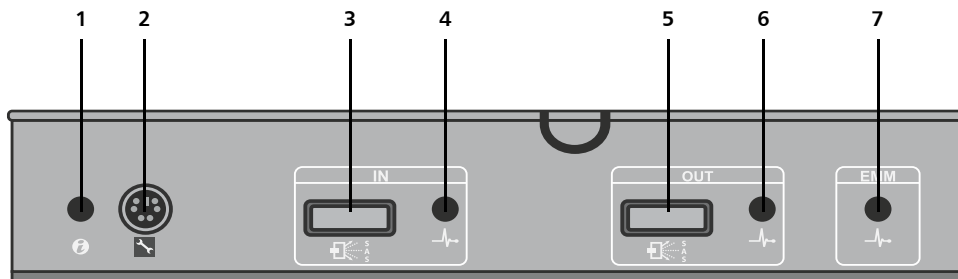







Table 8 DXi4700 Expansion Module EMM - Rear Panel Indicators and Connectors

Item	Indicator, Button, or Connector	Icon	Description
1	System status indicator		Blinks blue when the system identification button is pushed. You can identify a particular enclosure in a rack using the system identification indicator.
2	Debug port		Not used.
3	SAS port (In)		Provides connection from the Node or another Expansion module.
4	SAS port (In) link status		Indicates SAS port status: <ul style="list-style-type: none"> <li>Lights green when all the links to the port are connected.</li> <li>Lights amber when one or more links to the port are not connected.</li> <li>The LED remains off if enclosure is not connected.</li> </ul>
5	SAS port (Out)		Provides connection from the Expansion module to another Expansion module.

Item	Indicator, Button, or Connector	Icon	Description
6	SAS port (Out) link status		<p>Indicates SAS port status:</p> <ul style="list-style-type: none"> <li>• Lights green when all the links to the port are connected.</li> <li>• Lights amber when one or more links to the port are not connected.</li> <li>• The LED remains off if enclosure is not connected.</li> </ul>
7	EMM status LED		<p>The EMM status LED lights when the EMM power is on:</p> <ul style="list-style-type: none"> <li>• Lights green when the EMM is functioning properly.</li> <li>• Lights amber when the enclosure does not boot or is not properly configured.</li> <li>• Blinks green quickly when a firmware download is in progress.</li> <li>• Blinks green slowly when a peer auto-update is in progress.</li> <li>• Blinks amber two times when the enclosure is unable to communicate with enclosure devices.</li> <li>• Blinks amber four times when a firmware update fails.</li> <li>• Blinks amber five times when the firmware versions are different between two EMMs in an enclosure.</li> </ul>

### DXi4700 Expansion Module Power Supply Indicators

Each DXi4700 Expansion module power supply has LED indicators to show whether power is present or whether a power fault has occurred (see [Figure 19](#)):

- **DC Power** - Lights green when the DC output voltage is within the limit.
- **Power supply/cooling fan fault** - Lights amber when a fault with the power supply or fan is detected.


- **AC Power** - Lights green when the AC output voltage is within the limit.

---

**Caution:** All power supplies are hot swappable. When replacing power supplies, never remove more than one power supply at a time from the system. Also, before you remove one power supply, make sure the other power supply is operating correctly (power indicator is green).

---

Figure 19 DXi4700 Expansion Module - Power Supply LED Indicators

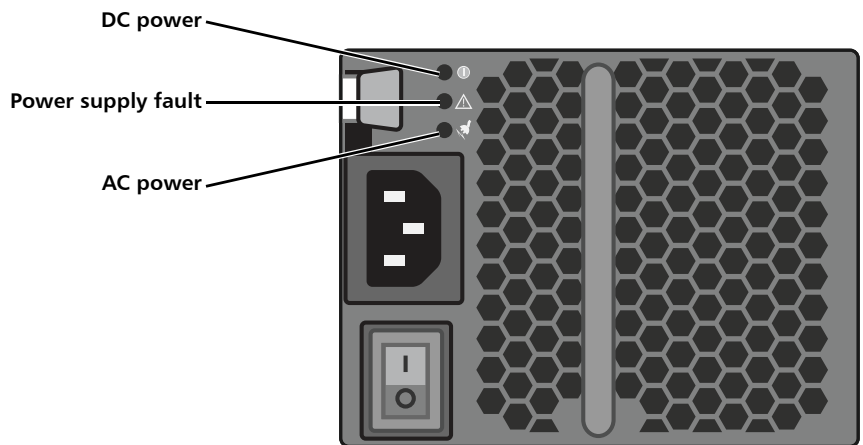

## DXi4700 Hard Drive Carrier Indicators

Each DXi4700 hard drive carrier in the Node and Expansion module has two LED indicators (see [Figure 20](#)):

- **Drive activity indicator (green)**
  - **Flashing** - Indicates hard disk drive activity.
- **Drive status indicator (green and amber)**
  - **Off** - Drive ready for insertion or removal

---

**Note:** The drive status indicator remains off until all hard drives are initialized after system power is applied. Drives are not ready for insertion or removal during this time.

---

- **Blinks green two times per second** - Identify drive/preparing for removal
- **Blinks green, amber, and off** - Drive predicted failure
- **Blinks amber four times per second** - Drive failed
- **Blinks green slowly** - Drive rebuilding
- **Steady green** - Drive online
- **Blinks green three seconds, amber three seconds, and off six seconds** - Rebuild aborted

---

**Note:** If a drive fails, you will be notified by a service ticket in the remote management console (see [Service Tickets](#) on page 203).


---

---

**Caution:** Do *not* remove a hard drive that has *not* failed. Instead, only remove a drive that has failed. If you accidentally remove a good drive, wait 30 seconds before reinserting the drive.

---

Figure 20 DXi4700 Hard Drive Carrier LEDs

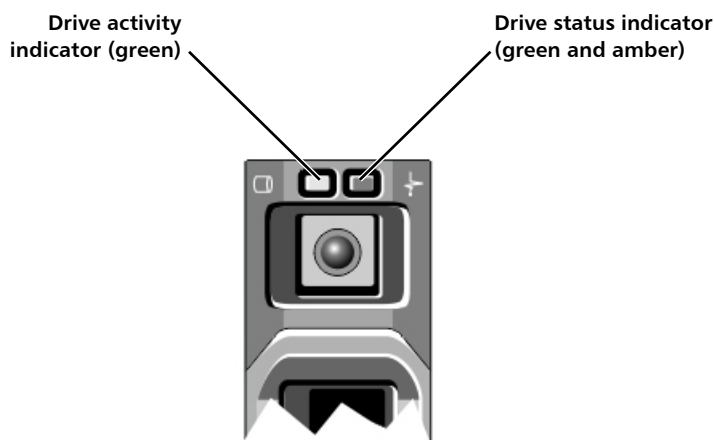

## Turning On and Shutting Down the DXi4700

To turn on or shut down the DXi4700, refer to the following sections:


- [Turning On the DXi4700](#)
- [Turning Off the DXi4700](#)

### Turning On the DXi4700

To turn on the system, power on the DXi4700 system components in the following order:


- 1 Turn on both power switches on the back of each Expansion module (JBOD) (see [Figure 21](#)). Wait 30 seconds for the Expansion modules to initialize.

Figure 21 DXi4700 Expansion Module Power Switches

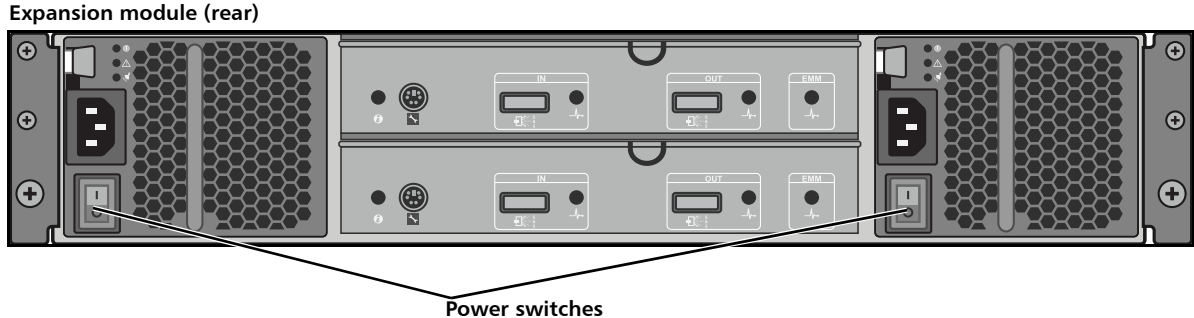

- 2 Press the power button on the front of the Node (see [Figure 22](#)). Wait for the system to boot before attempting to log on. (This can take up to 30 minutes.)

Figure 22 DXi4700 Node  
Power Button

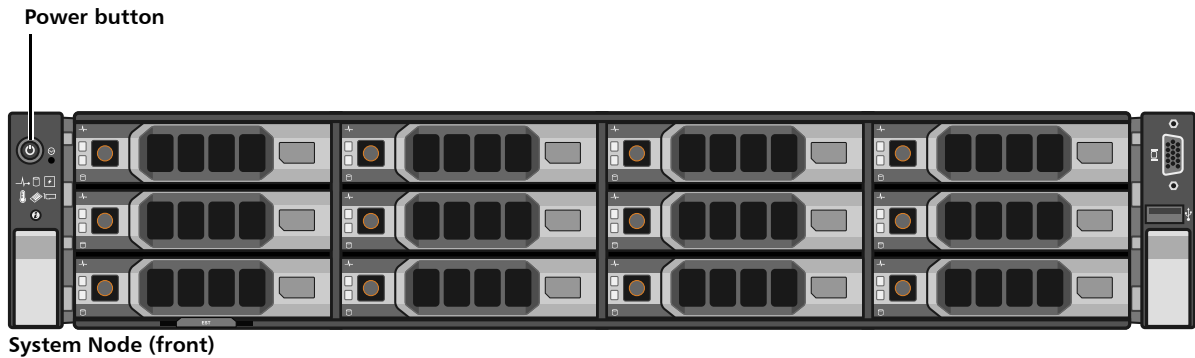

The system is now ready for operation (see [Chapter 3, DXi4700 Remote Management](#)).

## Turning Off the DXi4700

To turn off the system:

---

---

**Caution:** Before shutting down the DXi4700, make sure that all backup and replication jobs are finished, and that space reclamation activity is complete.

---

---

- 1 Shut down the system from the remote management console using the **Shutdown** option on the **Utilities > Reboot & Shutdown** page (see [Reboot & Shutdown](#) on page 408).

---

**Note:** Shutting down the system can take up to 15 minutes. Only the Node will completely shut down.

---

- 2 Turn off both power switches on the back of each Expansion module (JBOD) (see [Figure 21](#)).



## Locating DXi4700 Serial Numbers

You will need the system serial number, the Node serial number, and the Expansion module serial number at various times:

- **System Serial Number** - You need this number to contact Quantum Support or to add a licensed feature.
- **Node Serial Number** - You need this number for a Node replacement component.
- **Expansion Module (JBOD) Serial Number** - You need this number for an Expansion module replacement component.

You can locate the system serial number on the **Home** page of the remote management console.

You can also locate the system serial number, the Node serial number, and the Expansion module serial numbers by looking at the physical components.

- The system serial number is located on the pull-out information tag on the front of the Node (see [Figure 23](#)). The text **Service Call System Serial Number** appears on the label. The system serial number includes the letters **BVV**.
- The Node serial number is located to the left of the SAS ports on the rear of the Node. It is the same as the Node service tag.
- The Expansion module (JBOD) serial number is located on rear right flange, next to the right power supply.

---


**Note:** The system serial number also appears on the location ID label that is affixed to the lip on the rear of the Node and each Expansion module.

---

Figure 23 DXi4700 Node  
Information Tag



Pull out information tag to view  
system serial number

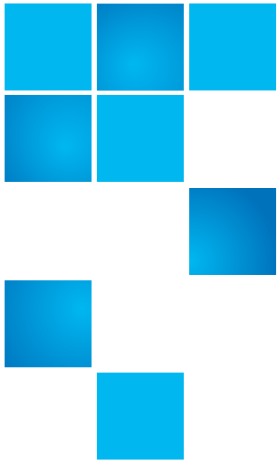

## Chapter 3

# DXi4700 Remote Management

---

The Quantum DXi4700 provides a powerful Web-based user interface that allows you to configure and manage the system from a remote workstation on the same network as the DXi4700.

---

**Note:** Management pages and information related to VTL (virtual tape library) and Fibre Channel status and configuration display only for DXi4700 VTL and Multi-Protocol configurations. Similarly, management pages and information related to NAS (network attached storage) and OST (OpenStorage technology) display only for DXi4700 NAS and Multi-Protocol configurations.

---

Use the DXi4700 remote management console to perform the following tasks:

- Set up the DXi4700 using guided procedures (see [DXi4700 Configuration Wizards](#) on page 63).
- View important system information at a glance (see [DXi4700 Home Page](#) on page 109).
- Manage data replication activities (see [DXi4700 Replication](#) on page 121).
- Monitor hardware status and system performance (see [DXi4700 Status](#) on page 173).
- View administration alerts and resolve service tickets (see [DXi4700 Alerts](#) on page 201).

- Configure storage presentation, data replication, and system settings (see [DXi4700 Configuration](#) on page 211).
- Run diagnostic tools and maintain the system (see [DXi4700 Utilities](#) on page 377).

---

## Accessing Remote Management

Access the remote management console using a Web browser on a workstation that is on the same network as the DXi4700.

See the following sections for more information about accessing DXi4700 remote management:

- [Supported Browsers](#)
- [Logging On to the DXi4700](#)
- [Logging Off of the DXi4700](#)

---

### Supported Browsers

---

Web browser software is not included with the DXi4700. You must obtain and install it separately. The DXi4700 remote management console supports the following Web browsers:

- Mozilla Firefox 17 or later
- Google Chrome 21 or later
- Microsoft Internet Explorer 9, 10, or 11

---

**Note:** For correct operation of the remote management console, including the display of the online help, disable any pop-up blockers and enable JavaScript in your Web browser. In the Google Chrome browser, the DXi help may not appear when Help is selected. If this occurs, select **Settings > Show Advanced Setting > Privacy > Pop-ups > Manage Exceptions**. Add the DXi IP address to the exceptions box, select **Allow**, and click **Done**.

---


## Logging On to the DXi4700

To log on to the DXi4700 remote management console:

- 1 Launch a supported Web browser on a workstation that has network access to the DXi4700.
- 2 In the browser address box, type the IP address of the DXi4700, and then press <Enter>.

The **Login** window displays (see [Figure 24](#)).

Figure 24 Login Window

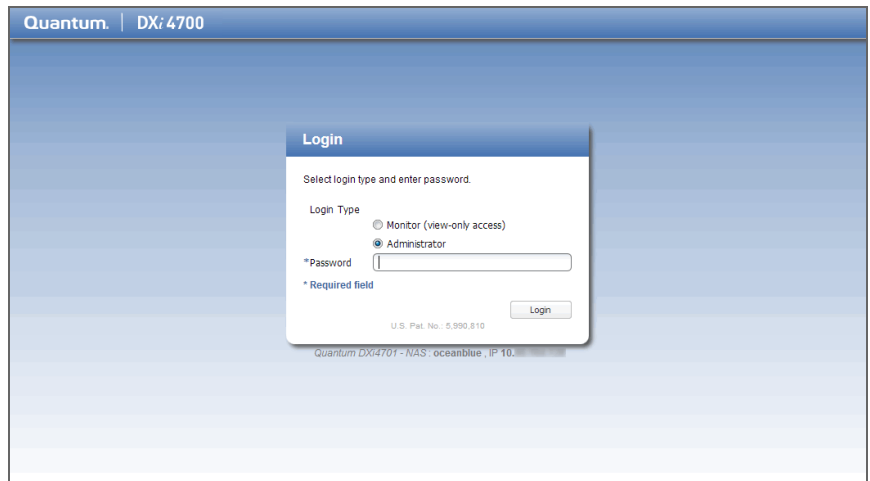

If the **Login** window does not display, verify that the IP address is correct and that the network path to the DXi4700 is valid. Also verify that you are using a supported Web browser. Then try again. If you are still unable to access the Login window, contact your DXi4700 administrator.

---

**Note:** The default IP address is **10.1.1.1**. The IP address can be changed during installation using the **Getting Started Wizard** or at a later time on the **Network** page (see [Network](#) on page 317).

---

- 3 Select the login type and enter the corresponding password.
  - **Monitor** - Allowed to view information on the DXi4700 remote management console but cannot make changes. (The default password is **password**.)

- **Administrator** - Allowed to view and change information on the DXi4700 remote management console. (The default password is **password**.)

---

**Note:** Passwords are limited to 15 characters. Alphanumeric characters and special characters are allowed. Passwords can be changed on the **Web & CLI Passwords** page (see [Web & CLI Passwords](#) on page 335).

---

- 4 Click **Login**.
- 5 If a security banner message has been specified for the DXi4700, click **Accept**.


---

**Note:** For information about specifying a security banner message, see [Security Notice](#) on page 344.

---

The **Home** page displays (see [Figure 25](#)).

Figure 25 Home Page

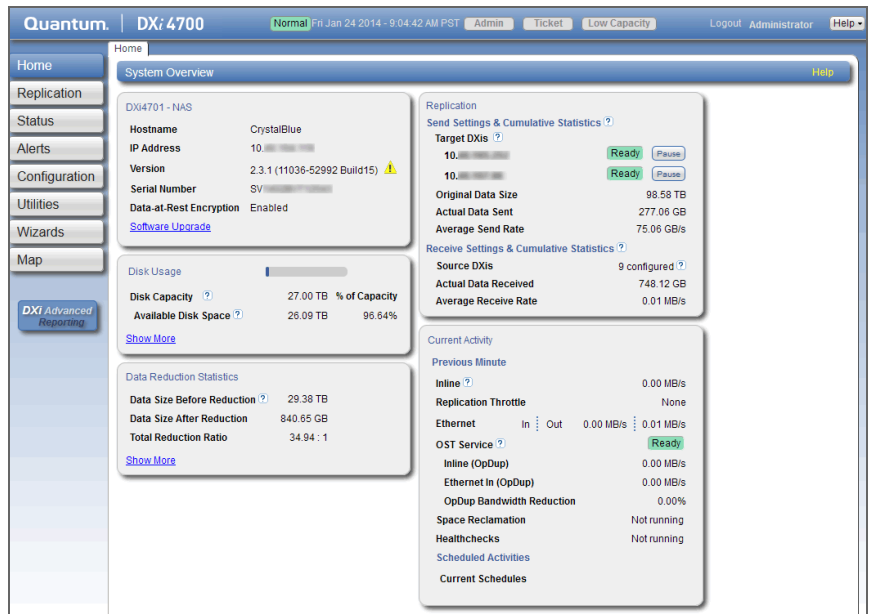

If you are unable to log on, verify that the password is correct, then try again. If you are still unable to log on, contact your DXi4700 administrator.

---

**Caution:** More than one Administrator can log on to the DXi at a time. If two Administrators attempt to make configuration changes on the same page at the same time, it is possible that one Administrator's changes will overwrite the other's. Always coordinate configuration changes with other Administrator users.

---

---

## Logging Off of the DXi4700

---

When you are done working in the DXi4700 remote management console, click **Logout** on the upper right of the remote management console to end your session.

---

**Note:** If the DXi4700 remote management console is idle for more than 30 minutes (default setting), the system logs off the user. The inactivity timeout can be changed on the **Login Session** page (see [Login Session](#) on page 343).

---

---

# The Remote Management Console

After you log on to the DXi4700, the remote management console displays. The remote management console includes the following features:

- [System Banner](#)
- [Main Menu](#)
- [DXi4700 Management Pages](#)

---


## System Banner

---

The system banner displays at the top of the remote management console (see [Figure 26](#)). Use the system banner to see overall system status and alert information at a glance, and to quickly access additional

information. The system banner also displays the time and date as well as the login type (administrator or monitor).

Figure 26 System Banner

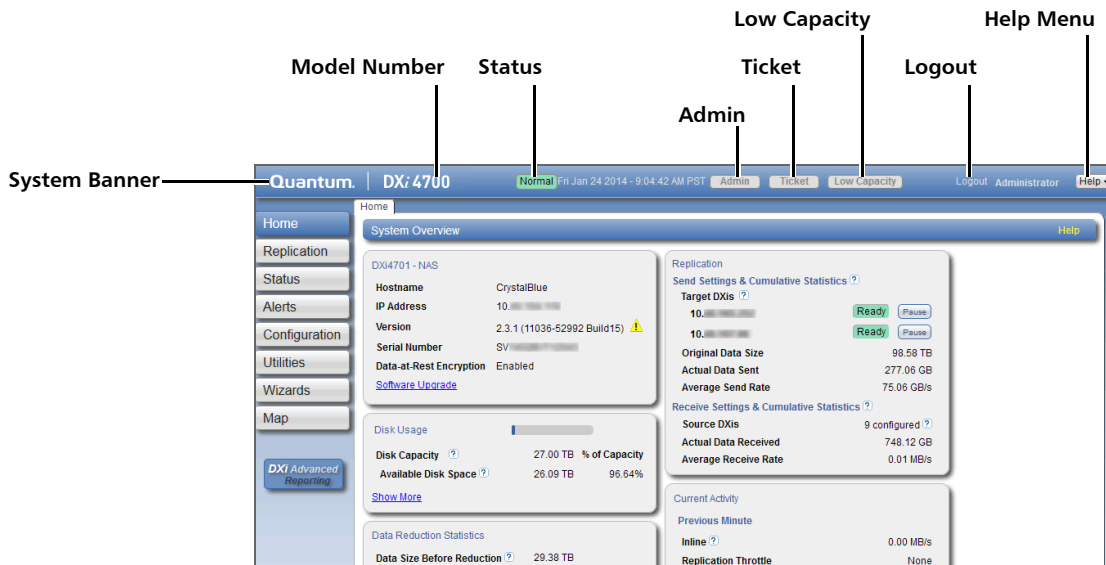

The following items display on the system banner:

- **Model Number** - The model number of the DXi4700 (see [Model Number](#) on page 55).
- **Status** - Displays the operating state of the DXi4700:
  - **Normal** - (Green) The system is operating correctly.
  - **Attention** - (Yellow) There is a problem with the system.

---

**Note:** The state displays **Attention** during a blockpool verify operation (see [Blockpool Verify Behavior](#) on page 58).

---

- **Verify Failure** - (Red) The blockpool verify process has failed.
- **Low Space** - (Yellow) Available disk space is low. Ingest and replication continue, and space reclamation starts.
- **Critical Reserve Space** - (Red) Available disk space is critically low. Ingest and replication are stopped, and space reclamation continues.



- **No Space** - (Red) Available disk space is critically low. Ingest and replication are stopped, and space reclamation continues.

Click the **Status** button to display detailed status information about the system (see [Hardware](#) on page 174).

- **Admin** - The **Admin** button turns yellow when an administration alert occurs. Click the **Admin** button to manage administration alerts (see [Admin Alerts](#) on page 201).
- **Ticket** - The **Ticket** button turns yellow when open service tickets are present. Click the **Ticket** button to manage service tickets (see [Service Tickets](#) on page 203).
- **Low Capacity** - The **Low Capacity** button turns yellow when available disk space falls to a low level and the DXi enters **Low Space** state (see [Low Space Management](#) on page 56). Click the **Low Capacity** button to view the administration alerts related to low disk space (see [Admin Alerts](#) on page 201).

---

**Note:** When disk space is low, target replication to the system is paused (see [Replication Service](#) on page 169). In addition, space reclamation and compaction are automatically started to free up disk space (see [Space Reclamation](#) on page 389).

---

- **Logout** - Click to end your remote management session.
- **Help Menu** - Select from the following help options:
  - **Help Contents** - Open the DXi4700 online help.
  - **Online Documentation** - Access documentation resources on the Quantum Web site.
  - **About** - Display DXi software version information.

## Model Number

The Model Number displays in the DXi4700 **System Overview** section on the **Home** page. The model number indicates the specific hardware configuration of the DXi4700.

[Table 9](#) describes the DXi4700 hardware configuration that is indicated by each model number.

Table 9 DXi4700 Model  
Number

DXi4700 Model Number	DXi4700 Configuration
DXi4700 - NAS	5–135 TB usable for data storage 3 x 1 GbE Ethernet ports (Optional) 2 x 10 GbE Ethernet ports or 2 x 10 GBase-T Ethernet ports.
DXi4700 - VTL	5–135 TB usable for data storage 3 x 1 GbE Ethernet ports (Optional) 2 x 10 GbE Ethernet ports or 2 x 10 GBase-T Ethernet ports. 2 x 8 Gb Fibre Channel ports (for host or SAN connection)
DXi4700 - Multi-Protocol	5–135 TB usable for data storage 3 x 1 GbE Ethernet ports (Optional) 2 x 10 GbE Ethernet ports or 2 x 10 GBase-T Ethernet ports. 2 x 8 Gb Fibre Channel ports (for host or SAN connection) 2 x 8 Gb Fibre Channel ports (for PTT)

## Low Space Management

As disk capacity is used and free disk space approaches low levels, the DXi4700 automatically responds as detailed in [Table 10](#).

When the DXi4700 enters the **Low Space** state, space reclamation and compaction are automatically started to free up disk space (see [Space Reclamation](#) on page 389). Space reclamation and compaction end when the DXi4700 exits the **Low Space** state.

When the DXi4700 enters the **Critical Reserve Space** state, backup ingest is stopped, and target replication to the system is paused. Backup ingest and target replication resume when the DXi4700 exits the **Critical Reserve Space** state.

**Note:** The system generates a service ticket and an admin alert when it enters the **Low Space**, **Critical Reserve Space**, and **No Space** states. In addition, a service ticket and an admin alert are generated when Used Disk Space reaches 85% and 95% of total disk capacity.

Table 10 Low Space States

DXi State	Disk Space Level	System Actions
<b>Normal</b> (Green)	Normal disk space	<b>Low Capacity</b> button is dark. Backup ingest and replication occur as normal. Space reclamation occurs at normally scheduled times.
<b>Low Space</b> (Yellow)	Free Space is less than: 850 GB + 100 GB x (total usable capacity in TB / 10 TB)	<b>Low Capacity</b> button is lit. Backup ingest and replication occur as normal. Space reclamation is automatically started.
<b>Critical Reserve Space</b> (Red)	Free Space is less than: 250 GB	<b>Low Capacity</b> button is lit. Backup ingest and replication are stopped. Space reclamation is automatically started. <b>Note:</b> VTL cartridge metadata files can still be updated.
<b>No Space</b> (Red)	Free Space is less than: 10 GB <b>Note:</b> <b>No Space</b> also occurs if the Used Metadata percentage is 85% or greater.	<b>Low Capacity</b> button is lit. Backup ingest and replication are stopped. Space reclamation is automatically started. <b>Note:</b> VTL cartridge metadata files <i>cannot</i> be updated.

## Blockpool Verify Behavior

A blockpool verify operation occurs if data on the system requires repair, for example, after an unexpected shutdown due to a power loss. During a blockpool verify operation, the banner displays the **Attention** state. Clicking **Attention** displays the message: *A previous unclean shutdown of the DXi has required a data verification to commence. While in this condition the DXi is operational, but performance may be severely degraded.*

While a blockpool verify operation is in progress, some system operations are affected.

- Mounting VTL cartridges created prior to the blockpool verify may fail.
- Retrieving data created prior to the blockpool verify may fail.
- Creating and mounting new VTL cartridges should succeed.
- Ingesting new data to new VTL cartridges or using NAS/OST should succeed.
- Sending data that existed prior to the blockpool verify to a replication target may fail.
- Sending new data to a replication target, or receiving replicated data, should succeed.
- Space reclamation and healthchecks will fail.

When the blockpool verify is complete, the banner displays Normal, and the system resumes normal operation

---

## Main Menu


---

The main menu displays on the left side of the DXi4700 remote management console (see [Figure 27](#)). Click a menu item to display the corresponding management page.

To access **DXi Advanced Reporting**, click the link below the main menu. Quantum DXi Advanced Reporting provides performance data logging and visual reporting and graphing features for Quantum DXi-Series systems. For more information, see the *Quantum DXi Advanced Reporting User's Guide* (6-67353).

**Note:** Clicking **Wizards** on the main menu replaces the main menu with the wizards menu. Click a menu item to begin a wizard, or click **Exit** to return to the main menu (see [DXi4700 Configuration Wizards](#) on page 63).

Figure 27 Main Menu

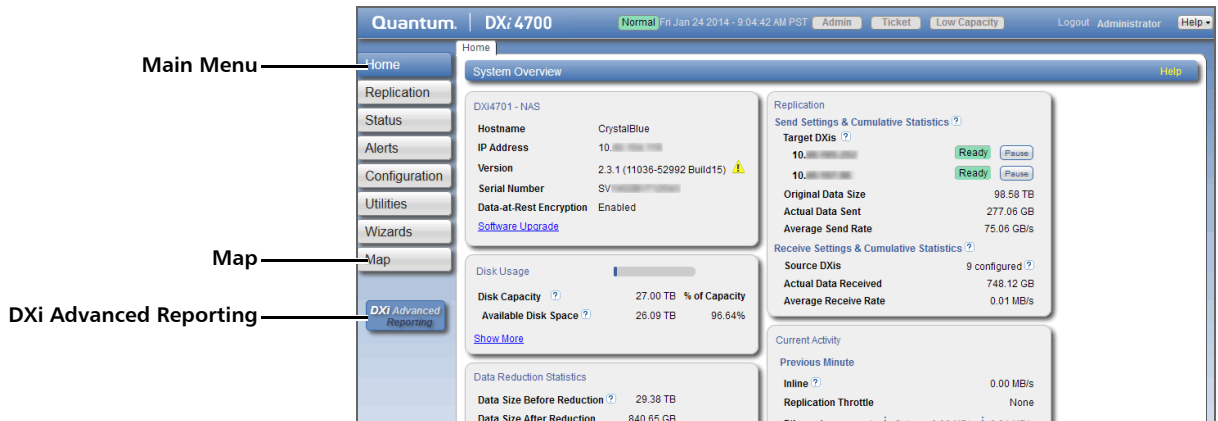

## DXi4700 Management Pages

Use the DXi4700 management pages to view information as well as configure and manage the system. To navigate to a page, first click a menu item, then click a tab to display the corresponding page. Some pages include sub-tabs that display pages with additional information and options.

To view a graphical map of all remote management pages, click **Map** on the main menu (see [Figure 27](#)). On the map, click the name of a page to quickly navigate to that page (see [Figure 28](#)).

If you need help as you work, click **Help** in the page's title bar to see online help for that page. In addition, Quick Tips are available on many pages. Click the **Quick Tip** icon [?] next to a section or field to learn more about that item.

---

**Note:** Management pages related to VTL (virtual tape library) and Fibre Channel status and configuration do not display for DXi4700 NAS configurations. Similarly, management pages related to NAS (network attached storage) and OST (OpenStorage technology) do not display for DXi4700 VTL configurations.

---

---

---


**Caution:** Unless directed to do so by the documentation, do not use your Web browser's **Back**, **Forward**, or **Refresh** buttons when navigating in the remote management console. Doing so may have unintended effects. Instead, always use the main menu and tabs to navigate in the remote management console.

---

---

Figure 28 Remote Management Pages Map

Click a page name to navigate to that page

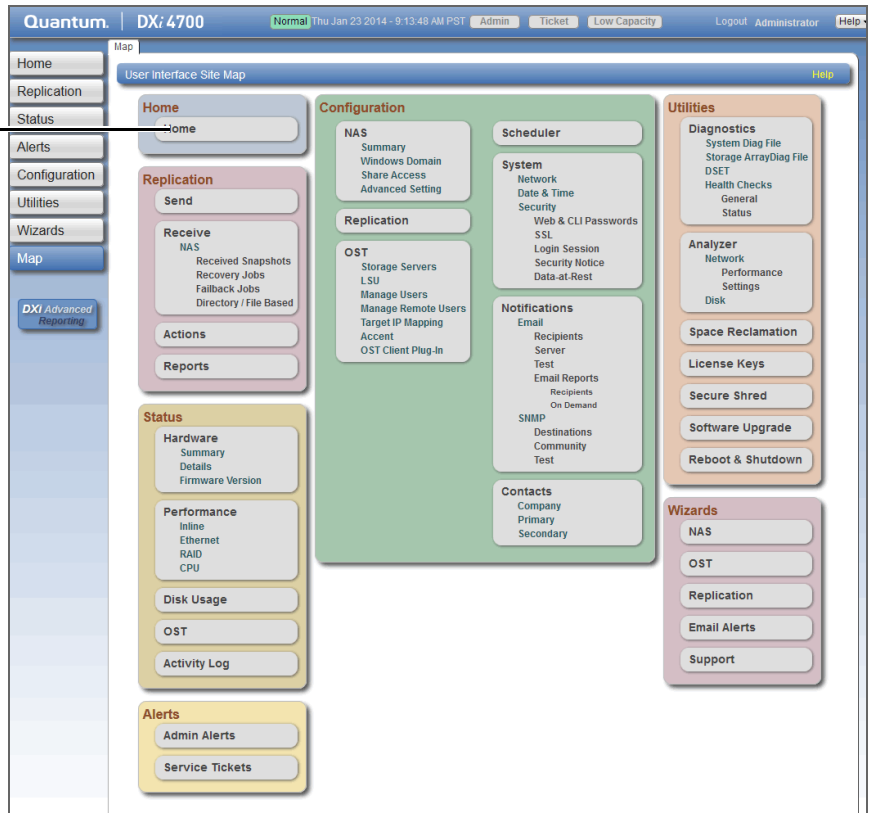







## Chapter 4

# DXi4700 Configuration Wizards

---

The **Configuration Wizards** provide guided assistance for setting up the DXi4700. Use the wizards to quickly configure the most important features of the system, including storage presentation and data replication. Each wizard leads you step-by-step through the configuration process.

The **Configuration Wizards** page displays the first time you log on to the remote management console after completing the **Getting Started** wizard. After that, to access the **Configuration Wizards**, click **Wizards** on the main menu. This replaces the main menu with the **Wizards** menu (see [Figure 29](#)).

The **Wizards** menu includes the following wizards:

- **NAS** (NAS and Multi-Protocol configurations only) - Helps you configure the DXi4700 as a NAS (Network Attached Storage) appliance for use on a Windows or UNIX/Linux network (see [NAS Wizard](#) on page 65).
- **VTL** (VTL and Multi-Protocol configurations only) - Helps you configure the DXi4700 to present its storage as one or more VTL (Virtual Tape Library) partitions for use with a backup application (see [VTL Wizard](#) on page 72).
- **OST** (NAS and Multi-Protocol configurations only) - Helps you configure the DXi4700 to present its storage as one or more OST (OpenStorage) storage servers for use with a backup application (see [OST Wizard](#) on page 81).

- **Replication** - Helps you configure the DXi4700 to send replicated data to or receive replicated data from another DXi system (see [Replication Wizard](#) on page 88).
- **Email Alerts** - Helps you configure the DXi4700 to automatically send notifications and reports to selected recipients (see [Email Alerts Wizard](#) on page 97).

---


**Note:** Before exiting the **Wizards** menu, Quantum recommends configuring an e-mail server and enabling automatic e-mails. To help maintain system integrity, Quantum regularly collects system information through automatic e-mails. These e-mails contain configuration and status information only, and do not contain any customer data stored on the system

---

- **Support** - Helps you enable licensed features on the DXi4700, register your system with Quantum, and perform other tasks that will aid Quantum customer support in assisting you (see [Support Wizard](#) on page 102).

Click an item on the **Wizards** menu to begin a wizard. After you complete a wizard, a green check mark displays next to its name on the **Wizards** menu. To display the main menu again, click **Exit**.

Figure 29 Wizards Menu

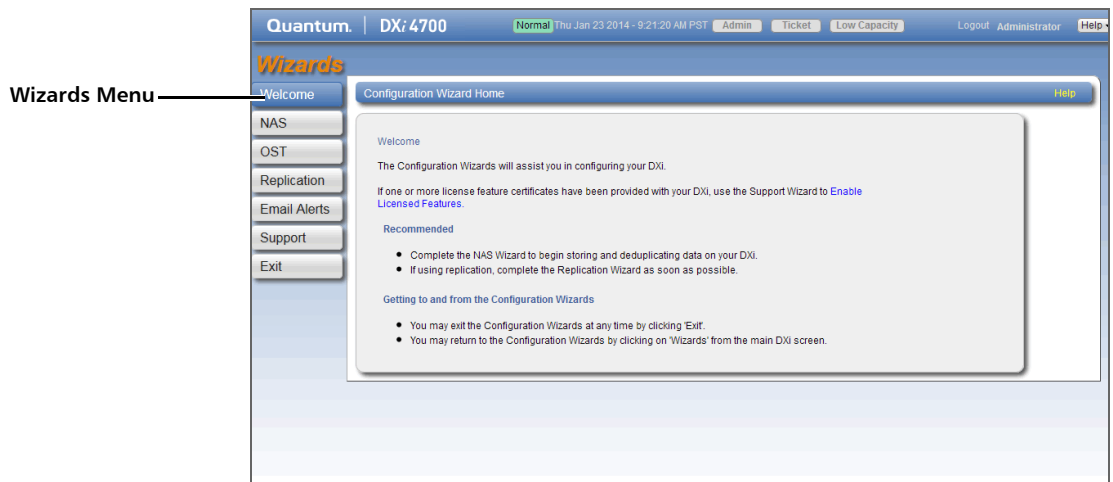

---

## NAS Wizard

The **NAS** wizard provides guided assistance for configuring the DXi4700 as a NAS (Network Attached Storage) appliance. The wizard helps you determine if the NAS shares will be used on a Windows or UNIX/Linux network, and if necessary helps you join the DXi4700 to a Windows domain. Then the wizard guides you through the process of adding one or more NAS shares to receive backup data.

---

**Note:** The NAS Wizard is available in DXi4700 NAS and Multi-Protocol configurations only.

---

**Note:** You cannot use the NAS wizard to edit existing shares. For more information about working with NAS shares, see [NAS](#) on page 212.

---

To begin the **NAS** wizard, on the **Wizards** menu, click **NAS**.

---

### Step 1: About

---


- 1 Read the information about the wizard (see [Figure 30](#)).
- 2 Click **Next** to continue.

---

**Note:** At any time while using the wizard, you can click **Previous** to return to the previous step.

---


Figure 30 NAS Wizard: About

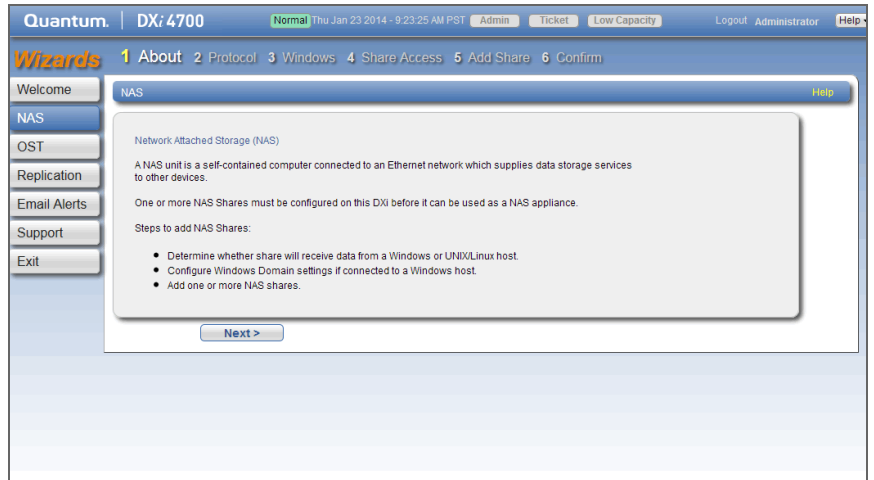

## Step 2: Protocol

- 1 Select the type of host the DXi4700 will present NAS shares to (see [Figure 31](#)):
  - **Windows (CIFS)** - All hosts that will interact with the DXi4700 run Windows.
  - **UNIX/Linux (NFS)** - All hosts that will interact with the DXi4700 run UNIX or Linux.
  - **Both Windows & UNIX/Linux** - Both types of hosts (Windows and UNIX/Linux) will interact with the DXi4700.
- 2 Click **Next** to continue.

Figure 31 NAS Wizard:  
Protocol

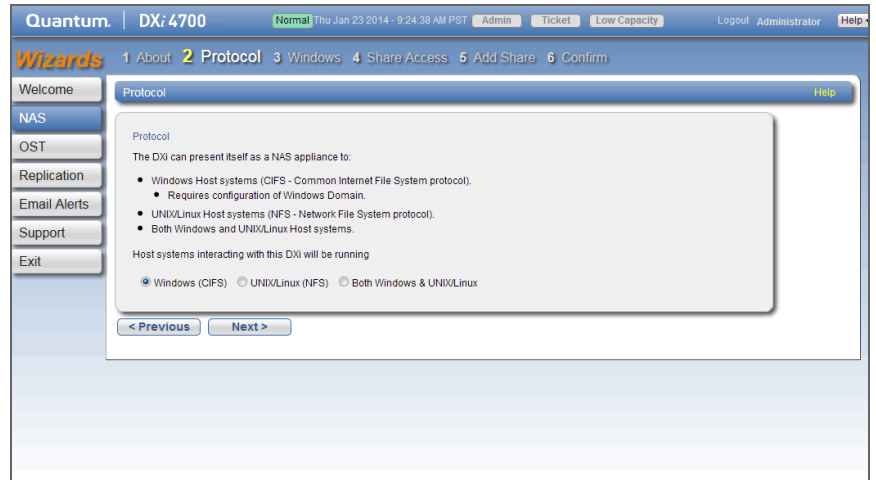

### Step 3: Windows

**Note:** If you selected the **UNIX/Linux (NFS)** option in the previous step, the wizard automatically skips this step and the next step. Continue with [Step 5: Add Share](#) on page 70.

- 1 Select an option for joining the DXi4700 to the Windows network (see [Figure 32](#)):
  - **Active Directory** - Add the DXi4700 to a Windows network using Active Directory
  - **Workgroup** - Add the DXi4700 to a workgroup on a Windows network

**Note:** To disjoin a domain, see [Windows Domain](#) on page 219.

- 2 In the **Domain/Workgroup Name** box, enter the name of the domain or workgroup the DXi4700 is joining.
- 3 (Active Directory only) Enter information about the primary domain controller:
  - **Primary Domain Controller** - Select an option for the Primary Domain Controller (PDC):
    - **Use DNS Discovery** - Discover the PDC automatically.

- **Specify Address** - Enter the fully qualified name or the IP address of the PDC.
- **Organization Unit** - (Optional) Enter the name of the organizational unit in the domain.

The DXi4700 will become a member of this organization.

- **Administrator Name** - Enter **Administrator** or any user that has the right to join the domain.

By default, any user belonging to the **Administrators** group or the **Domain Admins** group has the right to join the domain. In addition, any user can join the domain if they are specifically delegated this right by a member of the **Administrators** group.

- **Administrator Password** - Enter the password for the user entered above.


---

**Note:** To configure users, see [Share Access](#) on page 222.

---

#### 4 Click **Next** to continue.

Figure 32 NAS Wizard:  
Windows

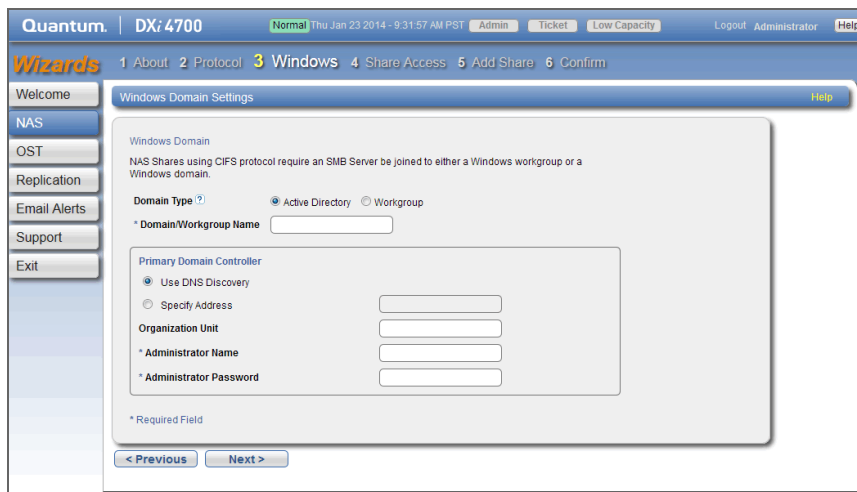

#### Step 4: Share Access

- 1 Do one of the following depending on whether the DXi4700 is joining a Windows Workgroup or an Active Directory Domain:

- **Windows Workgroup** - Enter information about the workgroup user:
  - **User Name** - Enter the name of the workgroup user.
  - **Password** - Enter the password for the workgroup user.
  - **Confirm Password** - Enter the password again to confirm it.
  - **Description** - (Optional) Enter a brief description of the workgroup user.
  - **Grant Administrator Privileges** - Select the check box to add the workgroup user to the Windows Administrators group.


This allows the workgroup user to override certain permissions settings and prevents the workgroup user from being locked out of shares or directories.
- **Active Directory Domain** - Enter information about the share administrator:
  - **Fully Qualified User or Group Name** - Enter the administrator's user or group name.

2 Click **Add**.

3 (Optional) To add additional workgroup users or share administrators, repeat Steps 1–2.

4 Click **Next** to continue.

Figure 33 NAS Wizard: Share Access

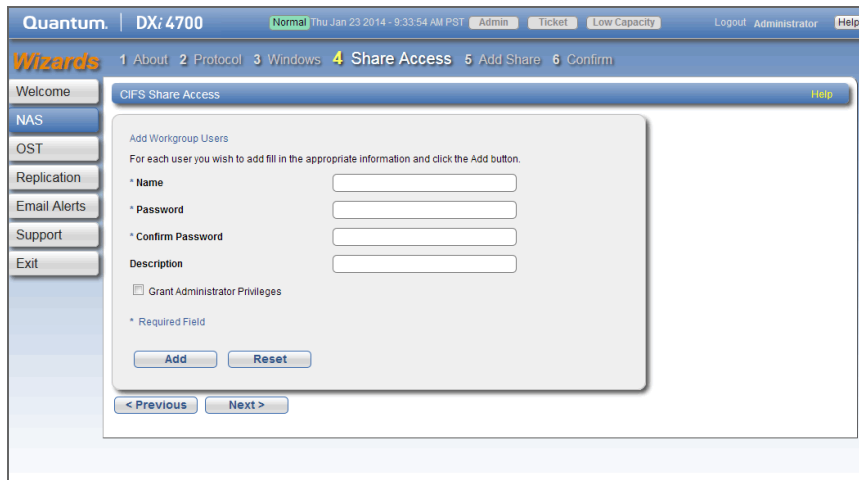

## Step 5: Add Share

1 Under **Add Share**, enter information about the NAS share (see [Figure 34](#)):

- **Name** - Enter the name of the NAS share.
- **Description** - (Optional) Enter a brief description of the share.
- **Enable deduplication** - Select the check box to enable data deduplication. Quantum recommends that you enable data deduplication to optimize disk usage.

---

**Note:** Data deduplication is enabled by default. You cannot enable or disable data deduplication after the share is added.

---

- **Hide from network browsing** - (Windows shares only) Select the check box to hide the share from network browsing. If selected, you cannot see the share when browsing the network.
- **Export Protocol** - (Available only if you selected the **Both** option in [Step 2: Protocol](#) on page 66) Select the export protocol for the share:
  - **CIFS** - Select the CIFS option to use the share on a Windows network.



- **NFS** - Select the NFS option to use the share on a UNIX or Linux network.

- 2 Click **Add**.
- 3 (Optional) To add additional shares, repeat Steps 1–2.
- 4 Click **Next** to continue.

Figure 34 NAS Wizard: Add Share


The screenshot shows the 'Add Shares' wizard in the Quantum DXi4700 interface. The breadcrumb trail indicates the current step is '5 Add Share'. The form contains the following elements:

- Shares:** 18 / Maximum: 128
- Name:** Text input field
- Description:** Text input field with a help icon
- Enable deduplication** (Note: Deduplication setting cannot be changed after share is created.)
- Hide from network browsing**
- Export Protocol:**
  - CIFS (Windows network)
  - NFS (UNIX/Linux network)
- \* Required Field**
- Add** and **Reset** buttons
- < Previous** and **Next >** navigation buttons

## Step 6: Confirm

- 1 Review the settings you selected to make sure they are correct (see [Figure 35](#)). If necessary, click **Previous** to return to a previous step to make changes.
- 2 To make changes to a NAS share you added, first select the share and click **Delete** to delete the share. Then click **Previous** to return to the previous step and add a new share.
- 3 After you have confirmed all settings, click **Finish**. The wizard configures the DXi4700 with the settings you selected.

Figure 35 NAS Wizard:  
Confirm

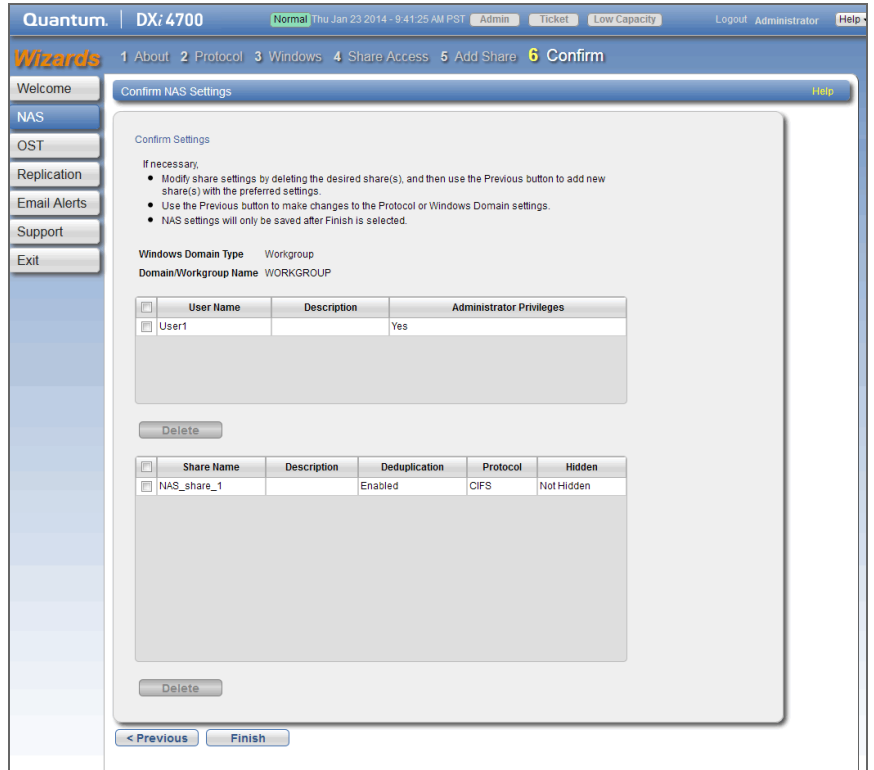

## VTL Wizard

The **VTL** wizard provides guided assistance for configuring the DXi4700 to present its storage as one or more VTL (Virtual Tape Library) partitions for use with a backup application. The wizard guides you through the process of adding one or more VTL partitions, adding virtual media, discovering hosts, and mapping partitions to hosts.

**Note:** The VTL Wizard is available in DXi4700 VTL and Multi-Protocol configurations only.

---

**Note:** You cannot use the VTL wizard to edit or add media to existing partitions, or to edit existing host access groups. For more information about working with VTL partitions, see [VTL](#) on page 229.

---

To begin the VTL wizard, on the **Wizards** menu, click **VTL**.

---

## Step 1: About

---


- 1 Read the information about the wizard (see [Figure 36](#)).
- 2 Click **Next** to continue.

---

**Note:** At any time while using the wizard, you can click **Previous** to return to the previous step.

---

Figure 36 VTL Wizard: About

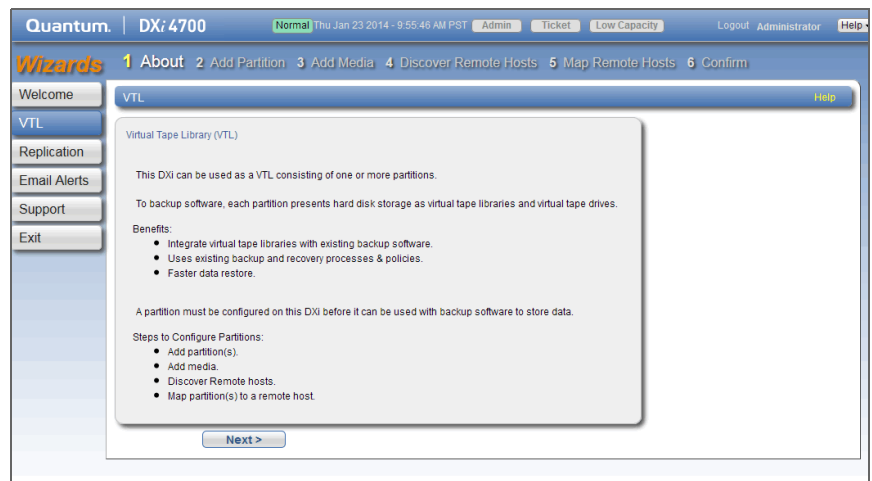

---

## Step 2: Add Partition

---

- 1 Enter information about the partition (see [Figure 37](#)):
  - **Name** - Enter the name of the VTL partition.
  - **Library Model** - Select the library model emulated by the partition. The library model determines the inquiry string returned to the host by the DXi4700.

The following library models are available:

- Quantum DXi7500
- ADIC Scalar 100, ADIC Scalar i2000, or ADIC Scalar i500
- ADIC Pathlight VX
- Quantum Scalar i40/i80 or Quantum Scalar i6000
- Quantum DXi6700, Quantum DXi6902, Quantum DXi6800, Quantum DXi4700, Quantum DXi4601, QuantumDXi4500, or Quantum DXi8500
- Quantum DX3000 or Quantum DX5000
- Quantum PX500 or Quantum PX720
- ATL M2500, ATL P1000, or ATL P7000

If you select a library such as the ATL P1000 or ATL P7000, the DXi4700 appears as the selected library to the host and backup application. If you select Quantum DXi4700, the host and backup application recognize the device as a Quantum DXi4700.

---

**Note:** Quantum recommends that you set the library model to Quantum DXi4700 for best compatibility. If your backup application does not support the Quantum DXi4700 inquiry string, select a different library model. Check your software compatibility guide to verify what library models are supported.

---

- **Number of Storage Slots** - Accept the default number of storage slots (based on DXi model), or enter the number of storage slots in the partition (up to 9,000).

---

**Note:** One I/E slot is created for each storage slot up to a maximum of 240 I/E slots.

---

- **Virtual Tape Drive Model** - Select the tape drive model emulated by the virtual drives in the partition. All virtual tape drives in a partition must be the same model.

The following tape drive models are available:

- Quantum DLT-S4, SDLT600, SDLT320, or DLT7000
- Certance LTO-2 and LTO-3

- IBM LTO-1, LTO-2, LTO-3, LTO-4, or LTO-5
- HP LTO-1, LTO-2, LTO-3, LTO-4, or LTO-5
- **Number of Virtual Tape Drives** - Accept the default number of tape drives (based on DXi model), or enter the number of virtual tape drives in the partition.

---

**Note:** If all tape drives are currently assigned to other partitions, you must remove one or more tape drives from an existing partition to make them available for use in a new partition.

---

- **Enable deduplication** - Select the check box to enable data deduplication. Quantum recommends that you enable data deduplication to optimize disk usage.

---

**Note:** Data deduplication is enabled by default. You cannot enable or disable data deduplication after the partition is added.

---

- 2 Click **Add**.
- 3 (Optional) To add additional partitions, repeat Steps 1–2.
- 4 Click **Next** to continue.

Figure 37 VTL Wizard: Add Partition

Quantum DXi4700 | Normal | Thu Jan 23 2014 - 9:56:58 AM PST | Admin | Ticket | Low Capacity | Logout | Administrator | Help

**Wizards** 1 About 2 Add Partition 3 Add Media 4 Discover Remote Hosts 5 Map Remote Hosts 6 Confirm

Welcome | Add VTL | Help

For each partition you wish to add, fill in the appropriate information and click the Add button.

New Partitions: 0      Existing Partitions: 2      Available Partitions: 62  
Available Virtual Tape Drives: 44 of 64      Maximum Slots per Partition: 9000      Maximum Virtual Tape Drives per Partition: 32

\* Name:

Library Model: Quantum DXi4700

\* Number of Storage Slots: 500

Virtual Tape Drive Model: Quantum DLT-S4

\* Number of Virtual Tape Drives: 4

Enable deduplication. Deduplication setting cannot be changed after partition is created.

\* Required Field

Add      Reset

< Previous      Next >

---

### Step 3: Add Media

---

- 1 In the **Partition** drop-down box, select the partition where the media will be created (see [Figure 38](#)).
- 2 Under **Add Contiguous Media**, enter information about the media:
  - **Initial Location** - The initial location for cartridges after they are created (**Storage Slot** or **I/E Slot**).

---

**Note:** You cannot create more cartridges than the number of available slots in the initial location. For example, if 50 I/E slots are available, you cannot create more than 50 cartridges if the initial location is set to **I/E Slot**.

---

- **Number of Media** - The number of cartridges to create in the partition.
- **Starting Barcode** - The first barcode number in the cartridge sequence.

You can enter any alpha-numeric string for the starting barcode. Subsequent barcodes are incremented accordingly. For example, if you enter AA, the cartridges are numbered AA0000, AA0001, AA0002, and so on. If you enter a starting barcode with less than 6 characters, zeroes are appended to the barcode to make it 6 characters long.

- **Media Type** - The media type of the cartridges.


---

**Note:** The available media type options are determined by the type of tape drive selected when the partition was created (see [Adding a VTL Partition](#) on page 232).

---

- **Media Capacity** - The capacity of the cartridges. Select an option:
    - **Native Size** - The capacity is determined by the selected media type.
    - **Custom Size** - The capacity is a custom value. Enter the custom cartridge capacity in the box. Make sure the value is within the acceptable range displayed next to the box.
- 3 Click **Add**.
  - 4 (Optional) To add additional media, repeat Steps 1–3.
  - 5 Click **Next** to continue.

Figure 38 VTL Wizard: Add Media

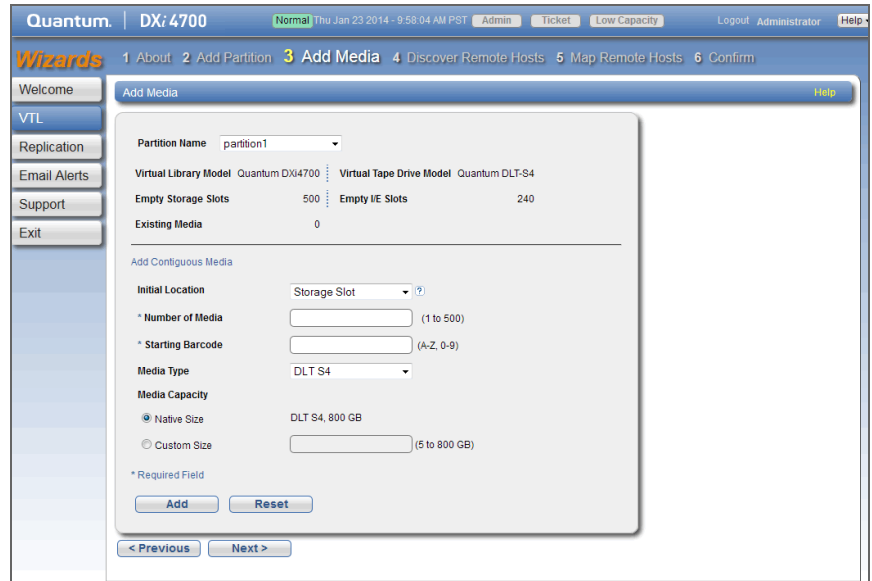

## Step 4: Discover Remote Hosts

- 1 Click **Discover Remote Hosts** to list all hosts that are known to the DXi4700 (see [Figure 38](#)).

A host is made known to the DXi4700 if you enter the host ID on this page, or if the host logs on to one or more Fibre Channel target ports.

If you do not see the world wide name (WWN) of the host, make sure the host is connected to a Fibre Channel port on the DXi4700 and click **Discover Remote Hosts** again.

The **Backpanel Locations** section displays a graphical representation of the Fibre Channel and Ethernet ports as they appear on the rear of the system.

---


**Note:** An **Active** status indicates the host is currently logged on to one or more Fibre Channel target ports.

---

- 2 Enter information about the host:
  - **Remote Host WWPN** - Enter the World Wide Port Name (WWPN) of the host.

- **Alias** - Enter a descriptive alias for the host.
- 3 Click **Apply**.
  - 4 (Optional) To discover additional hosts, repeat Steps 1–3.
  - 5 Click **Next** to continue.

Figure 39 VTL Wizard: Discover Remote Hosts

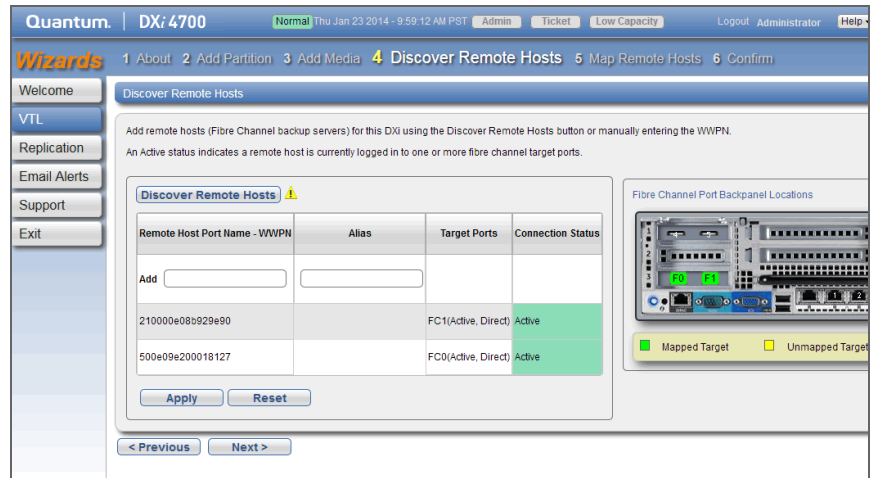

## Step 5: Map Remote Hosts

- 1 Enter information about the host access group (see [Figure 40](#)):
  - **Group Name** - Enter a name for the group.
  - **Partition** - Select the partition to associate with the group.
  - **Remote Host** - Select the host (initiator) to associate with the group.
  - **Target** - Select the target (port) to associate with the group.

The **Backpanel Locations** section displays a graphical representation of the Fibre Channel and Ethernet ports as they appear on the rear of the system. A dark border displays around the currently selected target.



---

**Note:** To change the LUN numbers assigned to a device, or to map virtual devices to a host, use the **Configuration > VTL > Host Access > Host Mapping** page (see [Remote Host Mapping](#) on page 248).

---

- 2 (Optional) Select the **Use CCL** check box to use the Command and Control LUN.

---

**Note:** The CCL (Command and Control LUN) is not used in most environments. This option is recommended for host access groups that contain an HP-UX host. It can also be used if hosts that are not assigned to any host access group exist in the SAN. The CCL is accessible to hosts only through LUN 0.

---

---

---


**Caution:** If you are not sure if you should use CCL, contact Quantum Customer Support before you enable this option.

---

---

- 3 Click **Add**.
- 4 (Optional) To map additional hosts, repeat Steps 1–3.
- 5 Click **Next** to continue.


Figure 40 VTL Wizard: Map Remote Hosts

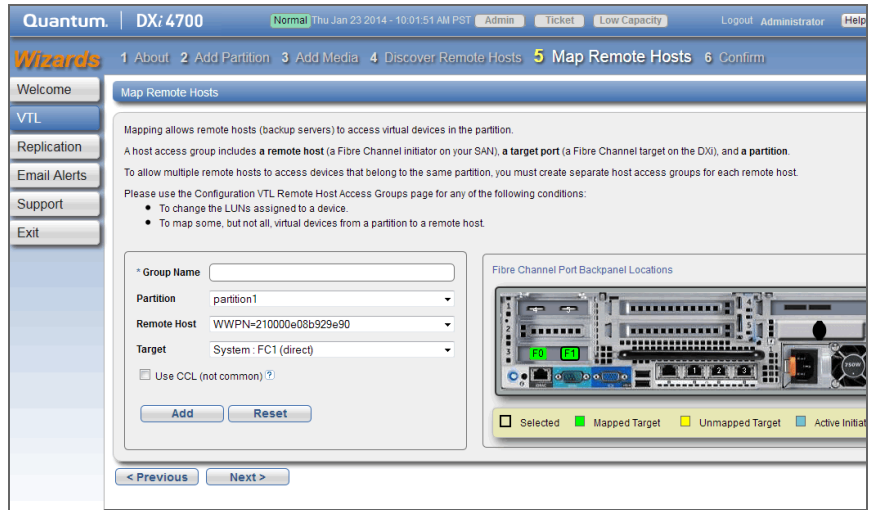

## Step 6: Confirm

- 1 Review the settings you selected to make sure they are correct (see [Figure 41](#)). If necessary, click **Previous** to return to a previous step to make changes.
- 2 To make changes to a VTL partition, media, or host access group you added, first select the item and click **Delete** to delete it. Then click **Previous** to return to the appropriate step and add a new item.
- 3 After you have confirmed all settings, click **Finish**. The wizard configures the DXi4700 with the settings you selected.

Figure 41 VTL Wizard: Confirm

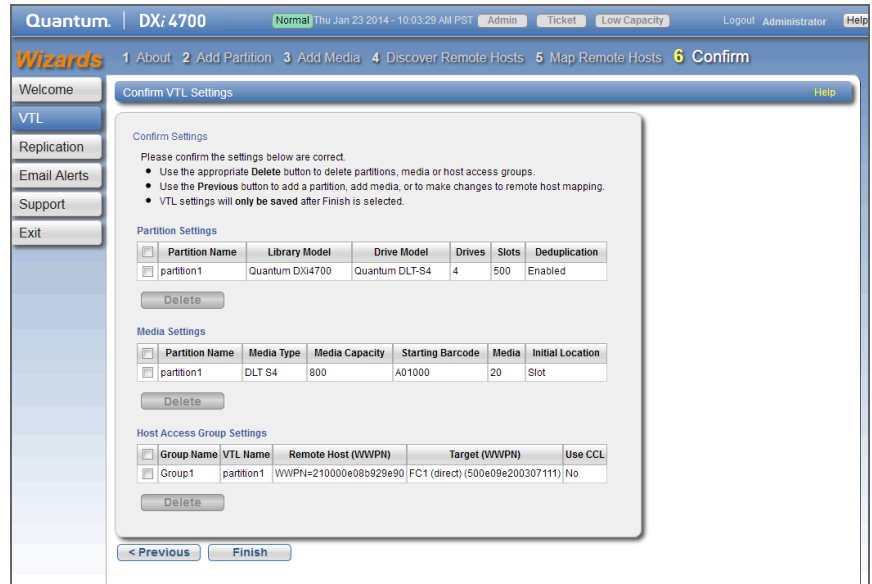

## OST Wizard

The **OST** wizard provides guided assistance for configuring the DXi4700 to present its storage as one or more OST (OpenStorage) storage servers for use with a backup application. The wizard guides you through the process of adding one or more OST storage servers, configuring LSUs (logical storage units), and adding OST users. The wizard also provides a link for downloading and installing the OST Plug-in on your backup host.

---

**Note:** The OST Wizard is available in DXi4700 NAS and Multi-Protocol configurations only.

---

**Note:** If you plan to use **Concurrent Optimized Duplication**, you should complete the Replication wizard before beginning the OST wizard (see [Replication Wizard](#) on page 88).

---

---

**Note:** You cannot use the OST wizard to edit existing storage servers or LSUs. For more information about working with OST, see [OST](#) on page 269.

---

To begin the **OST** wizard, on the **Wizards** menu, click **OST**.

---

## Step 1: About

---

- 1 Read the information about the wizard (see [Figure 42](#)).

The **About** page displays the status of the OST service. OST settings can be configured in **Ready**, **Stopped**, or **Verifying** state. The OST server is available for backup only in **Ready** state.


- 2 Click **Next** to continue.

---

**Note:** At any time while using the wizard, you can click **Previous** to return to the previous step.

---

Figure 42 OST Wizard: About

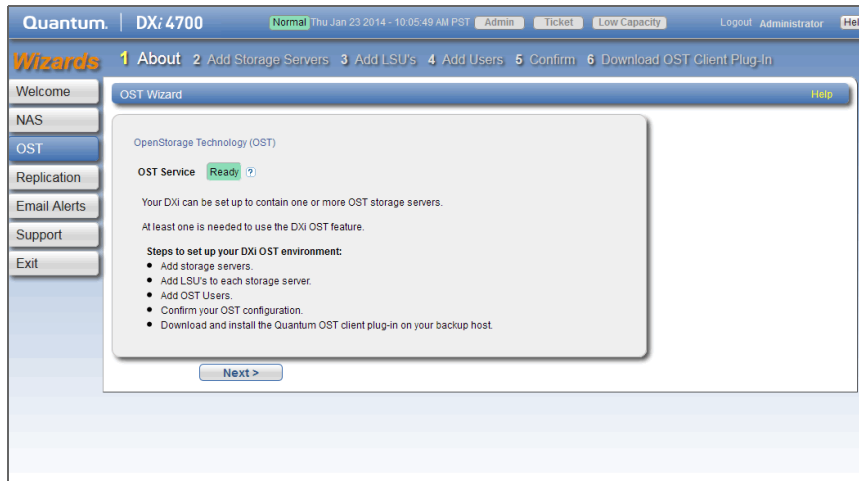

---

## Step 2: Add Storage Servers

---

- 1 Under **Add Storage Server**, enter information about the storage server (see [Figure 43](#)):
  - **Name** - Enter the name of the storage server.

---

---

**Caution:** Do not use an underscore ( \_ ) in the name of the storage server.

---

---

- **Description** - (Optional) Enter a brief description of the storage server.
- **Max Connections** - Enter the maximum number of connections allowed to the storage server (3 to 65536).

---

**Note:** Quantum recommends setting **Max Connections** to 300.

---

- **Enable Concurrent Optimized Duplication** - Select the check box to enable optimized duplication during OST ingest.

Concurrent Optimized Duplication is disabled by default. If enabled, as data is written to the storage server, it is simultaneously replicated to the target DXi. When optimized duplication or Automatic Image Replication subsequently occurs, the operation is more efficient because a portion of the required data has already been replicated to the target storage server.

---

**Note:** To configure the target DXi, see [Replication Wizard](#) on page 88.

---

---

**Note:** When Concurrent Optimized Duplication is enabled, all data on the storage server is duplicated, not just the specified images.

---

- 2 Select the check box for each optimized duplication target you want to duplicate the storage server to. When the storage server is duplicated, its data will be sent to all selected targets.

- 3 Click **Add**.


The storage server displays in the **Storage Servers Added** table.

- 4 (Optional) To add additional storage servers, repeat Steps 1–2.

To remove a storage server, select it in the **Storage Servers Added** table and click **Delete**.

- 5 Click **Next** to continue.

Figure 43 OST Wizard: Add Storage Servers

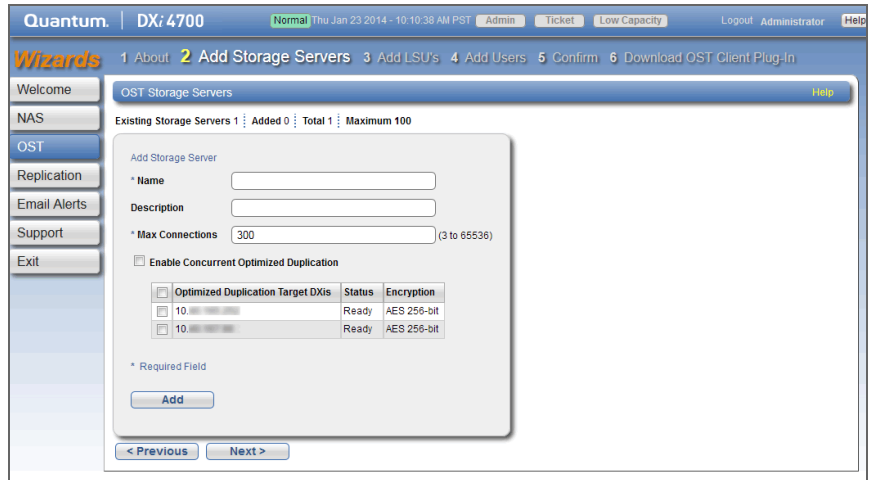

### Step 3: Add LSUs

1 Enter information about the LSU (see [Figure 44](#)).

- **Storage Server** - Select the storage server that will contain the new LSU.
- **Use Available Capacity** - Select this option to add an LSU that uses the available capacity on the system.

You cannot add an available capacity LSU to a storage server that already contains an LSU. Also, if you add an available capacity LSU to a storage server, you cannot add additional LSUs to that same storage server.

---

**Note:** After you add an LSU that uses the **Available Capacity** option, you cannot change the LSU to use the **Specific Capacity** option. Instead, you must delete the LSU, then add a new LSU and choose the **Specific Capacity** option (see [Deleting an LSU](#) on page 288).

---

- **Specify Capacity** - Select this option to specify the physical capacity of the LSU, and then enter the following information.
  - **LSU Name** - Enter the name of the LSU.
  - **Physical Capacity** - Enter the physical capacity of the LSU (1 to 1048576 GB).

2 Click **Add**.

The LSU displays in the **LSUs Added** table.

3 (Optional) To add additional LSUs, repeat Steps 1–2.

To remove an LSU, select it in the **LSUs Added** table and click **Delete**.


4 Click **Next** to continue.

---

**Note:** To configure the LSU for Automatic Image Replication, use the **Configuration > OST > LSU** page (see [LSU](#) on page 282).

---

Figure 44 OST Wizard: Add LSUs

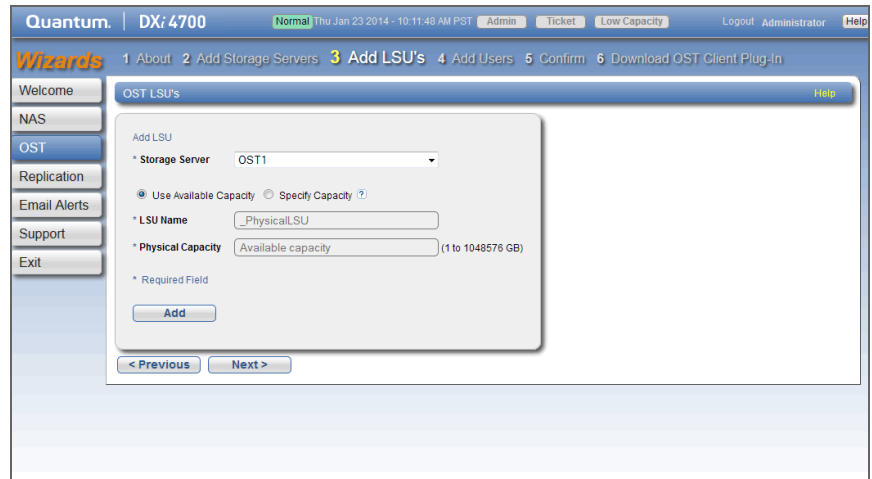

## Step 4: Add Users

1 Enter information about the authenticated user (see [Figure 45](#)):

- **Username** - Enter the name of the authenticated user.
- **Password** - Enter the password for the authenticated user.
- **Confirm Password** - Enter the password again to confirm it.
- **Description** - (Optional) Enter a brief description of the authenticated user.

2 Click **Apply**.

The user displays in the **Users Added** table.

- 3 (Optional) To add additional users, click **Add** and then repeat Steps 1–2.

To remove a user, select it in the **Users Added** table and click **Delete**.

- 4 Click **Next** to continue.


Figure 45 OST Wizard: Add Users

## Step 5: Confirm

- 1 Review the settings you selected to make sure they are correct (see [Figure 46](#)). The items to be added display in the **Storage Servers Added**, **LSUs Added**, and **Users Added** tables. If necessary, click **Previous** to return to a previous step to make changes.
- 2 To make changes to storage servers, LSUs, or users you added, click **Previous** to return to the appropriate step. Select the incorrect item and click **Delete** to remove it, and then add a new item.
- 3 After you have confirmed all settings, click **Finish**. The wizard configures the DXi4700 with the settings you selected.



Figure 46 OST Wizard:  
Confirm

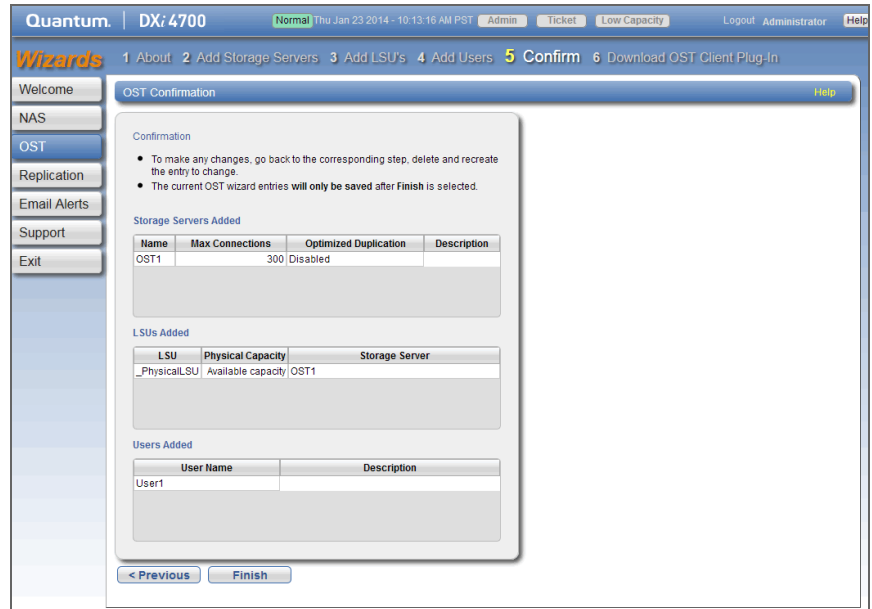


## Step 6: Download OST Client Plug-In

To download the OST Plug-in, click **Client Plug-in Download** (see [Figure 47](#)). On the download page, download the correct OST Plug-in for your backup application and operating system.

Also on the download page, click **Installation Instructions**, to download the *OST Plug-in Installation Instructions*. Follow the instructions to install the OST Plug-in on your media server.

Figure 47 OST Wizard:  
Download OST Client Plug-in

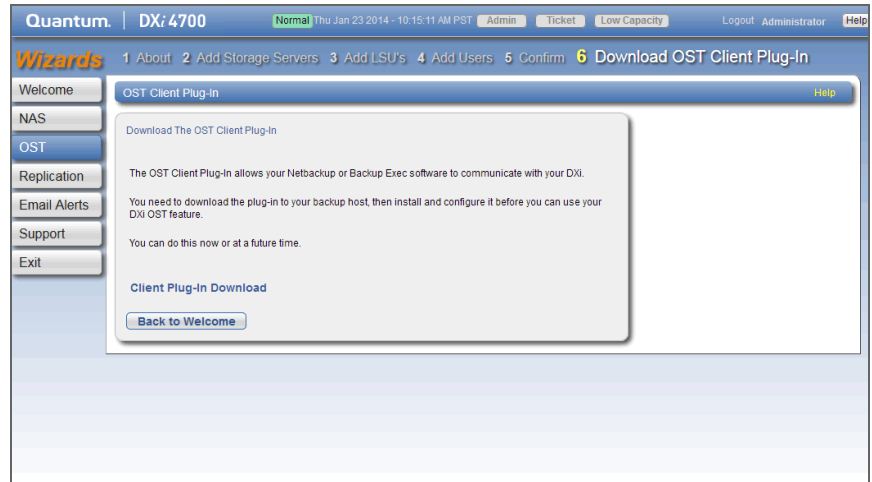

## Replication Wizard

The **Replication** wizard provides guided assistance for configuring the DXi4700 to send replicated data to another DXi system as part of disaster recovery plan. The wizard can also help you configure the DXi4700 to receive replicated data from another DXi system.

Sources *send* replicated data, and targets *receive* replicated data. A target system can receive data from up to 10 sources. However, a source system can send data to only a single target. Finally, one system can act as both a source and a target.

---

**Note:** For more information about working with data replication, see [DXi4700 Replication](#) on page 121.

---

**Note:** Use the **Replication** wizard (or the **Configuration > Replication** page) to configure other DXi systems that this DXi4700 is configured to send replicated data to or receive replicated data from. You should configure a target system before configuring source systems.

---

To begin the **Replication** wizard, on the **Wizards** menu, click **Replication**.

---

## Step 1: About

---

- 1 Read the information about the wizard (see [Figure 48](#)).
- 2 Click **Next** to continue.


---

**Note:** At any time while using the wizard, you can click **Previous** to return to the previous step.

---

---

Figure 48 Replication Wizard:  
About

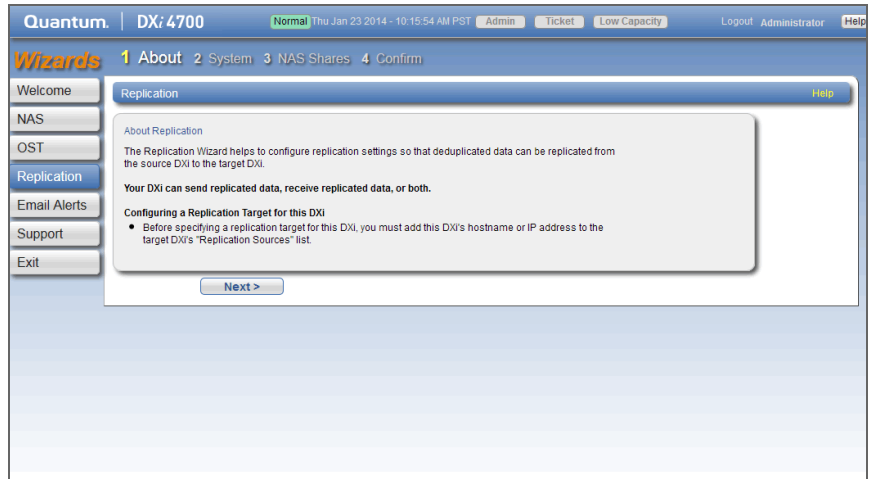

---

## Step 2: System

---

- 1 If data on this DXi4700 will be replicated to another DXi system, enter target information under **Target DXis** (see [Figure 49](#)). You can specify up to two targets:

---

**Note:** If two targets are already specified, you must delete a target before adding another. First click **Pause** to pause replication to the target, and then click **Delete** to remove the target.

---

---

**Note:** Before specifying a target, make sure you have completed the **Replication** wizard on the target DXi. The target DXi must be configured to allow the source DXi hostname or IP address.

---

- a In the **Target Hostname or IP Address** box, enter the hostname or IP address of the system that will receive the replicated data.

---

**Note:** When entering IP addresses, never use an address that is in a reserved IP address range. To see a list of reserved IP address ranges, click the quick tip icon [?] located near the IP address field.

---

**Note:** To use hostname format, you must specify at least one DNS IP address on the **Network** page (see [Network](#) on page 317).

---

- b (Optional) Select an encryption option:

- **NONE** - Data is not encrypted when sending replication data to the target system.
- **AES 128-BIT** - Data is encrypted using AES 128-bit encryption when sending replication data to the target system.
- **AES 256 BIT** - Data is encrypted using AES 256-bit encryption when sending replication data to the target system.

---

**Caution:** Select 128-bit encryption if you are sending data to a DXi running a system software version prior to DXi 2.1 Software.

---

**Note:** AES encryption options are available only if the Data-in-Flight license is installed (see [License Keys](#) on page 392).

---

- c In the **Source IP Address** field, enter the IP address that is used to uniquely identify the source DXi to the target. This may be different than the actual network IP address of the source DXi.

If the target system is at DXi 2.1 Software or higher, this field is not required. If the target system is at DXi 2.0.1.x Software or below, then you must enter the IP address by which the target system recognizes the source system. The default value is **0.0.0.0**.

**2** If data on other DXi systems will be replicated to this DXi4700, enter the following information under **Source DXis**:

**a** In the **Source Hostnames or IP Addresses** box, enter the hostname or IP address of the system that will send the replicated data to the DXi4700.


You can specify up to 10 replication sources. To enter multiple sources, press **<Enter>** after each entry.

**b** In the **Maximum Snapshots Per Share or Partition** drop-down box, select the number of snapshots to retain for each replicated share or partition (up to 32).

During scheduled or manual data replication, the DXi4700 receives a snapshot from the source system. A snapshot contains all of the data necessary to fully recover or failback a NAS share or VTL partition to the point in time when the snapshot was saved.

**3** Click **Next** to continue.

Figure 49 Replication Wizard:  
System

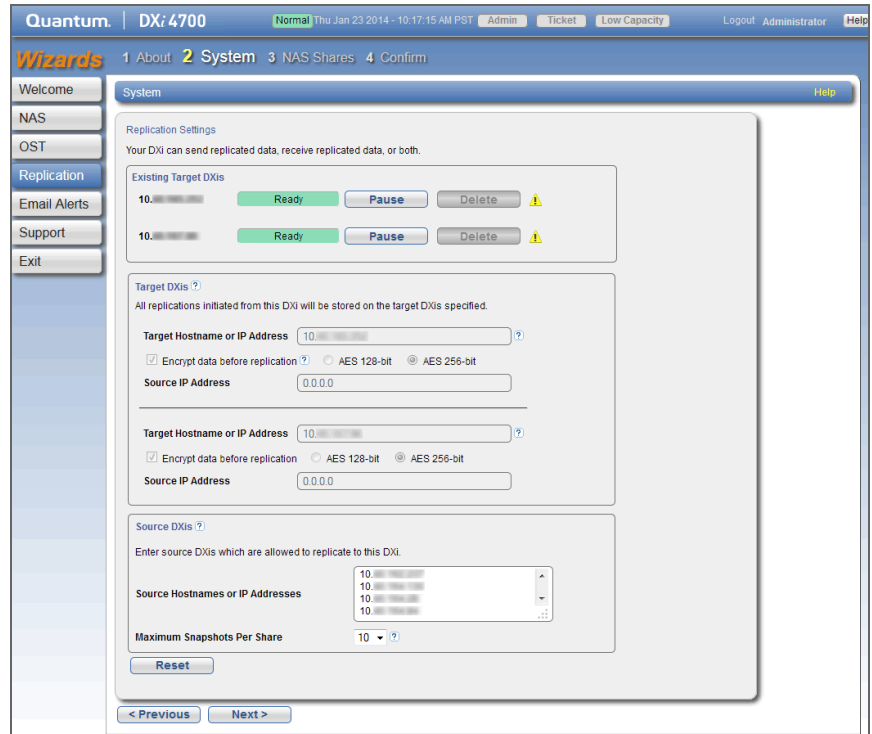

### Step 3: NAS Shares

#### (DXi4700 NAS and Multi-Protocol configurations only)

- 1 Select a NAS share in the **Replication Settings for NAS Shares** section to manage its replication settings (see [Figure 50](#)).

**Note:** For help adding NAS shares to the system, use the **NAS Configuration Wizard** (see [NAS Wizard](#) on page 65).

- 2 To configure the share to replicate its data to another DXi system, enter the following information under **Send**:
  - a Select the **Enable replication for selected share** check box to enable replication for the share.
  - b (Optional) Select the **Enable Directory/File based replication to target** check box to enable Directory/File Based Replication for the share, and then enter a **Sync ID** in the box.

With Directory/File Based Replication, a file is automatically replicated when it is closed or a period of time after it is modified. After replication, the replicated files are immediately available on the target system.

The Sync ID is used to identify the target share that will receive replicated data from the source share. The Sync ID *must* be identical to the Sync ID of the target share on the target system.

- c Select the check box for each replication target you want to replicate the share to. When the share is replicated, its data will be sent to all selected targets.
- 3 To configure the share to receive replicated data from another DXi system, enter the following information under **Receive**:

- a (Optional) Select the **Enable Directory/File based replication to this DXi** check box to enable Directory/File Based Replication for the share, and then enter a **Sync ID** in the box.

The Sync ID is used to identify the source share that will send replicated data to the target share. The Sync ID *must* be identical to the Sync ID of the source share on the source system.

- b If you enabled Directory/File Based Replication, select an **Access** option:
  - **Locked** - The share is not allowed to receive new Directory/File Based Replication data.
  - **Unlocked** - The share is allowed to receive new Directory/File Based Replication data.


---

**Note:** You cannot configure a share to both send and receive Directory/File Based Replication data.

---

- 4 Click **Apply**.
- 5 (Optional) To configure additional shares for replication, repeat Steps 1–4.
- 6 Click **Next** to continue.

Figure 50 Replication Wizard:  
NAS Shares

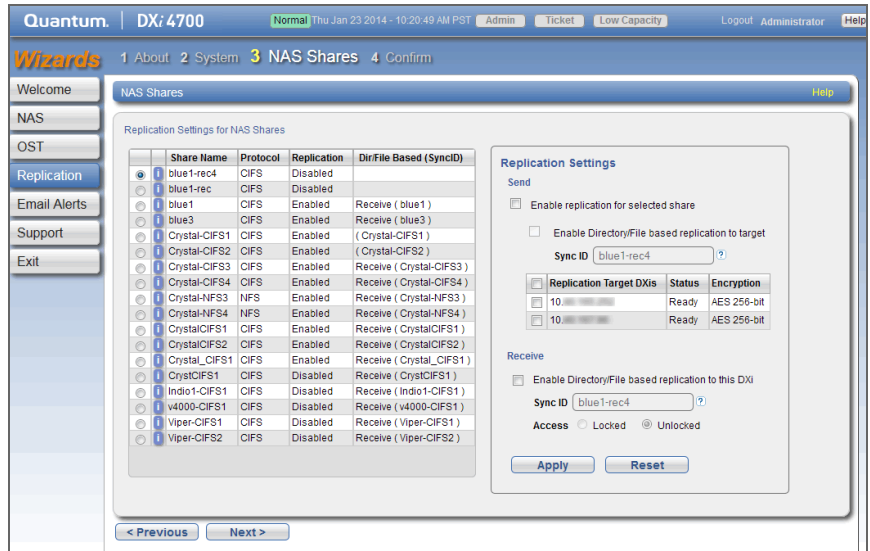

### Step 3: VTL Partition

#### (DXi4700 VTL and Multi-Protocol configurations only)

- 1 Select a VTL partition in the **Replication Settings for VTL Partitions** section to manage its replication settings (see [Figure 51](#)).

**Note:** For help adding VTL partitions to the system, use the **VTL Configuration Wizard** (see [VTL Wizard](#) on page 72).

- 2 To configure the partition to replicate its data to another DXi system, enter the following information under **Send**:
  - a Select the **Enable replication for selected partition** check box to enable replication for the partition.
  - b (Optional) Select the **Enable Cartridge based replication to target** check box to enable Cartridge Based Replication for the partition, and then enter a **Sync ID** in the box.

With Cartridge Based Replication, a cartridge is automatically replicated when it is unmounted. After replication, the replicated cartridges are immediately available on the target system.



The Sync ID is used to identify the target partition that will receive replicated data from the source partition. The Sync ID *must* be identical to the Sync ID of the target partition on the target system.

- c Select the check box for each replication target you want to replicate the partition to. When the partition is replicated, its data will be sent to all selected targets.
- 3 To configure the partition to receive replicated data from another DXi system, enter the following information under **Receive**:
- a (Optional) Select the **Enable Cartridge based replication to this DXi** check box to enable Cartridge Based Replication for the partition, and then enter a **Sync ID** in the box.

The Sync ID is used to identify the source partition that will send replicated data to the target partition. The Sync ID *must* be identical to the Sync ID of the source partition on the source system.

- b If you enabled Cartridge Based Replication, select an **Access** option:
  - **Locked** - The partition is not allowed to receive new Cartridge Based Replication data.
  - **Unlocked** - The partition is allowed to receive new Cartridge Based Replication data.


---

**Note:** You cannot configure a partition to both send and receive Cartridge Based Replication data.

---

- 4 Click **Apply**.
- 5 (Optional) To configure additional partitions for replication, repeat Steps 1–4.
- 6 Click **Next** to continue.


Figure 51 Replication Wizard:  
VTL Partitions

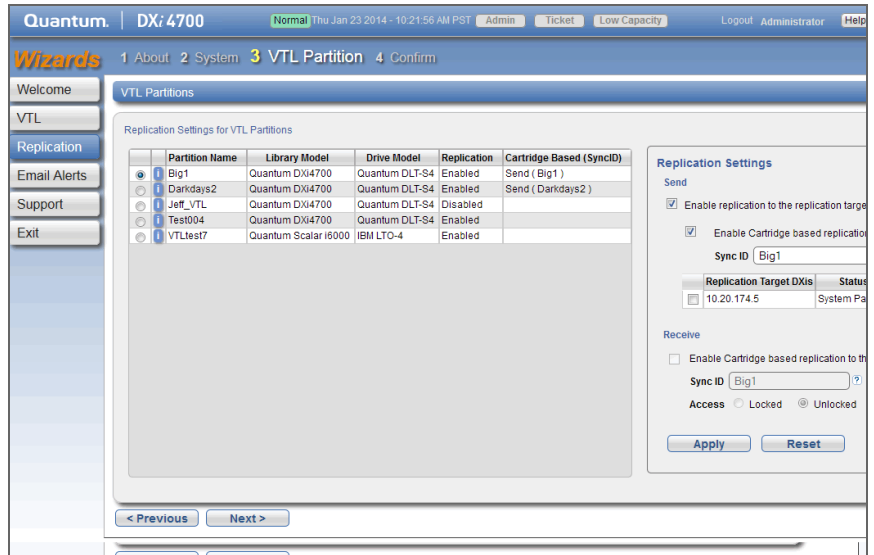

## Step 4: Confirm

- 1 Review the settings you selected to make sure they are correct. If necessary, click **Previous** to return to a previous step to make changes (see [Figure 52](#)).
- 2 After you have confirmed all settings, click **Finish**. The wizard configures the DXi4700 with the settings you selected.

Figure 52 Replication Wizard: Confirm

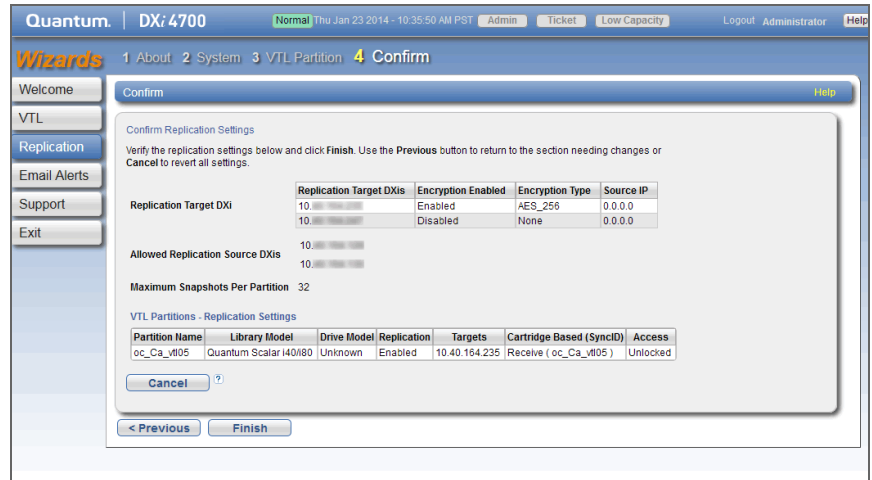

## Email Alerts Wizard

The **Email Alerts** wizard provides guided assistance for configuring the DXi4700 to automatically send notifications and reports to selected recipients. The wizard helps you configure an outgoing e-mail server. Then the wizard guides you through the process of specifying e-mail recipients and selecting the notifications and reports to send to the recipients.

**Note:** For more information about sending e-mail alerts, see [Email](#) on page 352.

To begin the **Email Alerts** wizard, on the **Wizards** menu, click **Email Alerts**.

### Step 1: About


- 1 Read the information about the wizard (see [Figure 53](#)).
- 2 Click **Next** to continue.

---

**Note:** At any time while using the wizard, you can click **Previous** to return to the previous step.

---

Figure 53 Email Alerts Wizard:  
About

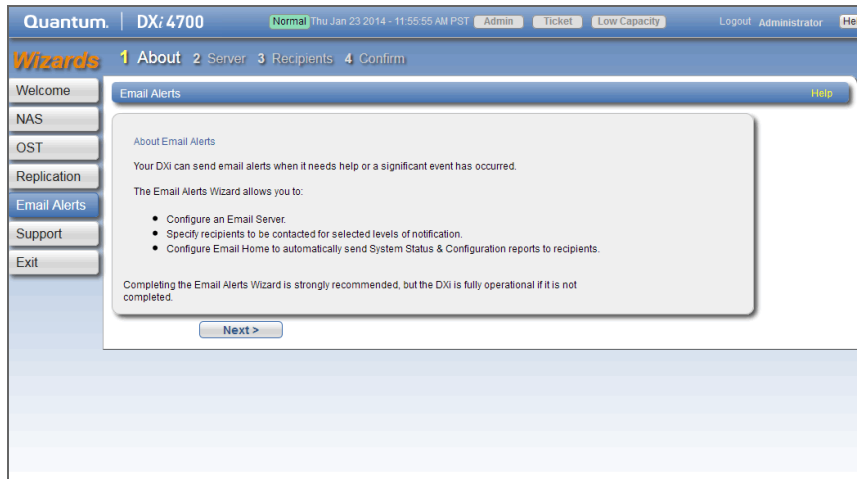

---

## Step 2: Server

---

- 1 In the **Hostname or IP Address** box, enter the hostname or IP address of the outgoing e-mail server (see [Figure 54](#)).

---

**Note:** When entering IP addresses, never use an address that is in a reserved IP address range. To see a list of reserved IP address ranges, click the quick tip icon [?] located near the IP address field.

---

---

**Note:** To use hostname format, you must specify at least one DNS IP address on the **Network** page (see [Network](#) on page 317).

---

- 2 In the **From Email Address** box, enter the return e-mail address displayed in e-mails sent by the DXi4700.

Specify a return address that lets you easily identify the system that generated the e-mail (for example, systemname@any-domain.com). The return address must contain an @ symbol and a valid domain name, including a period.

- 3 (Optional) Select the **Enable Admin Alerts about Email Server not configured** check box to have system generate administration alerts to notify you if an e-mail server is not configured.
- 4 (Recommended) Select the **Enable automatic emails to Quantum** check box to periodically send system configuration and status information to Quantum, including any software upgrades you have installed using the **Software Upgrade Utility**. Quantum Support can use this information to provide a better support experience in the future.

---

**Note:** Automatic e-mails contain configuration and status information only, and do not contain any customer data stored on the system.

---

- 5 Click **Next** to continue.

Figure 54 Email Alerts Wizard:  
Server


The screenshot shows the 'Email Server' configuration screen in the Quantum DXi4700 wizard. The interface includes a top navigation bar with 'Quantum | DXi: 4700', a status indicator 'Normal Thu Jan 23 2014 - 10:56:20 AM PST', and user options 'Admin', 'Ticket', 'Low Capacity', 'Logout', 'Administrator', and 'Help'. Below this is a 'Wizards' section with steps: 1 About, 2 Server (active), 3 Recipients, and 4 Confirm. A left sidebar contains buttons for 'Welcome', 'NAS', 'OST', 'Replication', 'Email Alerts' (highlighted), 'Support', and 'Exit'. The main content area is titled 'Email Server' and contains a form for 'Outgoing Email Server' with two required fields: '\* Hostname or IP Address' and '\* From Email Address'. A '\* Required Field' note is present. At the bottom of the form are '< Previous' and 'Next >' buttons.

### Step 3: Recipients

- 1 Click **Add** to add an e-mail recipient.
- 2 Under **Add Email Recipient**, enter information about the recipient (see [Figure 55](#)):
  - **Name** - The name of the recipient.
  - **Email Address** - The e-mail address of the recipient.

- **Notification Type** - Select the types of notifications to send to the recipient:
  - **High** - Send e-mail notifications for High service tickets.  
High service tickets indicate that a critical problem has occurred and needs to be resolved immediately. The operation and performance of the DXi4700 are degraded, and there is a risk of system failure or data loss.
  - **High and Medium** - Send e-mail notifications for High and Medium service tickets.  
Medium service tickets indicate that a serious problem occurred and needs to be resolved, but it does not necessarily need to be fixed immediately. The operation and performance of the DXi4700 may be degraded.
  - **All** - Send e-mail notifications for High, Middle, and Low service tickets, as well as any administration alerts.  
Low service tickets indicate that a minor problem occurred and needs to be resolved, but the operation and performance of the DXi4700 are not significantly affected.
- 3 Select the **Notification Enabled** check box to enable sending of notifications to the recipient.
- 4 Click **Add**.  
The recipient displays in the **Email Recipient** list.
- 5 (Optional) To add additional recipients, click **Add** and then repeat Steps 1–4.  
To change a recipient, select it in the **Email Recipient** list and click **Edit**. To remove a recipient, select it in the **Email Recipient** list and click **Delete**.
- 6 Click **Next** to continue.


Figure 55 Email Alerts Wizard:  
Recipients

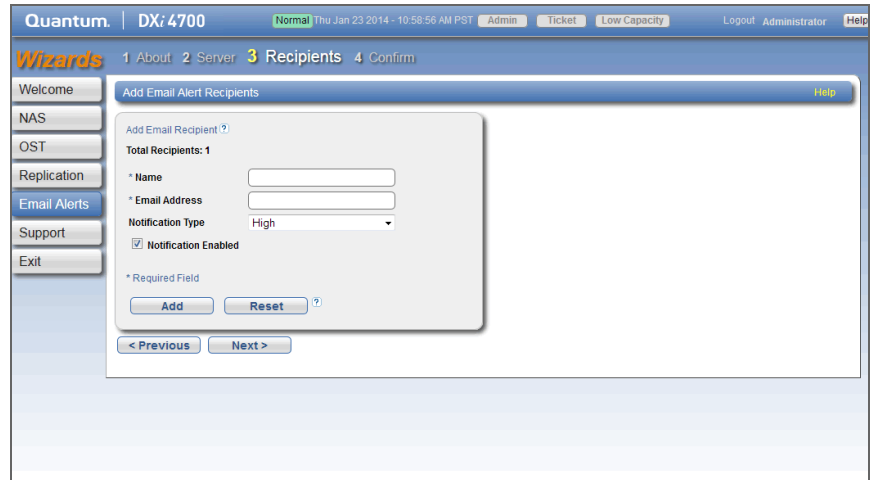

## Step 4: Confirm

- 1 Review the settings you selected to make sure they are correct. If necessary, click **Previous** to return to a previous step to make changes (see [Figure 56](#)).
- 2 To make changes to an e-mail recipient you added, click **Previous** to return to the appropriate step. Select the incorrect item and click **Delete** to remove it, and then add a new item.
- 3 After you have confirmed all settings, click **Finish**. The wizard configures the DXi4700 with the settings you selected.

Figure 56 Email Alerts Wizard:  
Confirm

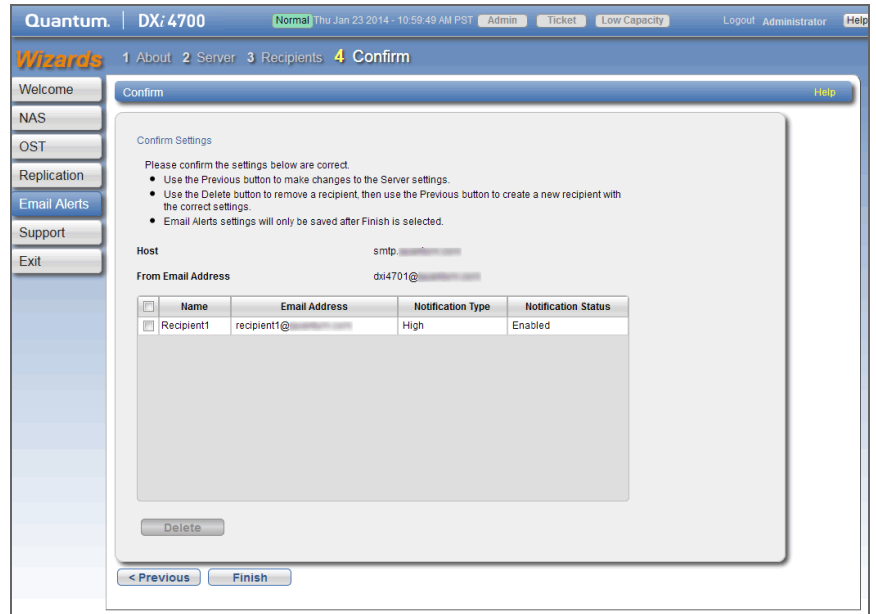

## Support Wizard

The **Support** wizard provides guided assistance to help you enable licensed features on the DXi4700 and register your system with Quantum. The wizard also guides you through other tasks that will aid Quantum customer support in assisting you, such as downloading StorageCare Guardian and creating a system log.

To begin the **Support** wizard, on the **Wizards** menu, click **Support**.

### Step 1: About

- 1 Read the information about the wizard (see [Figure 57](#)).
- 2 Click **Next** to continue.




---

**Note:** At any time while using the wizard, you can click **Previous** to return to the previous step.

---

Figure 57 Support Wizard:  
About

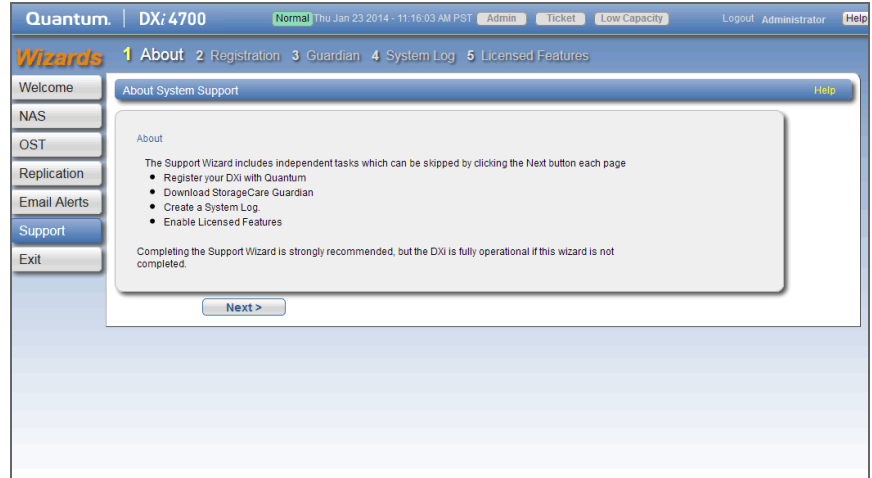

---


## Step 2: Registration

---

You must register your DXi4700 to receive service and support from Quantum.

- 1 Click the link for [Quantum's Product Registration](#) site (see [Figure 58](#)).
- 2 Follow the onscreen instructions to register your system.
- 3 When you are finished, switch back to the **Support** wizard.
- 4 Click **Next** to continue.

Figure 58 Support Wizard:  
Registration

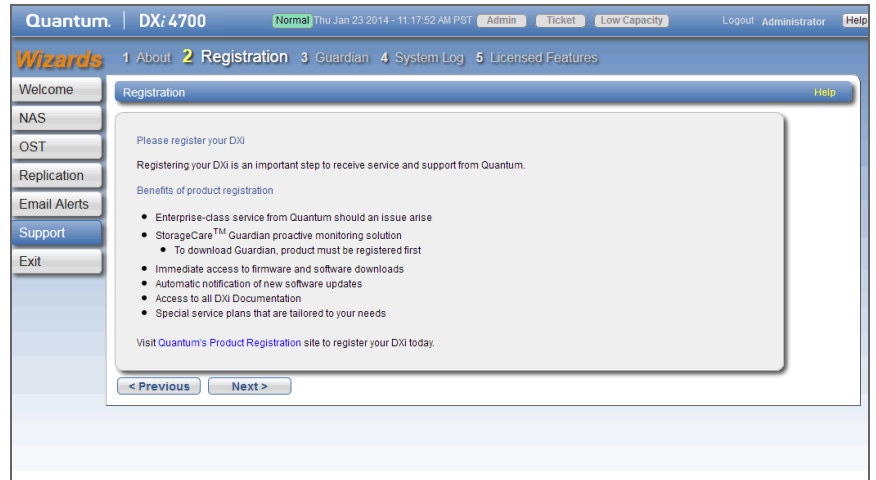

### Step 3: Guardian

StorageCare Guardian is a remote monitoring and diagnostic solution that enables Quantum to monitor the health of Quantum systems over the Internet and use the intelligent diagnostics data to remotely service the equipment if issues arise.


StorageCare Guardian delivers more reliable operation and faster resolution time for customers at no additional cost for supported products under warranty or service contract.

- 1 Click the link to [learn more](#) about the features and benefits of StorageCare Guardian (see [Figure 59](#)).
- 2 Click the link to [download StorageCare Guardian](#), and then install it on a workstation with outgoing Internet access.

For more information, see the *StorageCare Guardian Installation Guide*. You can download a copy of the *Installation Guide* by clicking the link under **Documentation** on the StorageCare Guardian download page.

- 3 When you are finished, switch back to the **Support** wizard.
- 4 Click **Next** to continue.

Figure 59 Support Wizard:  
Guardian

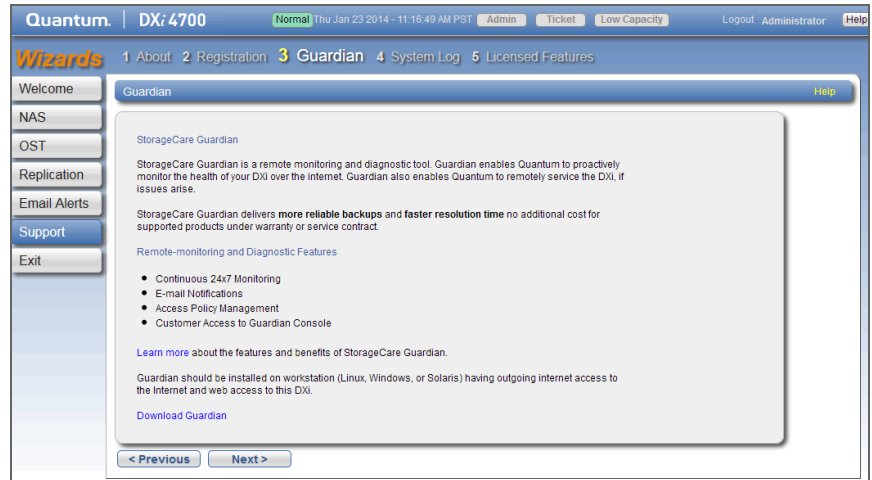

## Step 4: System Log

This system diagnostics file contains the diagnostic logs for all of the system components. The diagnostic files are helpful when troubleshooting problems on the DXi4700. You should generate a system diagnostic file after setting up your DXi4700 and save it for future reference.

- 1 Click **Generate New** to generate a new system diagnostics file (see [Figure 60](#)).


The system generates a new diagnostics file. This can take several minutes.

- 2 After the file finishes generating, click the link to enable the **Download Current** button.
- 3 To download the generated diagnostics file, click **Download Current**.

A dialog box displays asking if you want to open or save the file.

- 4 Click **Save** or **OK** to download the file.
- 5 Click **Next** to continue.

Figure 60 Support Wizard:  
System Log

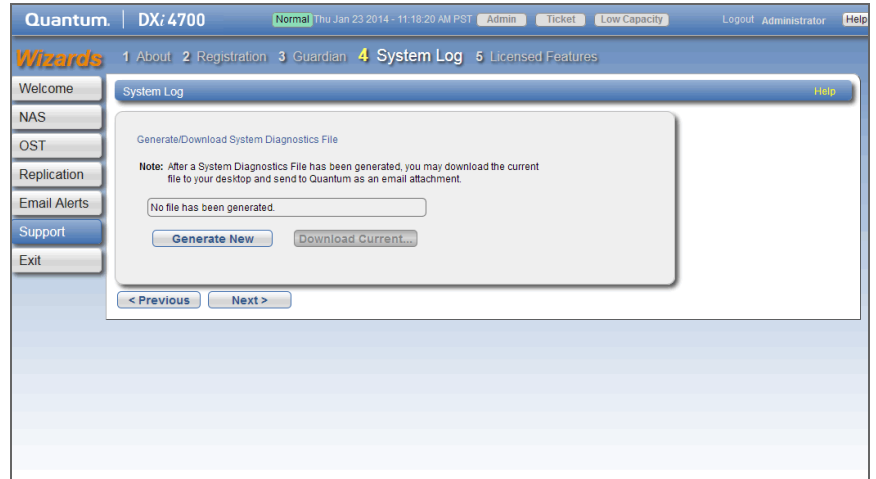

## Step 5: Licensed Features

Add a license key to enable new functionality on the DXi4700. To install a license key, you must first obtain a License Certificate containing an authorization code.

Contact your Quantum sales representative to purchase a license. After you purchase the license, you will receive a License Certificate containing an authorization code.

---

**Note:** Some licenses are pre-installed on the DXi4700. In addition, License Certificates for some licenses may be included with the DXi4700. For more information about licensed features, see [License Keys](#) on page 392.

---

- 1 Select the DXi system serial number (displayed under **Enable Licensed Features**) and press **<Ctrl+C>** to copy it (see [Figure 61](#)).
- 2 Click the link for [Quantum's License Key Management](#) site.  
The **License Key Management** page displays.
- 3 Click to place the cursor in the **Serial Number** box and press **<Ctrl+V>** to paste the DXi system serial number.
- 4 Click **Submit**.  
The **Licensed Feature** page displays.

- 5 Enter the authorization code (printed on the License Certificate) and click **Get License Key**.


The **Licensed Feature** page returns a license key. Select the license key and press **<Ctrl+C>** to copy it. You should also print out or write down the license key, or save it to a text file, for future use.

- 6 Switch back to the **Support** wizard.
- 7 Enter the license key in the **New Key** box, and then click **Add**.

The license key is added to the system, and the new feature is enabled.

- 8 (Optional) To add additional license keys, repeat Steps 1–7.
- 9 Click **Finish** to complete the **Support** wizard.

Figure 61 Support Wizard:  
Licensed Features

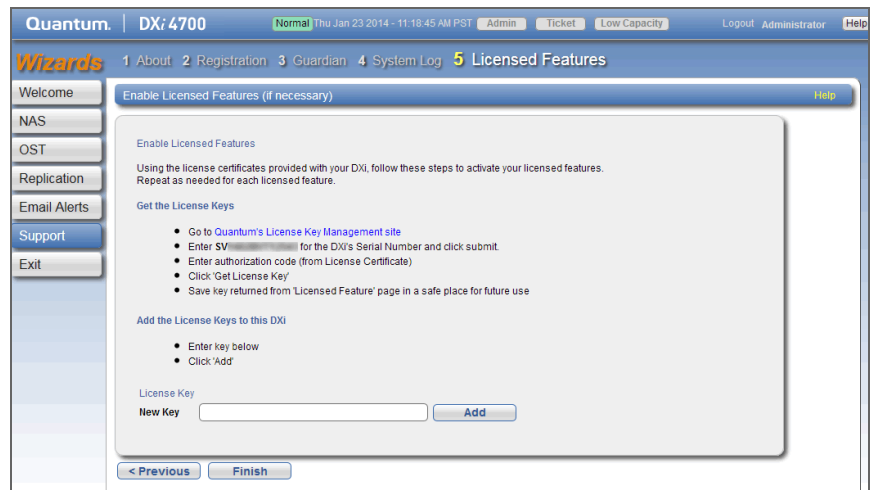





## Chapter 5

# DXi4700 Home Page

---

The first page that displays after you log on to the DXi4700 remote management console is the **Home** page (see [Figure 62](#)). Use the **Home** page to see important performance information at a glance, including disk usage, data reduction statistics, and replication activity.

To return to the **Home** page at any time, click **Home** on the main menu.

The **Home** page contains the following overviews:


- [DXi4700 System Overview](#)
- [Disk Usage Overview](#)
- [Data Reduction Statistics Overview](#)
- [Replication Overview](#)
- [Current Activity Overview](#)

---

**Note:** Disk usage statistics, data reduction statistics, replication statistics, and current activity are updated every 30 seconds.

---

Figure 62 Home Page

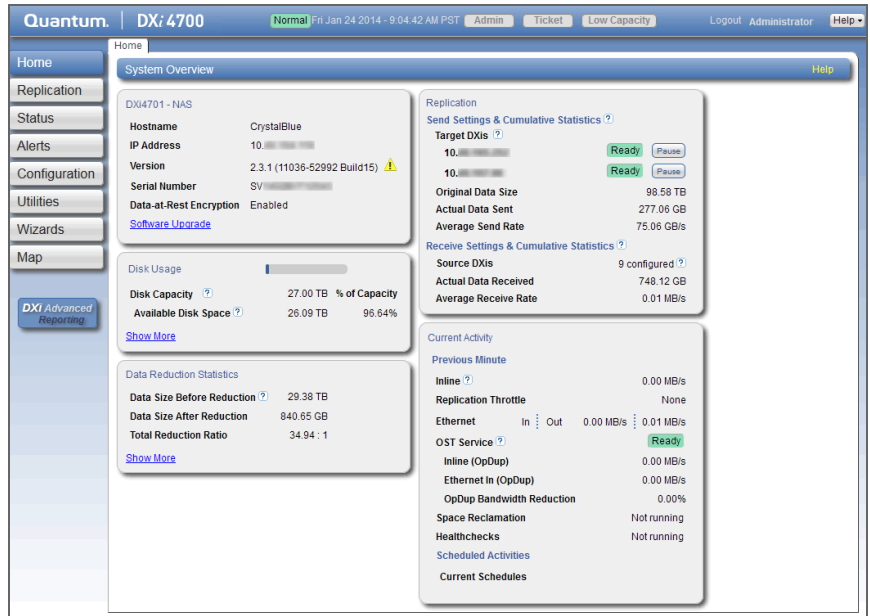

## DXi4700 System Overview


The **DXi4700 System Overview** on the **Home** page (see [Figure 63](#)) displays the following information about the system:

- **Hostname** - The hostname of the DXi4700. Click to change the hostname (see [Network](#) on page 317).
- **IP Address** - The IP address of the DXi4700. Click to change the IP address (see [Network](#) on page 317).
- **Version** - The software version installed on the DXi4700. A Quick Tip icon indicates if a software upgrade is available for the DXi4700. Click to upgrade the software (see [Software Upgrades](#) on page 400).



- **Serial Number** - The serial number of the DXi4700. (You need to know the serial number to add a licensed feature. For more information, see [License Keys](#) on page 392.)
- **Data-at-Rest Encryption** - The status of Data-at-Rest encryption (**Enabled** or **Disabled**). (To enable Data-at-Rest encryption, see [Data-at-Rest Encryption](#) on page 345).
- **Software Upgrade** - Click to displays the **Software Upgrade Utility** (see [Software Upgrades](#) on page 400).

Figure 63 DXi4700 System Overview

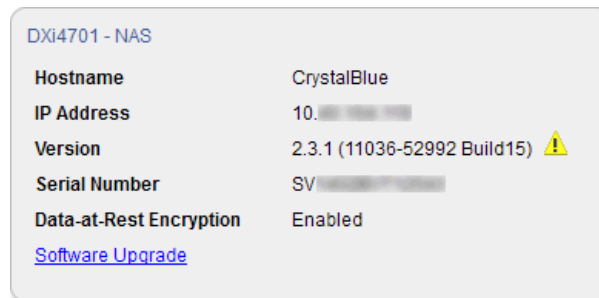

## Disk Usage Overview

The **Disk Usage** overview on the **Home** page (see [Figure 64](#)) displays the following information about disk usage as an amount and as a percentage of the total capacity in the system:

- **Disk Capacity** - The total usable disk capacity of the DXi4700.

---

**Note:** Click the **Quick Tip** icon [?] to see information about on demand storage capacity upgrades. For more information about upgrading storage capacity of the DXi4700, see [License Keys](#) on page 392.

---

- **Available Disk Space** - The disk space available for data storage (free space).

On the disk space meter, blue (left side of meter) indicates used disk space and gray (right side of meter) indicates available disk space.

The left side of the meter changes color based on the amount of remaining free disk space and the state of the DXi4700. For more information, see [Low Space Management](#) on page 56.

---

**Note:** When disk space is low, click the **Quick Warning** icon [!] next to the space meter to see more information.

---

**Note:** When disk space is low, target replication to the system is paused (see [Replication Service](#) on page 169). In addition, space reclamation is automatically started to free up disk space (see [Space Reclamation](#) on page 389).

---

**Note:** For optimal system performance, Quantum recommends keeping the amount of **Available Disk Space** (free space) at 20% or more.


---

Click **Show More** to display additional information:

- **Free Space** - The disk space that can be used for new deduplicated or non-deduplicated data.
- **Reclaimable Space** - The disk space that is occupied by outdated deduplicated data and which will be automatically reused if additional space for new deduplicated data is needed.
- **Used Disk Space** - The disk space that already holds data, including deduplicated data, system metadata, and data not intended for deduplication.
- **Deduplicated Data** - The amount of data that has been deduplicated.
- **Data Not Intended for Deduplication** - The amount of data on shares or partitions that do not have deduplication enabled.
- **System Metadata** - The amount of disk space used for internal operations of the DXi, including system configuration files as well as temporary files created during replication, space reclamation, and healthchecks.

Click an item to view detailed statistics for disk usage (see [Disk Usage](#) on page 188).

Figure 64 Disk Usage Overview

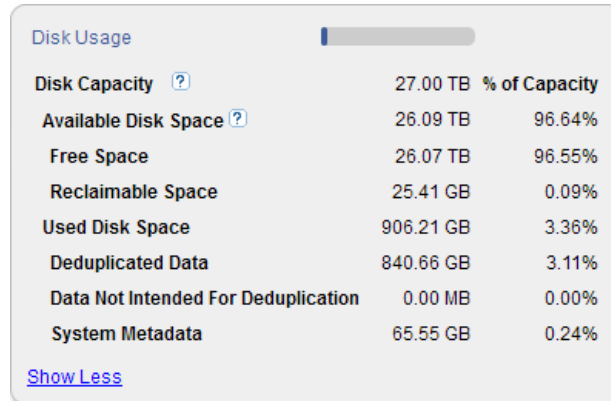

## Data Reduction Statistics Overview

The **Data Reduction Statistics** overview on the **Home** page (see [Figure 65](#)) displays the following information about the results of data reduction:

- **Data Size Before Reduction** - The original, native size of all data that has been processed by the data deduplication and compression engines.
- **Data Size After Reduction** - The final, reduced size of all data that has been processed by the data deduplication and compression engines.
- **Total Reduction Ratio** - The total reduction ratio of all data that has been processed by the data deduplication and compression engines (**Data Size Before Reduction** divided by **Data Size After Reduction**).


Click **Show More** to display additional information:

- **Incoming Replication** - The amount of data stored on the DXi via replication from another DXi. This does *not* include incoming data from Directory/File or Cartridge Based Replication, or incoming data from Failback replication.

- **Shares & Partitions** - The amount of data stored on the DXi via local I/O. This includes incoming data from Directory/File or Cartridge Based Replication, and incoming data from Failback replication.
- **OST Storage Servers** - The amount of data stored in deduplicated OpenStorage (OST) storage servers. This includes incoming data for OST and DXi Accent.
- **Deduplication Ratio** - The deduplication ratio of all data that has been processed by the data deduplication engine.
- **Compression Ratio** - The compression ratio of all data that has been processed by the compression engine.

Click an item to view detailed statistics for disk usage (see [Disk Usage](#) on page 188).

Figure 65 Data Reduction  
Statistics Overview

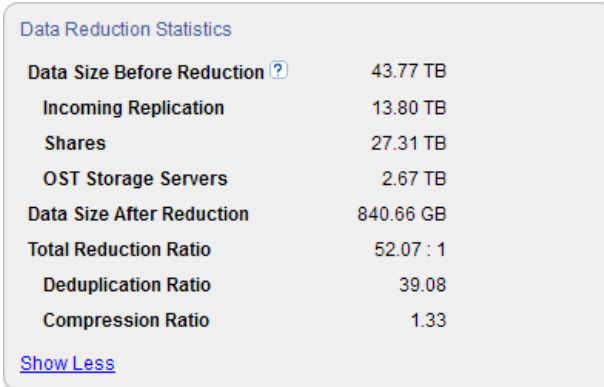

The screenshot shows a table titled "Data Reduction Statistics" with the following data:

Data Reduction Statistics	
Data Size Before Reduction ?	43.77 TB
Incoming Replication	13.80 TB
Shares	27.31 TB
OST Storage Servers	2.67 TB
Data Size After Reduction	840.66 GB
Total Reduction Ratio	52.07 : 1
Deduplication Ratio	39.08
Compression Ratio	1.33

Below the table is a [Show Less](#) link.

## Replication Overview

The **Replication** overview on the **Home** page (see [Figure 66](#)) displays the following information about target and source replication activity:

- [Send Settings & Cumulative Statistics](#)
- [Receive Settings & Cumulative Statistics](#)

---

## Send Settings & Cumulative Statistics

---

The **Send Settings & Cumulative Statistics** section displays statistics for all data sent from the system since system installation or since **Send** cumulative replication statistics were last cleared by clicking **Clear Send** on the **Replication Actions** page (see [Replication Performance](#) on page 171).

- **Target DXis** - The IP address and replication status for each configured replication target (up to two). Click to specify a replication target (see [Replication Configuration](#) on page 258).
  - **Ready** - (Green) The system is ready to perform replication.
  - **In Progress** - (Blue) A replication job is currently in progress.
  - **Queued** - (Blue) A replication job is queued and will continue when the system is ready.
  - **Partial** - (Yellow) A replication job was partially completed. Generate a replication report to see the files that were not replicated (see [Reports](#) on page 171).
  - **Manually Paused** - (Yellow) Replication was manually paused. To resume replication, click **Resume**.
  - **System Paused** - (Yellow) The system has automatically paused replication due to a problem, for example, low disk space or a problem on the target system.

To see more information about the problem that occurred, click **Admin** at the top of the remote management console to view administration alerts (see [Admin Alerts](#) on page 201). You may also need to view alerts on the target DXi. In addition, make sure that the DXi is an allowed replication source on the target DXi (see [Replication Configuration](#) on page 258).
  - **Failed** - (Red) A replication job was not completed.
  - **Internal Error** - (Red) An error occurred during replication.
- **Pause/Resume** - The source DXi controls the replication pause behavior. To manually pause replication between the source and target, click **Pause** on the source DXi. To manually restart replication, click **Resume** on the source DXi.

---

**Note:** When the target DXi enters low disk space condition, replication on the source DXi is automatically paused. Replication will resume when the target leaves low disk space condition.

---

- **Original Data Size** - The original, native size of data sent during replication or failback. This value does not represent the amount of data actually sent over the network during replication or failback because data is deduplicated and compressed before being sent.
- **Actual Data Sent** - The amount of data actually sent over the network during replication or failback. This value is usually much less than the **Original Data Size** due to the benefits of data deduplication and compression.
- **Average Send Rate** - The average send rate (in MB/s) of data sent over the network during replication or failback (**Actual Data Sent** divided by the amount of time required to complete replication or failback).

---


## Receive Settings & Cumulative Statistics

---

The **Receive Settings & Cumulative Statistics** section displays statistics for all data received by the system from all sources since system installation or since **Receive** cumulative replication statistics were last cleared by clicking **Clear Receive** on the **Replication Actions** page (see [Replication Performance](#) on page 171).

- **Source DXis** - The number of source systems configured to replicate data to the DXi4700. Click to specify replication sources (see [Replication Configuration](#) on page 258).
- **Actual Data Received** - The amount of data actually received over the network during replication or failback.
- **Average Receive Rate** - The average receive rate (in MB/s) of data received over the network during replication or failback (**Actual Data Received** divided by the amount of time required to complete replication or failback).

Figure 66 Replication Overview

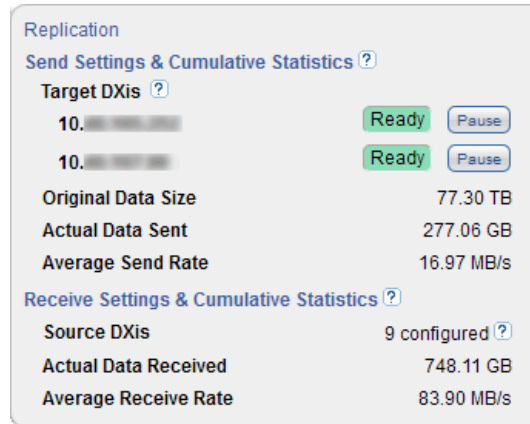

## Current Activity Overview

The **Current Activity** overview on the **Home** page (see [Figure 67](#)) displays the following information about system activity that occurred in the previous minute:

- **Inline** - The inline data flow throughput (in MB/s). Inline data flow includes deduplicated and non-deduplicated backup data as well as received OST data. Click to view detailed statistics for inline performance (see [Inline](#) on page 182).
- **Replication Throttle** - The system replication throttle currently in effect (in KB/s or MB/s). When a constant throttle is enabled, the DXi limits the amount of data it sends during source replication so that it does not exceed the specified bandwidth. Click to enable or disable system throttling (see [Replication Configuration](#) on page 258).
- **Ethernet** - The amount of data received (**In**) and sent (**Out**) by all Ethernet ports (in MB/s). Click to view details statistics for Ethernet performance (see [Ethernet](#) on page 183).
- **Fibre Channel** (VTL and Multi-Protocol configuration only) - The amount of data received (**In**) and sent (**Out**) by all Ethernet ports (in MB/s). Click to view details statistics for Fibre Channel performance (see [Fibre Channel](#) on page 186).

- **OST Service** (NAS and Multi-Protocol configuration only) - The status of the OST service. OST settings can be configured in **Ready**, **Stopped**, or **Verifying** state. The OST server is available for backup only in **Ready** state.
  - **Inline (OpDup)** - The inline data flow throughput (in MB/s). Inline data flow represents the original, native size of the data protected by the DXi.
  - **Ethernet In (OpDup)** - The amount of data received by all Ethernet ports (in MB/s). This amount represents the reduced size of the data protected by the DXi (after deduplication and compression on the media servers).
  - **OpDup Bandwidth Reduction** - The percentage by which network bandwidth utilization was reduced by using Optimized Duplication.
  - **Inline (Accent)** - The inline data flow throughput (in MB/s). Inline data flow represents the original, native size of the data protected by the DXi.
  - **Ethernet In (Accent)** - The amount of data received by all Ethernet ports (in MB/s). This amount represents the reduced size of the data protected by the DXi (after deduplication and compression on the media servers).
  - **Accent Bandwidth Reduction** - The percentage by which network bandwidth utilization was reduced by enabling Accent.
- **Space Reclamation** - The status of space reclamation (**Not running** or **Percent complete**). Click to start or stop space reclamation (see [Space Reclamation](#) on page 389).
- **Compaction** - The status of space reclamation (**Not running** or **Running**). Click to start or stop compaction (see [Space Reclamation](#) on page 389).
- **Healthchecks** - The status of healthchecks (**Not running** or **Percent complete**). Click to start or stop space healthchecks (see [Healthchecks](#) on page 382).

To view or modify scheduled system activity, click **Current Schedules** (see [Scheduler](#) on page 307).

---

**Note:** For more detailed information about all system activity, see [DXi4700 Status](#) on page 173.

---




---

**Note:** DXi Accent activity displays only if DXi Accent is currently enabled or was previously enabled (see [DXi Accent](#) on page 298).

---

Figure 67 Current Activity Overview

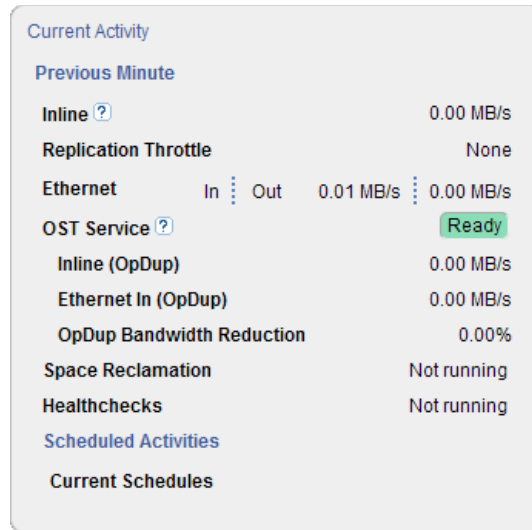





## Chapter 6

# DXi4700 Replication

---

The DXi4700 provides data replication capabilities that you can use as an integral part of a disaster recovery plan. Replication allows you to configure the DXi4700 to create a copy of your data on another DXi system at scheduled intervals (or manually as needed).

In the event of a disaster in which the original data is lost, you can quickly recover the replicated data on the remote system, allowing your business to resume normal operations. Once the original system is available again, you can restore all data back to its original location.

---

**Note:** Quantum recommends that you configure and start replication before storing large amounts of data on the DXi4700.

---

**Note:** A DXi4700 can only replicate data to a DXi that supports the same protocol as the DXi4700 (NAS or VTL). That is, a DXi4700 NAS system can only replicate data to a DXi that supports NAS. Similarly, a DXi4700 VTL system can only replicate data to a DXi that supports VTL.

---

See the following sections for more information about the data replication capabilities of the DXi4700:

- [Understanding Data Replication](#)
- [Performing Data Replication](#)

---

**Note:** To schedule replication for a share or partition, use the **Configuration > Scheduler** page (see [Scheduling a Share or Partition for Replication](#) on page 311). To limit the amount of network bandwidth used for replication, enable a constant throttle (see [Enabling System Throttling](#) on page 265), or schedule replication throttling (see [Scheduling Replication Throttling](#) on page 312).

---

## Understanding Data Replication

During data replication, data is sent from one system (the source) to another system, usually in another location (the target). For example, you might replicate data from a branch office (the source) to a central office (the target).

Sources *send* replicated data, and targets *receive* replicated data. A target system can receive data from up to ten sources. A source system can send data to up to two targets. Finally, one system can act as both a source and a target.

Replication works only with deduplicated data, and data is compressed before it is replicated. Because of this, the amount of data transmitted between systems during replication is greatly reduced compared to the original amount of data stored. In addition, a data block is transmitted only if the target does not already have a copy of the block. Finally, data can optionally be encrypted before it is transmitted.

The DXi4700 can perform the following types of replication:

- [Replication](#)
- [Directory/File or Cartridge Based Replication](#)
- [OST Optimized Duplication](#)
- [Multiple Target Replication](#)

---

### Replication

---

Replication occurs when replication is enabled for a deduplicated NAS share or VTL partition and a replication schedule is configured (or

manual replication is performed on a regular basis). For replication to occur, the source system must be configured to point to the target system. Similarly, the target system must be configured to accept data from the source system.

To optimize the replication process, deduplicated data is continuously sent in the background from the source system to the target system. However, a snapshot that preserves the file structure of your data is sent to the target system only when a scheduled or manual replication job occurs. A snapshot contains all of the information that is necessary to recreate a share or partition just as it was at the point in time when the snapshot was created.

---

---

**Caution:** A saved snapshot is necessary to recover your data at a later time. For this reason, it is not enough to simply enable replication for a share or partition. You must also configure a replication schedule (recommended) or perform manual replication on a regular basis to send snapshots of the share or partition to the target system.

---

---

If the source system ever becomes unavailable, you can recover the share or partition on the target system using a saved snapshot. After you recover a share or partition, it is recreated on the target system and is available for use. Once the source system becomes available again, you can perform a failback operation to restore the share or partition to its original location.

---

## Directory/File or Cartridge Based Replication

---

Like replication, Directory/File or Cartridge Based Replication sends data from a NAS share or VTL partition to another system where it can be accessed. However, Directory/File or Cartridge Based Replication differs in a number of important ways:

- Both replication and Directory/File or Cartridge Based Replication must be enabled for the share or partition.
- A unique Sync ID is used to associate the replicated share or partition on the source system with the share or partition that will receive the replicated data on the target system.
- You do not need to schedule or manually perform Directory/File or Cartridge Based Replication through the remote management console. Instead, replication is triggered when a file is closed or a

period of time after it is modified (NAS shares), or when a tape cartridge is unmounted (VTL partitions).

---

**Note:** For CIFS shares, a file is replicated immediately after it is closed. For NFS shares, a file is replicated after it has been idle (not accessed) for several minutes.

---

---

**Note:** To optimize the replication process, deduplicated data is continuously sent in the background from the source system to the target system. Any remaining data is sent (along with metadata) at the time a file is closed or a tape cartridge is unmounted.

---

- After files or cartridges are replicated using Directory/File or Cartridge Based Replication, they are automatically recovered on the target system and are immediately available for use. There is no need to first recover the share or partition to access its data.
- Deletions are automatically propagated from the source system to the target system in order to free up space on the target. In addition, you can manually initiate a synchronization from the source system at any time. Synchronizing ensures that the contents of the source share or partition are exactly the same as the target share or partition.

---

---

**Caution:** Cartridge barcodes for all source systems that are replicating to the same target must be unique.

---

---

---

**Note:** If you delete a share configured for Directory/File Based Replication on the source DXi, the share is *not* automatically deleted on the target DXi. If you do not want to retain the share on the target DXi, you can manually delete it.

---

---

## OST Optimized Duplication

---

The DXi4700 can duplicate the data on an LSU (logical storage unit) to another location using the OST optimized duplication (OST replication) feature supported by Symantec NetBackup and Backup Exec. If you are using Symantec NetBackup 7.1 or higher, you can configure an LSU for Automatic Image Replication.

For information about configuring and using OST optimized duplication and Automatic Image Replication, see [Replicating OST Data](#) on page 270.

---

## Multiple Target Replication

---

The DXi4700 can send replicated data to multiple target systems. First, configure up to two replication targets (see [Adding a Replication Target](#) on page 261). Then, for each share or partition, select which targets to replicate data to—one, both, or neither (see [Enabling Replication For a Share or Partition](#) on page 134).

Below are two possible scenarios in which multiple replication targets are configured.

### All Shares or Partitions Replicate to Multiple Targets

For enhanced disaster recovery, all shares or partitions on the DXi4700 are configured to replicate to multiple targets. In this scenario, even if one target system is lost, the other target system still retains a full copy of all data on the source DXi4700.

### Some Shares or Partitions Replicate to Multiple Targets

For increased flexibility, each share or partition on the DXi4700 is configured to replicate only to the targets where needed. In this scenario, shares or partitions fall into three categories:

- Some shares or partitions replicate to Target 1. (They may also replicate to Target 2.)
- Some shares or partitions replicate to Target 2. (They may also replicate to Target 1.)
- Some shares or partitions are not replicated.

---

## Performing Data Replication

The **Replication** page allows you to set up replication for NAS shares or VTL partitions and to replicate and recover data.

To access the **Replication** page, click the **Replication** menu.

The **Replication** page contains the following tabs:

- [Replication Send](#)
- [Receive NAS](#)
- [Receive VTL](#)
- [Actions](#)
- [Reports](#)

Use the DXi4700 data replication features to perform the following tasks:

- Replicate all data on a share or partition to another system where it can be recovered at a later time (see [Task Overview: Setting Up and Performing Replication](#) on page 126).
- Automatically replicate files or cartridges to another system where they are immediately available (see [Task Overview: Setting Up and Performing Directory/File or Cartridge Based Replication](#) on page 128).
- Recover data from a lost or damaged share or partition (see [Task Overview: Recovering a Replicated Share or Partition](#) on page 129).
- Restore a lost or damaged share or partition back to its original location (see [Task Overview: Performing a Share or Partition Failback](#) on page 130).

---

**Note:** The **Replication** wizard provides guided assistance for configuring data replication (see [DXi4700 Configuration Wizards](#) on page 63).

---

---

## Task Overview: Setting Up and Performing Replication

---

To replicate all data on a NAS share or VTL partition from a source system to a target system:

- 1 On the target system, add the source system to the list of allowed replication sources (see [Adding a Replication Source](#) on page 267).
- 2 On the source system, specify the target system that will receive replicated data (see [Adding a Replication Target](#) on page 261).



- 3 On the source system, create a new share or partition with deduplication enabled (see [Adding a NAS Share](#) on page 215 or [Adding a VTL Partition](#) on page 232).
- 4 Enable replication for the new share or partition (see [Enabling Replication For a Share or Partition](#) on page 134).
- 5 Before writing any data to the new share or partition, replicate the new share or partition (see [Replicating a Share or Partition](#) on page 138).

Quantum recommends that you always replicate a new share or partition immediately after creating it. This establishes the initial data structure on the target system and greatly increases the speed of the first replication.

- 6 Choose one of the following methods to regularly replicate the new share or partition:
  - (Recommended) Use the **Scheduler** page to set up a schedule for performing replication automatically after backups complete (see [Scheduling a Share or Partition for Replication](#) on page 311).
  - Manually perform replication at frequent intervals (see [Replicating a Share or Partition](#) on page 138).

After replication, a snapshot is sent to the target system. You can use the snapshot to recover the replicated share or partition on the target system (see [Task Overview: Recovering a Replicated Share or Partition](#) on page 129) or restore the share or partition to its original location on the source system (see [Task Overview: Performing a Share or Partition Failback](#) on page 130).

---

---

**Caution:** If you do not configure a replication schedule or manually replicate the share or partition on a regular basis, your data is *not* protected. While the DXi4700 continually sends data to the target system in the background to optimize the replication process, a snapshot that preserves the complete structure of your data is sent to the target system *only* when a scheduled or manual replication job occurs. If you do not regularly and frequently replicate your data as described in [Step 6](#) above, it cannot be restored at a later time.

---

---

---

**Note:** To limit the amount of network bandwidth used for replication, enable a constant throttle (see [Enabling System Throttling](#) on page 265), or schedule replication throttling (see [Scheduling Replication Throttling](#) on page 312).

---

---

## Task Overview: Setting Up and Performing Directory/File or Cartridge Based Replication

---

To automatically replicate files or cartridges from a source system and immediately recover them for use on a target system:

- 1 Perform the following steps on the target system:
  - a Add the source system to the list of allowed replication sources (see [Adding a Replication Source](#) on page 267).
  - b Create a new share or partition with deduplication enabled (see [Adding a NAS Share](#) on page 215 or [Adding a VTL Partition](#) on page 232).
  - c Enable Directory/File or Cartridge Based Replication for the new share or partition and specify the Sync ID (see [Configuring a Target Share for Directory/File Based Replication](#) on page 152 or [Configuring a Target Partition for Cartridge Based Replication](#) on page 166).
- 2 Perform the following steps on the source system:
  - a Specify the target system that will receive replicated data (see [Adding a Replication Target](#) on page 261).
  - b Create a new share or partition with deduplication enabled (see [Adding a NAS Share](#) on page 215 or [Adding a VTL Partition](#) on page 232).
  - c Enable Directory/File or Cartridge Based Replication for the new share or partition and specify the Sync ID (see [Configuring Directory/File or Cartridge Based Replication](#) on page 135).

A file is automatically replicated when it is closed or a period of time after it is modified. A cartridge is automatically replicated after it is unmounted. After replication, the replicated files or cartridges are immediately available on the target system. There is no need to recover the share or partition to make the files or cartridges available.

---

---

**Caution:** Cartridge barcodes for all source systems that are replicating to the same target must be unique.

---

---

---

**Note:** To limit the amount of network bandwidth used for replication, enable a constant throttle (see [Enabling System Throttling](#) on page 265), or schedule replication throttling (see [Scheduling Replication Throttling](#) on page 312).

---

---

### Task Overview: Recovering a Replicated Share or Partition

---

If a NAS share or VTL partition is lost or damaged on the source system, you can recover it on the target system using a received snapshot. When you recover a share or partition, it is recreated on the target system just as it was at the point in time when the snapshot was saved.

To recover a replicated share or partition:

- 1 On the target system, select a received snapshot and perform a recover operation (see [Recovering a Share](#) on page 144 or [Recovering a Partition](#) on page 157).

The share or partition is now available on the target system.

- 2 (Optional) Map your backup application to the recovered share or partition on the target system to continue making backups.
- 3 When the source system is operating correctly again, choose one of the following actions:
  - Failback the share or partition to restore it on the original source system (see [Task Overview: Performing a Share or Partition Failback](#) on page 130). Then, if necessary, map your backup application to the restored share or partition on the original source system.
  - Continue to make backups to the recovered share or partition on the original target system. In addition, set up replication to replicate the share or partition back to the original source system (see [Task Overview: Setting Up and Performing Replication](#) on page 126). In this scenario, the original source system is now the target, and the original target system is now the source.

---

### Task Overview: Performing a Share or Partition Failback

---

If a NAS share or VTL partition is lost or damaged on the source system, you can failback the share or partition to the source system using a received snapshot on the target system. When you failback a share or partition, it is restored on the source system just as it was at the point in time when the snapshot was saved.

To perform a share or partition failback:

- 1 On the original source system, add the original target system to the list of allowed replication sources (see [Adding a Replication Source](#) on page 267).

---

**Note:** For the purposes of failback, the original source system is now acting as a target because it will receive the snapshot from the original target system.

---

- 2 On the original target system, select a received snapshot and perform a failback operation pointing to the original source system, and then recover the share or partition on the original source system (see [Performing a Failback For a Share](#) on page 145 or [Performing a Failback For a Partition](#) on page 159).

The share or partition is now available on the original source system.

- 3 (Optional) If necessary, map your backup application to the restored share or partition on the original source system.

---

## Replication Send

The **Replication Send** page allows you to manage outgoing replication activity for NAS shares or VTL partitions. You can replicate shares or partitions on the DXi4700 (the source) to other DXi systems (the targets). You can also schedule replication, and view the status of current and recent replication jobs.


---

**Note:** Before you can replicate shares or partitions, you must specify a replication target (see [Adding a Replication Target](#) on page 261).

---

To access the **Replication Send** page, click the **Replication** menu, and then click the **Send** tab (see [Figure 68](#)).

Figure 68 Replication Send Page

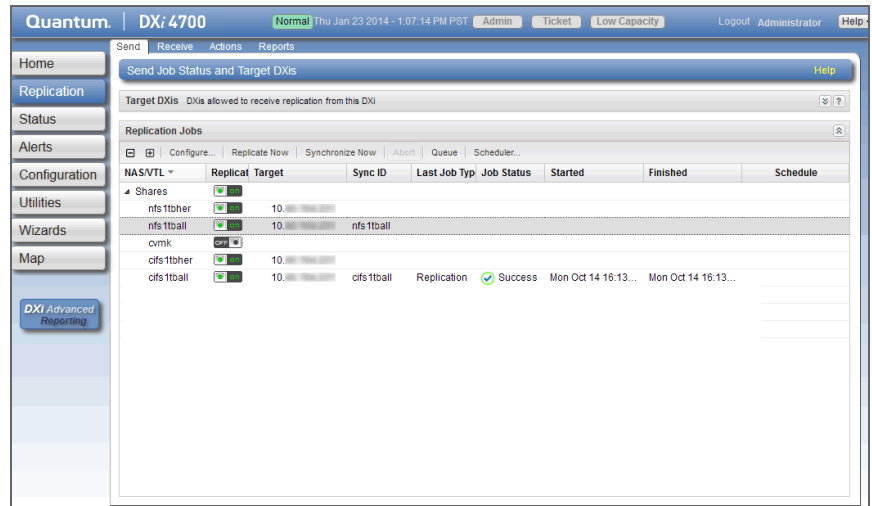

Use the **Replication Send** page to perform the following tasks:

- View replication information for shares or partitions (see [Replication Jobs List](#) on page 132).
- Enable or disable replication for a share or partition (see [Enabling Replication For a Share or Partition](#) on page 134).
- Configure Directory/File or Cartridge Based Replication for a share or partition (see [Configuring Directory/File or Cartridge Based Replication](#) on page 135).
- Initiate replication for a share or partition (see [Replicating a Share or Partition](#) on page 138).
- Synchronize a share or partition configured for Directory/File or Cartridge Based Replication (see [Synchronizing a Share or Partition](#) on page 138).
- View replication statistics for a share or partition configured for Directory/File or Cartridge Based Replication (see [Directory/File or Cartridge Based Replication Queue](#) on page 139).
- Schedule a share or partition for replication (see [Scheduling a Share or Partition For Replication](#) on page 141).

- Manage replication targets (see [Target DXis List](#) on page 142)

---

## Replication Jobs List

---

The **Replication Jobs** list displays replication statistics for all NAS shares or VTL partitions on the DXi4700 that are eligible for replication. To be eligible for replication, a share or partition must have data deduplication enabled at the time it is created.

---

**Note:** For information about creating NAS shares or VTL partitions, see [Adding a NAS Share](#) on page 215 or [Adding a VTL Partition](#) on page 232.

---

The **Replication Jobs** list displays the following information:

---

**Note:** Click the arrow next to **Shares** or **Partitions** to display all shares or partitions in the list. Alternately, click the plus [ + ] or minus [ - ] icons to show or hide all shares or partitions.

---

- **NAS/VTL** - The name of the share or partition. Hold the cursor over the name to display detailed information about the share or partition.

---

**Note:** If multiple targets are configured for a share or partition, click the arrow next to the share or partition to view all targets.

---

- **Replication** - The replication state (**On** or **Off**). Click the toggle switch to turn replication on or off for the share or partition.

---

**Note:** Clicking the toggle next to **Shares** or **Partitions** will turn replication on or off for all shares or partitions.

---

- **Target** - The hostname or IP address of the configured replication target. If the share or partition is configured to replicate to multiple targets, click the arrow next to the share or partition name to display all targets.
- **Sync ID** - The Sync ID of the share or partition if Directory/File or Cartridge Based Replication is enabled.
- **Last Job Type** - The type of the most recent replication job (**Replication** or **Synchronization**).

- **Job Status** - The status of the most recent replication job (see [Replication and Synchronization Status](#) on page 133). Hold the cursor over the job status to display detailed job statistics.
- **Started** - The time the most recent replication job was started.
- **Finished** - The time the most recent replication job was completed.
- **Schedule** - A watch icon displays if replication is scheduled for the share or partition, as well as the next scheduled event (see [Scheduling a Share or Partition For Replication](#) on page 141).

You can customize the appearance of the **Replication Jobs** list in the following ways:

- Click the top banner row of the list to collapse or expand the list.
- Click the arrow to the right of a column heading and select **Sort Ascending** or **Sort Descending** to sort the rows in the table by that column.
- To show or hide a column, click the arrow to the right of a column heading, and then click **Columns**. Select the check box to show a column, or clear the check box to hide a column. (The following columns are hidden by default: **Original Data Size**, **Actual Data Sent**, and **Average Data Sent**.)
- To filter content in a column, click the arrow to the right of a column heading, and then click **Filters**. Type or select the desired filter. (If one row for a share or partition matches the filter, all rows for the share or partition are displayed.)

## Replication and Synchronization Status

A replication job can have one of the following statuses:

- **In Progress** - The replication job is in progress.
- **Partial** - A replication job was partially completed. Generate a replication report to see the files that were not replicated (see [Reports](#) on page 171).
- **Queued** - The replication job is queued and will continue when the system is ready.
- **Success** - The replication job was completed successfully.
- **Failed** - The replication job was not completed.

A synchronization job can have one of the following statuses:

- **Queued** - The synchronization job is queued and will continue when the system is ready.
- **Success** - The synchronization job was completed successfully.
- **Recovering** - The recover operation is in process.
- **Replicating** - The replication operation is in process.
- **Failed** - The synchronization job was not completed.

## Enabling Replication For a Share or Partition

Enable replication for a NAS share or VTL partition to allow the data on the share or partition to be replicated to other DXi systems (the targets). Disable replication if you do not want to replicate the share or partition to other DXi systems.

---

**Note:** To be eligible for replication, a share or partition must have data deduplication enabled at the time it is created.


---

To enable or disable replication for a share or partition:

- 1 Select the share or partition and click **Configure**.

The **Share or Partition Configure** window displays (see [Figure 69](#)).

Figure 69 Share or Partition  
Configure Window

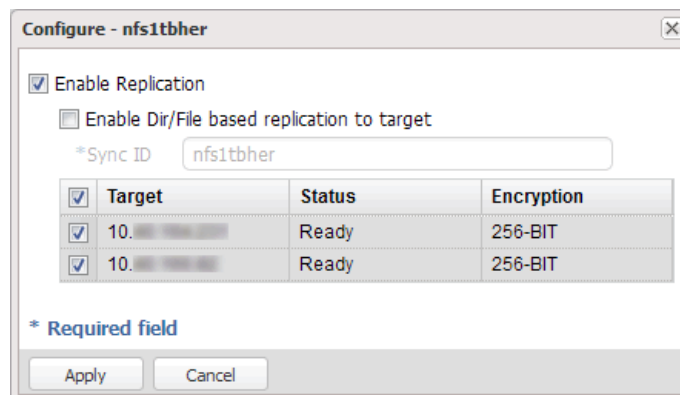

- 2 Select the **Enable Replication** check box to enable replication for the share or partition.



Or clear the **Enable Replication** check box to disable replication for the share or partition. Any jobs from that share or partition that are in progress or queued will transition to failure. Also, all replication job history for that combination of target and share or partition will be removed.

- 3 Select the check box for each replication target you want to replicate the share or partition to. (You must select at least one target.) When the share or partition is replicated, its data will be sent to all selected targets.

- 4 Click **Apply**.

---

**Note:** Quantum recommends scheduling replication to run after backups are complete (see [Scheduling a Share or Partition For Replication](#) on page 141). If you do not enable scheduled replication, replication will only occur if you manually replicate a share or partition (see [Replicating a Share or Partition](#) on page 138) or if you configure Directory/File Based Replication (see [Configuring Directory/File or Cartridge Based Replication](#) on page 135).

---

---

**Note:** Disabling replication for a share or partition does not delete any scheduled replication events for that share or partition. If you no longer want to schedule the share or partition for replication, manually delete the schedule (see [Deleting a Scheduled Event](#) on page 316).

---

---

## Configuring Directory/ File or Cartridge Based Replication

---

Configure a NAS share or VTL partition for Directory/File or Cartridge Based Replication to automatically replicate files or cartridges to other DXi systems (the targets). A file is automatically replicated when it is closed or a period of time after it is modified. A cartridge is automatically replicated when it is unmounted. After replication, the replicated files or cartridges are immediately available on the target systems. There is no need to recover the share or partition to make the files or cartridges available. Disable Directory/File or Cartridge Based Replication if you do not want to automatically replicate files or cartridges.

When you configure a share or partition for Directory/File or Cartridge Based Replication, you must specify a Sync ID. The Sync ID associates the

share or partition on the source system with the share or partition on the target systems that will receive the replicated data. The **Sync ID** for the source share or partition must match the **Sync ID** for the target share or partition.

If Cartridge Based Replication is enabled for a VTL partition, the following media behaviors apply:


- When a cartridge is exported from the partition, the cartridge is deleted from the configured target systems.
- When a cartridge is imported into the partition, the cartridge is replicated to the configured target systems.
- When a cartridge is deleted on a source system, it is in the **Unassigned** partition, thus this action has no effect on Cartridge Based Replication activity.

To configure a source share or partition for Directory/File or Cartridge Based Replication:

- 1 If you have not already done so, configure the target share or partition on the target DXi (see [Configuring a Target Share for Directory/File Based Replication](#) on page 152 or [Configuring a Target Partition for Cartridge Based Replication](#) on page 166.)
- 2 On the source DXi, select the source share or partition and click **Configure**.

The **Share or Partition Configure** window displays (see [Figure 70](#)).

Figure 70 Share or Partition  
Configure Window

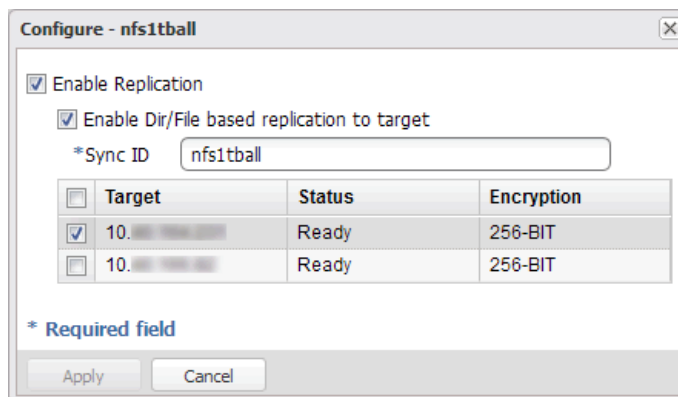

- 3 If it is not already selected, select the **Enable Replication** check box to enable replication for the share or partition.
- 4 Select the **Enable Directory/File or Cartridge Based Replication to target** check box to enable Directory/File or Cartridge Based Replication for the share or partition.

Or clear the **Enable Directory/File or Cartridge Based Replication to target** check box to disable Directory/File or Cartridge Based Replication for the share or partition.

- 5 Enter a **Sync ID** in the box.

The **Sync ID** is used to identify the target share or partition that will receive replicated data from the source share or partition. The **Sync ID** *must* be identical to the **Sync ID** of the target share or partition on the target system.

The **Sync ID** must contain no more than 32 characters (NAS share) or 12 characters (VTL partition) and can contain only alphanumeric characters, underscores, and hyphens. (An underscore or hyphen must not be the first character.)

---

**Note:** If you are performing Directory/File or Cartridge Based Replication with a system running a DXi software version prior to 2.3, you may need to change the **Sync ID** on the system running pre-2.3 software to match the above **Sync ID** name restrictions.

---

- 6 Select the check box for each replication target you want to replicate the share or partition to. (You must select at least one target.) When the share or partition is replicated, its data will be sent to all selected targets.

---

**Note:** Directory/File or Cartridge Based Replication will be configured for all selected targets. You cannot configure one share or partition for multiple replication types.

---

- 7 Click **Apply**.

---

**Note:** After you configure a share or partition for Directory/File or Cartridge Based Replication, you should synchronize it to ensure it is in sync with the target share or partition (see [Synchronizing a Share or Partition](#) on page 138).

---

---

## Replicating a Share or Partition

---

Replicate a NAS share or VTL partition to send a snapshot of the share or partition to the target systems. A snapshot is required to recover the data on the targets at a later time. If you have not configured a replication schedule for a share or partition, replication only occurs when you manually initiate it (see [Scheduling a Share or Partition For Replication](#) on page 141).

---

---

**Caution:** Do not replicate a partition containing media in an **Exported** state.

---

---

To replicate a share or partition:

- 1 Select the share or partition to replicate.

If multiple targets are configured, click the arrow next to the share or partition to display all targets, and then select the desired target.

- 2 Click **Replicate Now**.

The status of the replication job displays in the **Job Status** column.

To cancel the replication job, select the share or partition and click **Abort**.

---

## Synchronizing a Share or Partition

---

Synchronize a NAS share or VTL partition to synchronize its contents with the corresponding share or partition on the target systems. To synchronize a share or partition, it must be configured for Directory/File or Cartridge Based Replication (see [Configuring Directory/File or Cartridge Based Replication](#) on page 135).

Synchronizing a share or partition ensures that the contents of the source share or partition are the same as the target share or partition. The synchronization verifies that the same files or cartridges exist in both locations, and that no additional files or cartridges exist in either location.

You should perform a synchronization in any of the following situations:

- When Directory/File or Cartridge Based Replication is first enabled for a share or partition.
- If a Directory/File or Cartridge Based Replication job fails.
- If Directory/File or Cartridge Based Replication is disabled for a time and then is re-enabled.

Manually performing a synchronization is not necessary except in the cases described above. When synchronization is manually initiated for a share or partition, the replication queue for that share or partition is cleared. All file write and delete requests are queued after the synchronization, and they are not processed until the synchronization is complete. This can cause replication to appear to be slow, especially for a share or partition that is frequently accessed.

---

**Caution:** Before synchronizing a share or partition, make sure all media are unmounted and there are no active backup jobs to the share or partition. (After the synchronization reaches the **Replicating** state, backup jobs are allowed.)

---

---

**Note:** Even when replication is paused, the system continues to queue Directory/File or Cartridge Based Replication operations. Each time an operation is queued, the system logs an administration alert that reports the total number of queued Directory/File or Cartridge Based Replication requests.

---

---

**Note:** If a synchronization fails, make sure the target share or partition is unlocked (see [Configuring a Target Share for Directory/File Based Replication](#) on page 152 or [Configuring a Target Partition for Cartridge Based Replication](#) on page 166).

---

To synchronize a share or partition:

- 1 Select the share or partition to synchronize.

If multiple targets are configured, click the arrow next to the share or partition to display all targets, and then select the desired target.

- 2 Click **Synchronize Now**.

The status of the synchronization job displays in the **Job Status** column.

To cancel the synchronization job, select the share or partition and click **Abort**.

---

## Directory/File or Cartridge Based Replication Queue

---

The Directory/File or Cartridge Based Replication Queue displays replication statistics for shares or partitions that are configured for Directory/File or Cartridge Based Replication (see [Configuring Directory/File or Cartridge Based Replication](#) on page 135).

To view the Directory/File or Cartridge Based Replication Queue:


- 1 Select a share or partition that is configured for Directory/File or Cartridge Based Replication.

If multiple targets are configured, click the arrow next to the share or partition to display all targets, and then select the desired target.

- 2 Click **Queue**.

The Directory/File or Cartridge Based Replication Queue displays (see [Figure 71](#)).

Figure 71 Directory/File or Cartridge Based Replication Queue

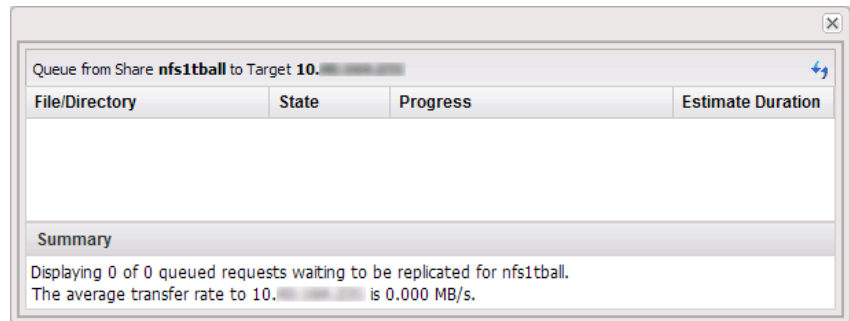

The Directory/File or Cartridge Based Replication Queue displays the following information for the share or partition:

- **File/Directory or Barcode** - The file/directory or cartridge to be replicated.
- **State** - The replication state for the file/directory or cartridge.
- **Progress** - The percentage complete for replication of the file/directory or cartridge.
- **Estimated Duration** - The estimated time it will take to complete replication for the file/directory or cartridge.

---

**Note:** The estimated duration may display as **unknown** if replication has been very recently initiated. After the system has enough information to calculate a value, the estimated duration will display.

---

---

**Note:** The contents of the Directory/File or Cartridge Based Replication Queue are dynamic. Because of this, statistics are subject to change if items are added to the queue.

---

**Note:** The queue may show a large number of deletion entries after a single directory is deleted. This is expected behavior, and occurs because several recursive file or subdirectory deletions may be required.

---

- 3 To close the **Directory/File or Cartridge Based Replication Queue**, click the **Close** icon.

---

## Scheduling a Share or Partition For Replication

---


When a share or partition is enabled for replication, it is important to regularly replicate the share or partition to the target systems. Quantum recommends scheduling replication to run after backups are complete.

To schedule a share or partition for replication, click **Scheduler**. The **Scheduler** window displays (see [Figure 72](#)).

For details about using the **Scheduler** to add or edit a replication schedule, see [Scheduling a Share or Partition for Replication](#) on page 311.

---

Figure 72 Scheduler Window

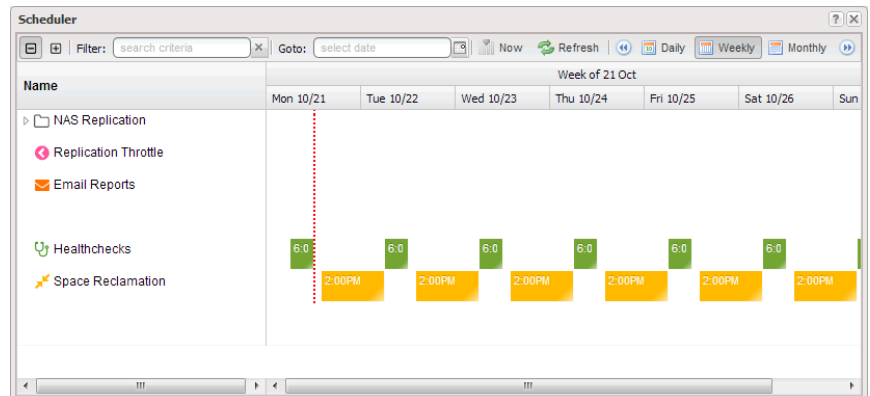

---

## Target DXis List

---

The **Target DXis** list allows you to configure and manage replication targets on the DXi4700. Click the arrows at the upper right, or click the top banner row, to expand or collapse the **Target DXis** list. For details about working with targets, see [Target DXis List](#) on page 260.

---

## Receive NAS

The **Receive NAS** page allows you to manage incoming replication activity for NAS shares. You can recover a replicated share on the target system if the source system is unavailable. Once the source system becomes available, you can failback the share to make it available on the source system again.

---

**Note:** Before you can receive replicated shares, you must specify one or more replication sources (see [Adding a Replication Source](#) on page 267).

---

To access the **Receive NAS** page, click the **Replication** menu, and then click the **Receive > NAS** tab.

Use the **Receive NAS** page to perform the following tasks:

- View received snapshots and recover, failback, or delete snapshots (see [Received Snapshots](#) on page 142).
- Manage recovery jobs (see [Recovery Jobs](#) on page 148).
- Manage failback jobs (see [Failback Jobs](#) on page 149).
- Manage shares configured for Directory/File Based Replication (see [Directory/File Based](#) on page 150).

---

## Received Snapshots


---

The **Received Snapshots** page allows you to view and work with received snapshots. When a replicated NAS share is received from a source system, it is saved as a snapshot. The snapshot contains all of the data necessary to fully recover or failback the share to the point in time when the snapshot was saved.



To access the **Received Snapshots** page, on the **Receive NAS** page, click the **Received Snapshots** tab (see [Figure 73](#)).

Figure 73 Received Snapshots Page

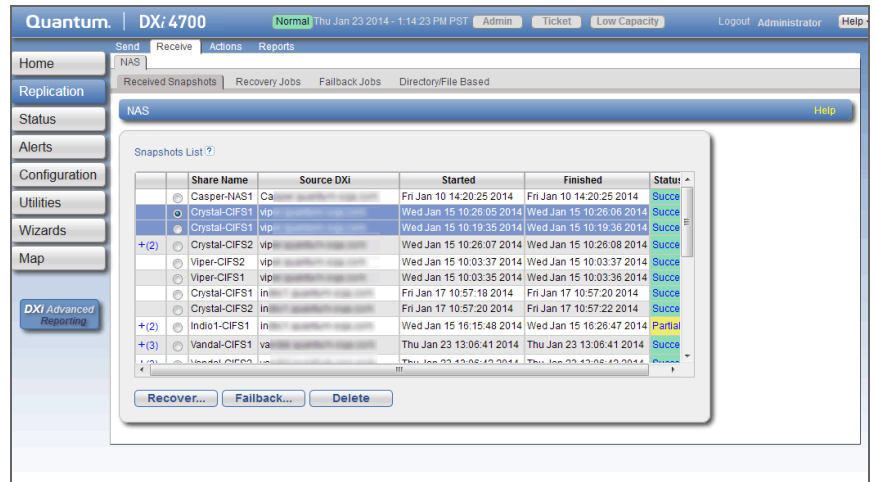

Use the **Received Snapshots** page to perform the following tasks:

- View information about received snapshots (see [Snapshots List](#) on page 143).
- Recover a share on the target system (see [Recovering a Share](#) on page 144).
- Failback a share to the source system (see [Performing a Failback For a Share](#) on page 145).
- Delete a received snapshot (see [Deleting a Snapshot](#) on page 147).

**Note:** The target system will retain up to 10 replication snapshots (default setting) for each replicated share. Once 10 snapshots have been saved, the oldest snapshot is deleted to make room for each new snapshot that is received. (To change the maximum number of snapshots retained for each share, see [Changing the Maximum Number of Snapshots](#) on page 269).

## Snapshots List

The **Snapshots List** displays all available snapshots that have been received from configured replication sources. Snapshots are grouped by

NAS share. To see all available snapshots for a share, click the plus icon [+] next to the share name.

The **Snapshots List** displays the following information about each snapshot:

- **Share Name** - The name of the share.
- **Source DXi** - The hostname of the system that the snapshot was sent from.
- **Started** - The time the most recent replication job was started.
- **Finished** - The time the most recent replication job finished.
- **Status** - The status of the most recent replication job (see [Replication and Synchronization Status](#) on page 133). Click the status to display detailed information about the most recent replication job.

---

**Note:** Click a column heading to sort the rows in the table by that column. Click the column heading again to reverse the sort order.

---

## Recovering a Share

Recover a NAS share if the source system is unavailable and you need to access the share (for example, to continue performing backups). When you recover a share, you select a received snapshot. The DXi4700 uses the snapshot to recreate the share on the target system just as it was at the point in time when the snapshot was saved.

---

**Note:** Before recovering a share, you must enable CIFS on the DXi (see [Windows Domain](#) on page 219). Also, if the DXi is not using Active Directory, you must configure at least one workgroup user to own recovered CIFS shares (see [Share Access](#) on page 222).


---

To recover a share:

- 1 On the target system, select a snapshot in the **Snapshots List** and click **Recover**.

The **Recovered Share Name** page displays (see [Figure 74](#)).

Figure 74 Recovered Share Name Page

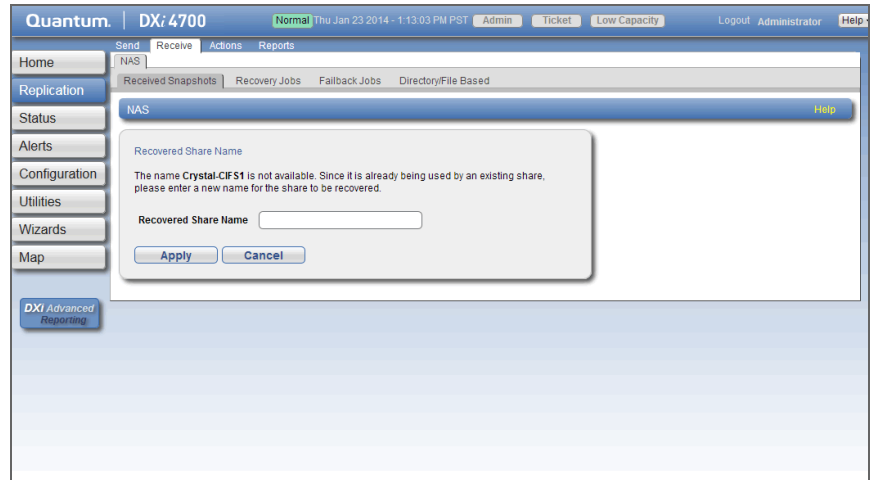

- 2 (Optional) In the **Recovered Share Name** box, type a new name for the recovered share. (The default name is the original share name.)
- 3 Click **Apply**.
- 4 If the DXi is joined to a Windows workgroup, select the workgroup user that will own the recovered share, and then click **Apply**.

The share is recovered on the target system. All data stored on the share at the time the snapshot was saved is available. The original export protocol of the share (NFS or CIFS) is retained in the recovery process.

---

**Note:** After you recover a share, if you want to continue backing up data to the share, you must remap your backup application to point to the target system instead of the source system.

---

## Performing a Failback For a Share

Perform a failback of a NAS share if a source system that was previously unavailable becomes available again. When you failback a share, you select a received snapshot. The DXi4700 copies the snapshot from the target system back to the source system. You can then perform a recover operation to recreate the share on the source system just as it was at the point in time when the snapshot was saved.

---

**Note:** Before you can failback a share, on the original source system, you must add the original target system to the list of allowed replication sources (see [Adding a Replication Source](#) on page 267). This is because, during failback, the original target is acting as a source when it sends a snapshot to the original source.


---

To perform a share failback:

- 1 On the target system, select a snapshot in the **Snapshots List** and click **Failback**.

The **Failback Target** page displays (see [Figure 75](#)).

Figure 75 Failback Target Page

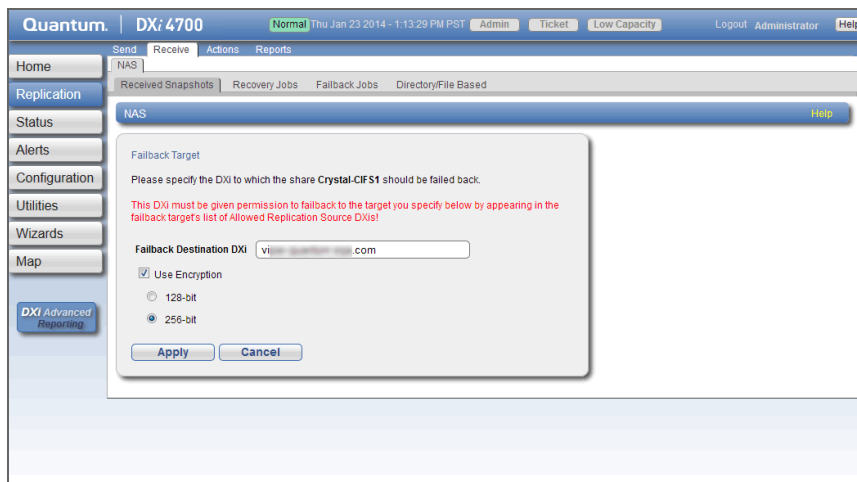

- 2 (Optional) In the **Failback Destination DXi** box, type the hostname or IP address of a new destination system to failback the share to. (The default destination is the original source system.)

---

**Note:** To use hostname format, you must specify at least one DNS IP address on the **Network** page (see [Network](#) on page 317).

---

- 3 (Optional) Leave the **Use Encryption** check box selected to enable encryption when sending the snapshot to the destination. Or clear the **Use Encryption** check box to disable encryption when sending the snapshot to the destination.

---

---

**Caution:** Select 128-bit encryption if you are sending data to a DXi running a system software version prior to DXi 2.1 Software.

---

---

---

**Note:** AES encryption options are available only if the Data-in-Flight license is installed (see [License Keys](#) on page 392).

---

**4 Click Apply.**

The snapshot is sent to the source system.

**5 On the source system, in the Snapshots List, select the snapshot that was sent during the failback operation and click Recover.**

The **Recovered Share Name** page displays (see [Figure 74](#)).

**6 (Optional) In the Recovered Share Name box, type a new name for the recovered share. (The default name is the original share name.)**

**7 Click Apply.**

The share is recovered on the source system. All data stored on the share at the time the snapshot was saved is available. The original export protocol of the share (NFS or CIFS) is retained in the recovery process.

---

**Note:** If you previously remapped your backup application to a recovered share on the target system, after you failback the share, you must remap your backup application again to point to the source system.

---

## Deleting a Snapshot

Delete a snapshot if it is no longer needed. After you delete a snapshot, it can no longer be used to recover or failback a NAS share.

---

**Note:** You cannot delete a snapshot if a failback operation is in progress for the snapshot. Wait for the failback operation to complete, or abort the operation (see [Failback Jobs](#) on page 149).

---

To delete a snapshot:

- 1 Do one of the following actions:
  - On the source system, disable replication for the share associated with the snapshot (see [Enabling Replication For a Share or Partition](#) on page 134).
  - On the target system, delete the source system associated with the snapshot from the list of allowed replication sources (see [Deleting a Replication Source](#) on page 268).
- 2 On the target system, select a snapshot in the **Snapshots List** and click **Delete**.

---

**Note:** If you delete the last snapshot for a share while replication for the share (to this target) is still enabled, any replicated data not yet protected by a replicated share is *not* deleted. To delete this data, on the source system, disable replication for the share before deleting the last snapshot.

---

- 3 Click **Yes** to confirm the action.

---


## Recovery Jobs

---

The **Recovery Jobs** page allows you to view information about snapshot recover operations that were previously completed.

To access the **Recovery Jobs** page, on the **Receive NAS** page, click the **Recovery Jobs** tab (see [Figure 76](#)).

Figure 76 Recovery Jobs Page

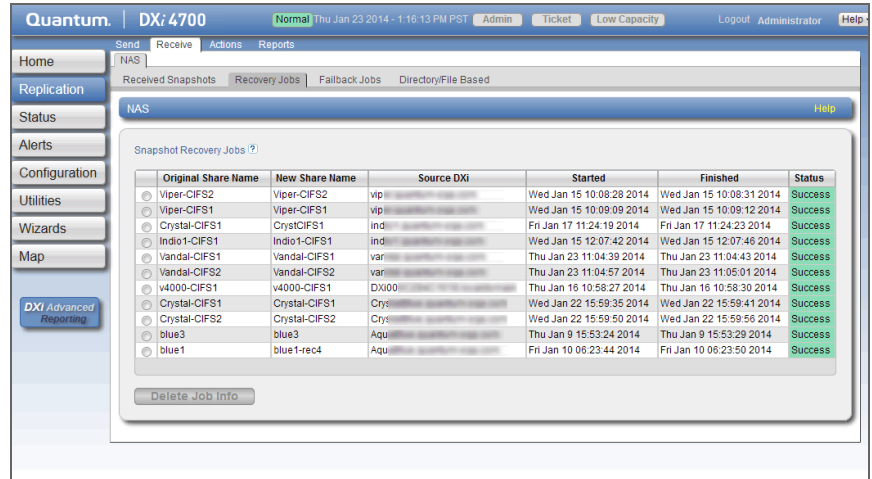

The **Snapshot Recovery Jobs** section displays the following information about recovery jobs:

- **Original Share Name** - The name of the share the snapshot was created from.
- **New Share Name** - The name of the share the snapshot was recovered to.
- **Source DXi** - The hostname of the system that the snapshot was received from.
- **Started** - The time the recovery job was started.
- **Finished** - The time the recovery job finished.
- **Status** - The status of the recovery job (**Success**, **In Progress**, or **Failed**).


To delete information for a recovery job, select it in the **Snapshot Recovery Jobs** list and click **Delete Job Info**.

## Failback Jobs

The **Failback Jobs** page allows you to view information about snapshot failback operations that were previously completed. You can also abort a failback that is currently in progress.

To access the **Failback Jobs** page, on the **Receive NAS** page, click the **Failback Jobs** tab (see [Figure 77](#)).

Figure 77 Failback Jobs Page

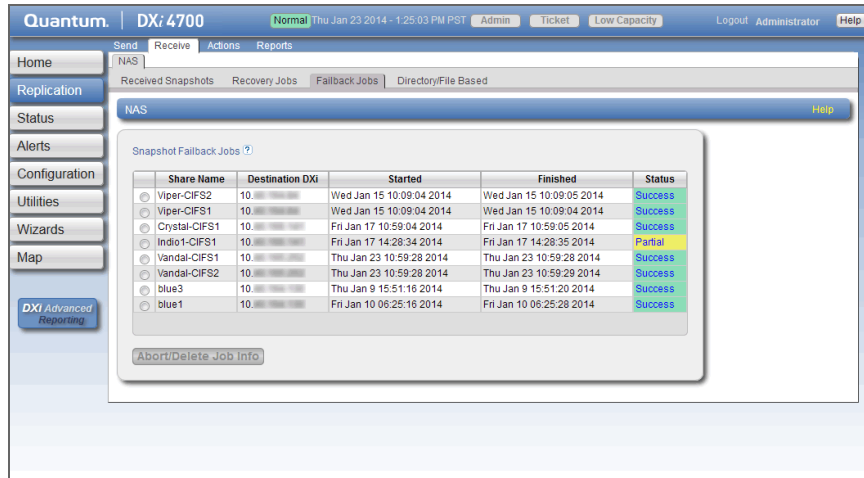

The **Snapshot Failback Jobs** section displays the following information about failback jobs:

- **Share Name** - The name of the share the snapshot was created from.
- **Destination DXi** - The hostname of the system that the snapshot was sent to.
- **Started** - The time the failback job was started.
- **Finished** - The time the failback job finished.
- **Status** - The status of the failback job (**Success**, **In Progress**, or **Failed**).

Use the **Failback Jobs** page to perform the following tasks:

- To delete information for a failback job, select it in the **Snapshot Failback Jobs** section and click **Delete Job Info**.
- To abort a failback job that is in progress, select it in the **Snapshot Failback Jobs** section and click **Abort**.

## Directory/File Based


The **Directory/File Based** page allows you to manage Directory/File Based Replication on the target system. You can configure a NAS share to receive Directory/File Based Replication data sent from a source system and view replication statistics for the share.



**Note:** For information about creating NAS shares, see [Adding a NAS Share](#) on page 215.

To access the **Directory/File Based** page, on the **Receive NAS** page, click the **Directory/File Based** tab (see [Figure 78](#)).

Figure 78 Directory/File Based Page

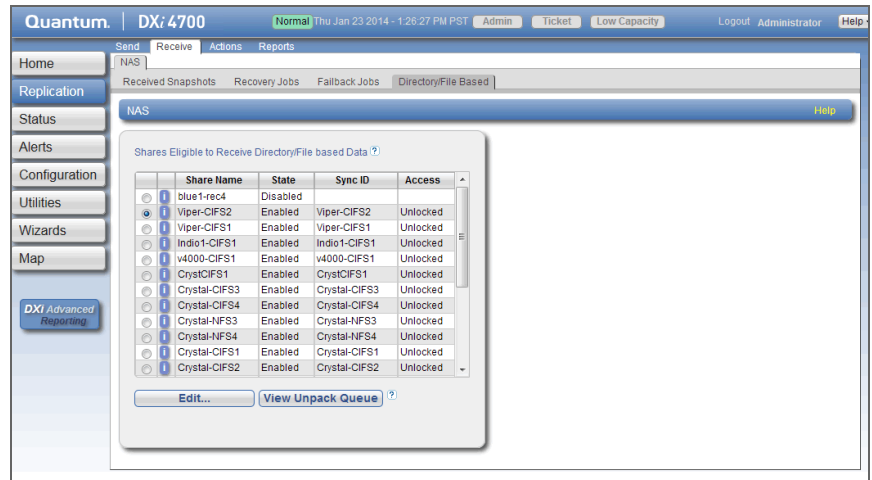

Use the **Directory/File Based** page to perform the following tasks:

- View shares eligible to receive Directory/File Based data (see [Shares Eligible to Receive Directory/File Based Data](#) on page 151)
- Configure a share to receive Directory/File Based Replication data (see [Configuring a Target Share for Directory/File Based Replication](#) on page 152)
- View statistics for shares configured for Directory/File Based Replication (see [Unpack Queue](#) on page 154)

### Shares Eligible to Receive Directory/File Based Data

The **Shares Eligible to Receive Directory/File Based Data** section displays information for all NAS shares on the DXi4700 that are eligible to receive Directory/File Based Replication data from a source share. To be eligible to receive Directory/File Based Replication data, a share must have data deduplication enabled at the time it is created.

The **Shares Eligible for Replication** section displays the following information:

- **Share Name** - The name of the share.
- **State** - The state of Directory/File Based Replication for the share (**Enabled** or **Disabled**).
- **Sync ID** - The Sync ID used to identify the source share that will send replicated data to the share.
- **Access** - The selected access option for the share (**Locked** or **Unlocked**).

---

**Note:** Click the Information button [i] next to a share to display detailed information about the share and recent replication activity.

---

## Configuring a Target Share for Directory/File Based Replication

Configuring a NAS share for Directory/File Based Replication enables the automatic replication of files and directories on the source share to the target share. Before you configure a share on the source system for Directory/File Based Replication, you must configure a share on the target system to receive the replicated data from the source share.

---

**Note:** For information about configuring Directory/File Based Replication on the source system, see [Configuring Directory/File or Cartridge Based Replication](#) on page 135.


---

To configure a target share for Directory/File Based Replication:

- 1 Select the share and click **Edit**.

The **Edit Share Settings** page displays (see [Figure 79](#)).

Figure 79 Edit Share Settings  
Page

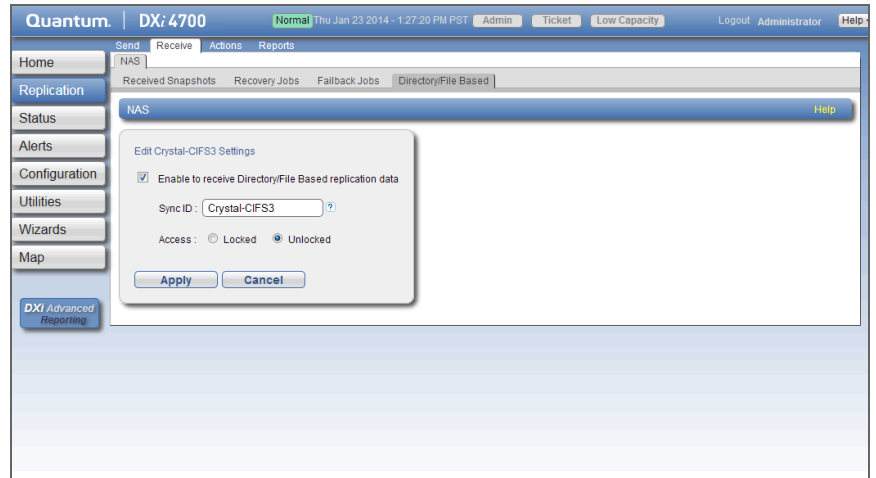

- 2 Select the **Enable to receive Directory/File Based replication data** check box to enable Directory/File Based Replication for the share.

Or clear the **Enable to receive Directory/File Based replication data** check box to disable Directory/File Based Replication for the share.

- 3 Enter a **Sync ID** in the box.

The Sync ID is used to identify the source share that will send replicated data to the target share. The Sync ID *must* be identical to the Sync ID of the source share on the source system.

- 4 Select an **Access** option:

- **Locked** - The share is not allowed to receive new Directory/File Based Replication data.
- **Unlocked** - The share is allowed to receive new Directory/File Based Replication data.

---

**Note:** If a share configured for Directory/File Based Replication is locked on the target system, synchronization jobs may fail on the source system.

---


- 5 Click **Apply**.

## Unpack Queue

Use the **Unpack Queue** to view Directory/File Based Replication statistics for data received from the source system.

To view the **Unpack Queue**, select a share and click **View Unpack Queue** (see [Figure 80](#)).

Figure 80 Unpack Queue

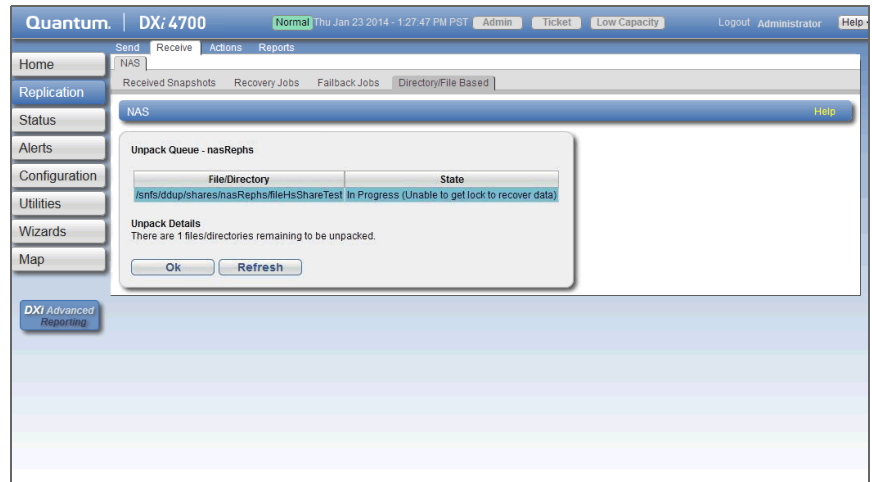

The **Unpack Queue** displays the following information:

- **File/Directory** - The file or directory to be replicated.
- **State** - The replication state of the file or directory.

Click **Refresh** to update the statistics in the Unpack Queue. Click **OK** to return to the **Directory/File Based** page.

## Receive VTL

The **Receive VTL** page allows you to manage incoming replication activity for VTL partitions. You can recover a replicated partition on the target system if the source system is unavailable. Once the source system becomes available, you can fallback the partition to make it available on the source system again.

---

**Note:** Before you can receive replicated partitions, you must specify one or more replication sources (see [Adding a Replication Source](#) on page 267).

---

To access the **Receive VTL** page, click the **Replication** menu, and then click the **Receive > VTL** tab.

Use the **Receive VTL** page to perform the following tasks:

- View received snapshots and recover, failback, or delete snapshots (see [Received Snapshots](#) on page 155).
- Manage recovery jobs (see [Recovery Jobs](#) on page 162).
- Manage failback jobs (see [Failback Jobs](#) on page 163).
- Manage partitions configured for Cartridge Based Replication (see [Cartridge Based](#) on page 164).

---


## Received Snapshots

---

The **Received Snapshots** page allows you to view and work with received snapshots. When a replicated VTL partition is received from a source system, it is saved as a snapshot. The snapshot contains all of the data necessary to fully recover or failback the partition to the point in time when the snapshot was saved.

To access the **Received Snapshots** page, on the **Receive VTL** page, click the **Received Snapshots** tab (see [Figure 81](#)).

Figure 81 Received Snapshots Page

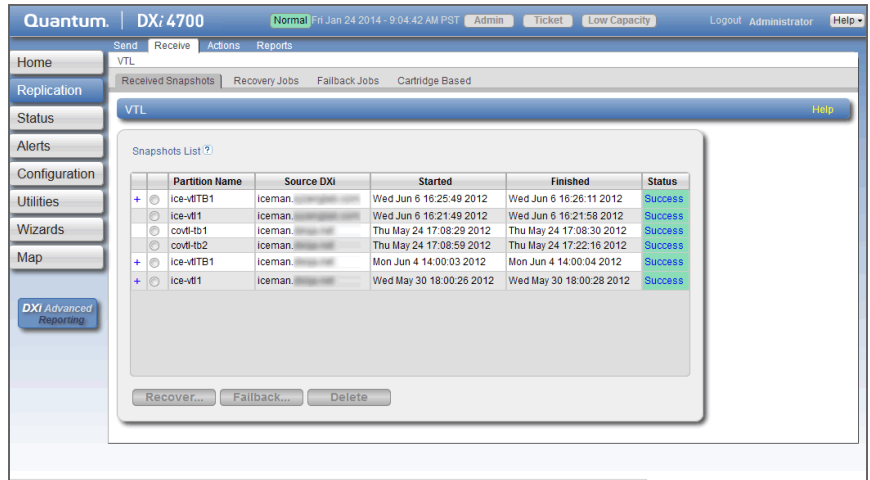

Use the **Received Snapshots** page to perform the following tasks:

- View information about received snapshots (see [Snapshots List](#) on page 156).
- Recover a partition on the target system (see [Recovering a Partition](#) on page 157).
- Failback a partition to the source system (see [Performing a Failback For a Partition](#) on page 159).
- Delete a received snapshot (see [Deleting a Snapshot](#) on page 161).

**Note:** The target system will retain up to 10 replication snapshots (default setting) for each replicated partition. Once 10 snapshots have been saved, the oldest snapshot is deleted to make room for each new snapshot that is received. (To change the maximum number of snapshots retained for each partition, see [Changing the Maximum Number of Snapshots](#) on page 269).

## Snapshots List

The **Snapshots List** displays all available snapshots that have been received from configured replication sources. Snapshots are grouped by VTL partition. To see all available snapshots for a partition, click the plus icon [+ ] next to the partition name.

The **Snapshots List** displays the following information about each snapshot:

- **Partition Name** - The name of the partition.
- **Source DXi** - The hostname of the system that the snapshot was sent from.
- **Started** - The time the most recent replication job was started.
- **Finished** - The time the most recent replication job finished.
- **Status** - The status of the most recent replication job (see [Replication and Synchronization Status](#) on page 133). Click the status to display detailed information about the most recent replication job.

---

**Note:** Click a column heading to sort the rows in the table by that column. Click the column heading again to reverse the sort order.

---

## Recovering a Partition

Recover a VTL partition if the source system is unavailable and you need to access the partition (for example, to continue performing backups). When you recover a partition, you select a received snapshot. The DXi4700 uses the snapshot to recreate the partition on the target system just as it was at the point in time when the snapshot was saved.

---

**Note:** To recover a partition, the target system must support the library emulation and drive type used in the original partition. For a list of the available library emulations and drive types on the target system, see [Adding a VTL Partition](#) on page 232.


---

To recover a partition:

- 1 On the target system, select a snapshot in the **Snapshots List** and click **Recover**.

The **Recovered Partition Name** page displays (see [Figure 82](#)).

Figure 82 Recovered Partition  
Name Page

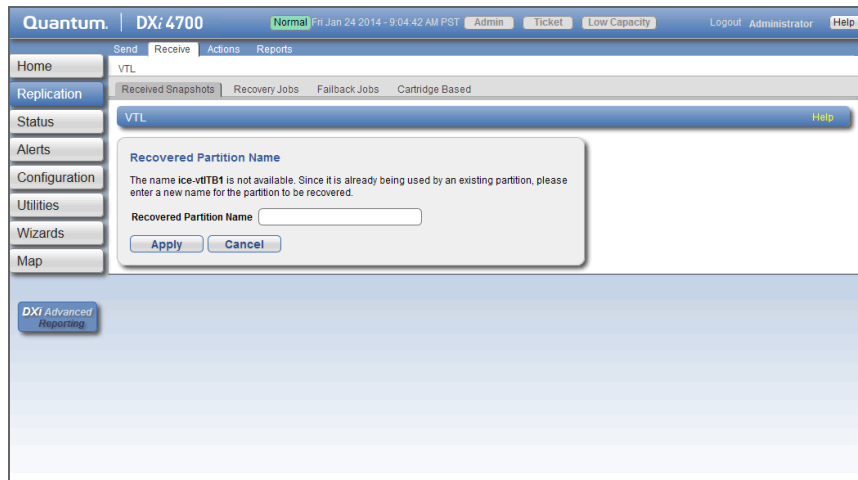

- 2 (Optional) In the **Recovered Partition Name** box, type a new name for the recovered partition. (The default name is the original partition name.)
- 3 Click **Apply**.

The partition and its cartridges are recovered on the target system. All data stored on the partition at the time the snapshot was saved is available.

After recovering the partition, you must add tape drives to the partition. The tape drive type must be identical to the original partition so that the media is compatible. In addition, you must map the devices before the VTL partition is accessible.

If the partition contains media, you will only be able to select the highest capacity tape drive for that media type. For example, if the partition contains SDLT600 tape cartridges, you will only be able to select DLT-S4 tape drives when mapping devices to the recovered partition.

---

**Note:** When a VTL partition is recovered on a target system, a new serial number is created for the partition.

---



---

**Note:** After you recover a partition, if you want to continue backing up data to the partition, you must remap your backup application to point to the target system instead of the source system.

---

## Performing a Failback For a Partition

Perform a failback of a VTL partition if a source system that was previously unavailable becomes available again. When you failback a partition, you select a received snapshot. The DXi4700 copies the snapshot from the target system back to the source system. You can then perform a recover operation to recreate the partition on the source system just as it was at the point in time when the snapshot was saved.

---

**Note:** Before you can failback a partition, on the original source system, you must add the original target system to the list of allowed replication sources (see [Adding a Replication Source](#) on page 267). This is because, during failback, the original target is acting as a source when it sends a snapshot to the original source.


---

To perform a partition failback:

- 1 On the target system, select a snapshot in the **Snapshots List** and click **Failback**.

The **Failback Target** page displays (see [Figure 83](#)).

Figure 83 Failback Target Page

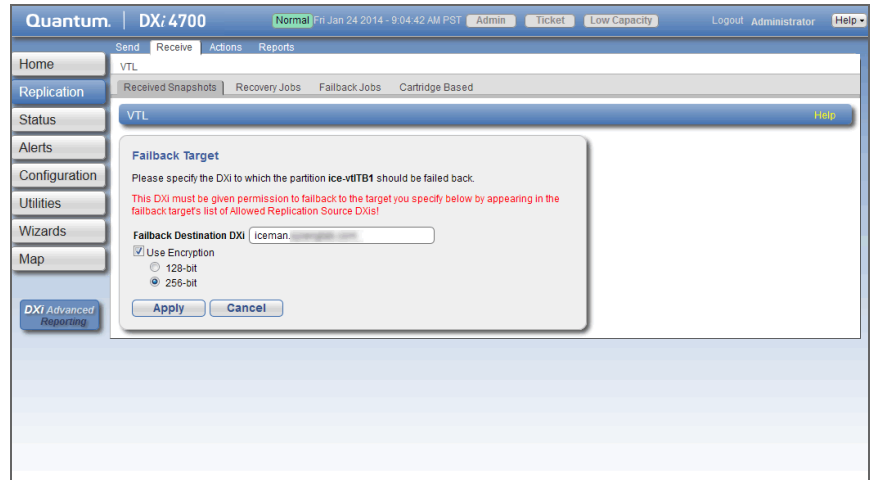

- (Optional) In the **Failback Destination DXi** box, type the hostname or IP address of a new destination system to failback the partition to. (The default destination is the original source system.)

---

**Note:** To use hostname format, you must specify at least one DNS IP address on the **Network** page (see [Network](#) on page 317).

---

- (Optional) Leave the **Use Encryption** check box selected to enable encryption when sending the snapshot to the destination. Or clear the **Use Encryption** check box to disable encryption when sending the snapshot to the destination.

---

**Caution:** Select 128-bit encryption if you are sending data to a DXi running a system software version prior to DXi 2.1 Software.

---

---

**Note:** AES encryption options are available only if the Data-in-Flight license is installed (see [License Keys](#) on page 392).

---

- Click **Apply**.  
The snapshot is sent to the source system.
- On the source system, in the **Snapshots List**, select the snapshot that was sent during the failback operation and click **Recover**.

The **Recovered Partition Name** page displays (see [Figure 82](#)).

- 6 (Optional) In the **Recovered Partition Name** box, type a new name for the recovered partition. (The default name is the original partition name.)
- 7 Click **Apply**.

The partition and its cartridges are recovered on the source system. All data stored on the partition at the time the snapshot was saved is available.

After recovering the partition, you must add tape drives and a robot to the partition, and you must map the devices before the VTL partition is accessible. If the partition contains media, you will only be able to select the highest capacity tape drive for that media type. For example, if the partition contains SDLT600 tape cartridges, you will only be able to select DLT-S4 tape drives when mapping devices to the recovered partition.

---

**Note:** When a VTL partition is recovered on a target system, a new serial number is created for the partition.

---

---

**Note:** If you previously remapped your backup application to a recovered partition on the target system, after you failback the partition, you must remap your backup application again to point to the source system.

---

## Deleting a Snapshot

Delete a snapshot if it is no longer needed. After you delete a snapshot, it can no longer be used to recover or failback a VTL partition.

---

**Note:** You cannot delete a snapshot if a failback operation is in progress for the snapshot. Wait for the failback operation to complete, or abort the operation (see [Failback Jobs](#) on page 163).

---

To delete a snapshot:

- 1 Do one of the following actions:

- On the source system, disable replication for the partition associated with the snapshot (see [Enabling Replication For a Share or Partition](#) on page 134).
  - On the target system, delete the source system associated with the snapshot from the list of allowed replication sources (see [Deleting a Replication Source](#) on page 268).
- 2 On the target system, select a snapshot in the **Snapshots List** and click **Delete**.

---

**Note:** If you delete the last snapshot for a partition while replication for the partition (to this target) is still enabled, any replicated data not yet protected by a replicated partition is *not* deleted. To delete this data, on the source system, disable replication for the partition before deleting the last snapshot.

---


- 3 Click **Yes** to confirm the action.

## Recovery Jobs

The **Recovery Jobs** page allows you to view information about snapshot recover operations that were previously completed.

To access the **Recovery Jobs** page, on the **Receive VTL** page, click the **Recovery Jobs** tab (see [Figure 84](#)).

Figure 84 Recovery Jobs Page

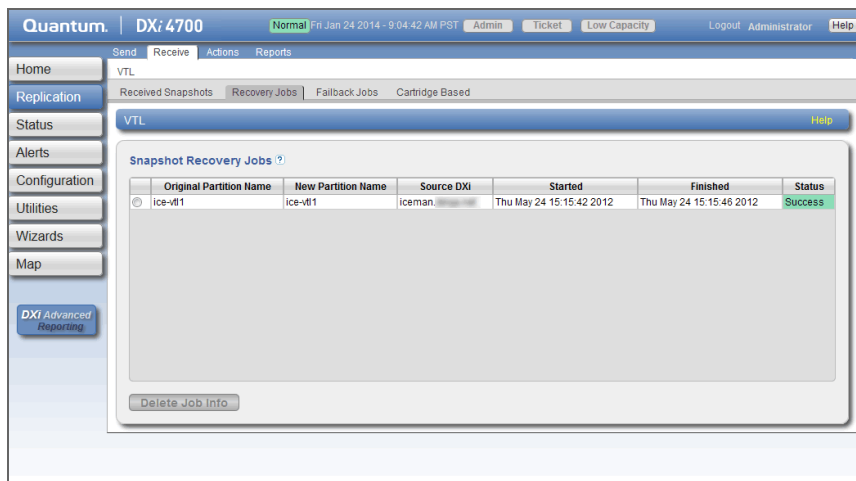

The **Snapshot Recovery Jobs** section displays the following information about recovery jobs:

- **Original Partition Name** - The name of the partition the snapshot was created from.
- **New Partition Name** - The name of the partition the snapshot was recovered to.
- **Source DXi** - The hostname of the system that the snapshot was received from.
- **Started** - The time the recovery job was started.
- **Finished** - The time the recovery job finished.
- **Status** - The status of the recovery job (**Success**, **In Progress**, or **Failed**).


To delete information for a recovery job, select it in the **Snapshot Recovery Jobs** list and click **Delete Job Info**.

## Failback Jobs

The **Failback Jobs** page allows you to view information about snapshot failback operations that were previously completed. You can also abort a failback that is currently in progress.

To access the **Failback Jobs** page, on the **Receive VTL** page, click the **Failback Jobs** tab (see [Figure 85](#)).

Figure 85 Failback Jobs Page

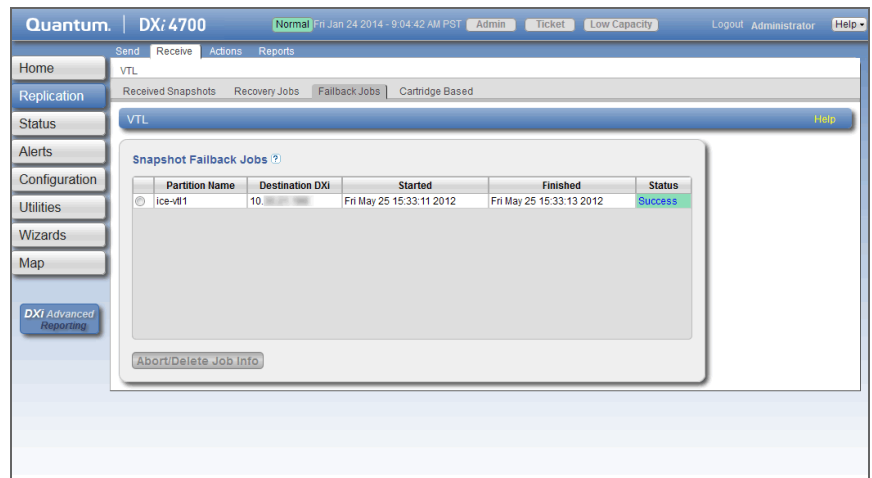

The **Snapshot Failback Jobs** section displays the following information about failback jobs:

- **Partition Name** - The name of the partition the snapshot was created from.
- **Destination DXi** - The hostname of the system that the snapshot was sent to.
- **Started** - The time the failback job was started.
- **Finished** - The time the failback job finished.
- **Status** - The status of the failback job (**Success, In Progress, or Failed**).

Use the **Failback Jobs** page to perform the following tasks:

- To delete information for a failback job, select it in the **Snapshot Failback Jobs** section and click **Delete Job Info**.
- To abort a failback job that is in progress, select it in the **Snapshot Failback Jobs** section and click **Abort**.

---

## Cartridge Based

---

The **Cartridge Based** page allows you to manage Cartridge Based Replication on the target system. You can configure a VTL partition to receive Cartridge Based Replication data sent from a source system and view replication statistics for the partition.


---

**Note:** For information about creating VTL partitions, see [Adding a VTL Partition](#) on page 232.

---

To access the **Cartridge Based** page, on the **Receive VTL** page, click the **Cartridge Based** tab (see [Figure 86](#)).

Figure 86 Cartridge Based  
Page

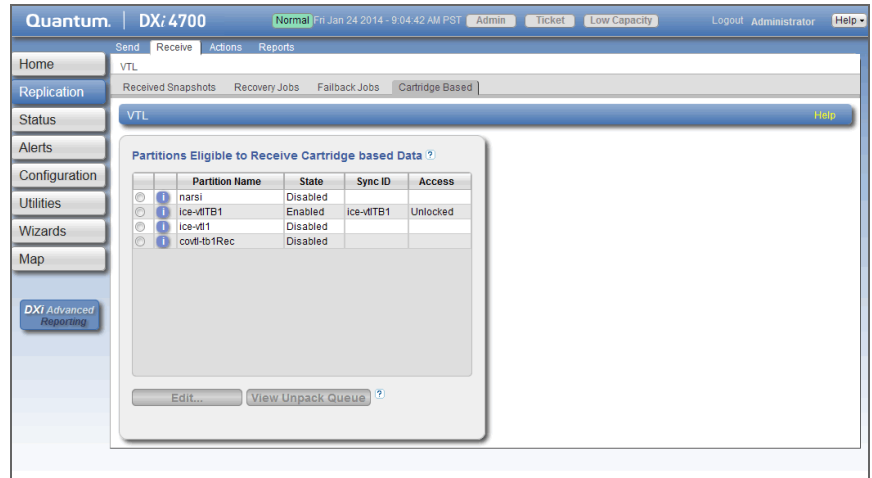

Use the **Cartridge Based** page to perform the following tasks:

- View partitions eligible to receive Cartridge Based data (see [Partitions Eligible to Receive Cartridge Based Data](#) on page 165)
- Configure a partition to receive Cartridge Based Replication data (see [Configuring a Target Partition for Cartridge Based Replication](#) on page 166)
- View statistics for partitions configured for Cartridge Based Replication (see [Unpack Queue](#) on page 167)

### Partitions Eligible to Receive Cartridge Based Data

The **Partitions Eligible to Receive Cartridge Based Data** section displays information for all VTL partitions on the DXi4700 that are eligible to receive Cartridge Based Replication data from a source partition. To be eligible to receive Cartridge Based Replication data, a partition must have data deduplication enabled at the time it is created.

The **Partitions Eligible for Replication** section displays the following information:

- **Partition Name** - The name of the partition.
- **State** - The state of Cartridge Based Replication for the partition (**Enabled** or **Disabled**).
- **Sync ID** - The Sync ID used to identify the source partition that will send replicated data to the partition.

- **Access** - The selected access option for the partition (**Locked** or **Unlocked**).

---

**Note:** Click the Information button [i] next to a partition to display detailed information about the partition and recent replication activity.

---

## Configuring a Target Partition for Cartridge Based Replication

Configuring a VTL partition for Cartridge Based Replication enables the automatic replication of cartridges on the source partition to the target partition. Before you configure a partition on the source system for Cartridge Based Replication, you must configure a partition on the target system to receive the replicated data from the source partition.

---

**Note:** For information about configuring Cartridge Based Replication on the source system, see [Configuring Directory/File or Cartridge Based Replication](#) on page 135.


---

To configure a target partition for Cartridge Based Replication:

- 1 Select the partition and click **Edit**.

The **Edit Partition Settings** page displays (see [Figure 87](#)).

Figure 87 Edit Partition  
Settings Page

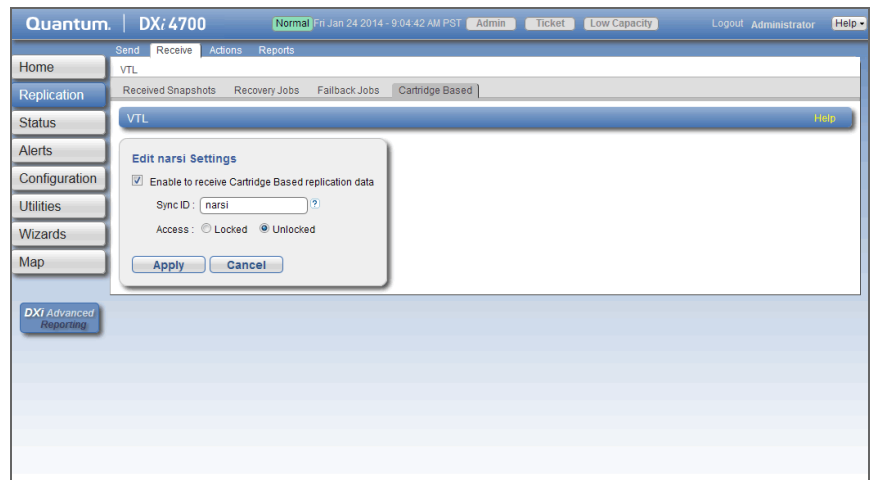



2 Select the **Enable to receive Cartridge Based replication data** check box to enable Cartridge Based Replication for the partition.

Or clear the **Enable to receive Cartridge Based replication data** check box to disable Cartridge Based Replication for the partition.

3 Enter a **Sync ID** in the box.

The Sync ID is used to identify the source partition that will send replicated data to the target partition. The Sync ID *must* be identical to the Sync ID of the source partition on the source system.

4 Select an **Access** option:

- **Locked** - The partition is not allowed to receive new Cartridge Based Replication data.
- **Unlocked** - The partition is allowed to receive new Cartridge Based Replication data.

---

**Note:** If a partition configured for Cartridge Based Replication is locked on the target system, synchronization jobs may fail on the source system.

---

5 Click **Apply**.

## Unpack Queue

Use the **Unpack Queue** to view Cartridge Based Replication statistics for data received from the source system.

To view the **Unpack Queue**, select a partition and click **View Unpack Queue** (see [Figure 88](#)).

Figure 88 Unpack Queue



The **Unpack Queue** displays the following information:

- **Barcode** - The barcode of the cartridge to be replicated.
- **State** - The replication state of the cartridge.


Click **Refresh** to update the statistics in the Unpack Queue. Click **OK** to return to the **Cartridge Based** page.

## Actions

The **Actions** page allows you to manage replication activity on the DXi4700. You can pause the replication service, enable the replication state, and clear performance statistics.

To access the **Actions** page, click the **Replication** menu, and then click the **Actions** tab (see [Figure 89](#)).

Figure 89 Actions Page

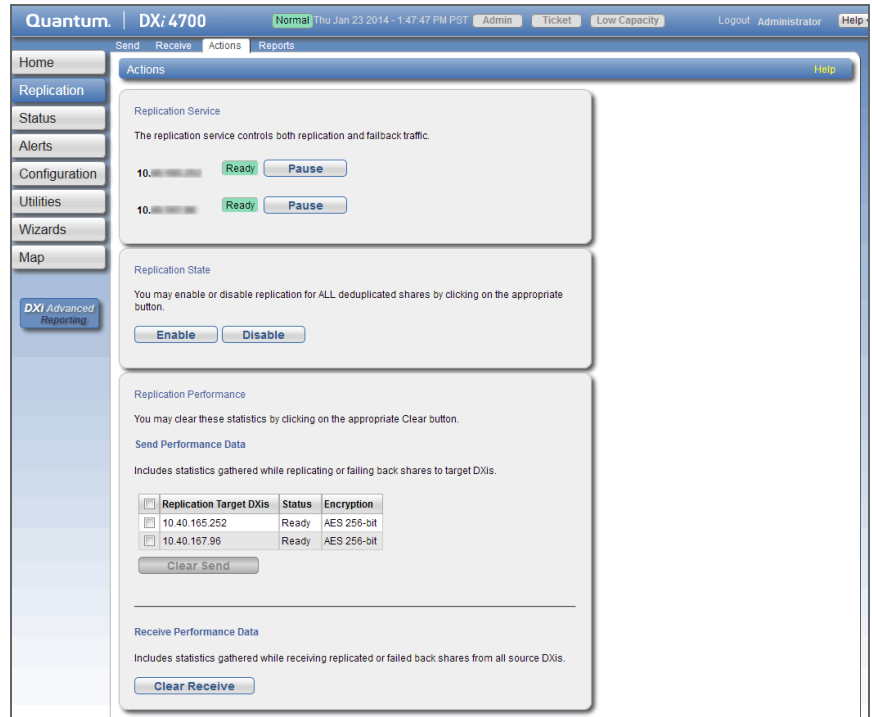

Use the **Actions** page to perform the following tasks:

- Pause or resume the replication service (see [Replication Service](#) on page 169).
- Enable or disable the replication state (see [Replication State](#) on page 170).
- Clear cumulative replication statistics (see [Replication Performance](#) on page 171).

## Replication Service

The replication service controls replication and failback traffic on the DXi4700. You can pause each replication target independently.

- Click **Pause** next to a target to pause all replication and failback traffic to that target.

If a replication job is currently in progress, the system continues to replicate the current block of data. The process of replicating the

current block can take up to 15 minutes to complete. After the block has completed replication, the system pauses replication.

---

**Note:** If you pause a replication job that is in process, a Failure event is logged in the replication report (see [Reports](#) on page 171).

---

- Click **Resume** next to a target to resume all incoming and outgoing replication and failback traffic to that target.

If a replication job was in progress when replication was paused, the replication job continues.

---

## Replication State

---

The replication state applies to all NAS shares or VTL partitions on the DXi4700 that are eligible for replication (that is, all deduplicated shares or partitions).

---

**Note:** The **Replication Actions** page may appear busy for a few moments when enabling or disabling the replication state. Wait for the process to complete before performing other actions.

---

- Click **Enable** to enable replication for all shares or partitions.
- Click **Disable** to disable replication for all shares or partitions.

If a replication job is currently in progress, the system continues until the entire replication job is complete. After the replication job has completed, the system disables replication. The system will not be able to replicate data for any shares or partitions until you click **Enable**.

---

**Note:** To disable replication for a single share or partition, select it on the **Replication > Send** page and click **Edit**. Clear the **Enable replication** and the **Enable scheduled replication** check boxes, and then click **Apply**. For more information, see [Replication Send](#) on page 130

---

---

## Replication Performance

---

The DXi4700 maintains cumulative performance statistics for send and receive replication activity. The statistics appear on the **Home** page and elsewhere. You can reset these statistics so the system will calculate them with new data going forward.

- To clear send statistics, first select one or more targets to clear statistics for, and then click **Clear Send**. This resets cumulative performance statistics gathered while replicating shares or partitions to the selected target systems, or when sending a snapshot during a failback operation.
- To clear receive statistics, click **Clear Receive**. This resets cumulative performance statistics gathered while receiving replicated shares or partitions from source systems, or when receiving a snapshot during a failback operation.

---

## Reports

The **Reports** page allows you to generate and download a replication report. The report includes detailed information about all replication activity, including Directory/File or Cartridge Based Replication.

To access the **Reports** page, click the **Replication** menu, and then click the **Reports** tab (see [Figure 90](#)).

Figure 90 Reports Page



Use the **Reports** page to perform the following tasks:

- To generate a new replication report, click **Generate New**.
- To download the most recently generated replication report, click **Download Current**.

Save the replication report to your local workstation, and then unzip the downloaded file. The report consists of a ZIP file that contains multiple CSV (comma separated value) files. To view the CSV files, open them in a compatible spreadsheet application.



## Chapter 7

# DXi4700 Status

---

The **Status** page allows you to view status information for the DXi4700 hardware as well as performance and disk usage information.

---

**Note:** Status information is gathered by the system every two minutes.

---

To access the **Status** pages, click the **Status** menu.

The **Status** pages contains the following tabs:

- [Hardware](#)
- [Performance](#)
- [Disk Usage](#)
- [VTL Status](#)
- [OST Status](#)
- [Activity Log](#)

---

# Hardware

The **Hardware** page allows you to view information about the hardware components of the DXi4700. You can view the overall status of the node as well as detailed status information for components such as the system board, host bus adapters, network ports, and storage arrays.

To access the **Hardware** page, click the **Status** menu, and then click the **Hardware** tab.

The **Hardware** page contains the following tabs:

- [Summary](#)
- [Details](#)
- [Firmware Version](#)

---

## Summary

---


The **Hardware Summary** page allows you to view the overall status of the node and its main components. The system and each component can have one of the following statuses:

- **Normal** - (Green) The hardware is operating correctly.
- **Attention** - (Yellow) There is a problem with the hardware.
- **Failed** - (Red) The hardware has failed.

To access the **Hardware Summary** page, on the **Hardware** page, click the **Summary** tab (see [Figure 91](#)).



Figure 91 Hardware Summary Page

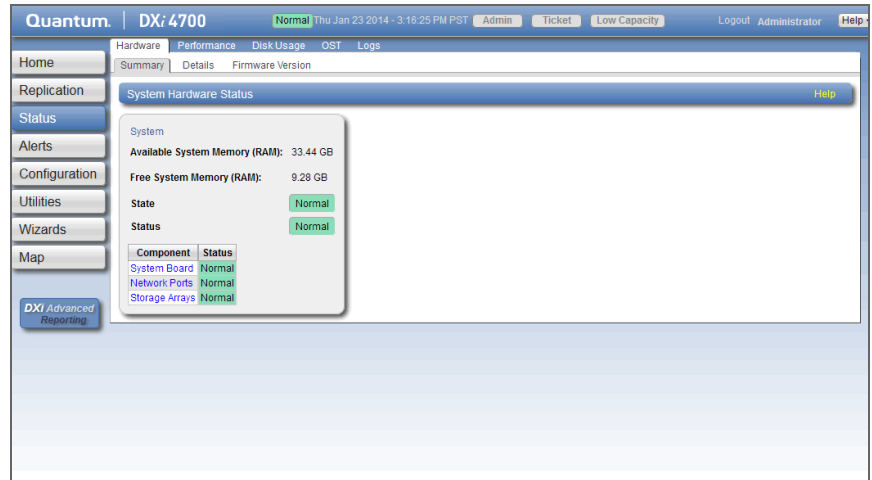

The **Hardware Summary** page displays the following information:

- **Available System Memory (RAM)** - The total amount of memory (RAM) installed in the system.
- **Free System Memory (RAM)** - The amount of system memory (RAM) that is currently free.
- **State** - The status of the node.
- **Status** - The overall status of all components in the node.
- **Component Name** - The name of the main component.  
Click the component name to see detailed information (see [Details](#) on page 175).
- **Component Status** - The overall status of the main component.

## Details

The **Details** page allows you to view detailed information about the hardware components of the DXi4700.

To access the **Details** page, on the **Hardware** page, click the **Details** tab.

Use the **Details** page to view information for the following components:

- [System Board](#)
- [Host Bus Adapters](#)
- [Network Ports](#)


- [Storage Arrays](#)

## System Board

The **System Board** page allows you to view information reported by the main system board in the node, such as temperature, voltage, fan, and power supply information.

To access the **System Board** page, on the **Details** page, click the **System Board** tab (see [Figure 92](#)).

Figure 92 System Board Page

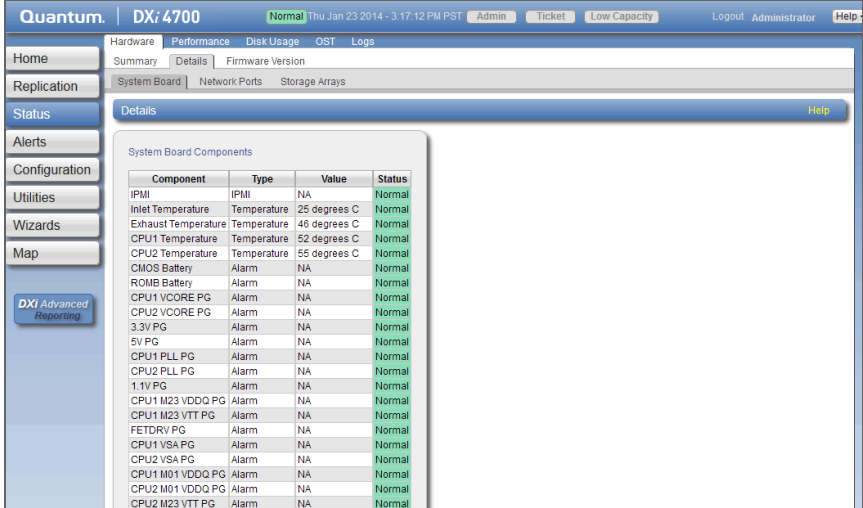

The screenshot shows the Quantum DXi4700 System Board page. The page title is "Quantum DXi4700" with a status of "Normal" and a timestamp of "Thu Jan 23 2014 - 3:17:12 PM PST". The page has a navigation menu on the left with options like Home, Replication, Status, Alerts, Configuration, Utilities, Wizards, and Map. The main content area shows a "Details" view with a "System Board Components" table.

Component	Type	Value	Status
IPMI	IPMI	NA	Normal
Inlet Temperature	Temperature	25 degrees C	Normal
Exhaust Temperature	Temperature	46 degrees C	Normal
CPU1 Temperature	Temperature	52 degrees C	Normal
CPU2 Temperature	Temperature	55 degrees C	Normal
CMOS Battery	Alarm	NA	Normal
ROMB Battery	Alarm	NA	Normal
CPU1 VCORE PG	Alarm	NA	Normal
CPU2 VCORE PG	Alarm	NA	Normal
3.3V PG	Alarm	NA	Normal
5V PG	Alarm	NA	Normal
CPU1 PLL PG	Alarm	NA	Normal
CPU2 PLL PG	Alarm	NA	Normal
1.1V PG	Alarm	NA	Normal
CPU1 M23 VDDQ PG	Alarm	NA	Normal
CPU1 M23 VTT PG	Alarm	NA	Normal
FETDRV PG	Alarm	NA	Normal
CPU1 VSA PG	Alarm	NA	Normal
CPU2 VSA PG	Alarm	NA	Normal
CPU1 M01 VDDQ PG	Alarm	NA	Normal
CPU2 M01 VDDQ PG	Alarm	NA	Normal
CPU2 M23 VTT PG	Alarm	NA	Normal

The **System Board** page displays the following information:

- **Component** - The name of the component on the system board.
- **Type** - The component type (Sensor, Fan, or Power Supply).
- **Value** - The value reported by the sensor or component.
- **Status** - The status of the component.
  - **Normal** - (Green) The component is operating correctly.
  - **Attention** - (Yellow) There is a problem with the component.
  - **Failed** - (Red) The component has failed.

## Host Bus Adapters

The **Host Bus Adapters** page allows you to view information about installed Fibre Channel cards and their ports.


---

**Note:** The **Host Bus Adapters** page displays only on DXi4700 configurations that include a Fibre Channel card.

---

To access the **Host Bus Adapters** page, on the **Details** page, click the **Host Bus Adapters** tab (see [Figure 93](#)).

Figure 93 Host Bus Adapters Page

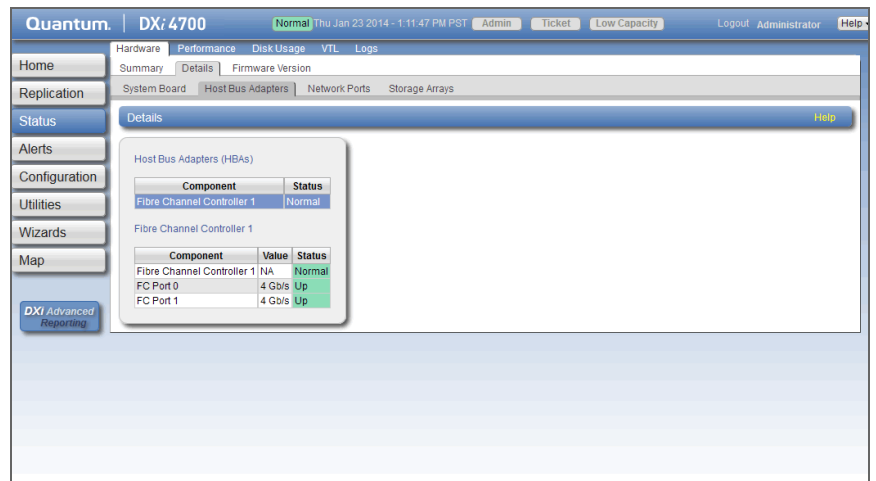

The **Host Bus Adapters** section displays the following information about each Fibre Channel card:

- **Component** - The name of the Fibre Channel card.  
Click the name of the card to view detailed information for the card below.
- **Status** - The status of the Fibre Channel card.
  - **Normal** - (Green) The component is operating correctly.
  - **Attention** - (Yellow) There is a problem with the component.
  - **Failed** - (Red) The component has failed.

The **Fibre Channel Controller** section displays the following information about the ports in the selected Fibre Channel or SAS controller:


- **Component** - The number of the Fibre Channel port.
- **Value** - The throughput capacity of the port (if connected).
- **Status** - The status of the port.
  - **Up** - (Green) The port is connected.
  - **Down** - (Green) The port is not connected.

## Network Ports

The **Network Ports** page allows you to view information about Ethernet ports in the system. The DXi4700 includes three or more Ethernet ports (depending on the configuration).

To access the **Network Ports** page, on the **Details** page, click the **Network Ports** tab (see [Figure 94](#)).

Figure 94 Network Ports Page

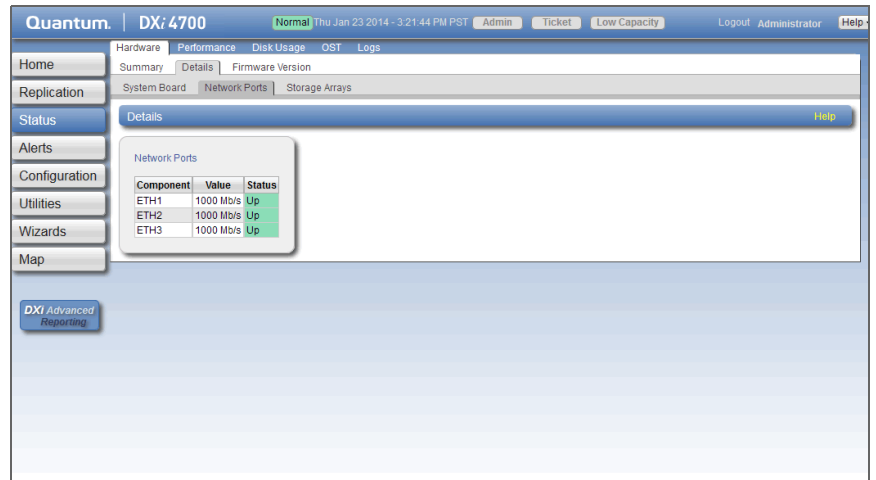

The **Network Ports** page displays the following information:

- **Component** - The number of Ethernet port.
- **Value** - The speed of the port in Mb/s.
- **Status** - The status of the Ethernet port.

- **Up** - (Green) The port is connected.
- **Down** - (Green) The port is not connected.

## Storage Arrays

The **Storage Arrays** page allows you to view information about storage arrays and controllers in the DXi4700.

To access the **Storage Arrays** page, on the **Details** page, click the **Storage Arrays** tab (see [Figure 95](#)).

Figure 95 Storage Arrays Page

Component	Status
a0	Normal

Components in a0

Component	Count	Status
Controllers	1	Normal
Volumes	5	Normal
Drives	12	Normal
Batteries	1	Normal
Alarms	13	Normal

Controllers in a0

Component	Location	Value	Status
PERC H710 Mini	PERC H710 Mini (Embedded)	Ok	Ready

The **Storage Arrays** section displays the following information about each storage array:

- **Component** - The name of the storage array.  
Click the name of the storage array to view detailed information for the array in the **Component** section.
- **Status** - The status of the storage array.
  - **Normal** - (Green) The component is operating correctly.
  - **Attention** - (Yellow) There is a problem with the component.
  - **Failed** - (Red) The component has failed.

The **Components** section displays the following information about the components in the selected storage array:

- **Component** - The name of the component.  
Click the name of the component to view detailed information for the component in the subcomponent section.
- **Count** - The number of that component type in the system.
- **Status** - The status of the component.
  - **Normal** - (Green) The component is operating correctly.
  - **Attention** - (Yellow) There is a problem with the component.
  - **Failed** - (Red) The component has failed.

The subcomponent section displays the following information about the subcomponents in the selected component:

- **Component** - The name of the subcomponent.
- **Location** - The location of the subcomponent within the system.
- **Value** - The value reported by the subcomponent.
- **Status** - The status of the subcomponent.
  - **Normal** - (Green) The component is operating correctly.
  - **Attention** - (Yellow) There is a problem with the component.
  - **Failed** - (Red) The component has failed.

---


## Firmware Version

---

The **Firmware Version** page allows you to view information about hardware components installed in the DXi4700, such as the firmware version, hardware revision, and manufacturer.

To access the **Firmware Version** page, on the **Hardware** page, click the **Firmware Version** tab (see [Figure 96](#)).

Figure 96 Firmware Version Page

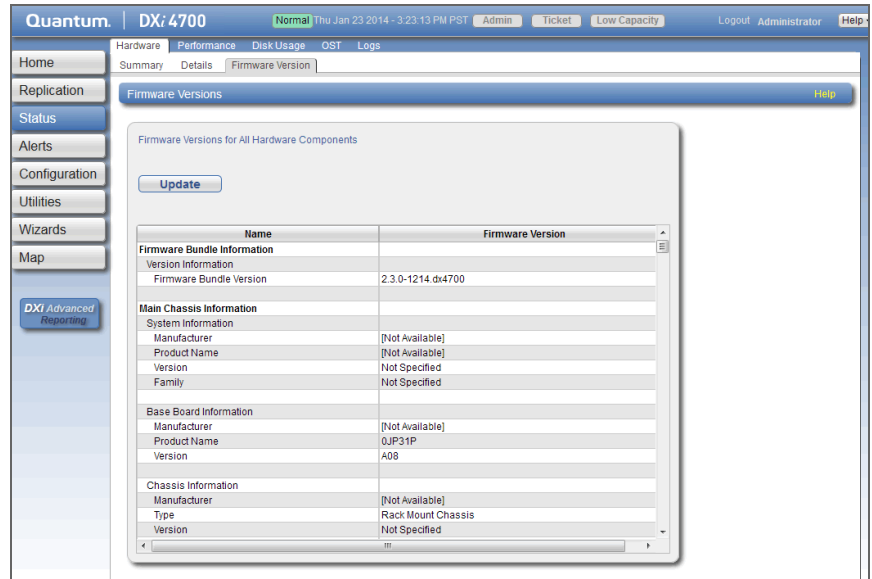

The **Firmware Version** page displays the following information:

- **Name** - Displays a hardware component or a property of the component (for example, **Manufacturer**, **Version**, or **Release Date**).

---

**Note:** The properties that are listed vary depending on the hardware component.

---

- **Firmware Version** - The value of the corresponding item in the **Name** column (for example, the specific manufacturer, version number, or release date for the item).

Click **Update** to refresh the table with the latest information.

---

**Note:** In some cases, when updating firmware versions, the remote management console may time out and then return to the **Home** page. If this occurs, simply navigate back to the **Status > Hardware > Firmware Version** page to see the updated information.

---

---

## Performance

The **Performance** page allows you to view information about system performance, including inline throughput, network throughput, read/write throughput, and CPU usage.

To access the **Performance** page, click the **Status** menu, and then click the **Performance** tab.

The **Performance** page contains the following tabs:

- [Inline](#)
- [Ethernet](#)
- [RAID](#)
- [Fibre Channel](#)
- [CPU](#)

---

### Inline


---

The **Inline** page allows you to view throughput performance for inline data flow. Inline data flow includes deduplicated and non-deduplicated backup data as well as received replication data.

To access the **Inline** page, on the **Performance** page, click the **Inline** tab (see [Figure 97](#)).



Figure 97 Inline Page

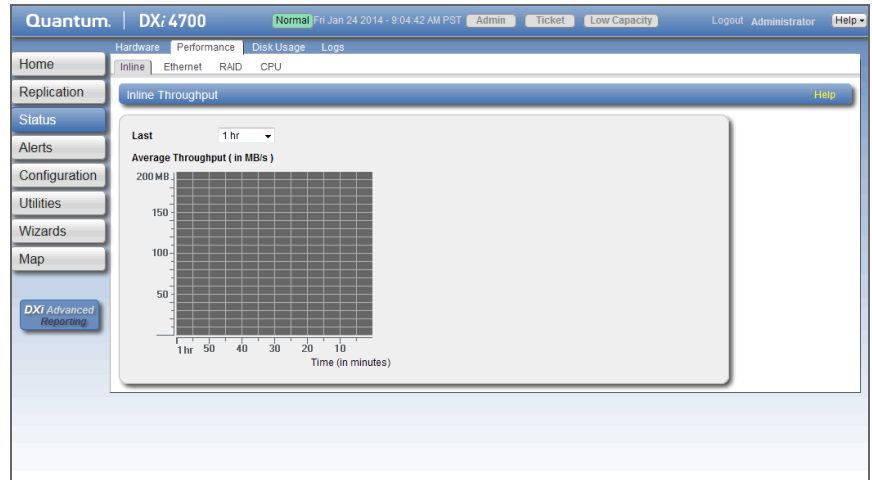

Use the **Inline** page to display recent inline data flow activity in a dynamic graph:

- Select the amount of time to display in the **Last** list (1–24 hours).
- The horizontal axis displays time (in minutes).
- The vertical axis displays inline throughput (0–2,000 MB/s).

---

**Note:** The range represented by the Y-axis changes based on the maximum value, increasing in 200 MB increments as needed.

---


- Each bar on the graph represents approximately 1 minute of time.
- Hold the cursor over a bar to display the value of the bar.

## Ethernet

The **Ethernet** page allows you to view throughput performance for network send and receive activity.

To access the **Ethernet** page, on the **Performance** page, click the **Ethernet** tab (see [Figure 98](#)).

Figure 98 Ethernet Page

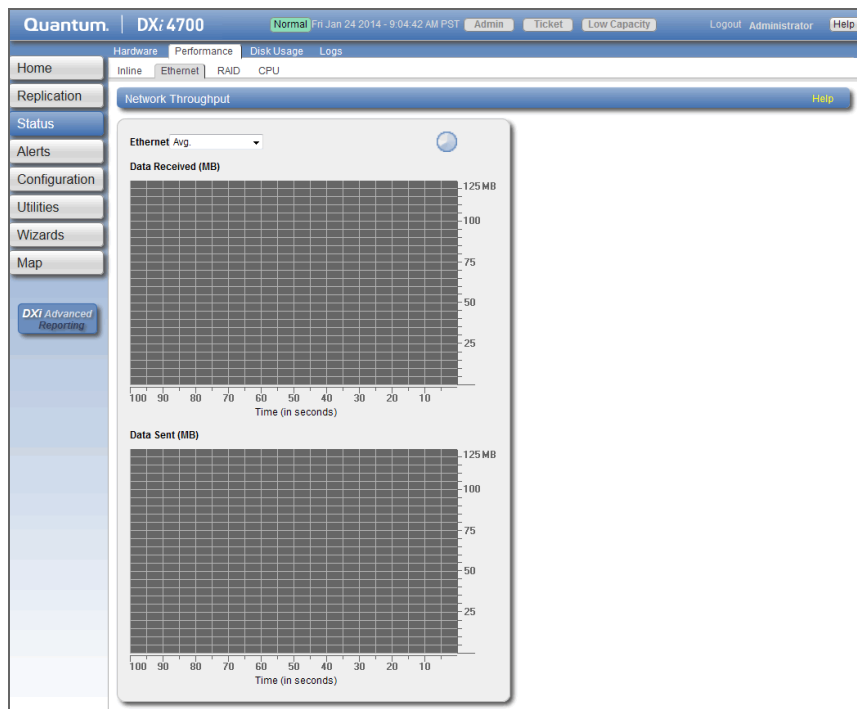

Use the **Ethernet** page to display recent network activity in dynamic graphs:


- The top graph reports data received and the bottom graph reports data sent.
- Select the port to monitor in the **Ethernet** drop-down box, or select **Avg** to display an average of all ports.
- The horizontal axis displays time (0–100 seconds).
- The vertical axis displays data throughput (0–125 MB/s for 1 GbE ports or 0–1.25 GB/s for 10 GbE ports).
- Values that exceed the maximum value of the vertical axis are shown in lighter green.
- Each bar on the graph represents approximately 1 second of time.
- Hold the cursor over a bar to display the value of the bar.

## RAID

The **RAID** page allows you to view throughput performance for RAID read and write activity.

To access the **RAID** page, on the **Performance** page, click the **RAID** tab (see [Figure 99](#)).

Figure 99 RAID Page

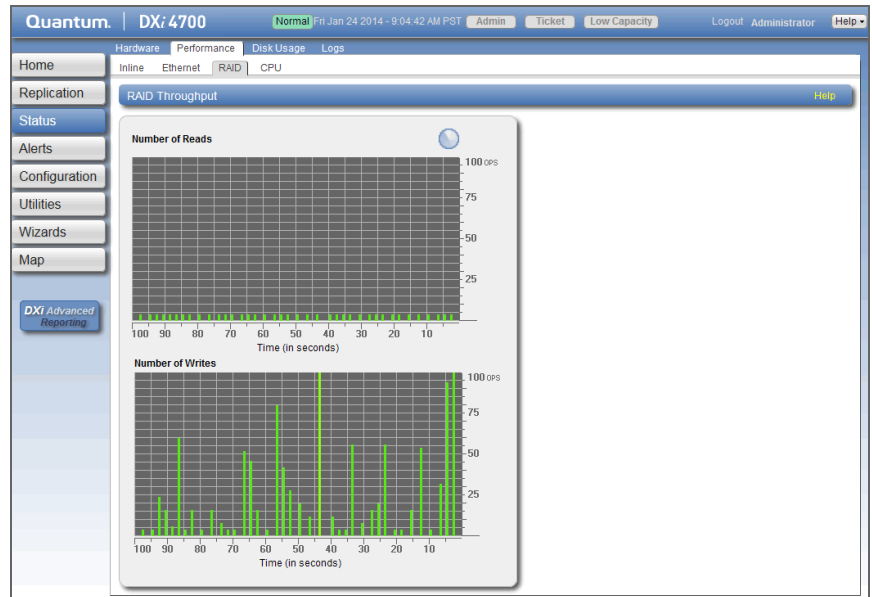

Use the **RAID** page to display recent RAID activity in dynamic graphs:

- The top graph reports data reads and the bottom graph reports data writes.
- The horizontal axis displays time (0–100 seconds).
- The vertical axis displays the amount of data read or written (100 OPS/s).
- Values that exceed the maximum value of the vertical axis are shown in lighter green.
- Each bar on the graph represents approximately 1 second of time.
- Hold the cursor over a bar to display the value of the bar.


## Fibre Channel

The **Fibre Channel** page allows you to view throughput performance for Fibre Channel send and receive activity.

**Note:** The Fibre Channel page displays only on DXi4700 configurations that include a Fibre Channel card.

To access the **Fibre Channel** page, on the **Performance** page, click the **Fibre Channel** tab (see Figure 74).

Figure 100 Fibre Channel Page

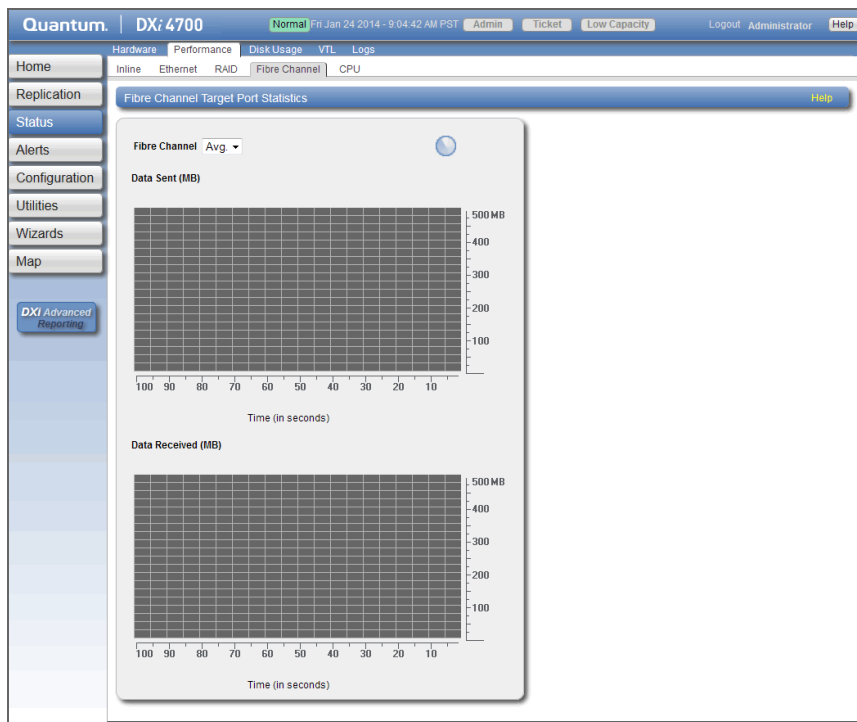

Use the **Fibre Channel** page to display recent fibre channel activity in dynamic graphs:

- The top graph reports data received and the bottom graph reports data sent.
- Select the port to monitor in the **Fibre Channel** drop-down box, or select **Avg** to display an average of all ports.
- The horizontal axis displays time (0–100 seconds).

- The vertical axis displays data throughput (0–500 MB/s).
- Values that exceed the maximum value of the vertical axis are shown in lighter green.
- Each bar on the graph represents approximately 1 second of time.
- Hold the cursor over a bar to display the value of the bar.

---

## CPU


---

The **CPU** page allows you to view CPU usage.

To access the CPU page, on the **Performance** page, click the **CPU** tab (see [Figure 101](#)).

---

Figure 101 CPU Page

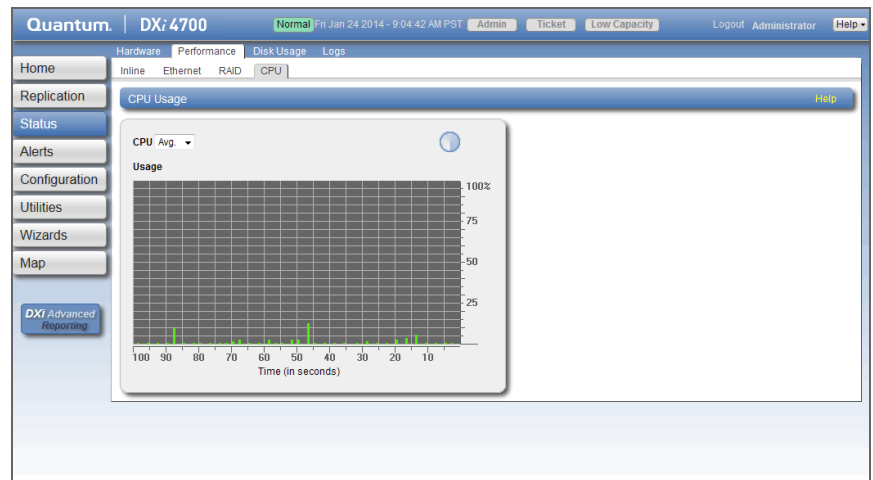

Use the **CPU** page to display recent CPU usage in a dynamic graph:

- Select the CPU core to monitor in the **CPU** drop-down box, or select **Avg** to display an average of all CPUs.

---

**Note:** The **CPU** drop-down box lists all CPU threads. Each hyper-threaded CPU core counts as two threads.

---

- The horizontal axis displays time (0–100 seconds).
- The vertical axis displays CPU usage (0–100%).
- Each bar on the graph represents approximately 1 second of time.


- Hold the cursor over a bar to display the value of the bar.

## Disk Usage

The **Disk Usage** page allows you to view information about free and used disk space on the system. You can also view data reduction statistics.

To access the **Disk Usage** page, click the **Status** menu, and then click the **Disk Usage** tab (see [Figure 102](#)).

Figure 102 Disk Usage Page

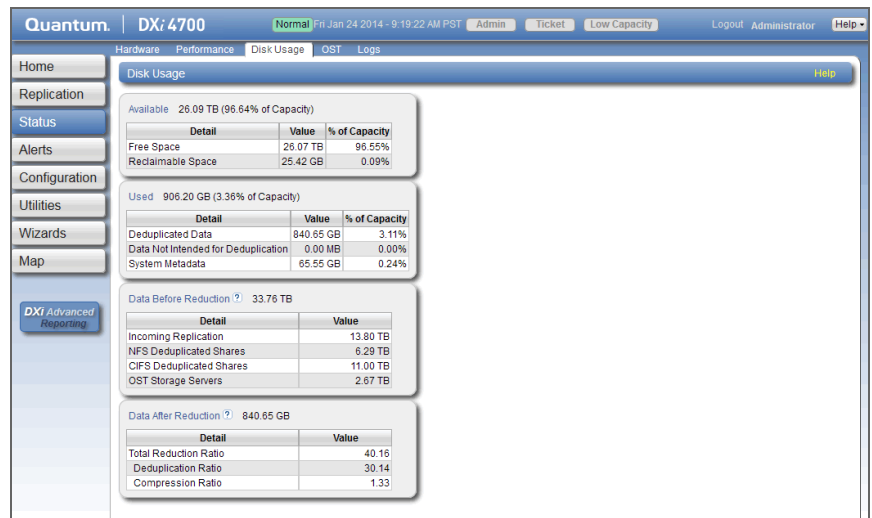

Use the **Disk Usage** page to view the following information:

- [Available](#)
- [Used](#)
- [Data Before Reduction](#)
- [Data After Reduction](#)

---

## Available

---

Available space is the area that is available for data storage. The **Available** value is displayed as an amount and as a percentage of the total capacity in the system.

Available space is divided into the following categories:

- **Free Space** - The disk space that can be used for new deduplicated or non-deduplicated data.
- **Reclaimable Space** - The disk space that is occupied by outdated deduplicated data and which will be automatically reused if additional space for new deduplicated data is needed.

---

**Note:** For optimal system performance, Quantum recommends keeping the amount of **Available** disk space at 20% or more.

---

---

## Used

---

Used space is the area that already holds data. The **Used** value is displayed as an amount and as a percentage of the total capacity in the system.

Used space is divided into the following categories:

- **Deduplicated Data** - The amount of data that has been deduplicated.
- **Data Not Intended For Deduplication** - The amount of data that will not be deduplicated (data on shares or partitions that do not have deduplication enabled).
- **System Metadata** - The amount of disk space used for internal operations of the DXi, including system configuration files as well as temporary files created during replication, space reclamation, and healthchecks.

---

## Data Before Reduction

---

The **Data Before Reduction** value represents the original, native size of all data that has been processed by the data deduplication and compression engines.

Data before reduction is divided into the following categories:

- **Incoming Replication** - The amount of data stored on the DXi via replication from another DXi. This does *not* include incoming data

from Directory/File or Cartridge Based Replication, or incoming data from Failback replication.

- **NFS Deduplicated Shares** - (DXi4700 NAS and Multi-Protocol configurations only) The amount of data stored in deduplicated shares configured in Network File System (NFS) format for Linux systems. This includes incoming data from Directory/File Based Replication, and incoming data from Failback replication.
- **CIFS Deduplicated Shares** - (DXi4700 NAS and Multi-Protocol configurations only) The amount of data stored in deduplicated shares configured in Common Internet File System (CIFS), also known as Server Message Block (SMB), format for Windows systems. This includes incoming data from Directory/File Based Replication, and incoming data from Failback replication.
- **Deduplicated Partitions** - (DXi4700 VTL and Multi-Protocol configurations only) The amount of data stored in deduplicated partitions. This includes incoming data from Cartridge Based Replication, and incoming data from Failback replication.
- **OST Storage Servers** - (DXi4700 NAS and Multi-Protocol configurations only) The amount of data stored in deduplicated OpenStorage (OST) storage servers. This includes incoming data for OST and DXi Accent.

---

## Data After Reduction

---

The **Data After Reduction** value represents the final, reduced size of all data that has been processed by the data deduplication and compression engines.

Data after reduction is divided into the following categories:

- **Total Reduction Ratio** - The total reduction ratio of all data that has been processed by the data deduplication and compression engines (**Data Before Reduction** divided by **Data After Reduction**).
- **Deduplication Ratio** - The deduplication ratio of all data that has been processed by the data deduplication engine.
- **Compression Ratio** - The compression ratio of all data that has been processed by the compression engine.



---

## VTL Status

The **VTL Status** page allows you to view information about virtual tape library (VTL) components, including tape drives, storage slots, and cartridges. You can view a physical or logical representation of VTL components, or view VTL performance statistics.

---

**Note:** For information about creating VTLs, see [Adding a VTL Partition](#) on page 232.

---

To access the **VTL Status** page, click the **Status** menu, and then click the **VTL** tab.

The **VTL Status** page contains the following tabs:

- [Physical View](#)
- [Logical View](#)
- [Performance View](#)

---


### Physical View

---

The **Physical View** page allows you to view a physical representation of the virtual components in a VTL. You can view information about virtual tapes drives, storage slots, and cartridges.

To access the **Physical View** page, on the **VTL Status** page, click the **Physical View** tab (see [Figure 103](#)).

Figure 103 Physical View Page

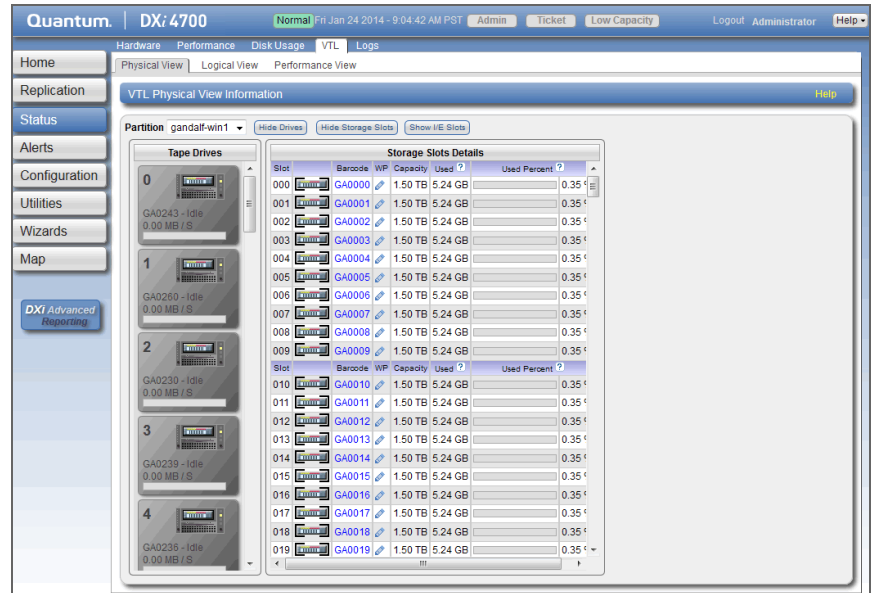

Use the controls in the **VTL Physical View Information** section to select the information to display:

- Select the VTL to display in the **Partition** drop-down box.
- Click **Hide Drives** or **Show Drives** to hide or show the virtual tape drives in the VTL (see [Tape Drives](#) on page 192).
- Click **Hide Storage Slots** or **Show Storage Slots** to hide or show the virtual storage slots in the VTL (see [Storage and I/E Slots](#) on page 193).
- Click **Hide I/E Slots** or **Show I/E Slots** to hide or show the virtual I/E slots in the VTL (see [Storage and I/E Slots](#) on page 193).

## Tape Drives

The **Tape Drives** section displays information about virtual tape drives in the VTL:

- If a cartridge is mounted in the tape drive, the barcode of the cartridge displays beneath the drive.
- Click a tape drive to view detailed information about the drive.

## Storage and I/E Slots

The **Storage Slots** and **I/E Slots** sections displays information about the virtual cartridges located in the storage and I/E slots:

- The following information is displayed for each cartridge:
  - **Slot** - The slot where the cartridge is located.
  - **Barcode** - The barcode of the cartridge.
  - **WP** - The write protect status of the cartridge.
  - **Capacity** - The capacity of the cartridge.
  - **Used** - The amount of space on the cartridge currently used to store data. The value for **Used** might be less than the original, native (raw) data size because the data is compressed before it is written to the media.
  - **Used Percent** - The amount of currently used space on the cartridge expressed as a percentage of the total capacity ( [ Used / Capacity ] x 100 ).
- Click a cartridge to view detailed information about the cartridge.
- When the storage system is degraded, all tape cartridges are shown in a degraded state.
- When the storage system has failed or is inaccessible due to failure, all tape cartridges are shown as unavailable.

---


## Logical View

---

Use the **Logical View** page to view information about the virtual (logical) components in a VTL partition. You can also view information about used space in the partition.

To access the **Logical View** page, on the **VTL Status** page, click the **Logical View** tab (see [Figure 104](#)).

Figure 104 Logical View Page

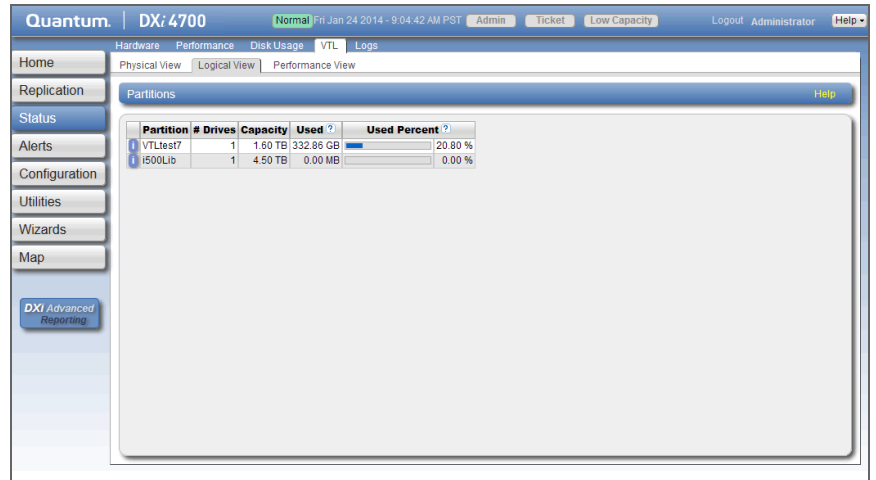

The **Partitions** section displays the following information about VTL partitions:

- **Partition** - The name of the partition.
- **Number of Drives** - The number of virtual tape drives in the partition.
- **Capacity** - The storage capacity of the partition.
- **Used** - The amount of space on all cartridges in the partition currently used to store data. The value for **Used** might be less than the original, native (raw) data size because the data is compressed before it is written to the media.
- **Used Percent** - The amount of currently used space on all cartridges in the partition expressed as a percentage of the total capacity (  $[ \text{Used} / \text{Capacity} ] \times 100$  ).

---

**Note:** Click the **Information** button [i] next to a partition to display detailed information about the partition.


---

## Performance View

Use the **Performance View** page to view information about the throughput of VTL partitions. You can also view performance for virtual tape drives.

To access the **Performance View** page, on the **VTL Status** page, click the **Performance View** tab (see [Figure 105](#)).

Figure 105 Performance View Page

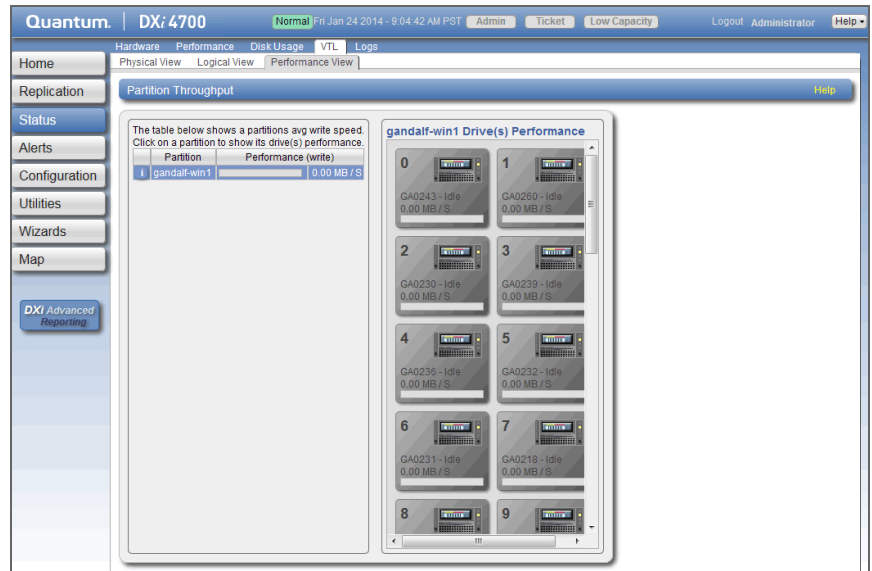

The **Partition Throughput** section displays the following information about VTL partitions:

- **Partition** - The name of the partition.  
Click the partition name to display the tape drives in the partition. Click a tape drive to see individual performance information for that drive.
- **Performance (write)** - The average write speed to the partition in MB/s.

---

**Note:** Click the **Information** button [i] next to a partition to display detailed information about the partition. Click a tape drive to view detailed information about the drive.

---


## OST Status

Use the **OST Status** page to view statistics for OST optimized duplication and DXi Accent activity that occurred in the previous minute.

**Note:** DXi Accent statistics display only if DXi Accent is currently enabled or was previously enabled (see [DXi Accent](#) on page 298).

To access the **OST Status** page, click the **Status** menu, and then click the **OST** tab (see [Figure 106](#)).

Figure 106 OST Status Page

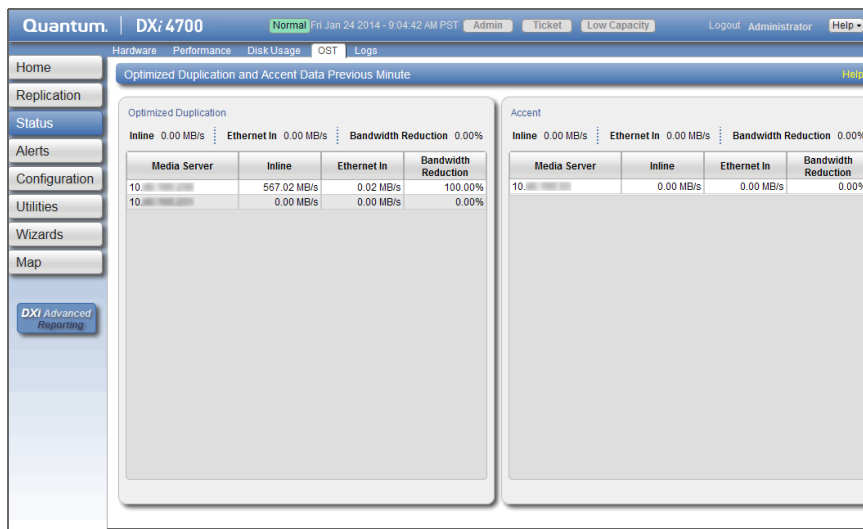

Combined statistics for all media servers display at the top of each section (**Optimized Duplication** and **Accent**):

- **Inline** - The inline data flow throughput (in MB/s). Inline data flow represents the original, native size of the data protected by the DXi.
- **Ethernet In** - The amount of data received by all Ethernet ports (in MB/s). This amount represents the reduced size of the data protected by the DXi (after deduplication and compression on the media servers).

- **Bandwidth Reduction** - The percentage by which network bandwidth utilization was reduced by using optimized duplication or enabling Accent.

Statistics for individual media servers display in the tables in each section (**Optimized Duplication** and **Accent**):

- **Media Server** - The IP address of the media server.
- **Inline** - The inline data flow throughput (in MB/s). Inline data flow represents the original, native size of the data protected by the DXi.
- **Ethernet In** - The amount of data received by all Ethernet ports (in MB/s). This amount represents the reduced size of the data protected by the DXi (after deduplication and compression on the media server).
- **Bandwidth Reduction** - The percentage by which network bandwidth utilization was reduced by using optimized duplication or enabling Accent.


---

## Activity Log

The **Activity Log** page allows you to view a record of all activities performed by administrative and service users in the past 90 days. You can view the user who performed the activity, the time the activity was performed, and other information. You can also download the activity log to an XML file.

To access the **Activity Log** page, click the **Status** menu, and then click the **Logs** tab (see [Figure 107](#)).

Figure 107 Activity Log Page

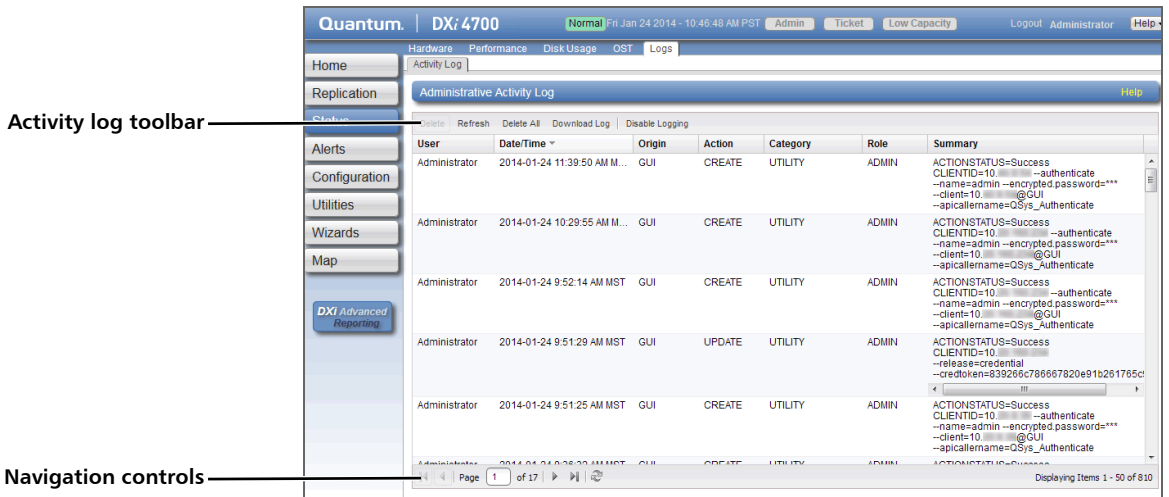

Activity log toolbar

Navigation controls

Use the **Activity Log** page to perform the following tasks:

- View information about activities that have been recorded in the log (see [Viewing Logged Activities](#) on page 198).
- Enable or disable the recording of activities in the log (see [Enabling or Disabling Activity Logging](#) on page 200).
- Delete one or more activities from the log (see [Deleting Logged Activities](#) on page 200).
- Download the activity log in XML format (see [Downloading the Activity Log](#) on page 200).

## Viewing Logged Activities

The **Administrative Activity Log** list displays the following information for each entry:

- **User** - The user that performed the activity (**Administrator, Monitor, Service, Engineering, cliadmin, or root**).
- **Date/Time** - The date and time the activity was performed.
- **Origin** - The interface where the activity originated. Possible origins are the **GUI** (remote management console) or the **CLI** (command line interface).
- **Action** - The type of activity performed (**Create, Update, or Delete**).



- **Category** - The category of the activity (**Alert, Analyzer, Cluster, Date Time, Email, Event, Hard Drive Security, Healthcheck, NAS, Network, OST, Replication, Security, SNMP, Utility, or VTL**).
- **Role** - The role of the user that performed the activity (**Admin**).
- **Summary** - Details about the activity that was performed, including CLI commands and field values.

---

**Note:** Click a column heading to sort the rows in the table by that column. Click the column heading again to reverse the sort order.

---

---

**Note:** To rearrange the order of the columns, click and drag a column heading left or right. To show or hide columns, click the arrow to the right of a column heading. In the pop-up menu, point to **Columns**, then select the name of a column to show or hide it.


---

## Navigating in the Activity Log

Use the controls at the bottom of the **Administrative Activity Log** list to adjust the activity log view (see [Figure 108](#)):

- To navigate between pages in the list, use the left and right arrows.
- To view a specific page, type the page number in the box.
- To update the activity log with latest data, click the **Refresh** icon.

Figure 108 Activity Log View Controls

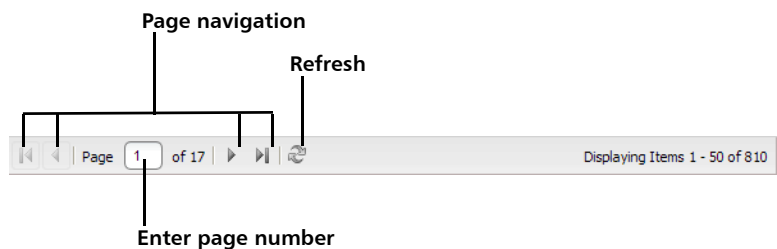


## Enabling or Disabling Activity Logging

By default, activity logging is enabled on the DXi4700. Use the toolbar above the **Administrative Activity Log** list to enable or disable activity logging (see [Figure 109](#)).

- To enable the logging of administrative and service actions, click **Enable Logging** on the toolbar.
- To disable the logging of administrative and service actions, click **Disable Logging** on the toolbar.
- To update the activity log with latest data, click **Refresh** on the toolbar.

Figure 109 Activity Log View Controls

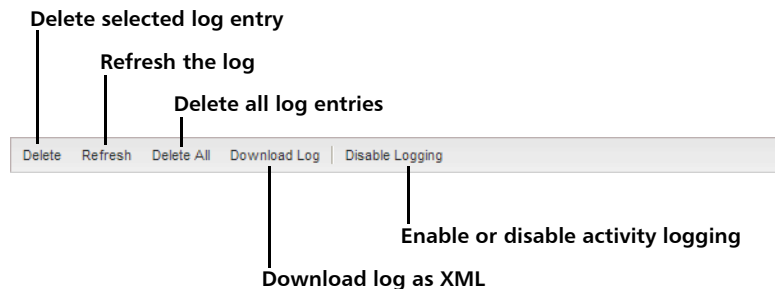

## Deleting Logged Activities


Use the toolbar above the **Administrative Activity Log** list to delete one or more entries in the activity log (see [Figure 109](#)).

- To delete a log entry, select the entry and click **Delete**.
- To delete all entries in the activity log, click **Delete All**.

## Downloading the Activity Log

Use the toolbar above the **Administrative Activity Log** list to save the activity log in XML format (see [Figure 109](#)). You can then open the log file in another program that is compatible with XML.

To download the activity log, click **Download Log**. Specify a location to save the file, and then click **OK** or **Save**.



## Chapter 8

# DXi4700 Alerts

---

The **Alerts** page allows you to view and work with administration alerts and service tickets. The DXi4700 generates administration alerts and service tickets when a hardware or software event occurs.

To access the **Alerts** page, click the **Alerts** menu.

The **Alerts** page contains the following tabs:

- [Admin Alerts](#)
- [Service Tickets](#)

---

## Admin Alerts

The **Admin Alerts** page allows you to view and work with administration alerts. The DXi4700 generates an administration alert when the condition of the system has changed, such as going from the offline state to the online state.


---

**Note:** In addition to viewing administration alerts on the **Admin Alerts** page, you can configure the system to send alerts to an e-mail address (see [Recipients](#) on page 352).

---

To access the **Admin Alerts** page, click the **Alerts** menu, and then click the **Admin Alerts** tab (see [Figure 110](#)).

Figure 110 Admin Alerts Page

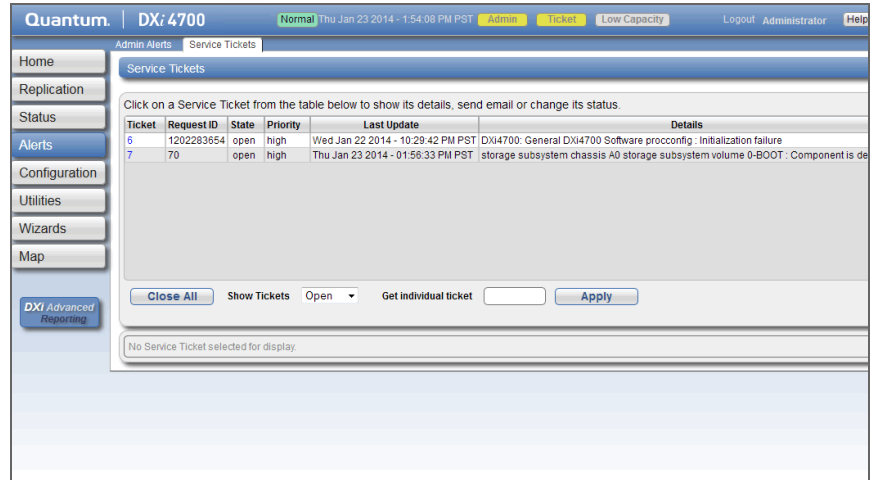

The **Admin Alerts** page displays the following information about administration alerts:

- **Alert** - The name of the administration alert.
- **Library** - The library or partition where the admin alert was generated.
- **Last Update** - The date when the administration alert was last updated by the system.
- **Summary** - A brief description of the administration alert.

---

**Note:** Click a column heading to sort the rows in the table by that column. Click the column heading again to reverse the sort order.

---

Use the **Admin Alerts** page to perform the following tasks:

- To view details about an administration alert, click the alert name. Detailed information about the alert appears in the **Activity Status History** section.
- To delete an administration alert, select it and click **Delete**.

## Service Tickets

The DXi4700 has the capability to automatically detect and resolve problems encountered by the system during operation. If a problem cannot be resolved automatically and requires user intervention or servicing, the system generates a service ticket.

A service ticket contains detailed information about the problem and, if appropriate, steps you can take to resolve it. If the DXi4700 detects that the problem is resolved, the system automatically closes the service ticket. You can also manually close a service ticket after the problem is corrected.

---

**Note:** Tickets that are not resolved are generated again after 24 hours.

---

See the following sections for more information about service tickets:

- [Service Ticket Priority](#)
- [Recommended Actions](#)
- [Working With Service Tickets](#)

---

### Service Ticket Priority

---

The system assigns each service ticket a priority based on the criticality of the problem that caused the system to generate the ticket. There are three priority levels:

- **Low** - A minor problem occurred and needs to be resolved, but the operation and performance of the DXi4700 are not significantly affected.
- **Middle** - A serious problem occurred and needs to be resolved, but it does not necessarily need to be fixed immediately. The operation and performance of the DXi4700 may be degraded.
- **High** - A critical problem has occurred and needs to be resolved immediately. The operation and performance of the DXi4700 are degraded, and there is a risk of system failure or data loss.

## Recommended Actions

If appropriate, a service ticket includes recommended actions. The recommended actions provide instructions for resolving the problem that caused the system to generate the ticket.

Perform the recommended actions to try to resolve the problem before contacting Quantum customer support. If you are able to resolve the problem, you can close the service ticket.

---

**Note:** The recommended actions should be performed by a user who is familiar with operating the DXi4700.


---

## Working With Service Tickets

The **Service Tickets** page allows you to view and work with service tickets.

To access the **Service Tickets** page, click the **Alerts** menu, and then click the **Service Tickets** tab (see [Figure 111](#)).

Figure 111 Service Tickets Page

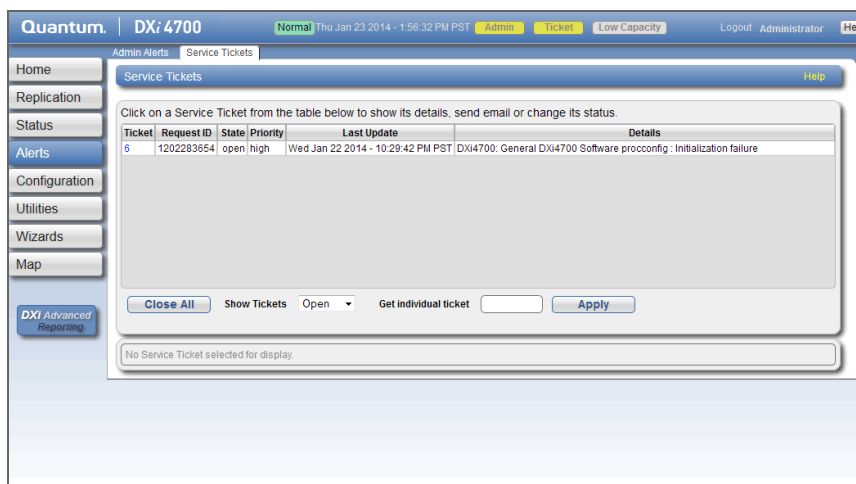

The **Service Tickets** page displays the following information about open service tickets:

- **Ticket** - The service ticket number.
- **Request ID** - The Request ID of the ticket.
- **State** - The current status of the service ticket (**Open** or **Closed**).

- **Priority** - The priority level of the service ticket (**Low**, **Middle**, or **High**).
- **Last Update** - The date when the service ticket was last updated by the system.
- **Details** - A brief description of the service ticket.
- **Close All** - Click to close all open service tickets.
- **Show Tickets** - Select an option to display **Open** tickets, **Closed** tickets, or **All** tickets.
- **Get individual ticket** - To display a specific ticket in the list, enter a ticket number and click **Apply**.

---

**Note:** Click a column heading to sort the rows in the table by that column. Click the column heading again to reverse the sort order.

---

Use the **Service Tickets** page to perform the following tasks:

- View details for a service ticket, including recommended actions (see [Viewing a Service Ticket](#) on page 205).
- Add information to a service ticket (see [Modifying a Service Ticket](#) on page 207).
- Send a service ticket to an e-mail address (see [Sending a Service Ticket](#) on page 208).
- Close a service ticket that has been resolved (see [Closing a Service Ticket](#) on page 209).

## Viewing a Service Ticket

View a service ticket to see detailed information about the problem that caused the system to generate the ticket and to view recommended actions.

To view a service ticket:

- 1 In the list of service tickets, click the ticket number.

The **Ticket Details** section at the bottom of the page displays information about the service ticket, including the time the ticket was opened and closed, the ticket status, and detailed information about the problem (see [Figure 112](#)).

**Note:** The time indicated in the service ticket may not match the DXi4700 system time.

Figure 112 Ticket Details

The screenshot shows the Quantum DXi4700 web interface. The top navigation bar includes 'Admin Alerts' and 'Service Tickets'. A sidebar on the left contains navigation options: Home, Replication, Status, Alerts, Configuration, Utilities, Wizards, and Map. The main content area displays a table of service tickets. Below the table are buttons for 'Close All', 'Show Tickets', a dropdown menu set to 'Open', a text input for 'Get individual ticket', and an 'Apply' button. The detailed view for ticket 6 shows the following information:

Ticket	Request ID	State	Priority	Last Update	Details
6	1202283654	open	high	Wed Jan 22 2014 - 10:29:42 PM PST	DXi4700: General DXi4700 Software proconfig : Initialization failure
7	70	open	high	Thu Jan 23 2014 - 01:56:33 PM PST	storage subsystem chassis A0 storage subsystem volume 0-BOOT: Component is de

**Ticket Details**

Ticket 6 | Request ID 1202283654

Opened At: Wed Jan 22 2014 - 10:06:10 PM PST  
Closed At: Open  
Closed By: Open  
Priority: high  
Summary: DXi4700: General DXi4700 Software proconfig : Initialization failure

Wed Jan 22 2014 - 10:29:42 PM PST  
Summary:  
DXi4700: General DXi4700 Software proconfig : Initialization failure  
Details:  
System Memory Size does not match Blockpool Index Size Ticket creation time: 01/22 22:29:42 PST  
[View Recommended Actions](#)

Wed Jan 22 2014 - 10:14:18 PM PST  
Summary:  
[Analysis](#) [Email](#)

**View Recommended Actions**

2 (Optional) Click **View Recommended Actions** to view instructions for resolving the problem.

The recommended actions display in a new Web browser window (see [Figure 113](#)). Follow the instructions to resolve the problem. When you are finished, click the close button [x] on the upper right corner of the window.



Figure 113 Recommended Actions

Recommended Actions	
Quota Limit or Fragmentation Warnings	
IF	THEN
You receive a warning that the quota hard limit is reached for a user:	Either increase the user's quota, or notify the user.
You receive a warning that fragmentation has been detected in an inode:	<ol style="list-style-type: none"> <li>1. Consult the snfsdefrag man page for instructions on performing fragmentation analysis and defragmenting files.</li> <li>2. See ExtentCountThreshold in the cvfs_config documentation for information on adjusting this RAS event.</li> </ol>
The problem <b>IS</b> resolved:	Close the service ticket. Refer to <a href="#">Closing Service Tickets</a> .
The problem is <b>NOT</b> resolved:	<ol style="list-style-type: none"> <li>1. Modify the ticket according to the troubleshooting steps taken. Refer to <a href="#">Analyzing Service Tickets</a>.</li> <li>2. Contact the Quantum Technical Assistance Center. <ul style="list-style-type: none"> <li><b>In the USA:</b> 1+800-284-5101</li> <li><b>UK, France and Germany:</b> 00800 4 QUANTUM</li> <li><b>EMEA:</b> +49 6131 3241 1164 / Asia Pacific: +603 7953 3010</li> <li><b>On the Web:</b> <a href="http://www.quantum.com/support">http://www.quantum.com/support</a></li> </ul> </li> </ol>
<a href="#">Print Document</a>   <a href="#">Close Window</a>	
<small>©2010 Quantum Corporation © All rights reserved.</small>	

## Modifying a Service Ticket


Modify a service ticket to add additional information to the ticket, for example, troubleshooting steps you have taken or a record of calls made to Quantum customer support. The additional information is saved with the service ticket and remains associated with the ticket even after it is closed.

To modify a service ticket:

- 1 In the list of service tickets, click the ticket number.
- 2 Click **Analysis** at the bottom of the page.

The **Ticket Analysis** section displays at the bottom of the page (see [Figure 114](#)).

Figure 114 Ticket Analysis

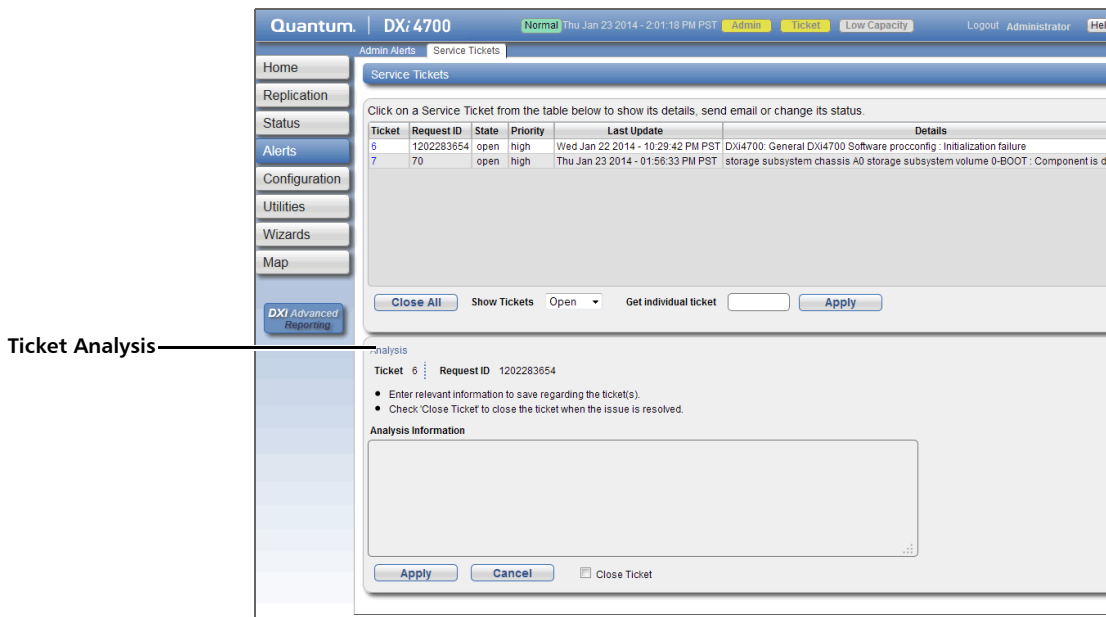

Ticket Analysis

- 3 In the **Analysis Information** box, enter all relevant information about actions taken to resolve the issue.
- 4 Click **Apply**.

### Sending a Service Ticket

Send a service ticket to send the ticket details to an e-mail address. You can also add optional comments to the e-mail.

---

**Note:** To enable the DXi4700 to send e-mail, you must specify an outgoing e-mail server (see [Server](#) on page 357).


---

To send a service ticket:

- 1 In the list of service tickets, click the ticket number.
- 2 Click **Email** at the bottom of the page.

The **Email Ticket Information** section displays at the bottom of the page (see [Figure 115](#)).

Figure 115 Email Ticket Information

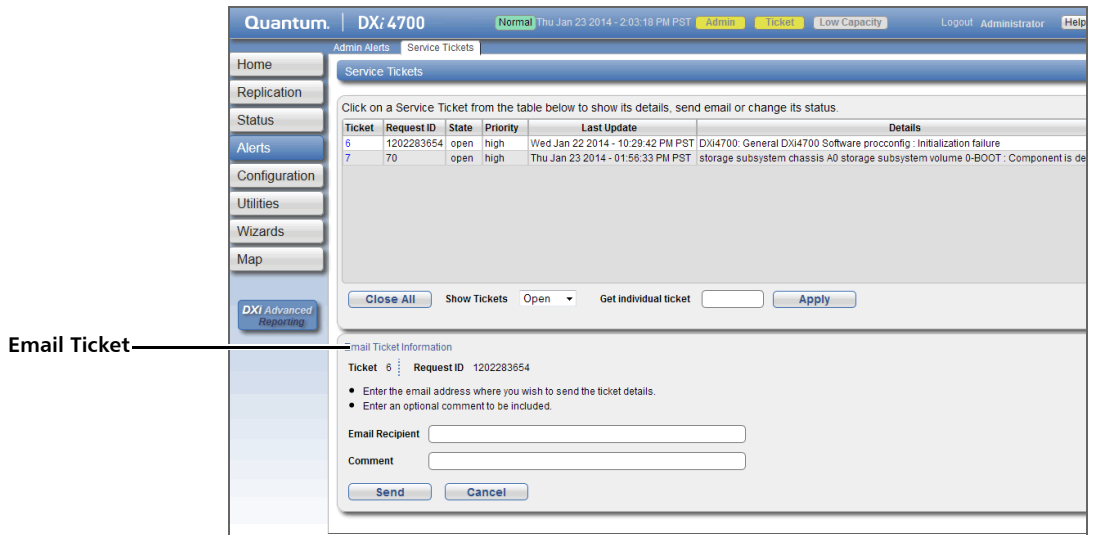

- 3 In the **Email Recipient** box, enter the e-mail address where you want to send the ticket details.
- 4 (Optional) In the **Comment** box, enter additional information to send with the ticket.
- 5 Click **Send**.

### Closing a Service Ticket

Close a service ticket if the problem the caused the system to generate the ticket is resolved. You can also close all service tickets that are currently open.

**Note:** You can still view and modify a ticket after it has been closed.

To close all service tickets that are currently open, below the list of service tickets, click **Close All**.

To close a single service ticket:

- 1 In the list of service tickets, click the ticket number.
- 2 Click **Analysis** at the bottom of the page.

The **Ticket Analysis** section displays at the bottom of the page (see [Figure 114](#)).

- 3 Select the **Close Ticket** check box.
- 4 Click **Apply**.



## Chapter 9

# DXi4700 Configuration

---

The **Configuration** page allows you to configure the features of the DXi4700, including storage presentation, data replication, system settings, and notifications.

To access the **Configuration** page, click the **Configuration** menu.

The **Configuration** page contains the following tabs:

- [NAS](#)
- [VTL](#)
- [Replication Configuration](#)
- [OST](#) (including DXi Accent with OST)
- [PTT](#)
- [Scheduler](#)
- [System](#)
- [Notifications](#)
- [Contacts](#)

---

## NAS

The **NAS** page allows you to configure the DXi4700 to present its storage capacity as NAS (network attached storage) shares that are compatible with standard backup applications. You can create NAS shares for use with Windows or Linux networks. You can also join the DXi4700 to a Windows domain or workgroup and manage users.

---

**Note:** Network Attached Storage (NAS) is available only on the DXi4700 NAS and Multi-Protocol configurations.

---

---

**Note:** The **NAS** wizard provides guided assistance for configuring NAS shares (see [DXi4700 Configuration Wizards](#) on page 63).

---

---

**Caution:** Filenames on NAS shares are limited to a length of 256 bytes. If a filename uses Japanese characters, the filename can be no longer than 85 characters. This is because each Japanese character is represented by 3 bytes.

---

To access the **NAS** page, click the **Configuration** menu, and then click the **NAS** tab.

The **NAS** page contains the following tabs:

- [NAS Summary](#)
- [Windows Domain](#)
- [Share Access](#)
- [Advanced Setting](#)


---

### NAS Summary

---

The **NAS Summary** page allows you to manage NAS shares on the DXi4700. You can view information about existing shares, add or edit shares, and delete shares.

To access the **NAS Summary** page, on the **NAS** page, click the **Summary** tab (see [Figure 116](#)).

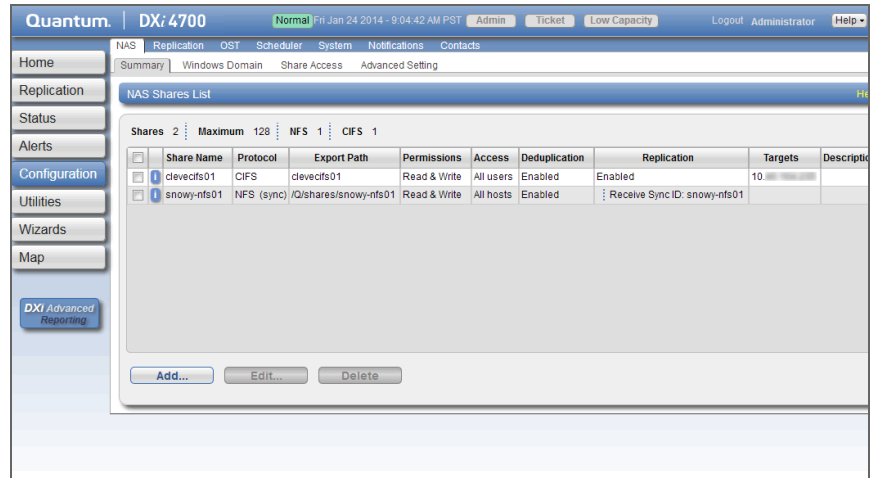Figure 116 NAS Summary  
Page

Use the **NAS** page to perform the following tasks:

- View information about existing NAS shares (see [NAS Shares List](#) on page 213).
- Add a new NAS share to the system (see [Adding a NAS Share](#) on page 215).
- Edit properties for an existing NAS share (see [Editing a NAS Share](#) on page 216).
- Delete a NAS share from the system (see [Deleting a NAS Share](#) on page 218).

## NAS Shares List

The **NAS Shares List** section displays the following information for all NAS shares on the DXi4700:

- **Shares** - The number of shares that have been added to the system.
- **Maximum** - The maximum number of shares that can be added to the system.
- **NFS** - The number of existing shares configured to use the NFS protocol (for Linux networks).
- **CIFS** - The number of existing shares configured to use the CIFS protocol (for Windows networks).
- **Share Name** - The name of the share.

- **Protocol** - The protocol (**CIFS** or **NFS**) the share is configured to use. For NFS shares, the **Protocol** column displays the commit type of the share (**sync** for synchronous or **async** for asynchronous). For information about changing the commit type of NFS shares, see the *DXi-Series Command Line Interface (CLI) Guide* (6-67081).
- **Export Path** - The export path of the share (different for CIFS and NFS shares).
- **Permissions** - The permissions in use on the share (**Read & Write** or **Read Only**).
- **Access** - The access type of the share (**all hosts** or specific users).
- **Deduplication** - The data deduplication state of the share (**Enabled** or **Disabled**).
- **Replication** - The current state of replication for the share:
  - **Enabled** - Replication is enabled.
  - **Send/Receive Sync ID** - Directory/File Based Replication is enabled.
  - **Configure** - Click to configure replication for the share (see [Editing a NAS Share](#) on page 216)
  - **Scheduled** - Replication is scheduled for the share. Click to view or modify the schedule (see [Scheduling a Share or Partition for Replication](#) on page 311).
- **Targets** - The targets the share is configured to replicate to.
- **Description** - A brief description of the NAS share (if available).

---

**Note:** Click a column heading to sort the rows in the table by that column. Click the column heading again to reverse the sort order.

---

---

**Note:** Click the Information button [i] next to a share to display detailed information about the share and recent replication activity.

---



## Adding a NAS Share

Add a NAS share to present the storage capacity of the DXi4700 as a NAS share that is compatible with standard backup applications. You can add up to 128 shares. When you add a share, you must specify whether it uses the NFS protocol (for Linux networks) or the CIFS protocol (for Windows networks).

---

**Note:** If you are adding a CIFS share for use with a Windows network, you must configure the Windows domain before adding the new share (see [Windows Domain](#) on page 219).

---

To add a NAS share:

- 1 Click **Add**.

The **Add NAS Share** page displays (see [Figure 117](#)).

Figure 117 Add NAS Share Page

- 2 Under **NAS Share Settings**, enter information about the share:

- **Name** - Enter the name of the NAS share.

---

**Note:** NAS share names are not case-sensitive. For example, if you create a share named **nas1**, you cannot create another share named **NAS1** because the system considers the names to be the same.

---

- **Description** - (Optional) Enter a brief description of the share.
- **Hide from network browsing** - (CIFS shares only) Select the check box to hide the share from network browsing. If selected, you cannot see the share when browsing the network.
- **Enable data deduplication** - Select the check box to enable data deduplication. Quantum recommends that you enable data deduplication to optimize disk usage.

---

**Note:** Data deduplication is enabled by default. You cannot enable or disable data deduplication after the share is added. If data duplication is disabled, then data compression is also disabled.

---

- **Export Protocol** - Select the export protocol for the share:
  - **CIFS** - Select the CIFS option to use the share on a Windows network.
  - **NFS** - Select the NFS option to use the share on a UNIX or Linux network.

**3** (Optional) Under **Replication Settings**, specify replication settings.

For more information about configuring replication for a share, or to set up replication for the share at a later time, see [DXi4700 Replication](#) on page 121.

**4** Click **Apply**.

---

**Note:** When you create a CIFS share, the initial permissions are the same as the default permissions for a Windows 2003 share with the addition of an ACE (Access Control Entry) that permits full access to the share for all authenticated users. Administrators can choose to remove this full access ACE, set up custom permissions, or leave the ACL (Access Control List) as it is if the server is set up in a fully trusted environment.

---

## Editing a NAS Share


Edit a NAS share to modify the settings for the share, for example, to change the description of the share or to select different options.

To edit a NAS share:

- 1 Select the share and click **Edit**.

The **Edit NAS Share & Replication Settings** page displays (see [Figure 118](#)).

Figure 118 Edit NAS Share & Replication Settings Page

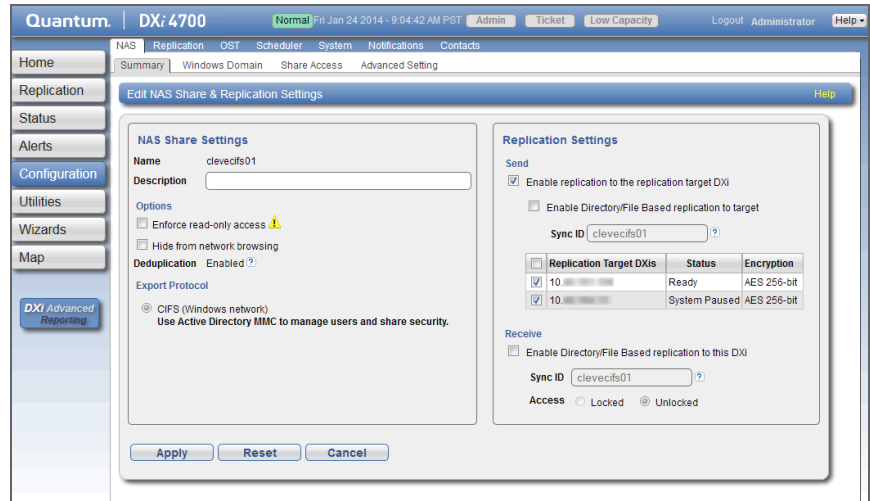

- 2 Under **NAS Share Settings**, enter information about the share:

**Note:** If you are editing a share, only the **Description**, **Enforce read-only access**, **Hide from network browsing**, and **Allow all users to access this share** options can be changed.

- **Description** - (Optional) Enter a brief description of the share.
- **Enforce read-only access** - Select the check box to make the share read only. If selected, you cannot write to the share.
- **Hide from network browsing** - (CIFS shares only) Select the check box to hide the share from network browsing. If selected, you cannot see the share when browsing the network.
- **Allow all users/hosts to access this share** - Select this check box to allow all users (CIFS shares) or hosts (NFS shares) to access the share.

Or clear the check box to allow only specified users or hosts to access the share. To add a user or host to the access list, click **Add**. Specify the **Workgroup User** (CIFS shares) or the

**Hostname or IP Address** (NFS shares) and the associated permissions (**Read Only** or **Read & Write**), and then click **Apply**.

---

**Note:** To modify the users that are available in the **Workgroup User** list, see [Share Access](#) on page 222.

---

**Note:** After you add a user or host to the access list, you cannot change their permissions. Instead, select the user or host in the access list and click **Delete** to remove them from the list. Then add the user or host again with the correct permissions.

---

**3** (Optional) Under **Replication Settings**, specify replication settings.

For more information about configuring replication for a share, or to set up replication for the share at a later time, see [DXi4700 Replication](#) on page 121.

**4** Click **Apply**.

---

**Note:** If you modify a NAS share that uses the CIFS protocol, you must restart the CIFS service for the changes to take effect. To restart the CIFS service, first disjoin the Windows workgroup, then join it again (see [Windows Domain](#) on page 219). Restarting the CIFS service will close all active connections to the share. Most Windows workstations will automatically reconnect, but some applications may be affected.

---

## Deleting a NAS Share

Delete a NAS share if it is no longer needed. When you delete a share, all data stored on the share is lost, and any schedules associated with the share are deleted.

---

**Note:** If you delete a share configured for Directory/File Based Replication on the source DXi, the share is *not* automatically deleted on the target DXi. If you do not want to retain the share on the target DXi, you can manually delete it.

---

To delete a NAS share:

**1** Select the share and click **Delete**.

---

**Note:** You can select multiple shares to delete at once.

---

2 Click **Yes** to confirm the deletion.

## Windows Domain

The **Windows Domain** page allows you to join the DXi4700 to a Windows workgroup or a Windows domain using **SMB**. To use a NAS share configured for the CIFS protocol on a Windows network, you must first join the DXi4700 to a workgroup or a domain. After you join the DXi4700 to a workgroup or a domain, CIFS shares are available for use on the Windows network.

To access the **Windows Domain** page, on the **NAS** page, click the **Windows Domain** tab (see [Figure 119](#)).

Figure 119 Windows Domain Page

Use the **Windows Domain** page to perform the following tasks:

- Join the DXi4700 to a Windows workgroup (see [Joining a Windows Workgroup](#) on page 220).
- Join the DXi4700 to a Windows domain (see [Joining a Windows Domain](#) on page 220).
- Remove the DXi4700 from a Windows workgroup or domain (see [Disjoining a Workgroup or Domain](#) on page 221).

## Joining a Windows Workgroup

Join a Windows workgroup to add the DXi4700 to a workgroup on a Windows network. After you join a workgroup, CIFS shares are available for use on the Windows network.

To join a Windows workgroup:

1 Enter the following information about the Windows domain:

- **Domain Type** - Select Workgroup.
- **Domain/Workgroup Name** - Enter the workgroup name.

The workgroup name can be the name of an existing workgroup or a new workgroup (for example, **Workgroup** or **Sales**).

2 Click **Apply**.

---

**Note:** When an SMB server is joined to a workgroup, share security is managed directly from the remote management console. For a CIFS share, security is provided through the read only or read/write access to the share. By default, when a CIFS share is created, the default security setting allows access for all users. Any access restrictions on individual users can be managed by editing a share on the NAS Summary page (see [Editing a NAS Share](#) on page 216).

---

## Joining a Windows Domain

Join a Windows domain to add the DXi4700 to a Windows network using Active Directory. After you join a domain, CIFS shares are available for use on the Windows network.

Before joining a Windows domain, make sure the date and time on the DXi4700 is correct and is synchronized with the Active Directory Services (ADS) server (see [Date & Time](#) on page 333). The time difference between the DXi4700 and the ADS server (domain controller) must be less than 300 seconds. Quantum recommends using the same NTP server for the DXi4700 and the ADS server to keep them synchronized.

To join a Windows domain:

1 Enter the following information about the Windows domain:

- **Domain Type** - Select **Active Directory**.

- **Domain/Workgroup Name** - Enter the domain name.
- **Primary Domain Controller** - Select an option for the Primary Domain Controller (PDC):
  - **Use DNS Discovery** - Discover the PDC automatically.
  - **Specify Address** - Enter the fully qualified name or the IP address of the PDC.
- **Organization Unit** - (Optional) Enter the name of the organizational unit in the domain.

The DXi4700 will become a member of this organization.

- **Administrator Name** - Enter **Administrator** or any user that has the right to join the domain.

By default, any user belonging to the **Administrators** group or the **Domain Admins** group has the right to join the domain. In addition, any user can join the domain if they are specifically delegated this right by a member of the **Administrators** group.

- **Administrator Password** - Enter the password for the user entered above.

## 2 Click **Apply**.

---

**Note:** When the system is joined to the Active Directory domain, share security is managed by the MMC (Microsoft Management Console) that is running on the domain controller. By default, when a CIFS share is created, the default security setting allows access for all users. Any access restrictions on individual users must be managed from the MMC.

---

## Disjoining a Workgroup or Domain

Disjoin a workgroup or a domain to remove the DXi4700 from a Windows workgroup or domain. After you disjoin the workgroup or domain, CIFS shares are no longer available for use on the Windows network

To disjoin a workgroup or domain, click **Disjoin**.

## Share Access

The **Share Access** page allows you to manage workgroup users when the DXi4700 is joined to a Windows workgroup, or manage share administrators when the DXi4700 is joined to a Windows domain using Active Directory. You can add users or administrators, change user privileges, and delete users or administrators. Available users or administrators can be granted access to NAS shares configured for the CIFS protocol.

**Note:** You must join a Windows workgroup or domain before you can add workgroup users or share administrators (see [Windows Domain](#) on page 219). The **Share Access** page is different depending on whether the DXi is joined to a workgroup or domain.

To access the **Share Access** page, on the **NAS** page, click the **Share Access** tab (see [Figure 120](#) and [Figure 121](#)).

Figure 120 Share Access Page  
(Windows Workgroup)


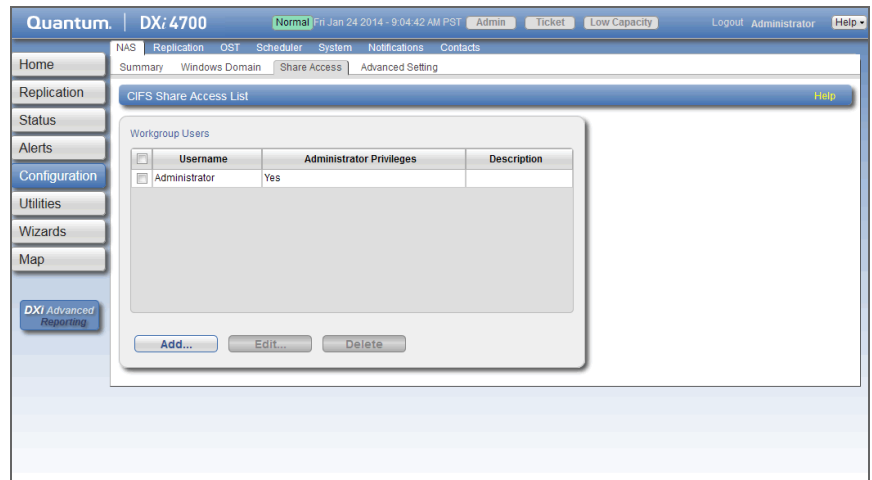




Figure 121 Share Access Page  
(Active Directory)

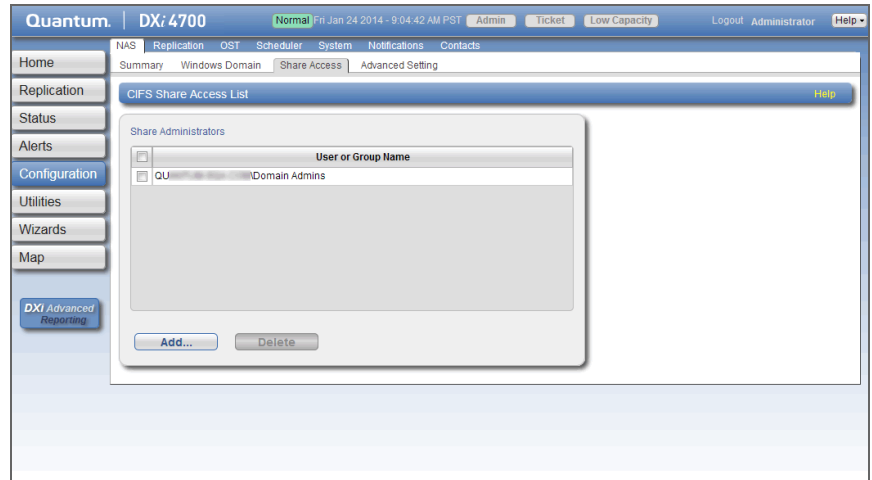

Use the **Share Access** page to perform the following tasks:

- View information about workgroup users or share administrators (see [Workgroup Users or Share Administrators](#) on page 223).
- Add a workgroup user or a share administrator (see [Adding a Workgroup User or Share Administrator](#) on page 224).
- Edit a workgroup user (see [Editing a Workgroup User](#) on page 225).
- Delete a workgroup user or a share administrator (see [Deleting a Workgroup User or Share Administrator](#) on page 227).

### Workgroup Users or Share Administrators

If the DXi4700 is joined to a Windows workgroup, the **Workgroup Users** section displays the following information about workgroup users:

- **Username** - The name of the workgroup user.
- **Administrator Privileges** - The privileges of the workgroup user (**Yes** if the user has administrator privileges, **No** if they do not.)
- **Description** - A brief description of the workgroup user (if available).

If the DXi4700 is joined to a Windows domain using Active Directory, the **Share Administrators** section displays the following information about share administrators:

- **User or Group Name** - The fully qualified name of the user or group.

## Adding a Workgroup User or Share Administrator

Add a workgroup user or share administrator to be able to grant that user or administrator access to CIFS shares.


### Windows Workgroup

To add a workgroup user for a Windows workgroup:

- 1 Click **Add**.

The **Add Workgroup User** page displays (see [Figure 122](#)).

Figure 122 Add Workgroup User Page

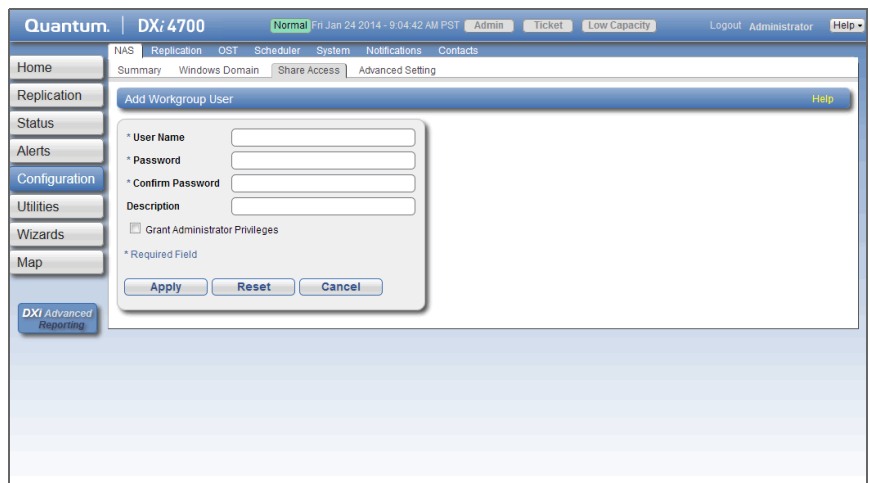

The screenshot shows the Quantum DXi4700 web interface. The top navigation bar includes 'Quantum DXi4700', a status indicator 'Normal', and a timestamp 'Fri Jan 24 2014 - 9:04:42 AM PST'. There are also links for 'Admin', 'Ticket', 'Low Capacity', 'Logout', 'Administrator', and 'Help'. Below the navigation bar, there are tabs for 'Summary', 'Windows Domain', 'Share Access', and 'Advanced Setting'. The main content area is titled 'Add Workgroup User' and contains a form with the following fields: 'User Name', 'Password', 'Confirm Password', and 'Description'. There is a checkbox for 'Grant Administrator Privileges' and a legend for '\* Required Field'. At the bottom of the form are 'Apply', 'Reset', and 'Cancel' buttons. A sidebar on the left contains navigation links: 'Home', 'Replication', 'Status', 'Alerts', 'Configuration', 'Utilities', 'Wizards', and 'Map'. A 'DXi Advanced Reporting' button is located at the bottom left of the sidebar.

- 2 Enter information about the workgroup user:

- **User Name** - Enter the name of the workgroup user.
- **Password** - Enter the password for the workgroup user.
- **Confirm Password** - Enter the password again to confirm it.
- **Description** - (Optional) Enter a brief description of the workgroup user.
- **Grant Administrator Privileges** - Select the check box to add the workgroup user to the Windows Administrators group.

This allows the workgroup user to override certain permissions settings and prevents the workgroup user from being locked out of shares or directories.

**3 Click Apply.**

After you create a workgroup user, you can grant the user access to a NAS share (see [Editing a NAS Share](#) on page 216).


### Windows Domain

To add a share administrator for a Windows domain:

**1 Click Add.**

The **Add Share Administrator** page displays (see [Figure 123](#)).

Figure 123 Add Share Administrator Page

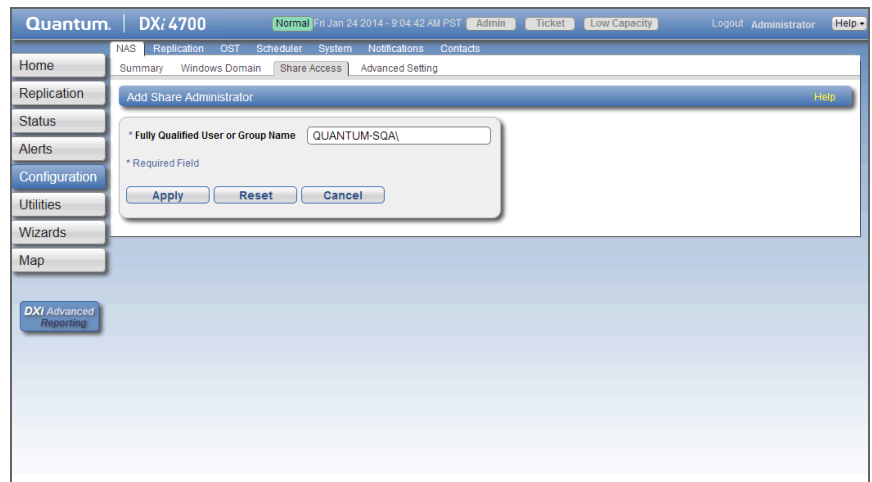

**2 Enter the Fully Qualified User or Group Name of the share administrator.**

**3 Click Apply.**

Use the MMC (Microsoft Management Console) to manage users (see [ADS Share Permissions](#) on page 227).

### Editing a Workgroup User

Edit a workgroup user to change the user's password or description, or to change the user's administrator privileges.

---

**Note:** You cannot edit a share administrator. Instead, delete the share administrator, then add a new share administrator.


---

To edit a workgroup user:

- 1 Select the user and click **Edit**.

The **Edit Workgroup User** page displays (see [Figure 124](#)).

Figure 124 Edit Workgroup User Page

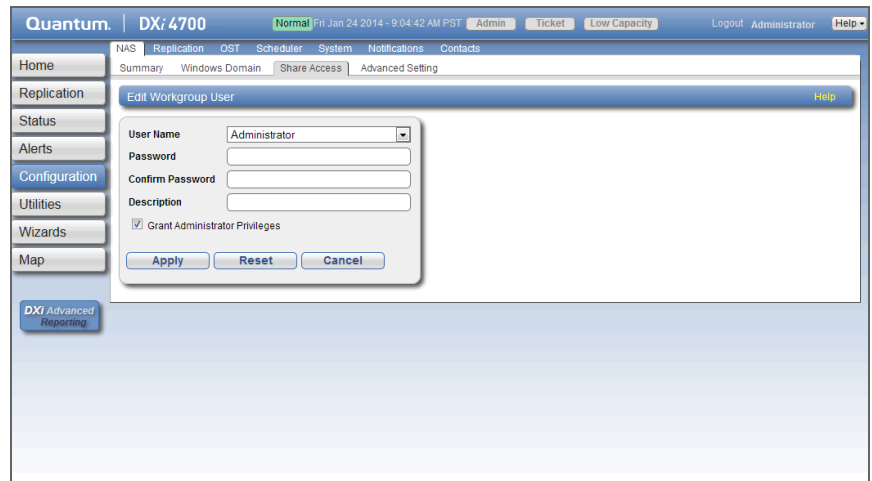

- 2 Enter information about the workgroup user:

---

**Note:** If you are editing a workgroup user, you cannot change the **User Name**.

---

- **User Name** - (Optional) Select a different workgroup user to edit.
- **Password** - Enter the password for the workgroup user.
- **Confirm Password** - Enter the password again to confirm it.
- **Description** - (Optional) Enter a brief description of the workgroup user.
- **Grant Administrator Privileges** - Select the check box to add the workgroup user to the Windows Administrators group.

This allows the workgroup user to override certain permissions settings and prevents the workgroup user from being locked out of shares or directories.

**3 Click Apply.**

### Deleting a Workgroup User or Share Administrator

Delete a workgroup user or share administrator if the user or administrator no longer needs to access CIFS shares.

To delete a workgroup user or share administrator, select the user or administrator and click **Delete**.

---

**Note:** You can select multiple users or administrators to delete at once.

---

### ADS Share Permissions

To manage user access to CIFS shares when the DXi4700 is joined to a Windows domain, use the MMC (Microsoft Management Console). Log onto the MMC on the domain controller and access a share's properties to set share permissions for users.

---

**Note:** In some cases, when you view file permissions on a Windows system, you will not see the user and group information. Instead you will see the SID (security ID) which appears as a series of numbers. This occurs when you move files (for example, using a backup utility or DOS **xcopy**) from one system to another system, and the user and group from the source system do not exist on the target system.

Often users and groups are unique to a particular scope, such as a Windows system or an ADS domain. As a result, some assigned permissions might not be available on the target system because the associated user and group do not exist there. However, common groups (for example, **Administrators**, **Users**, and **Everyone**) are recognized on most Windows systems and domains.


---

## Advanced Setting

The **Advanced Setting** page allows you to enable or disable advanced SMB settings.

To access the **Advanced Setting** page, on the **NAS** page, click the **Advanced Setting** tab (see [Figure 125](#)).

Figure 125 Advanced Setting Page

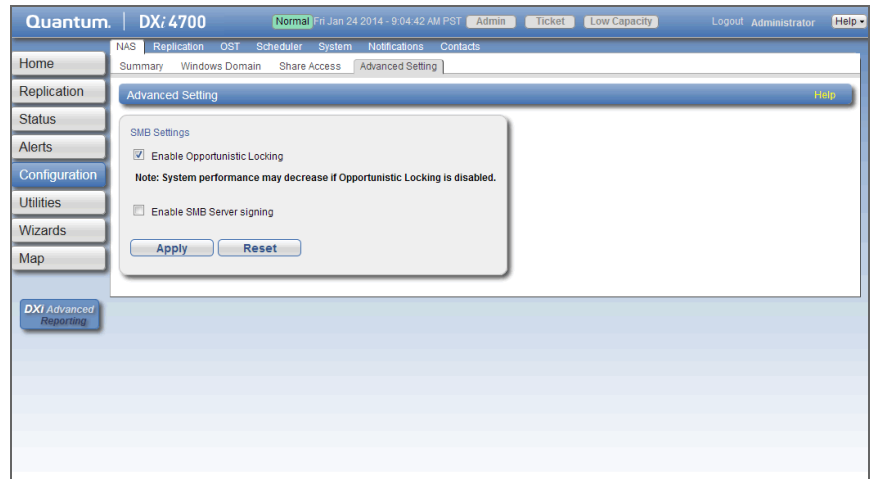

To enable or disable advanced SMB settings:

- 1 Select the check box to enable, or clear the check box to disable, the following settings:
    - **Enable Opportunistic Locking** - (Enabled by default)  
Opportunistic locking lets clients lock files and locally cache information without the risk of another user changing the file. This increases performance for many file operations, but it may decrease performance in other operations because the server that grants the opportunistic lock must manage the breaking of that lock when another user requests access to the file.
- 
- Note:** System performance may decrease if **Opportunistic Locking** is disabled.
- 
- **Enable SMB Server signing** - (Disabled by default) SMB server signing improves security on Windows networks by requiring clients to provide a security signature to connect to a server. If the DXi is joined to a Windows domain that is configured to require signing, you should enable SMB server signing.

- 2 Click **Apply**.

---

## VTL

The **VTL** page allows you to configure the DXi4700 to present its storage capacity as VTL (virtual tape library) partitions that are compatible with standard backup applications. You can add virtual tape drives and storage slots to VTL partitions, as well as create and work with virtual tape cartridges. You can also map partitions to hosts.

---

**Note:** Virtual Tape Library (VTL) is available only on the DXi4700 VTL and Multi-Protocol configurations.

---

---

**Note:** The **VTL** wizard provides guided assistance for configuring VTL partitions (see [DXi4700 Configuration Wizards](#) on page 63).

---

To access the **VTL** page, click the **Configuration** menu, and then click the **VTL** tab.

The **VTL** page contains the following tabs:

- [Partitions](#)
- [Media](#)
- [Remote Host Access](#)

---

## Partitions

---

The **Partitions** page allows you to manage VTL partitions on the DXi4700. Use partitions to allocate the DXi4700 virtual tape drives and storage elements to separate partitions that can be accessed by different host systems.

To access the **Partitions** page, on the **VTL** page, click the **Partitions** tab.

The **Partitions** page contains the following tabs:


- [Partitions Summary](#)
- [Partitions General](#)

## Partitions Summary

The **Partitions Summary** page allows you to view information about existing partitions. You can also add or edit partitions, and delete partitions.

To access the **Partitions Summary** page, on the **Partitions** page, click the **Summary** tab (see [Figure 126](#)).

Figure 126 Partitions Summary Page

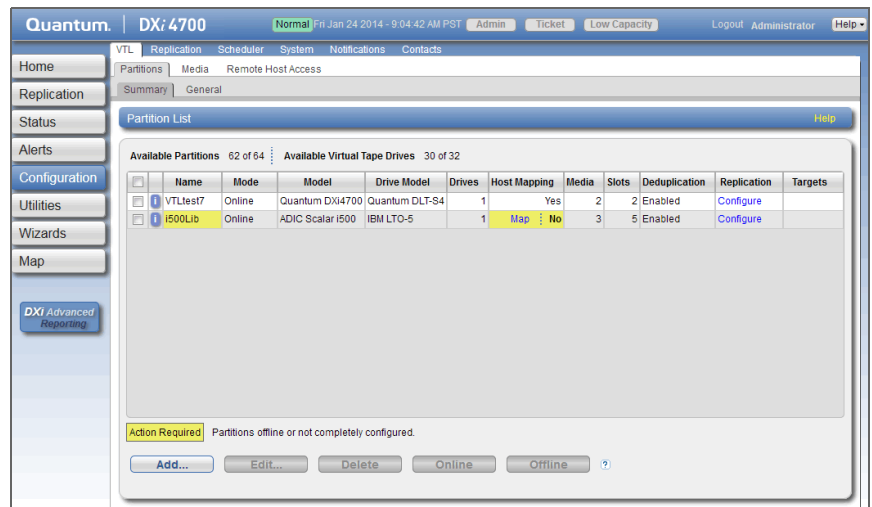

Use the **Partitions Summary** page to perform the following tasks:

- View information about existing VTL partitions (see [Partition List](#) on page 231).
- Add a new VTL partition to the system (see [Adding a VTL Partition](#) on page 232).
- Edit properties for an existing VTL partition (see [Editing a VTL Partition](#) on page 235).
- Delete a VTL partition from the system (see [Deleting a VTL Partition](#) on page 237).
- Change the mode of a partition (see [Changing Partition Mode](#) on page 238).



## Partition List

The **Partition List** section displays the following information for all VTL partitions on the DXi4700:

- **Available Partitions** - The number of partitions that have been added to the system and the maximum number of partitions that can be added.
- **Available Virtual Tape Drives** - The number of virtual tape drives that have been added to the system and the maximum number of drives that can be added.
- **Name** - The name of the partition.
- **Mode** - The current mode of the partition (**Online** or **Offline**).
- **Model** - The library model emulated by the partition.
- **Drive Model** - The tape drive model emulated by the virtual drives in the partition.
- **Drives** - The number of virtual tape drives in the partition.
- **Host Mapping** - The current state of host mapping for the partition (**Yes** or **No**). If no hosts have been mapped, click **Map** to map hosts to partitions (see [Remote Host Mapping](#) on page 248).
- **Media** - The number of virtual tape cartridges in the partition. If no cartridges have been created, click **Create** to add media (see [Media Add](#) on page 240).
- **Slots** - The number of storage slots in the partition.
- **Deduplication** - The data deduplication state of the partition (**Enabled** or **Disabled**).
- **Replication** - The current state of replication for the partition:
  - **Enabled** - Replication is enabled.
  - **Send/Receive Sync ID** - Cartridge Based Replication is enabled.
  - **Configure** - Click to configure replication for the partition (see [Editing a VTL Partition](#) on page 235)
  - **Scheduled** - Replication is scheduled for the partition. Click to view or modify the schedule (see [Scheduling a Share or Partition for Replication](#) on page 311).
- **Targets** - The targets the partition is configured to replicate to.

---

**Note:** Click a column heading to sort the rows in the table by that column. Click the column heading again to reverse the sort order.

---

---

**Note:** Click the Information button [i] next to a partition to display detailed information about the partition and recent replication activity.

---

### Adding a VTL Partition

Add a VTL partition to present the storage capacity of the DXi4700 as a VTL partition that is compatible with standard backup applications. You can add up to 64 partitions. When you add a partition, you must specify the type of physical library to emulate and configure virtual tape drives and storage slots.

The number of virtual tape drives (VTDs) totaled across all configured partitions must not exceed a maximum value. The maximum number of VTDs allowed varies depending on the system configuration:

- **DXi4700** - 64 VTDs (no more than 32 VTDs active at any one time)

---

**Note:** A license key for 32 VTDs is pre-installed on all DXi4700 models. To obtain a license for additional VTDs, contact your Quantum Sales Representative.

---

A virtual tape drive is considered active if a cartridge is loaded in the VTD. Make sure to configure the backup application software so that the maximum number of active VTDs is not exceeded at any time. Exceeding the maximum number of active VTDs may cause backup jobs to time out.

---

---

**Caution:** Make sure the backup application on the host is configured for the correct number of tape drives and storage slots emulated by the VTL partition. If you do not, the backup application might not operate correctly.

---

---


**Note:** If you plan to replicate partitions to another DXi, make sure that every partition name and barcode number on each DXi is unique. There cannot be duplicate partition names or barcode numbers on the DXi4700 or on a DXi receiving a replicated partition.

To add a VTL partition:

1 Click **Add**.

The **Add VTL Partition & Replication Settings** page displays (see [Figure 127](#)).

Figure 127 Add VTL Partition & Replication Settings Page

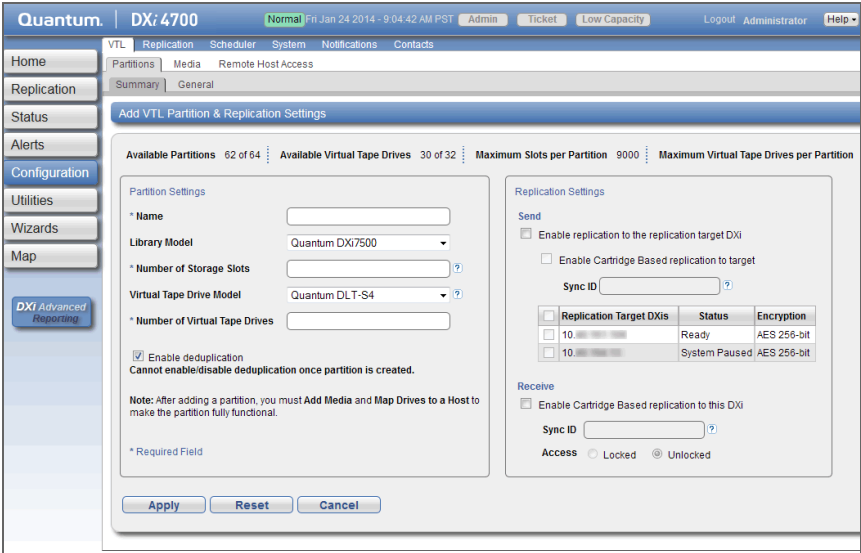

2 Under **Partition Settings**, enter information about the partition:

- **Name** - Enter the name of the VTL partition.
- **Library Model** - Select the library model emulated by the partition. The library model determines the inquiry string returned to the host by the DXi4700. (The library model does not restrict the number of slots or drives in a partition because library emulation is not a representation of a physical library.)

The following library models are available:

- Quantum DXi7500

- ADIC Scalar 100, ADIC Scalar i2000, or ADIC Scalar i500
- ADIC Pathlight VX
- Quantum Scalar i40/i80 or Quantum Scalar i6000
- Quantum DXi6700, Quantum DXi6902, Quantum DXi6800, Quantum DXi4700, Quantum DXi4601, QuantumDXi4500, or Quantum DXi8500
- Quantum DX3000 or Quantum DX5000
- Quantum PX500 or Quantum PX720
- ATL M2500, ATL P1000, or ATL P7000

If you select a library such as the ATL P1000 or ATL P7000, the DXi4700 appears as the selected library to the host and backup application. If you select Quantum DXi4700, the host and backup application recognize the device as a Quantum DXi4700.

---

**Note:** Quantum recommends that you set the library model to Quantum DXi4700 for best compatibility. If your backup application does not support the Quantum DXi4700 inquiry string, select a different library model. Check your software compatibility guide to verify what library models are supported.

---

- **Number of Storage Slots** - Enter the number of storage slots in the partition (up to 9,000).

---

**Note:** One I/E slot is created for each storage slot up to a maximum of 240 I/E slots.

---

- **Virtual Tape Drive Model** - Select the tape drive model emulated by the virtual drives in the partition. All virtual tape drives in a partition must be the same model.

The following tape drive models are available:

- Quantum DLT-S4, SDLT600, SDLT320, or DLT7000
- Certance LTO-2 and LTO-3
- IBM LTO-1, LTO-2, LTO-3, LTO-4, or LTO-5
- HP LTO-1, LTO-2, LTO-3, LTO-4, or LTO-5

- **Number of Virtual Tape Drives** - Enter the number of virtual tape drives in the partition.

---

**Note:** If all tape drives are currently assigned to other partitions, you must remove one or more tape drives from an existing partition to make them available for use in a new partition.

---

- **Enable deduplication** - Select the check box to enable data deduplication. Quantum recommends that you enable data deduplication to optimize disk usage.

---

**Note:** Data deduplication is enabled by default. You cannot enable or disable data deduplication after the partition is added. If data duplication is disabled, then data compression is also disabled.

---

**3** (Optional) Under **Replication Settings**, specify replication settings.

For more information about configuring replication for a partition, or to set up replication for the partition at a later time, see [DXi4700 Replication](#) on page 121.

**4** Click **Apply**.

After you add a partition, you must add media and map drives to a host before the partition can be used for backups (see [Media Add](#) on page 240 and [Remote Host Mapping](#) on page 248).

### Editing a VTL Partition


Edit a VTL partition to modify the settings for the partition, for example, to change the emulated library model or the number of storage slots and virtual tape drives.

To edit a VTL partition:

- 1 Select the partition and click **Edit**.

The **Edit VTL Partition & Replication Settings** page displays (see [Figure 128](#)).

Figure 128 Edit VTL Partition & Replication Settings Page

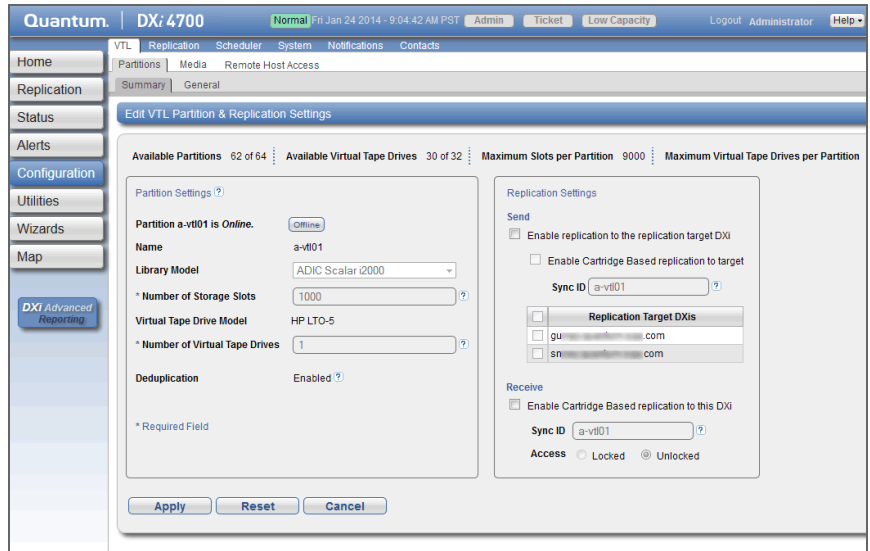

- 2 If the partition is online, click **Offline** to take the partition offline. To edit a partition, it must be offline.
- 3 Under **Partition Settings**, enter information about the partition:

---

**Note:** If you are editing a partition, only the **Library Model**, **Number of Storage Slots**, and **Number of Virtual Tape Drives** options can be changed.

---

- **Library Model** - Select the library model emulated by the partition. The library model determines the inquiry string returned to the host by the DXi4700.

The following library models are available:

- Quantum DXi7500
- ADIC Scalar 100, ADIC Scalar i2000, or ADIC Scalar i500
- ADIC Pathlight VX
- Quantum Scalar i40/i80 or Quantum Scalar i6000
- Quantum DXi6700, Quantum DXi6902, Quantum DXi6800, Quantum DXi4700, Quantum DXi4601, QuantumDXi4500, or Quantum DXi8500
- Quantum DX3000 or Quantum DX5000

- Quantum PX500 or Quantum PX720
- ATL M2500, ATL P1000, or ATL P7000

If you select a library such as the ATL P1000 or ATL P7000, the DXi4700 appears as the selected library to the host and backup application. If you select Quantum DXi4700, the host and backup application recognize the device as a Quantum DXi4700.

---

**Note:** Quantum recommends that you set the library model to Quantum DXi4700 for best compatibility. If your backup application does not support the Quantum DXi4700 inquiry string, select a different library model. Check your software compatibility guide to verify what library models are supported.

---

- **Number of Storage Slots** - Enter the number of storage slots in the partition (up to 9,000).

---

**Note:** One I/E slot is created for each storage slot up to a maximum of 240 I/E slots.

---

- **Number of Virtual Tape Drives** - Enter the number of virtual tape drives in the partition.

---

**Note:** If all tape drives are currently assigned to other partitions, you must remove one or more tape drives from an existing partition to make them available for use in a new partition.

---

- 4 (Optional) Under **Replication Settings**, specify replication settings.

For more information about configuring replication for a partition, or to set up replication for the partition at a later time, see [DXi4700 Replication](#) on page 121.

- 5 Click **Apply**.
- 6 Click **Online** to return the partition to an online state.

### Deleting a VTL Partition

Delete a VTL partition if it is no longer needed. When you delete a partition, all data stored on the partition is lost.

---

**Note:** If you delete a partition configured for Cartridge Based Replication on the source DXi, the partition is *not* automatically deleted on the target DXi. If you do not want to retain the partition on the target DXi, you can manually delete it.

---

To delete a VTL partition:

- 1 If the partition is online, select the partition and click **Offline** to take the partition offline. To delete a partition, it must be offline.
- 2 If there are tape cartridges in any of the tape drives in the partition, move the cartridges to storage slots (see [Media Move](#) on page 244). To delete a partition, all drives must be empty.
- 3 Select the partition and click **Delete**.

---

**Note:** You can select multiple partitions to delete at once.

---

- 4 Click **Yes** to confirm the deletion.

If the partition contains tape cartridges, they are exported from the partition before it is deleted.

### Changing Partition Mode

Change the mode of a VTL partition to take it online or offline. To make backups to a partition, it must be online. To edit or delete a partition, it must be offline.

- To change the partition mode to online, select the partition and click **Online**.
- To change the partition mode to offline, select the partition and click **Offline**.

---

**Note:** Taking a partition offline might disrupt backup operations.

---

### Partitions General

Use the **Partitions General** page to configure the Auto Export feature. When a tape is exported by the backup application, it is placed in a virtual I/E slot. After this, one of the following actions occurs:


- (Default) If Auto Export is enabled, the media is removed from the virtual I/E slot.



- If Auto Export is disabled, the media remains in the virtual I/E slot.

To access the **Partitions General** page, on the **Partitions** page, click the **General** tab (see [Figure 129](#)).

Figure 129 Partitions General Page

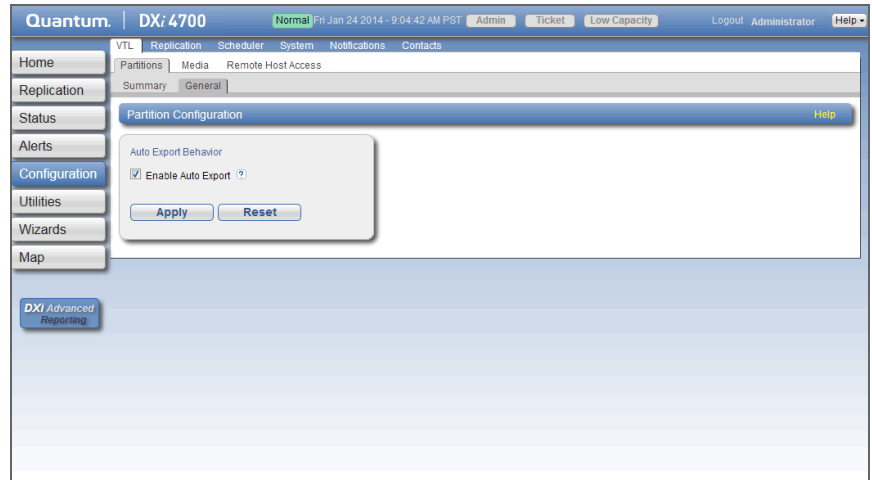

To configure Auto Export:

- 1 Select the **Enable Auto Export** check box to enable Auto Export.  
Or clear the **Enable Auto Export** check box to disable Auto Export.
- 2 Click **Apply**.

## Media

The **Media** page allows you to manage virtual tape cartridges in VTL partitions on the DXi4700. Backup applications can write data to virtual tape cartridges just as they would to physical media.

To access the **Media** page, on the **VTL** page, click the **Media** tab.

The **Media** page contains the following tabs:

- [Media Add](#)
- [Media Actions](#)
- [Media Move](#)
- [Media Unload](#)

## Media Add

Use the **Media Add** page to add a contiguous range of virtual tape cartridges to a VTL partition. You can specify the initial location, starting barcode, media type, and media capacity. After the cartridges are created, they are available for backing up data.

**Note:** It is possible to oversubscribe space on the DXi4700. In this case, the total capacity of all media is more than the capacity of the DXi. For guidance on selecting media quantity and size, see [Virtual Media—How Many and What Size?](#) on page 23.

To access the **Media Add** page, on the **Media** page, click the **Add** tab (see [Figure 130](#)).

Figure 130 Media Add Page

The screenshot displays the 'Add Media' interface in the Quantum DXi4700 management console. The interface includes a top navigation bar with 'Quantum | DXi4700' and a status indicator 'Normal Fri Jan 24 2014 - 9:04:42 AM PST'. Below the navigation bar, there are tabs for 'Partitions', 'Media', and 'Remote Host Access'. The 'Media' tab is active, and the 'Add' sub-tab is selected. The main content area is titled 'Add Media' and contains the following fields and options:

- Partition:** A dropdown menu set to 'VTLtes7'.
- Virtual Library Model:** 'Quantum DXi4700'.
- Virtual Tape Drive Model:** 'Quantum DLT-S4'.
- Empty Storage Slots:** 0.
- Empty I/E Slots:** 2.
- Existing Media:** 2. A note below states 'All Storage Slots are occupied.'
- Add Contiguous Media:**
  - Initial Location:** A dropdown menu set to 'I/E Slot'.
  - \* Number of Media:** A text input field with a range of '(1 to 2)'.
  - \* Starting Barcode:** A text input field with a range of '(A-Z, 0-9)'.
  - Media Type:** A dropdown menu set to 'DLT S4'.
  - Media Capacity:** Two radio button options: 'Native Size' (selected) with 'DLT S4, 800 GB' and 'Custom Size' with a text input field and a range of '(5 to 800 GB)'.
- \* Required Field:** A label for the asterisked fields.
- Buttons:** 'Apply' and 'Reset' buttons at the bottom.

To add virtual tape cartridges to a partition:

- 1 In the **Partition** drop-down box, select the partition where the media will be created.
- 2 Under **Add Contiguous Media**, enter information about the media:
  - **Initial Location** - The initial location for cartridges after they are created (**Storage Slot** or **I/E Slot**).

---

**Note:** You cannot create more cartridges than the number of available slots in the initial location. For example, if 50 I/E slots are available, you cannot create more than 50 cartridges if the initial location is set to **I/E Slot**.

---

- **Number of Media** - The number of cartridges to create in the partition.
- **Starting Barcode** - The first barcode number in the cartridge sequence.

You can enter any alpha-numeric string for the starting barcode (uppercase letters only). Subsequent barcodes are incremented accordingly. For example, if you enter AA, the cartridges are numbered AA0000, AA0001, AA0002, and so on. If you enter a starting barcode with less than 6 characters, zeroes are appended to the barcode to make it 6 characters long.

- **Media Type** - The media type of the cartridges.

---

**Note:** The available media type options are determined by the type of tape drive selected when the partition was created (see [Adding a VTL Partition](#) on page 232).

---

- **Media Capacity** - The capacity of the cartridges. Select an option:
  - **Native Size** - The capacity is determined by the selected media type.
  - **Custom Size** - The capacity is a custom value. Enter the custom cartridge capacity in the box. Make sure the value is within the acceptable range displayed next to the box.


3 Click **Apply**.

## Media Actions

Use the **Media Actions** page to perform actions on virtual tape cartridges. You can import, export, and remove cartridges from VTL partitions. You can also configure cartridges to be write protected to prevent access.

To access the **Media Actions** page, on the **Media** page, click the **Actions** tab (see [Figure 131](#)).

Figure 131 Media Actions  
Page

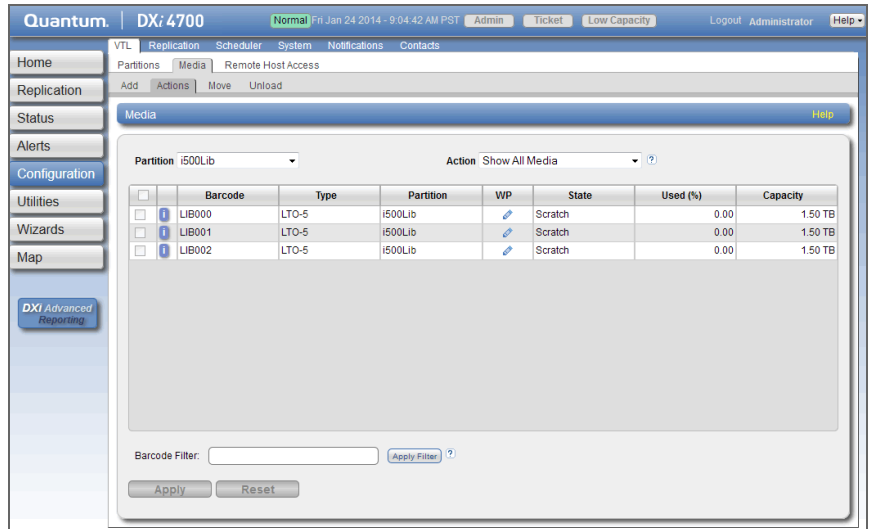

To perform actions on virtual tape cartridges:

- 1 In the **Partition** drop-down box, select the partition that contains the cartridges to work with.

---

**Note:** Select **UNASSIGNED** to work with cartridges that are not assigned to any partition.

---

The table displays the following information for all virtual tape cartridges in the partition:

- **Barcode** - The barcode number of the cartridge.
- **Type** - The cartridge type (**LTO** or **SDLT**).
- **Partition** - The partition where the cartridge is located.
- **WP** - The write protect status of the cartridge (**Write Enabled** or **Write Protected**).
- **State** - The state of the cartridge:
  - **Scratch** - Scratch newly created virtual media or virtual media that has been recycled with no data on it.
  - **Virtual** - Virtual media with data on it.
  - **Virtual, Mounted** - Virtual media with data that is mounted in a tape drive.

- **Vaulted** - Virtual media with data that has been exported from a partition. Data is still intact on the virtual media.
- **Exported** - Virtual media with no data that has been exported from a partition. Media has to be in this state before it can be deleted from the DXi4700.
- **Pool** - The type of cartridge pool such as application, cleaning, service, or unknown.
- **Used (%)** - The percentage of the tape cartridge that is used.

---

---

**Caution:** The **Used (%)** value is not updated while the media is mounted. Because of this, the displayed **Used (%)** value may be different from the real value for mounted media.

---

---

- **Capacity** - The total capacity of the tape cartridge.

---

**Note:** Click a column heading to sort the rows in the table by that column. Click the column heading again to reverse the sort order.

---

---

**Note:** Click the Information button [i] next to a cartridge to display detailed information about the cartridge.

---

2 In the **Action** drop-down box, select the action to perform:

- **Delete** - Deletes a cartridge from the \*UNASSIGNED partition. The cartridge must be in the exported state.
- **Export** - Removes a cartridge from the virtual media changer and places it in an exported state. Perform this action if an export cannot be performed from the backup application. The cartridge must be in the vaulted, scratch, or virtual state.
- **Recycle** - Recycles (erases) a cartridge so it can be reused by the partition.
- **Write Protect (WP)** - Enables or disables write protection for the cartridge.
- **Import Media** - Imports cartridges into the currently selected partition. Cartridges that are in the exported or vaulted state can be imported from another partition with the same media type and data deduplication settings.

After you select an action, the table is updated to show only the cartridges that support the selected action. Select **Show All Media** in the **Action** drop-down box to see all cartridges.

- 3 (Optional) To reduce the number of cartridges displayed in the table, enter a barcode or barcode range in the **Barcode Filter** box and click **Apply Filter**.

Use a hyphen (-) to indicate a range, and use an asterisk (\*) to indicate a wildcard. Separate multiple entries with commas, and do not use spaces.

For example, enter **AAA\*** to display all cartridge barcodes beginning with AAA. Or enter **AAA010-AAA020** to display all barcodes in the specified range. Click the **Quick Tip** icon [?] for additional examples.

- 4 Select the cartridges to perform the action on. The action is performed only for selected cartridges on the current page.

Or select the check box in the table heading row to perform the action on all cartridges in the partition.

---

**Note:** If necessary, use the controls at the bottom of the table to navigate between multiple pages of results. Select the number of rows to display in the **Show** drop-down box.

---

- 5 Click **Apply**.

## Media Move

Use the **Media Move** page to move a virtual tape cartridge from a source location (drive, storage slot, or I/E slot) to a destination location (drive, storage slot, or I/E slot). The location and destination must be in the same partition.

---

**Note:** If you do not create and associate a host access group with a partition, the virtual devices are not visible from the host, and drives cannot be destinations for move operations (see [Remote Host Access](#) on page 248).

---


---

**Caution:** Moving a virtual tape cartridge might disrupt backup jobs.

---

To access the **Media Move** page, on the **Media** page, click the **Move** tab (see [Figure 132](#)).

Figure 132 Media Move Page

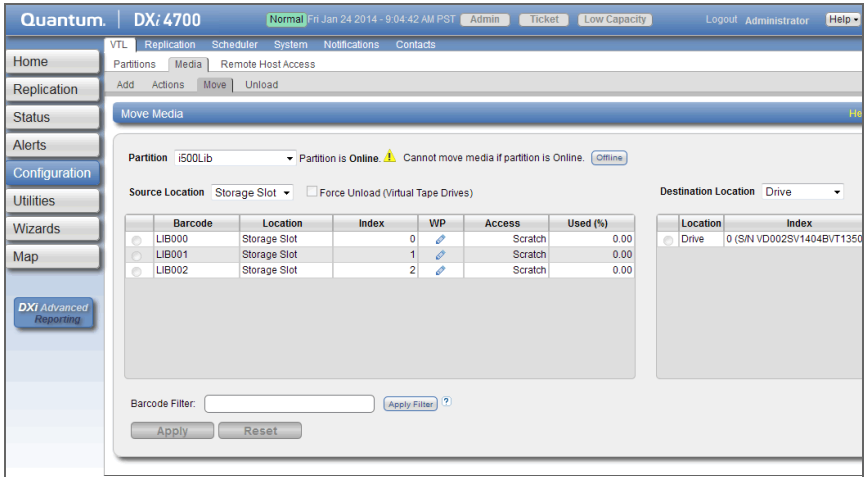

To move a virtual tape cartridge:

- 1 In the **Partition** drop-down box, select the partition that contains the cartridge to move.
- 2 If the partition is online, click **Offline** to take the partition offline. To move media, the partition must be offline.
- 3 In the **Source Location** drop-down box, select the type of location you want to move a cartridge from (**Drive**, **Storage Slot**, **I/E Slot**).
- 4 (Optional) If you are moving a cartridge from a drive, select the **Force Unload (Virtual Tape Drives)** check box to force the drive to unload the cartridge before ejecting it.
- 5 (Optional) To reduce the number of cartridges displayed in the table, enter a barcode or barcode range in the **Barcode Filter** box and click **Apply Filter**.

Use a hyphen (-) to indicate a range, and use an asterisk (\*) to indicate a wildcard. Separate multiple entries with commas, and do not use spaces.

For example, enter **AAA\*** to display all cartridge barcodes beginning with AAA. Or enter **AAA010-AAA020** to display all barcodes in the specified range. Click the **Quick Tip** icon [?] for additional examples.

- 6 Select the cartridge to move from the source location.

---

**Note:** If necessary, use the controls at the bottom of the table to navigate between multiple pages of results. Select the number of rows to display in the **Show** drop-down box.

---

7 In the **Destination Location** drop-down box, select the type of location you want to move the cartridge to (**Drive, Storage Slot, I/E Slot**).

8 Select the destination location to move the cartridge to.

---

**Note:** The destination section displays empty drives, storage slots, and I/E slots. Offline drives are *not* displayed. A drive might be offline if it has not been mapped to a host (see [Remote Host Access](#) on page 248).

---

9 Click **Apply**.

10 Return the partition to an online state (see [Changing Partition Mode](#) on page 238).

## Media Unload

Use the **Media Unload** page to perform a bulk unload of virtual tape cartridges from drives or I/E slots.

---

**Note:** If you do not create and associate a host access group with a partition, the virtual devices are not visible from the host, and drives cannot be destinations for move operations (see [Remote Host Access](#) on page 248).

---

---


**Caution:** If you unload a virtual tape cartridge from a drive while a backup to that drive is in progress, the backup job will fail.

---

To access the **Media Unload** page, on the **Media** page, click the **Unload** tab (see [Figure 133](#)).



Figure 133 Media Unload Page

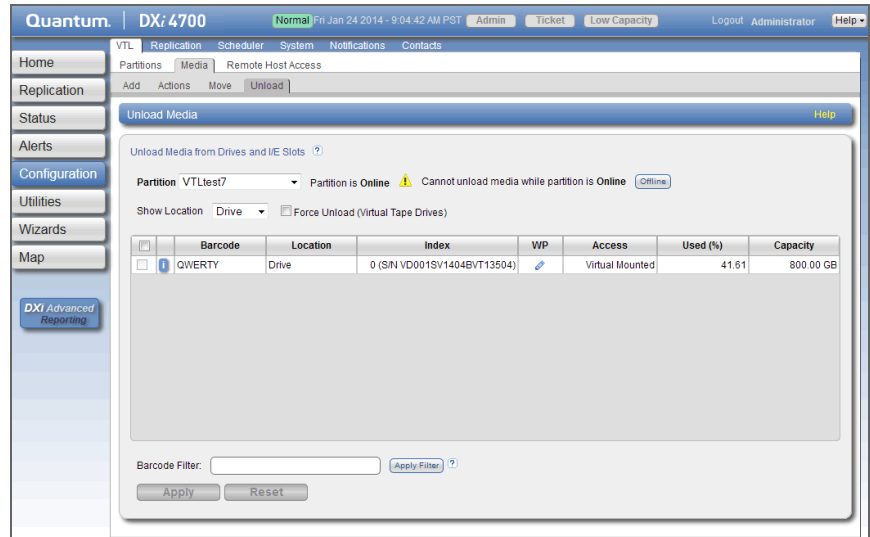

To unload virtual tape cartridges:

- 1 In the **Partition** drop-down box, select the partition that contains the cartridges to unload.
- 2 If the partition is online, click **Offline** to take the partition offline. To unload media, the partition must be offline.
- 3 In the **Show Location** drop-down box, select the type of location you want to unload cartridges from (**Drive, I/E Slot**).
- 4 (Optional) If you are unloading cartridges from a drive, select the **Force Unload (Virtual Tape Drives)** check box to force drives to unload the cartridges before ejecting them.
- 5 (Optional) To reduce the number of cartridges displayed in the table, enter a barcode or barcode range in the **Barcode Filter** box and click **Apply Filter**.

Use a hyphen (-) to indicate a range, and use an asterisk (\*) to indicate a wildcard. Separate multiple entries with commas, and do not use spaces.

For example, enter **AAA\*** to display all cartridge barcodes beginning with AAA. Or enter **AAA010-AAA020** to display all barcodes in the specified range. Click the **Quick Tip** icon [?] for additional examples.

- 6 Select the cartridges to unload.

---

**Note:** If necessary, use the controls at the bottom of the table to navigate between multiple pages of results. Select the number of rows to display in the **Show** drop-down box.

---

7 Click **Apply**.

Cartridges are moved to a previous storage slot if available. Otherwise, they are moved to the first available storage slot.

8 Return the partition to an online state (see [Changing Partition Mode](#) on page 238).

---

## Remote Host Access

---

The **Remote Host Access** page allows you to configure virtual media changers and tape drives on the DXi4700 to communicate with Fibre Channel hosts (initiators). You can add, edit, and delete hosts as well as view Fibre Channel target ports on the DXi.

---

**Note:** If you do not create and associate a host access group with a partition, the virtual devices are not visible from the host, and drives cannot be destinations for move operations.

---

To access the **Remote Host Access** page, on the **VTL** page, click the **Remote Host Access** tab.

The **Remote Host Access** page contains the following tabs:

- [Remote Host Mapping](#)
- [Remote Hosts](#)
- [Targets](#)
- [Target Usage](#)

### Remote Host Mapping


The **Remote Host Mapping** page allows you to view information about existing host access groups. You can also add or edit groups, and delete groups.

Host access groups allow backup hosts to access virtual devices on a DXi4700. A host access group is associated with a partition, a host (a Fibre Channel initiator on the SAN), and a target (a Fibre Channel port on the DXi4700). This association allows the host to access one or more

devices in the partition using different host LUNs on the port. To allow multiple hosts to access devices that belong to the same partition, you must create separate host access groups for each host.

To access the **Remote Host Mapping** page, on the **Remote Host Access** page, click the **Remote Host Mapping** tab (see [Figure 134](#)).

Figure 134 Remote Host Mapping Page

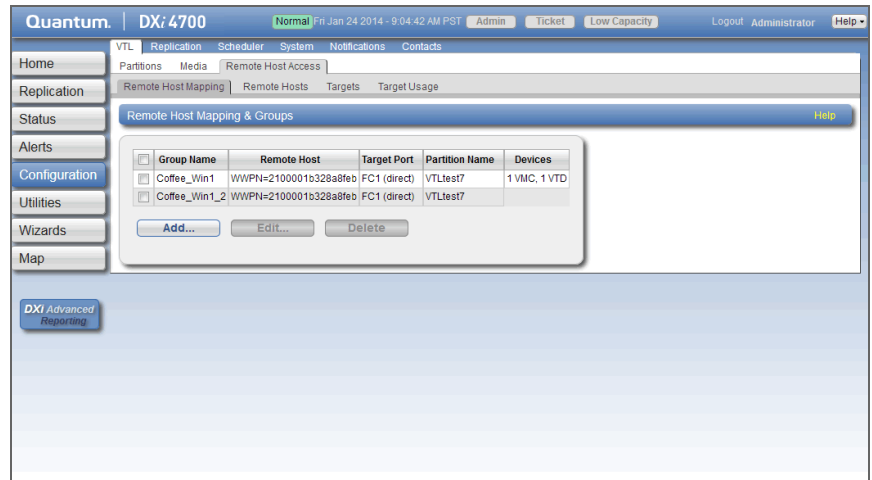

Use the **Remote Host Mapping** page to perform the following tasks:

- View information about existing host access groups (see [Remote Host Mapping And Groups](#) on page 249).
- Add a new host access group to a partition (see [Adding a Remote Host Access Group](#) on page 250).
- Edit properties for an existing host access group (see [Editing a Remote Host Access Group](#) on page 252).
- Delete a host access group from a partition (see [Deleting a Remote Host Access Group](#) on page 254).

### Remote Host Mapping And Groups

The **Remote Host Mapping And Groups** section displays the following information for all host access groups on the DXi4700:

- **Group Name** - The name of the group.
- **Remote Host** - The host (initiator) associated with the group.

- **Target Port** - The Fibre Channel port (target) associated with the group.
- **Partition Name** - The VTL partition associated with the group.
- **Devices** - The number of virtual media changers (VMCs) and virtual tape drives (VTDs) associated with the group.

---

**Note:** Click a column heading to sort the rows in the table by that column. Click the column heading again to reverse the sort order.

---

### **Adding a Remote Host Access Group**


Add a host access group to associate a VTL partition with a host (a Fibre Channel initiator on the SAN) and a target (a Fibre Channel port on the DXi4700).

To add a host access group:

- 1 Click **Add**.

The **Map Remote Hosts, Define Groups** page displays (see [Figure 135](#)).

Figure 135 Map Remote Hosts, Define Groups Page

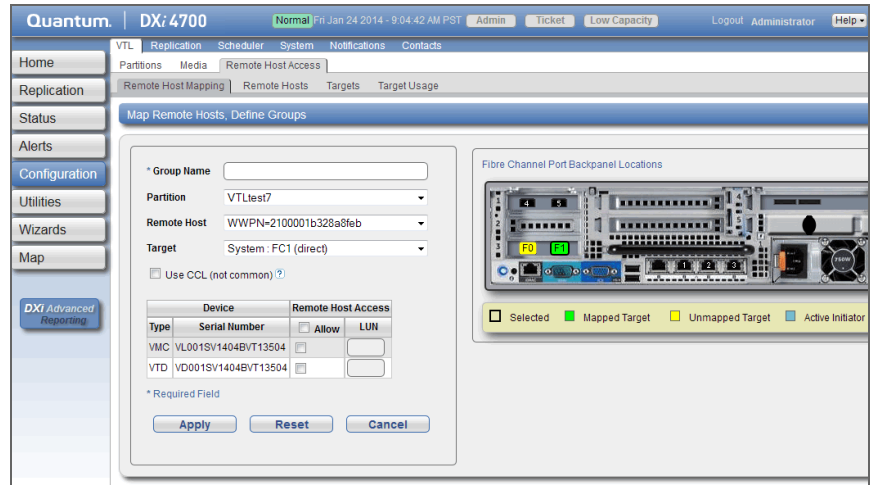

2 Enter information about the host access group:

- **Group Name** - Enter a name for the group.
- **Partition** - Select the partition to associate with the group.
- **Remote Host** - Select the host (initiator) to associate with the group.

---

**Note:** You must configure a host before it is available in the **Host** drop-down box (see [Remote Hosts](#) on page 254).

---

- **Target** - Select the target (port) to associate with the group.

The **Backpanel Locations** section displays a graphical representation of the Fibre Channel and Ethernet ports as they

appear on the rear of the system. A dark border displays around the currently selected target.

---

**Note:** If a target is directly connected to the DXi, only the directly connected ports are displayed. Otherwise, all ports are displayed.

---

- 3 (Optional) Select the **Use CCL** check box to use the Command and Control LUN.

---

**Note:** The CCL (Command and Control LUN) is not used in most environments. This option is recommended for host access groups that contain an HP-UX host. It can also be used if hosts that are not assigned to any host access group exist in the SAN. The CCL is accessible to hosts only through LUN 0.

---

---

---

**Caution:** If you are not sure if you should use CCL, contact Quantum Customer Support before you enable this option.

---

---

- 4 Select the check boxes for the media changer and tape drives to add to the host access group.

The LUN assignment displays next to the device.

- 5 Click **Apply**.

### Editing a Remote Host Access Group

Edit a host access group to change the CCL setting. You can also add or remove virtual media changers or tape drives.

To edit a host access group:

- 1 Select the group and click **Edit**.


The **Edit Remote Host Mapping** page displays (see [Figure 136](#)).

---

**Note:** If you are editing a host access group, you cannot change the **Group Name**, **Partition**, **Host**, or **Target**.

---

Figure 136 Edit Remote Host Mapping Page

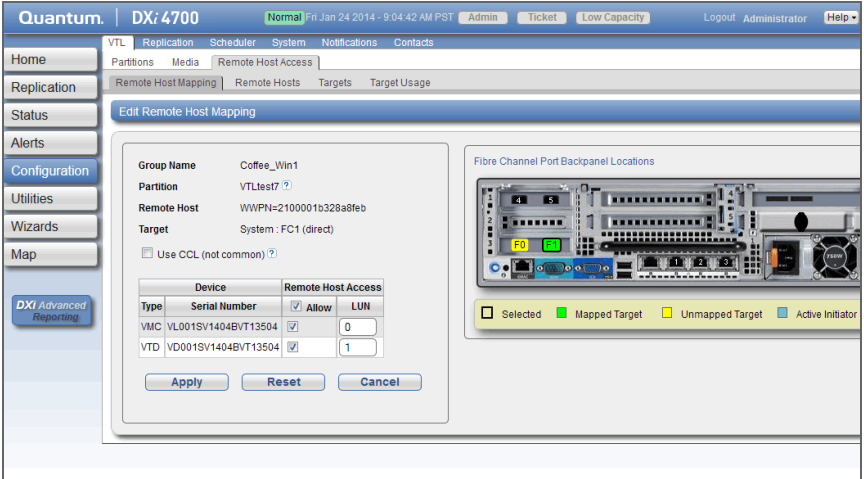

- 2 (Optional) Select the **Use CCL** check box to use the Command and Control LUN.

**Note:** The CCL (Command and Control LUN) is not used in most environments. This option is recommended for host access groups that contain an HP-UX host. It can also be used if hosts that are not assigned to any host access group exist in the SAN. The CCL is accessible to hosts only through LUN 0.

**Caution:** If you are not sure if you should use CCL, contact Quantum Customer Support before you enable this option.

- 3 Select the check boxes for the media changer and tape drives to add to the host access group.

The LUN assignment displays next to the device.

- 4 Click **Apply**.

### Deleting a Remote Host Access Group

Delete a host access group if it is no longer needed.

To delete a host access group:

- 1 Select the group and click **Delete**.

---

**Note:** You can select multiple groups to delete at once.

---

- 2 Click **Yes** to confirm the deletion.

### Remote Hosts

Use the **Remote Hosts** page to discover and add Fibre Channel hosts to the available host list for the DXi4700.

---

**Note:** You must configure a host before you can assign it to a new host access group (see [Adding a Remote Host Access Group](#) on page 250).

---

---

---

**Caution:** If you are connecting the DXi4700 directly to a host without using a Fibre Channel switch, you must know the WWPN connecting to each DXi4700 port. If you do not specify this information, the virtual medium changer and tape drives will not display on the device manager.


---

---

To access the **Remote Hosts** page, on the **Remote Host Access** page, click the **Remote Hosts** tab (see [Figure 137](#)).



Figure 137 Remote Hosts Page

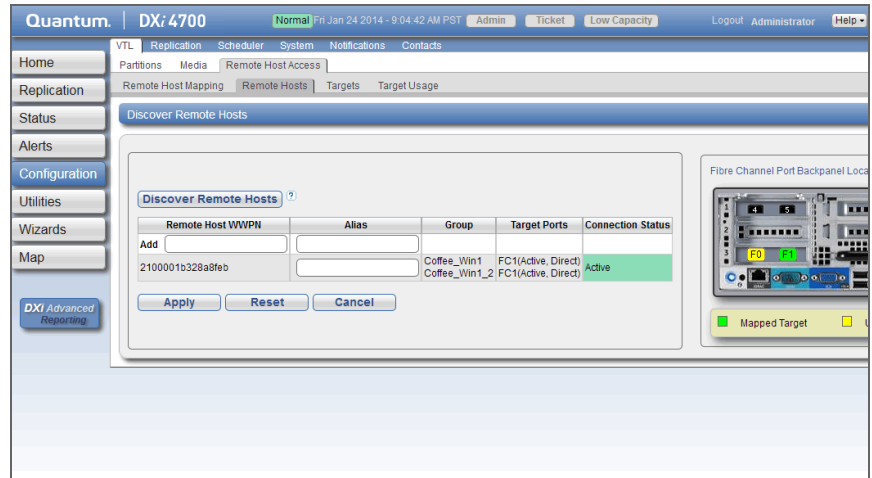

To add a host:

- 1 Click **Discover Remote Hosts** to list all hosts that are known to the DXi4700.

A host is made known to the DXi4700 if you enter the host ID on this page, or if the host logs on to one or more Fibre Channel target ports.

If you do not see the world wide name (WWN) of the host, make sure the host is connected to a Fibre Channel port on the DXi4700 and click **Discover Hosts** again.

The **Backpanel Locations** section displays a graphical representation of the Fibre Channel and Ethernet ports as they appear on the rear of the system.

---

**Note:** A mapped (green) status indicates the host is currently logged on to one or more Fibre Channel target ports.

---

- 2 Enter information about the host:
  - **Remote Host WWPN** - Enter the World Wide Port Name (WWPN) of the host. (This value is entered automatically by the system.)
  - **Alias** - (Optional) Enter a descriptive alias for the host.
- 3 Click **Apply**.

---

**Note:** To delete a host that is no longer needed, click **Delete** next to the host. You cannot delete a host if it is currently assigned to a host access group.


---

## Targets

Use the **Targets** page to view the current target (Fibre Channel) configuration.

To access the **Targets** page, on the **Host Access** page, click the **Targets** tab (see [Figure 138](#)).

Figure 138 Targets Page

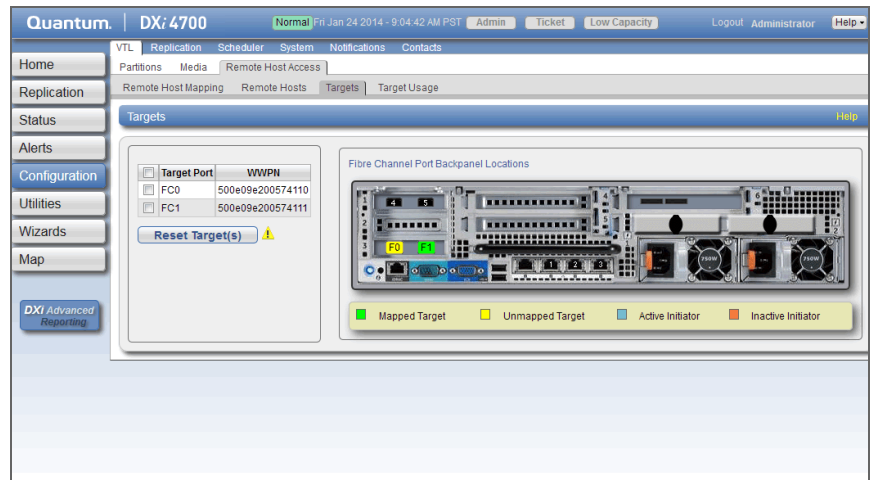

The **Targets** page displays the **Target Port** and **WWPN** for the currently configured targets. The **Backpanel Locations** section displays a graphical representation of the Fibre Channel and Ethernet ports as they appear on the rear of the system.

---

**Note:** A mapped (green) status indicates the host is currently logged on to one or more Fibre Channel target ports.

---


Select one or more targets and click **Reset Target(s)** to initiate a Fibre Channel reset on the selected ports. A reset causes the ports to go through LIP (Loop Initialization Protocol).

## Target Usage

Use the **Target Usage** page to view current target and device mappings for the DXi4700.

To access the **Target Usage** page, on the **Host Access** page, click the **Target Usage** tab (see [Figure 139](#)).

Figure 139 Target Usage Page

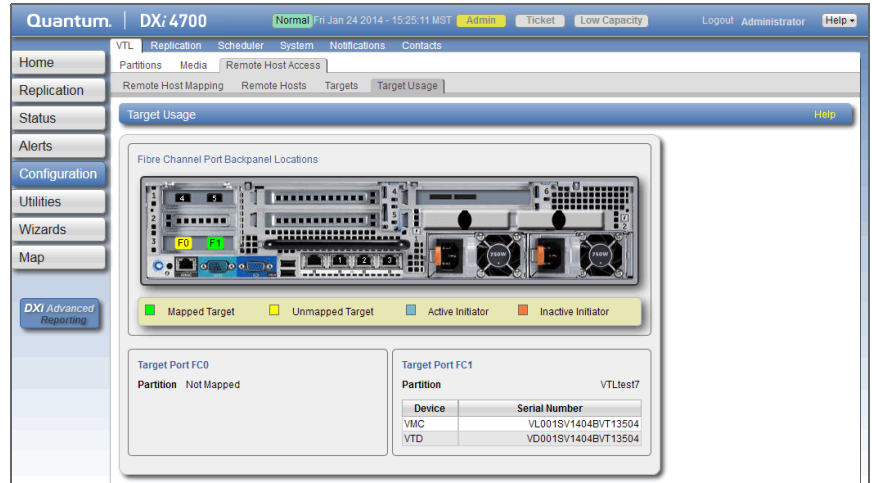

The **Backpanel Locations** section displays a graphical representation of the Fibre Channel and Ethernet ports as they appear on the rear of the system.

**Note:** A mapped (green) status indicates the host is currently logged on to one or more Fibre Channel target ports.

Each target Fibre Channel port is displayed, along with the partition and virtual media changer and tape drives (VMC and VTDs) mapped to the port.

---

## Replication Configuration

The **Replication Configuration** page allows you to configure and manage replication targets and allowed replication sources on the DXi4700. A source *sends* replicated data to 1 or 2 targets, and a target *receives* replicated data from up to 10 sources. A DXi4700 can act as both a source and a target.

---

**Note:** For more information about data replication, or to perform data replication, see [DXi4700 Replication](#) on page 121.


---

**Note:** If the DXi is configured as a replication target *and* replication is performed across a public network, with the source and target located behind NAT-enabled routers, you *must* specify a NAT IP address for the DXi on the **Network** page (see [Configuring Interface IP Addresses](#) on page 323).

---

To access the **Replication Configuration** page, click the **Configuration** menu, and then click the **Replication** tab (see [Figure 140](#)).

Figure 140 Replication Configuration Page

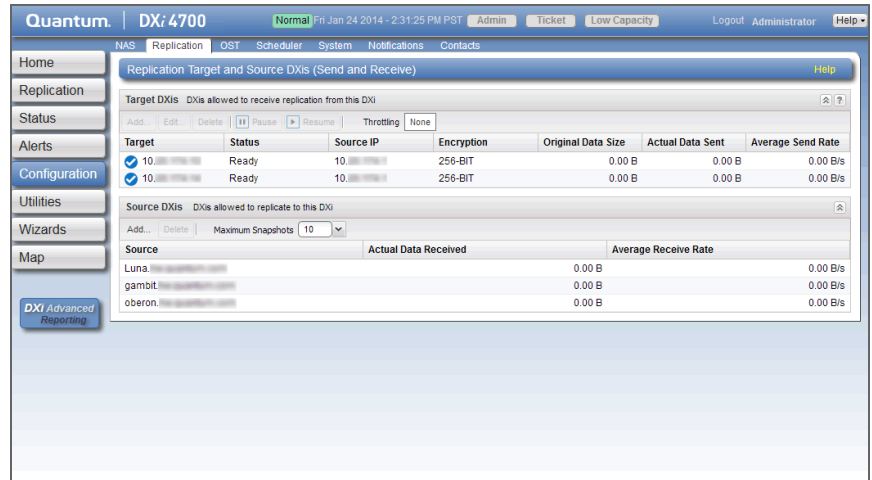

Use the **Replication Configuration** page to perform the following tasks:

- View information about configured replication target systems (see [Target DXIs List](#) on page 260).
- Add, edit, or delete a replication target (see [Adding a Replication Target](#) on page 261, [Editing a Replication Target](#) on page 263, or [Deleting a Replication Target](#) on page 265).
- Pause or resume replication to a target (see [Pausing or Resuming Replication to a Target](#) on page 265).
- Configure a constant replication throttle (see [Enabling System Throttling](#) on page 265).
- View information about allowed replication source systems (see [Source DXIs List](#) on page 267).
- Add or delete an allowed replication source (see [Adding a Replication Source](#) on page 267 or [Deleting a Replication Source](#) on page 268).
- Specify the maximum number of received snapshots to retain for each source (see [Changing the Maximum Number of Snapshots](#) on page 269).

---

## Target DXis List

---

The **Target DXis** list displays the following information for each target DXi:

- **Target** - The IP address of the target system that the DXi4700 is configured to send data to.
- **Status** - The replication status of the DXi4700. For a detailed description of all possible replication statuses, see [Replication Overview](#) on page 114.
- **Source IP** - The IP address that is used to uniquely identify the source DXi to the target.
- **Encryption** - The type of encryption used when sending replicated data to the target system (**None**, **128-bit**, or **256-bit**).
- **Original Data Size** - The original, native size of data sent during replication or failback. This value does not represent the amount of data actually sent over the network during replication or failback because data is deduplicated and compressed before being sent.
- **Actual Data Sent** - The amount of data actually sent over the network during replication or failback. This value is usually much less than the **Original Data Size** due to the benefits of data deduplication and compression.
- **Average Send Rate** - The average send rate (in B/s) of data sent over the network during replication or failback (**Actual Data Sent** divided by the amount of time required to complete replication or failback).

You can customize the appearance of the **Target DXis** list in the following ways:

- Click the top banner row of the list to collapse or expand the list.
- Click the arrow to the right of a column heading and select **Sort Ascending** or **Sort Descending** to sort the rows in the table by that column.
- To show or hide a column, click the arrow to the right of a column heading, and then click **Columns**. Select the check box to show a column, or clear the check box to hide a column.

---

**Note:** The statistics in the **Target DXis** list are for each target DXi rather than a cumulative total for all targets as is displayed on the **Home** page.

---

## Adding a Replication Target

Add a replication target to configure the DXi4700 to send replicated data to that target. You can add up to two targets. After you add a target, you can enable replication to that target for a NAS share or VTL partition. When replication is enabled for a share or partition, replicated data is sent to the target system during scheduled or manual replication.

**Note:** Before you can add a replication target, you must add the DXi to the list of allowed replication sources on the target DXi (see [Adding a Replication Source](#) on page 267).

**Note:** To add a new target when two targets are already configured, first delete one target (see [Deleting a Replication Target](#) on page 265). Then add the new target.


**Note:** For more information about enabling and scheduling replication for a share or partition, see [Replication Send](#) on page 130.

To add a replication target:

- 1 Under **Target DXis**, click **Add**.

The **Add Target Host** window displays (see [Figure 141](#)).

Figure 141 Add Target Host

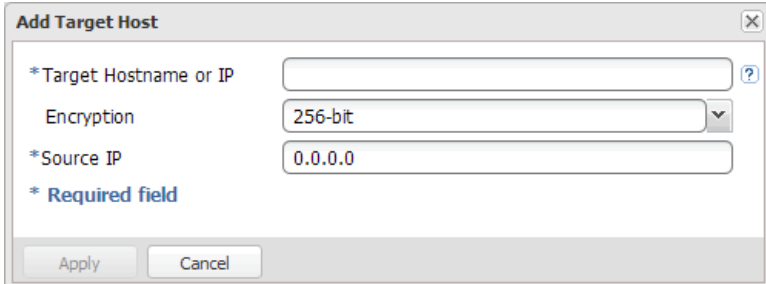

The screenshot shows a dialog box titled "Add Target Host" with a close button in the top right corner. It contains three input fields: "\*Target Hostname or IP" (empty), "Encryption" (set to "256-bit"), and "\*Source IP" (set to "0.0.0.0"). A blue asterisk and the text "\* Required field" are positioned to the left of the Source IP field. At the bottom are "Apply" and "Cancel" buttons.

- 2 In the **Target Hostname or IP** box, enter the hostname or IP address of the system that will receive the replicated data.

---

**Note:** When entering IP addresses, never use an address that is in a reserved IP address range. To see a list of reserved IP address ranges, click the quick tip icon [?] located near the IP address field.

---

---

**Note:** To use hostname format, you must specify at least one DNS IP address on the **Network** page (see [Network](#) on page 317).

---

- 3 In the **Encryption** drop-down box, select the type of encryption to use when sending replication data to the target system (**None**, **128-bit**, or **256-bit**).

---

**Caution:** For encryption, select **None** or **128-bit** if you are sending data to a DXi running a system software version prior to DXi 2.1 Software.

---

---

**Note:** AES encryption options are available only if the Data-in-Flight license is installed (see [License Keys](#) on page 392).

---

- 4 In the **Source IP** box, enter the IP address that is used to uniquely identify the source DXi to the target. This may be different than the actual network IP address of the source DXi.

If the target system is at DXi 2.1 Software or higher, the **Source IP** field is not required. If the target system is at DXi 2.0.1.x Software or below, then you must enter the IP address by which the target system recognizes the source system. The default value is **0.0.0.0**.

---

**Note:** The **Source IP** field does not accept fully qualified domain names. You must enter a valid IP address. Make sure this IP address is configured in the allowable sources list on the target DXi.

---



---

**Note:** When configuring segmented network interfaces, if the source DXi replication, data, and management interfaces are on the same subnet, you must add a host route on the source DXi to make sure the replication interface is correctly selected when replicating data to the target DXi (see [Understanding Interface Routing](#) on page 329).

---

5 Click **Apply**.

---

**Note:** The new target is not automatically added to existing replication schedules. You must add or edit scheduled events to schedule replication to the new target (see [Scheduler](#) on page 307).

---

---

## Editing a Replication Target

---

Edit a replication target to change encryption options or the source IP address.

To edit a replication target:

- 1 Under **Target DXis**, select the target and click **Pause** to pause replication.
- 2 Select the target again and click **Edit**.

The **Edit Target Host** window displays (see [Figure 142](#)).

---

**Note:** If you are editing a target, you cannot change the **Target Hostname or IP**.

---

---

Figure 142 Edit Target Host

The screenshot shows a dialog box titled "Edit Target Host". It contains three input fields: "\*Target Hostname or IP" with the value "10.40.165.181", "Encryption" with a dropdown menu showing "256-bit", and "\*Source IP" with the value "0.0.0.0". Below the fields is a blue asterisk and the text "\* Required field". At the bottom are "Apply" and "Cancel" buttons.

- 3 In the **Encryption** drop-down box, select the type of encryption to use when sending replication data to the target system (**None**, **128-bit**, or **256-bit**).

---

**Caution:** For encryption, select **None** or **128-bit** if you are sending data to a DXi running a system software version prior to DXi 2.1 Software.

---

---

**Note:** AES encryption options are available only if the Data-in-Flight license is installed (see [License Keys](#) on page 392).

---

- 4 In the **Source IP Address** box, enter the IP address that is used to uniquely identify the source DXi to the target. This may be different than the actual network IP address of the source DXi.

If the target system is at DXi 2.1 Software or higher, the **Source IP Address** field is not required. If the target system is at DXi 2.0.1.x Software or below, then you must enter the IP address by which the target system recognizes the source system. The default value is **0.0.0.0**.

---

**Note:** The **Source IP Address** field does not accept fully qualified domain names. You must enter a valid IP address. Make sure this IP address is configured in the allowable sources list on the target DXi.

---

---

**Note:** When configuring segmented network interfaces, if the source DXi replication, data, and management interfaces are on the same subnet, you must add a host route on the source DXi to make sure the replication interface is correctly selected when replicating data to the target DXi (see [Understanding Interface Routing](#) on page 329).

---

- 5 Click **Apply**.
- 6 Under **Target DXis**, select the target and click **Resume** to pause replication.

---

## Deleting a Replication Target

---

Delete a replication target if the DXi4700 no longer needs to send replicated data to that target. After the target system is deleted, the DXi4700 will no longer send replicated data to that system.

When a target is deleted:

- All replication jobs to that target that are in progress or queued will transition to failed.
- All replication job history for that combination of target and share or partition is removed.
- All shares or partitions will be reconfigured to no longer replicate to that target.

To delete a replication target:

- 1 Under **Target DXis**, select one or more targets to delete.
- 2 Click **Pause** to pause replication to the target.
- 3 Click **Delete**.

---

**Note:** The deleted target is not automatically removed from existing replication schedules. You must edit scheduled events to remove the deleted target (see [Scheduler](#) on page 307).

---

---

## Pausing or Resuming Replication to a Target

---

The source DXi controls the replication pause behavior.

- To pause replication, select a target under **Target DXis** and click **Pause**. The DXi temporarily stops sending replicated data to the selected target.
- To resume replication, select a target under **Target DXis** and click **Resume**. The DXi resumes sending replicated data to the selected target.

---

## Enabling System Throttling

---

Enable system throttling to limit the network bandwidth used for replication to all targets. When a constant throttle is enabled, the DXi limits the amount of data it sends during source replication so that it does not exceed the specified bandwidth.

---

**Note:** If multiple targets are configured, replication to all targets counts against the same bandwidth limit.

---

**Note:** To vary the replication throttle rate over time, use the **Configuration > Scheduler** page (see [Scheduler](#) on page 307). Do *not* enable a constant throttle if a throttle schedule is configured. The scheduled replication throttling bandwidth settings take precedence over the constant throttle value. (The currently active replication throttle rate appears on the **Home** page under **Current Activity**.)

---


To enable system replication throttling:

- 1 Under **Target DXis**, click the box next to **Throttling**.

The **Replication Throttle** window displays (see [Figure 141](#)).

---

Figure 143 Replication Throttle

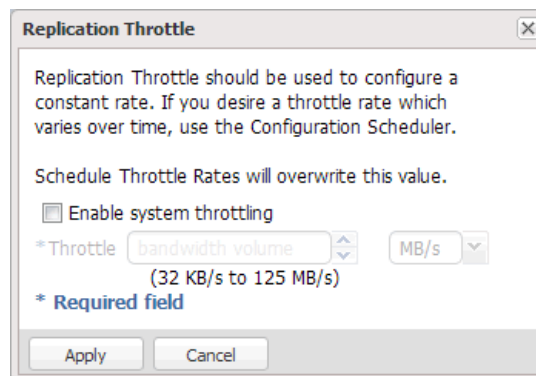

- 2 Select the **Enable system throttling** check box.

Or clear the check box to disable system throttling.

- 3 In the **Throttle** box, enter the maximum allowed bandwidth, and select the units you want to use to specify the constant throttle (**KB/s** or **MB/s**). The lowest value you can set is 32 KB/s. The highest value you can set is 125 MB/s for 1GbE and 500 MB/s for 10GbE.

- 4 Click **Apply**.

---

---

**Caution:** Do not set the maximum allowed bandwidth to a value that is lower than necessary. If the maximum allowed bandwidth is set to the lowest value, large replication jobs may fail.

---

---

---

## Source DXis List

---

The **Source DXis** list displays the following information for each source DXi:

- **Source** - The IP address of the source system that is allowed to send data to the DXi4700.
- **Actual Data Received** - The amount of data actually received over the network during replication or failback.
- **Average Receive Rate** - The average receive rate (in MB/s) of data received over the network during replication or failback (**Actual Data Received** divided by the amount of time required to complete replication or failback).

You can customize the appearance of the **Source DXis** list in the following ways:

- Click the top banner row of the list to collapse or expand the list.
- Click the arrow to the right of a column heading and select **Sort Ascending** or **Sort Descending** to sort the rows in the table by that column.
- To show or hide a column, click the arrow to the right of a column heading, and then click **Columns**. Select the check box to show a column, or clear the check box to hide a column.

---

**Note:** The statistics in the **Source DXis** list are for each source DXi rather than a cumulative total for all sources as is displayed on the **Home** page.

---

---

## Adding a Replication Source

---

Add a system to the list of replication sources to allow it to send replicated data to the DXi4700. You must add a source system to the list of allowed replication sources on the target DXi before you configure the source DXi to send replicated data to the target. The DXi can receive replicated data from up to 10 sources.

---

**Note:** For more information about working with received snapshots, see [Receive NAS](#) on page 142.

---

**Note:** It is typical for the target DXi to require additional disk space for replication data compared to the source DXi. This is because complete replication data is sent to the target before old data is deleted. For optimal performance, if the DXi is a replication target, Quantum recommends keeping the amount of free space at 20% or more (see [Disk Usage](#) on page 188).

---


To add a replication source:

- 1 Under **Source DXis**, click **Add**.

The **Add Allowed Source** window displays (see [Figure 141](#)).

---

Figure 144 Add Allowed Source

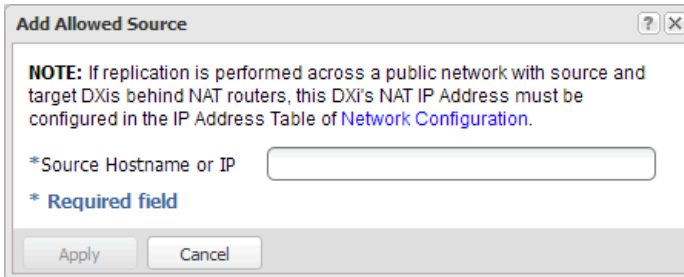

- 2 In the **Source Hostname or IP** box, enter the hostname or IP address of the system that will send the replicated data to the DXi4700.

---

**Note:** To use hostname format, you must specify at least one DNS IP address on the **Network** page (see [Network](#) on page 317).

---

- 3 Click **Apply**.

---

## Deleting a Replication Source

---

Delete a system from the list of replication sources if it will no longer send replicated data to the DXi4700. After the source system is deleted, the DXi4700 will no longer accept replicated data from that system.

To delete a replication source:

- 1 Under **Source DXis**, select one or more sources to delete.
- 2 Click **Delete**.

---

**Note:** If a source DXi is deleted from the list, its contribution to the cumulative totals on the **Home** page are not removed until you clear **Receive** statistics (see [Replication Performance](#) on page 171).

---

---

## Changing the Maximum Number of Snapshots

---

During scheduled or manual data replication, the DXi4700 receives a snapshot from the source system. A snapshot contains all of the data necessary to fully recover or failback a NAS share or VTL partition to the point in time when the snapshot was saved.

The DXi4700 can retain up to 32 snapshots for each replicated share or partition. Once the maximum number of snapshots have been saved, the oldest snapshot is deleted to make room for each new snapshot that is received.

To change the maximum number of received snapshots:

- Under **Source DXis**, in the **Maximum Snapshots** drop-down box, select the number of snapshots to retain for each replicated share or partition.
- The default value is 10. The maximum value is 32.

---

**Note:** Retaining more than the default number of snapshots will use additional disk space on the target DXi. This can cause the target DXi to fill up more quickly.

---

---

## OST

The **OST** page allows you to configure the DXi4700 to present its storage capacity as storage servers using OpenStorage (OST) technology. You can add one or more Logical Storage Units (LSUs) to a storage server. Storage servers and LSUs are compatible with backup

applications that support OST, such as Symantec NetBackup and Symantec Backup Exec. In addition, OST data can be duplicated (replicated) between DXi systems using NetBackup (see [Replicating OST Data](#) on page 270).

To authenticate OST devices on a media server, you must create OST user credentials. After you create the OST user credentials, enter them in the backup application to authenticate OST devices on the media server.

To access the **OST** page, click the **Configuration** menu, and then click the **OST** tab.

The **OST** page contains the following tabs:

- [Storage Servers](#)
- [LSU](#)
- [Manage Users](#)
- [Manage Remote Users](#)
- [Target IP Mapping](#)
- [DXi Accent](#)
- [OST Client Plug-In](#)

---

## Replicating OST Data

---

The DXi4700 can replicate (duplicate) OST data to another DXi using the following methods:

- **Optimized Duplication** - With optimized duplication, backup images on a storage server can be replicated to another storage server on a DXi that resides in the same NetBackup domain. The duplication occurs when it is initiated in NetBackup. With optimized duplication can specify up to two replication targets.
- **Automatic Image Replication (AIR)** - If you are using Symantec NetBackup 7.1 or higher, you can configure an LSU for Automatic Image Replication (see [Task Overview: Setting Up Automatic Image Replication](#) on page 271). If enabled, data on an LSU is automatically replicated to a remote LSU that resides on a DXi in a different NetBackup domain. The timing of the duplication, as well as the backup images that are duplicated, are determined by the storage lifecycle policies (SLPs) configured in NetBackup. With AIR, you can specify a single replication target.



- **Concurrent Optimized Duplication** - For both optimized duplication and Automatic Image Replication, you can optionally enable Concurrent Optimized Duplication. If enabled, as data is written to the storage server, it is simultaneously replicated to the target DXi. When optimized duplication or Automatic Image Replication subsequently occurs, the operation is more efficient because a portion of the required data has already been replicated to the target storage server.

It is important to remember that, with Automatic Image Replication, the local and remote LSUs reside in *different* NetBackup domains. This differs from optimized duplication, which occurs between two LSUs residing within *the same* NetBackup domain.

---

**Note:** For more information about configuring the DXi4700 for optimized duplication or Automatic Image Replication, see the *DXi-Series NetBackup and Backup Exec OST Configuration Guide (6-67079)*.

---

---

**Note:** For information about configuring NetBackup for optimized duplication or Automatic Image Replication (also referred to as duplicating images to a remote master server domain), see the *Symantec NetBackup Administrator's Guide*.

---

## Task Overview: Setting Up Automatic Image Replication

Setting up Automatic Image Replication (AIR) requires that you first configure the target (remote) DXi and then the source DXi (see [Figure 145](#)). In addition, you must create storage lifecycle policies (SLPs) in NetBackup that define when the automatic replication occurs and which backup images are duplicated.

To automatically replicate (duplicate) all data on an LSU to a remote LSU that resides on a DXi in a different NetBackup domain:

- 1 On the target system, add the source system to the list of allowed replication sources (see [Adding a Replication Source](#) on page 267).
- 2 On the target system, create a local OST user (see [Manage Users](#) on page 288).

---

---

**Caution:** On the target system, make sure to create a *local* user on the **Configuration > OST > Manage Users** page.

---

---

- 3 On the target system, create a storage server and LSU to receive the replicated OST data (see [Adding a Storage Server](#) on page 275).

---

**Note:** Quantum recommends selecting the **Available Capacity** option when creating an LSU for use with Automatic Image Replication.

---

- 4 On the source system, specify the target system that will receive the replicated data (see [Adding a Replication Target](#) on page 261).
- 5 On the source system, create a remote OST user with the same user name and password that you used in step 2 above (see [Manage Remote Users](#) on page 292).

---

---

**Caution:** On the source system, make sure to create a *remote* user on the **Configuration > OST > Manage Remote Users** page.

---


---

- 6 On the source system, create a storage server and LSU, and enable the LSU for Automatic Image Replication (see [Adding a Storage Server](#) on page 275).

For **Remote Storage Server** and **Remote LSU**, make sure to specify the storage server and LSU created in step 3 above. Also, for **Remote User**, make sure to select the remote user created in step 5 above.

- 7 Configure storage lifecycle policies in NetBackup to control when automatic replication of the LSU occurs (see the *Symantec NetBackup Administrator's Guide*).

Figure 145 Setting Up OST Automatic Image Replication

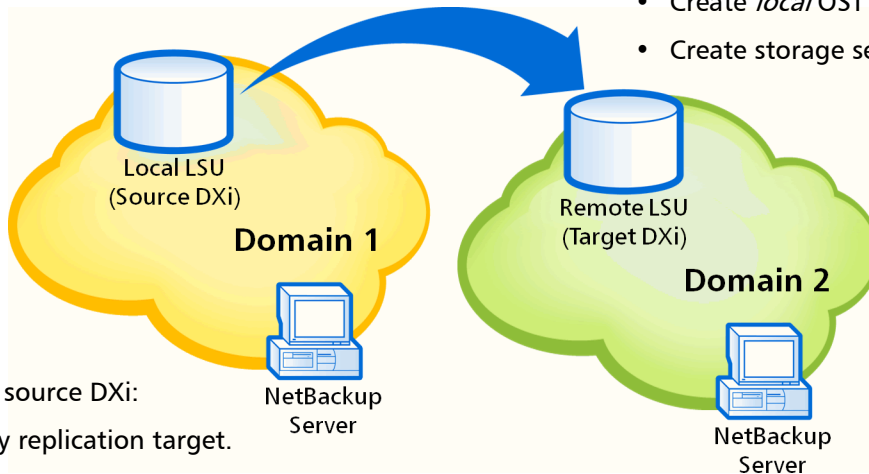


- 1 Configure target DXi:
  - Add allowed replication source.
  - Create *local*/OST user.
  - Create storage server and LSU.
- 2 Configure source DXi:
  - Specify replication target.
  - Create *remote* OST user.
  - Create storage server and LSU with AIR enabled.
- 3 Create storage lifecycle policies (SLPs) on the NetBackup server in each domain to control when duplication occurs and images are imported.

## Storage Servers

The **Storage Servers** page allows you to manage OST storage servers on the DXi4700. You can view information about existing storage servers, add or edit storage servers, and delete storage servers.

To access the **Storage Servers** page, on the **OST** page, click the **Storage Servers** tab (see [Figure 146](#)).

Figure 146 Storage Servers  
Page

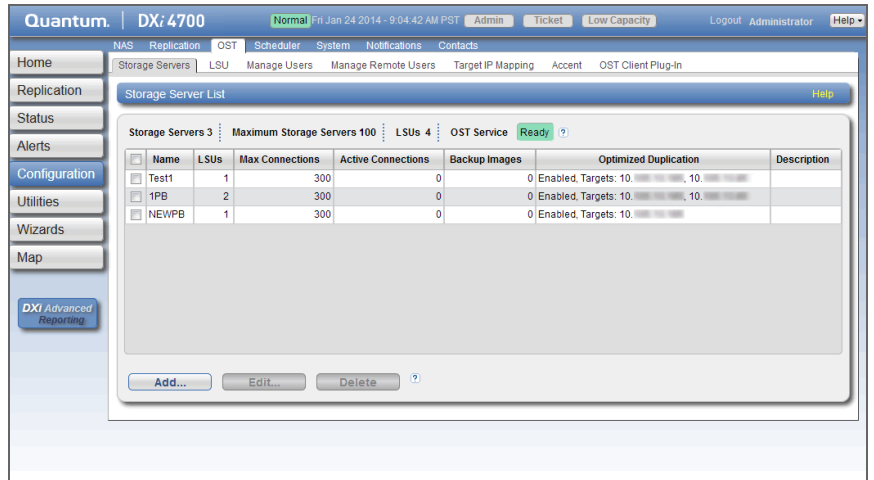

Use the **Storage Servers** page to perform the following tasks:

- View information about existing storage servers (see [Storage Server List](#) on page 274).
- Add a new storage server to the system (see [Adding a Storage Server](#) on page 275).
- Edit properties for an existing storage server (see [Editing a Storage Server](#) on page 279).
- Delete a storage server from the system (see [Deleting a Storage Server](#) on page 281).

### Storage Server List

The **Storage Server List** displays the following information for all storage servers on the DXi4700:

- **Storage Servers** - The number of storage servers that have been added to the system.
- **Maximum Storage Servers** - The maximum number of storage servers that can be added to the system.
- **LSUs** - The number of logical storage units (LSUs) that have been added to the system (see [LSU](#) on page 282).

- **OST Service** - The status of the OST service. OST settings can be configured in **Ready**, **Stopped**, or **Verifying** state. The OST server is available for backup only in **Ready** state.
- **Name** - The name of the storage server.
- **LSUs** - The number of LSUs that have been added to the storage server.
- **Max Connections** - The maximum number of connections allowed to the storage server.
- **Active Connections** - The number of currently active connections to the storage server.
- **Backup Images** - The number of backup images on the storage server.
- **Optimized Duplication** - The status of Concurrent Optimized Duplication for the storage server (**Enabled** or **Disabled**), as well as the configured targets (if any).
- **Description** - A brief description of the storage server (if available).

---

**Note:** Click a column heading to sort the rows in the table by that column. Click the column heading again to reverse the sort order.

---

---

**Note:** The connections of a storage server that are used equals the data streams plus one for each LSU polling. A backup job may generate more than one data stream if the data can be read in parallel. For example, a policy that is backing up A, B, C, and D drives of a Windows system can generate four data streams in parallel.

---

## Adding a Storage Server

Add a storage server to present the storage capacity of the DXi4700 as LSUs that are compatible with backup applications that support OST. You can add up to 100 storage servers. When adding a storage server, you must also add an LSU to the storage server. (For more information about LSUs, see [LSU](#) on page 282.)

---

**Note:** Data on storage servers is always deduplicated.

---

To add a storage server:

- 1 Click **Add**.

The **Add Storage Server** page displays (see [Figure 147](#)).

Figure 147 Add Storage Server Page

Optimized Duplication Target DXis	Status	Encryption
<input type="checkbox"/> 10	Ready	AES 256-bit
<input type="checkbox"/> 10	System Paused	AES 256-bit

Replication Target DXis
<input checked="" type="radio"/> 10
<input type="radio"/> 10

- 2 Under **Add Storage Server**, enter information about the storage server:

- **Name** - Enter the name of the storage server.

---

**Caution:** Do not use an underscore ( \_ ) in the name of the storage server.

---

---

**Note:** OST storage server names are not case-sensitive. For example, if you create a storage server named **ost1**, you cannot create another storage server named **OST1** because the system considers the names to be the same.

---

- **Description** - (Optional) Enter a brief description of the storage server.
  - **Max Connections** - Enter the maximum number of connections allowed to the storage server (3 to 65536).
- 

**Note:** Quantum recommends setting **Max Connections** to 300.

---

- **Enable Concurrent Optimized Duplication** - Select the check box to enable optimized duplication during OST ingest.

Concurrent Optimized Duplication is disabled by default. If enabled, as data is written to the storage server, it is simultaneously replicated to the target DXi. When optimized duplication or Automatic Image Replication subsequently occurs, the operation is more efficient because a portion of the required data has already been replicated to the target storage server.

---

**Note:** To configure the target DXi, see [Adding a Replication Target](#) on page 261.

---

---

**Note:** When Concurrent Optimized Duplication is enabled, all data on the storage server is duplicated, not just the specified images.

---

- 3 Select the check box for each optimized duplication target you want to duplicate the storage server to. When the storage server is duplicated, its data will be sent to all selected targets.
- 4 Under **Logical Storage Unit**, select the type of LSU to add to the new storage server:
  - **Available Capacity** - (Recommended for best performance) Select this option to add an LSU that uses the available capacity on the system.

You cannot add an available capacity LSU to a storage server that already contains an LSU. Also, if you add an available capacity LSU to a storage server, you cannot add additional LSUs to that same storage server.

---

**Note:** After you add an LSU that uses the **Available Capacity** option, you cannot change the LSU to use the **Specific Capacity** option. Instead, you must delete the LSU, then add a new LSU and choose the **Specific Capacity** option (see [Deleting an LSU](#) on page 288).

---

- **Specific Capacity** - Select this option to specify the physical capacity of the LSU, and then enter the following information.
  - **LSU Name** - Enter the name of the LSU.
  - **Physical Capacity** - Enter the physical capacity of the LSU (1 to 1048576 GB).

---

**Note:** Quantum recommends setting LSUs to maximum size (1048576 GB) because spanning them on a backup is not possible.

---

- 5 (Optional) In the **Description** box, enter a brief description of the LSU.
- 6 (Optional) Select the **Enable Automatic Image Replication** check box to automatically replicate (duplicate) data on the LSU to a remote LSU on another DXi.

Automatic Image Replication (AIR) is disabled by default. If enabled, data on an LSU is automatically replicated to a remote LSU that resides on a DXi in a different NetBackup domain. The timing of the duplication, as well as the backup images that are duplicated, are determined by the storage lifecycle policies (SLPs) configured in NetBackup.

OST AIR requires NetBackup 7.1 or higher. For information about configuring NetBackup for Automatic Image Replication, see the *DXi-Series NetBackup and Backup Exec OST Configuration Guide* (6-67079).

---

**Note:** You must configure at least one remote user before you can enable Automatic Image Replication (see [Manage Remote Users](#) on page 292).

---



- 7 If Automatic Image Replication is enabled, select the replication target you want to replicate images to. (You can select only a single target.) When images are replicated, data will be sent to the selected target.
- 8 If Automatic Image Replication is enabled, specify the following information:
  - **Remote Storage Server Name** - The name of the remote storage server (on the target DXi) to replicate data to. The source DXi and target DXi must reside in different NetBackup domains.

---

**Note:** To configure the target DXi, see [Adding a Replication Target](#) on page 261.

---

  - **Remote LSU Name** - The name of the LSU in the remote storage server that will receive the replicated data.
  - **Remote User** - The OST user credentials to use for authentication on the remote (target) DXi. The selected remote user *must* match a local user on the **Configuration > OST > Manage Users** page on the target DXi (see [Manage Users](#) on page 288).
- 9 Click **Apply**.

## Editing a Storage Server


Edit a storage server to change the description of the storage server or the maximum number of allowed connections.

To edit a storage server:

- 1 Select the storage server and click **Edit**.

The **Edit Storage Server** page displays (see [Figure 148](#)).

Figure 148 Edit Storage Server  
Page

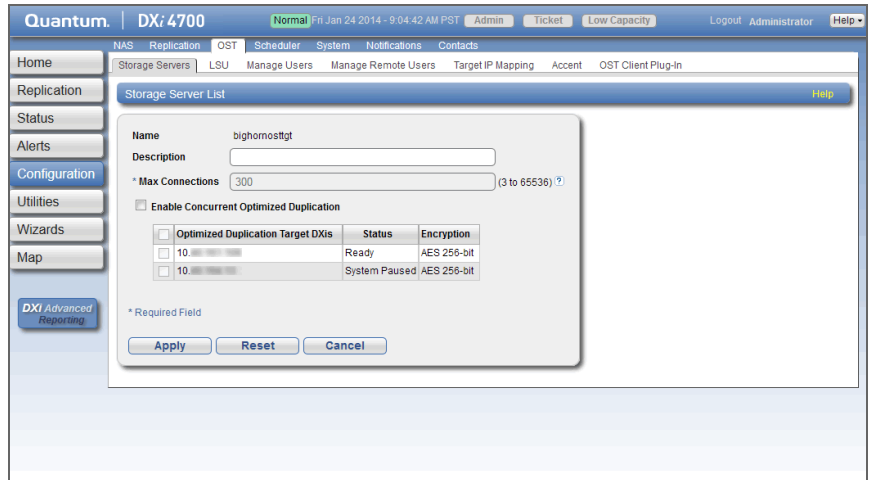

## 2 Enter information about the storage server:

**Note:** If you are editing a storage server, the **Name** option cannot be changed.

- **Description** - (Optional) Enter a brief description of the storage server.
- **Max Connections** - Enter the maximum number of connections allowed to the storage server (3 to 65536).

The maximum number of connections cannot be changed if the storage server has more than zero currently active connections. The number of active connections is displayed on the **OST** page (see [Storage Server List](#) on page 274).

**Note:** Quantum recommends setting **Max Connections** to 300.

- **Enable Concurrent Optimized Duplication** - Select the check box to enable optimized duplication during OST ingest.  
Concurrent Optimized Duplication is disabled by default. If enabled, as data is written to the storage server, it is simultaneously replicated to the target DXi. When optimized duplication or Automatic Image Replication subsequently occurs, the operation is more efficient because a portion of the

required data has already been replicated to the target storage server.

---

**Note:** To configure the target DXi, see [Adding a Replication Target](#) on page 261.

---

---

**Note:** When Concurrent Optimized Duplication is enabled, all data on the storage server is duplicated, not just the specified images.

---

- 3 Select the check box for each optimized duplication target you want to duplicate the storage server to. When the storage server is duplicated, its data will be sent to all selected targets.
- 4 Click **Apply**.

## Deleting a Storage Server

Delete a storage server if it is no longer needed. When you delete a storage server, all data stored on the storage server is lost.

---

**Note:** If you deleted the storage server from Symantec NetBackup or Symantec Backup Exec, you must wait several minutes before deleting the storage server from the DXi4700.

---

To delete a storage server:

- 1 Select the storage server in the **Storage Server List**.

You cannot delete a storage server if it has more than zero currently active connections. The number of active connections is displayed on the **OST** page (see [Storage Server List](#) on page 274). Also, you cannot delete a storage server if it contains LSUs. Before deleting the storage server, you must first delete any LSUs it contains (see [Deleting an LSU](#) on page 288).

---

**Note:** You can select multiple storage servers to delete at once.

---


- 2 Click **Delete**.

## LSU

The **LSU** page allows you to manage the logical storage units (LSUs) contained on OST storage servers on the DXi4700. You can view information about existing LSUs, add or edit LSUs, and delete LSUs.

To access the **LSU** page, on the **OST** page, click the **LSU** tab (see [Figure 149](#)).

Figure 149 LSU Page

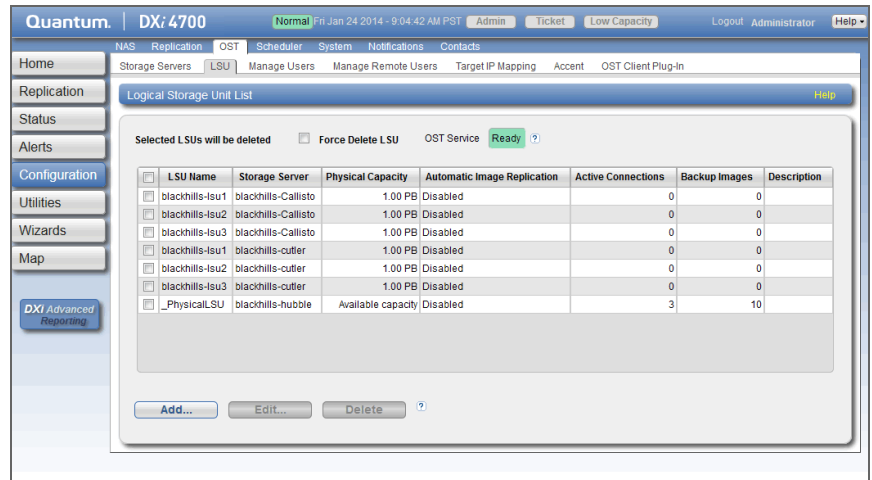

Use the **LSU** page to perform the following tasks:

- View information about existing LSUs (see [Logical Storage Unit List](#) on page 282).
- Add a new LSU to the system (see [Adding an LSU](#) on page 283).
- Edit properties for an existing LSU (see [Editing an LSU](#) on page 286).
- Delete an LSU from the system (see [Deleting an LSU](#) on page 288).

### Logical Storage Unit List

The **Logical Storage Unit List** displays the following information for all LSUs on the DXi4700:

- **OST Service** - The status of the OST service. OST settings can be configured in **Ready**, **Stopped**, or **Verifying** state. The OST server is available for backup only in **Ready** state.
- **LSU Name** - The name of the LSU.

- **Storage Server** - The storage server that contains the LSU.
- **Physical Capacity** - The physical storage capacity of the LSU.
- **Automatic Image Replication** - The status of Automatic Image Replication (AIR) for the LSU (**Enabled** or **Disabled**), as well as the configured targets (if any).

---

**Note:** To view details about the remote LSU if AIR is enabled, use the **Edit Logical Storage Unit** page (see [Editing an LSU](#) on page 286).

---

- **Active Connections** - The number of currently active connections to the LSU.
- **Backup Images** - The number of backup images on the LSU.
- **Description** - A brief description of the LSU (if available).

---

**Note:** Click a column heading to sort the rows in the table by that column. Click the column heading again to reverse the sort order.

---

## Adding an LSU

Add an LSU to a storage server to present the storage capacity of the DXi4700 as an LSU that is compatible with backup applications that support OST. You can add an LSU with a specific capacity, or you can add an LSU that uses the available capacity of the DXi4700.

---

**Note:** You must create a storage server before you can add an LSU (see [Adding a Storage Server](#) on page 275).


---

To add an LSU to a storage server:

- 1 Click **Add**.

The **Add Logical Storage Unit** page displays (see [Figure 150](#)).

Figure 150 Add Logical Storage Unit Page

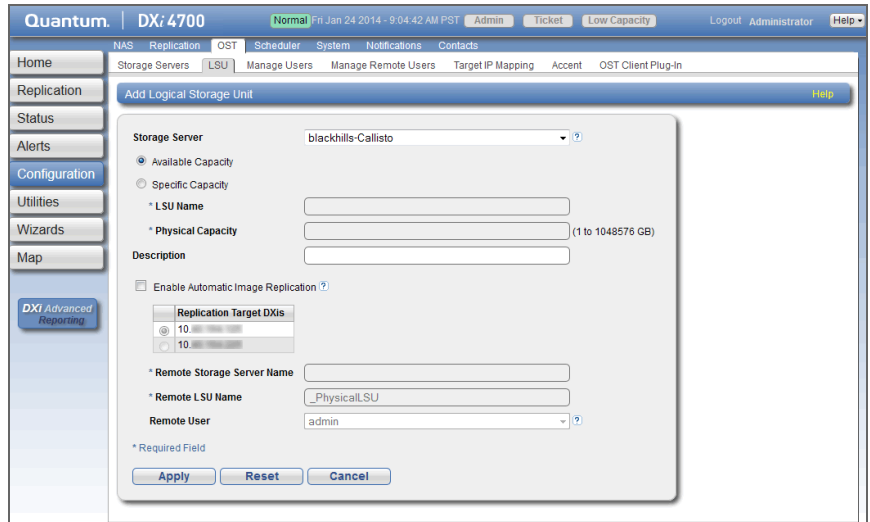

## 2 Enter information about the LSU.

- **Storage Server** - Select the storage server that will contain the new LSU.
- **Available Capacity** - (Recommended for best performance) Select this option to add an LSU that uses the available capacity on the system.

You cannot add an available capacity LSU to a storage server that already contains an LSU. Also, if you add an available capacity LSU to a storage server, you cannot add additional LSUs to that same storage server.

---

**Note:** After you add an LSU that uses the **Available Capacity** option, you cannot change the LSU to use the **Specific Capacity** option. Instead, you must delete the LSU, then add a new LSU and choose the **Specific Capacity** option (see [Deleting an LSU](#) on page 288).

---

- **Specific Capacity** - Select this option to specify the physical capacity of the LSU, and then enter the following information.
  - **LSU Name** - Enter the name of the LSU.
  - **Physical Capacity** - Enter the physical capacity of the LSU (1 to 1048576 GB).

---

**Note:** Quantum recommends setting LSUs to maximum size (1048576 GB) because spanning them on a backup is not possible.

---

- 3 (Optional) In the **Description** box, enter a brief description of the LSU.
- 4 (Optional) Select the **Enable Automatic Image Replication** check box to automatically replicate (duplicate) data on the LSU to a remote LSU on another DXi.

Automatic Image Replication (AIR) is disabled by default. If enabled, data on an LSU is automatically replicated to a remote LSU that resides on a DXi in a different NetBackup domain. The timing of the duplication, as well as the backup images that are duplicated, are determined by the storage lifecycle policies (SLPs) configured in NetBackup.

OST AIR requires NetBackup 7.1 or higher. For information about configuring NetBackup for Automatic Image Replication, see the *DXi-Series NetBackup and Backup Exec OST Configuration Guide* (6-67079).

---

**Note:** You must configure at least one remote user before you can enable Automatic Image Replication (see [Manage Remote Users](#) on page 292).

---

- 5 If Automatic Image Replication is enabled, select the replication target you want to replicate images to. (You can select only a single target.) When images are replicated, data will be sent to the selected target.
- 6 If Automatic Image Replication is enabled, specify the following information:
  - **Remote Storage Server Name** - The name of the remote storage server (on the target DXi) to replicate data to. The source DXi and target DXi must reside in different NetBackup domains.

---

**Note:** To configure the target DXi, see [Adding a Replication Target](#) on page 261.

---

- **Remote LSU Name** - The name of the LSU in the remote storage server that will receive the replicated data.
- **Remote User** - The OST user credentials to use for authentication on the remote (target) DXi. The selected remote user *must* match a local user on the **Configuration > OST > Manage Users** page on the target DXi (see [Manage Users](#) on page 288).

7 Click **Apply**.

## Editing an LSU

Edit an LSU to change its capacity, description, or automatic image replication settings.

To edit an LSU:

- 1 Select the LSU and click **Edit**.

The **Edit Logical Storage Unit** page displays (see [Figure 151](#)).

Figure 151 Edit Logical Storage Unit Page

The screenshot shows the 'Edit Logical Storage Unit' page in the Quantum DXi4700 web interface. The page title is 'Quantum DXi4700' and the user is logged in as 'Administrator'. The page contains a form with the following fields and options:

- Name:** blackhills-lsu1
- Storage Server Name:** blackhills-Callisto
- \* Physical Capacity ?**: 1048576 (1 to 1048576 GB)
- Description:** (empty field)
- Enable Automatic Image Replication ?**:
- Replication Target DXIs:** Radio buttons for 10. (selected) and 10. (unselected)
- \* Remote Storage Server Name:** (empty field)
- \* Remote LSU Name:** \_PhysicalLSU
- Remote User:** admin
- \* Required Field** (indicated by an asterisk)
- Buttons:** Apply, Reset, Cancel

- 2 Enter information about the LSU:

---

**Note:** If you are editing an LSU, the **Name** option cannot be changed.

---



- **Physical Capacity** - (Specific capacity LSUs only) Enter the physical capacity of the LSU (1 to 1048576 GB).

The physical capacity cannot be changed if the LSU has more than zero currently active connections. The number of active connections is displayed on the **LSU** page (see [Logical Storage Unit List](#) on page 282).

- **Description** - (Optional) Enter a brief description of the LSU.

- 3 (Optional) Select the **Enable Automatic Image Replication** check box to automatically replicate (duplicate) data on the LSU to a remote LSU on another DXi.

Automatic Image Replication (AIR) is disabled by default. If enabled, data on an LSU is automatically replicated to a remote LSU that resides on a DXi in a different NetBackup domain. The timing of the duplication, as well as the backup images that are duplicated, are determined by the storage lifecycle policies (SLPs) configured in NetBackup.

OST AIR requires NetBackup 7.1 or higher. For information about configuring NetBackup for Automatic Image Replication, see the *DXi-Series NetBackup and Backup Exec OST Configuration Guide* (6-67079).

---

**Note:** You must configure at least one remote user before you can enable Automatic Image Replication (see [Manage Remote Users](#) on page 292).

---

- 4 If Automatic Image Replication is enabled, select the replication target you want to replicate images to. (You can select only a single target.) When images are replicated, data will be sent to the selected target.
- 5 If Automatic Image Replication is enabled, specify the following information:
  - **Remote Storage Server Name** - The name of the remote storage server (on the target DXi) to replicate data to. The source DXi and target DXi must reside in different NetBackup domains.

---

**Note:** To configure the target DXi, see [Adding a Replication Target](#) on page 261.

---

- **Remote LSU Name** - The name of the LSU in the remote storage server that will receive the replicated data.
- **Remote User** - The OST user credentials to use for authentication on the remote (target) DXi. The selected remote user *must* match a local user on the **Configuration > OST > Manage Users** page on the target DXi (see [Manage Users](#) on page 288).

6 Click **Apply**.

## Deleting an LSU

Delete an LSU if it is no longer needed. When you delete an LSU, all data stored on the LSU is lost.

---

**Note:** If you deleted the LSU from Symantec NetBackup or Symantec Backup Exec, you must wait several minutes before deleting the LSU from the DXi4700.

---

To delete an LSU:

1 Select the LSU in the **Logical Storage Unit List**.

You cannot delete an LSU if it has more than zero currently active connections. The number of active connections is displayed on the **LSU** page (see [Logical Storage Unit List](#) on page 282).

---

**Note:** You can select multiple LSUs to delete at once.

---

2 (Optional) Select the **Force Delete LSU** check box to delete LSUs that are not empty.

Normally, you cannot delete an LSU if it contains existing backup images. If for some reason you cannot remove files from the LSU, selecting the **Force Delete LSU** check box allows you to delete the LSU even though it is not empty.

3 Click **Delete**.

---

## Manage Users


---

The **Manage Users** page allows you to create and manage local authenticated users for use with OST. After you create the OST user credentials, enter them in the backup application to authenticate OST devices on the media server. When using OST Automatic Image

Replication (AIR), the remote user credentials specified on the source DXi must match the local user credentials on the target (remote) DXi.

To access the **Manage Users** page, on the **OST** page, click the **Manage Users** tab (see [Figure 152](#)).

Figure 152 Manage Users Page

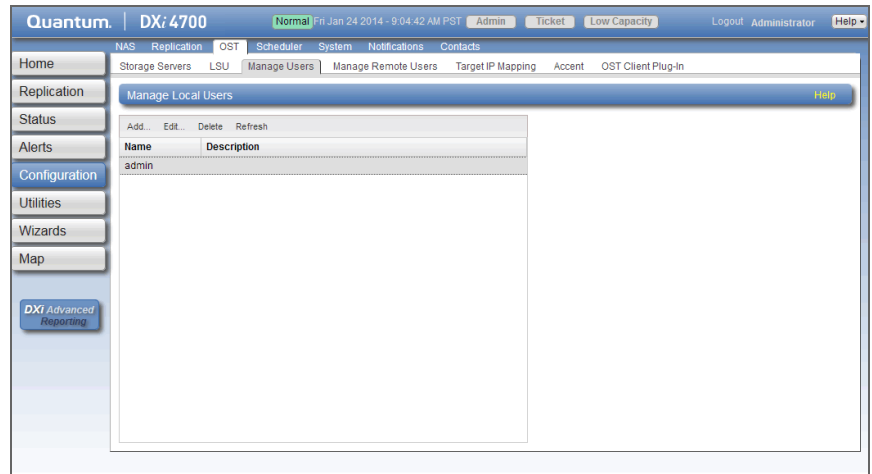

Use the **Manage Users** page to perform the following tasks:

- View information about local authenticated users (see [Manage Local Users List](#) on page 289).
- Add a local authenticated user (see [Adding an Authenticated User](#) on page 290).
- Edit a local authenticated user (see [Editing an Authenticated User](#) on page 290).
- Delete a local authenticated user (see [Deleting an Authenticated User](#) on page 291).

### Manage Local Users List

The **Manage Local Users** list displays the following information for all local authenticated users:

- **Name** - The name of the local authenticated user.
- **Description** - A brief description of the local authenticated user (if available).

---

**Note:** To update the list with the latest information, click **Refresh**.

---

## Adding an Authenticated User

Add an authenticated user to create local OST user credentials. The OST user credentials are required to authenticate OST devices on a media server, or to enable the DXi to receive duplicated data using OST AIR.


To add an authenticated user:

- 1 Click **Add**.

The **Add User Credential** window displays (see [Figure 153](#)).

---

Figure 153 Add User  
Credential

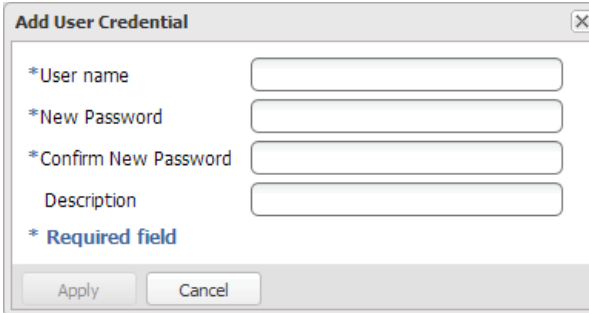

The screenshot shows a dialog box titled "Add User Credential" with a close button in the top right corner. It contains four text input fields: "\*User name", "\*New Password", "\*Confirm New Password", and "Description". Below the fields is a legend for "\* Required field". At the bottom are "Apply" and "Cancel" buttons.

- 2 Enter information about the authenticated user:

- **User name** - Enter the name of the authenticated user.
- **New Password** - Enter the password for the authenticated user.
- **Confirm New Password** - Enter the password again to confirm it.
- **Description** - (Optional) Enter a brief description of the authenticated user.

- 3 Click **Apply**.

## Editing an Authenticated User


Edit an authenticated user to change the user's password or description.

To edit an authenticated user:

- 1 Select the user and click **Edit**.

The **Edit User Credentials** window displays (see [Figure 154](#)).

Figure 154 Edit User Credentials

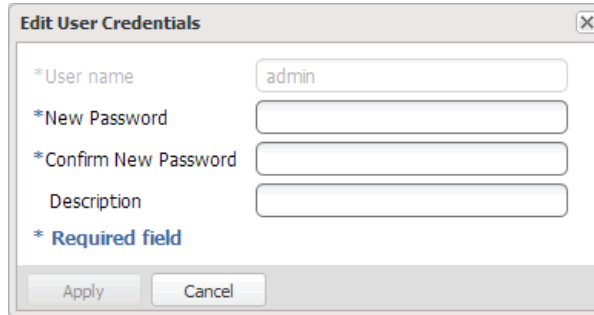

The screenshot shows a dialog box titled "Edit User Credentials". It contains the following fields and controls:

- \*User name: Text input field containing "admin".
- \*New Password: Text input field.
- \*Confirm New Password: Text input field.
- Description: Text input field.
- \* Required field: Legend for the asterisked fields.
- Buttons: "Apply" and "Cancel".

- 2 Enter information about the authenticated user:

---

**Note:** If you are editing an authenticated user, you cannot change the **User name**.

---

- **New Password** - Enter the password for the authenticated user.
- **Confirm New Password** - Enter the password again to confirm it.
- **Description** - (Optional) Enter a brief description of the authenticated user.

- 3 Click **Apply**.

## Deleting an Authenticated User

Delete an authenticated user if the OST user credentials are no longer needed to authenticate OST devices on a media server.

To delete an authenticated user, select the user and click **Delete**.

---

**Note:** You can select multiple users to delete at once.


---

## Manage Remote Users

The **Manage Remote Users** page allows you to create and manage remote users for use with OST Automatic Image Replication (AIR). You must configure at least one remote user before you can enable Automatic Image Replication for an LSU (see [Adding an LSU](#) on page 283). When using OST Automatic Image Replication (AIR), the remote user credentials specified on the source DXi must match the local user credentials on the target (remote) DXi.

To access the **Manage Remote Users** page, on the **OST** page, click the **Manage Remote Users** tab (see [Figure 155](#)).

Figure 155 Manage Remote Users Page

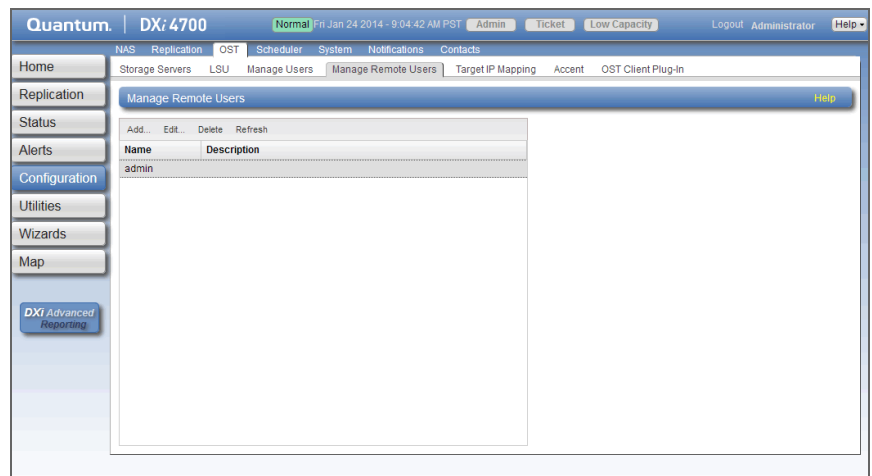

Use the **Manage Users** page to perform the following tasks:

- View information about remote users (see [Manage Remote Users List](#) on page 292).
- Add a remote user (see [Adding a Remote User](#) on page 293).
- Edit a remote user (see [Editing a Remote User](#) on page 294).
- Delete a remote user (see [Deleting a Remote User](#) on page 294).

### Manage Remote Users List

The **Manage Remote Users** list displays the following information for all remote users:

- **Name** - The name of the remote user.

- **Description** - A brief description of the remote user (if available).

---

**Note:** To update the list with the latest information, click **Refresh**.

---

## Adding a Remote User

Add a remote user to create OST user credentials for use with OST AIR. When you enable Automatic Image Replication for an LSU, you specify a remote user. The remote user credentials on the source DXi must match the local user credentials on the target (remote) DXi.


To add a remote user:

- 1 Click **Add**.

The **Add Remote AIR Credential** window displays (see [Figure 156](#)).

---

Figure 156 Add Remote AIR Credential

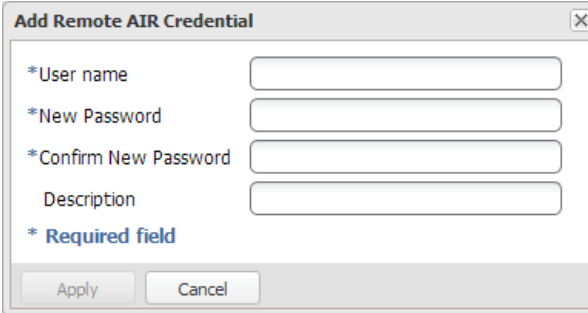

The screenshot shows a dialog box titled "Add Remote AIR Credential" with a close button in the top right corner. The dialog contains the following fields and labels:

- \*User name (required field)
- \*New Password (required field)
- \*Confirm New Password (required field)
- Description (optional field)

Below the fields is a legend: **\* Required field**. At the bottom of the dialog are two buttons: "Apply" and "Cancel".

- 2 Enter information about the remote user:

- **User name** - Enter the name of the remote user.
- **New Password** - Enter the password for the remote user.
- **Confirm New Password** - Enter the password again to confirm it.
- **Description** - (Optional) Enter a brief description of the remote user.

- 3 Click **Apply**.

## Editing a Remote User


Edit a remote user to change the user's password or description.

To edit a remote user:

- 1 Select the user and click **Edit**.

The **Edit Remote Credentials** window displays (see [Figure 157](#)).

Figure 157 Edit Remote  
Credentials

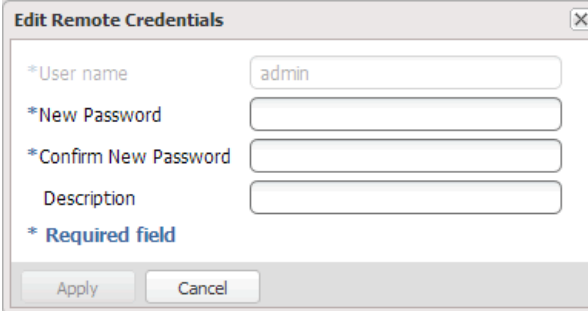

The screenshot shows a dialog box titled "Edit Remote Credentials" with a close button in the top right corner. It contains the following fields and controls:

- \*User name: A text box containing the value "admin".
- \*New Password: An empty password field.
- \*Confirm New Password: An empty password field.
- Description: An empty text box.
- \* Required field: A legend indicating that fields with an asterisk are required.
- Buttons: "Apply" and "Cancel" buttons at the bottom.

- 2 Enter information about the remote user:

---

**Note:** If you are editing a remote user, you cannot change the **User name**.

---

- **New Password** - Enter the password for the remote user.
- **Confirm New Password** - Enter the password again to confirm it.
- **Description** - (Optional) Enter a brief description of the remote user.

- 3 Click **Apply**.

## Deleting a Remote User

Delete a remote user if the OST user credentials are no longer needed to authenticate an LSU for Automatic Image Replication.

To delete a remote user, select the user and click **Delete**.



---

**Note:** You can select multiple users to delete at once.

---

---

## Target IP Mapping

---

The **Target IP Mapping** page allows you to map a target data IP address to route all network traffic sent to the data IP address to the specified replication IP address instead. This can be necessary if the target DXi is configured with different network interfaces (and therefore different IP addresses) for data and replication traffic (see [Network](#) on page 317).

Generally, OST traffic is routed to the data network segment. However, the OST Automatic Image Replication (AIR) and Concurrent Optimized Duplication features use the replication network segment to transmit data to the target system. (Optimized duplication can optionally use the replication channel.) When a data IP address is mapped to a replication IP address, OST traffic that is sent to one of the IP addresses is routed to the other IP address as necessary.

---

**Note:** You must add target IP mapping information if you are performing optimized duplication on a segmented network and replication is not configured between the source DXi and target DXi.

---


---

**Note:** Quantum does not recommend mapping multiple data IP addresses to a single replication IP address. If you have mapped multiple data IP addresses and the routing is not working, try removing the additional data IP addresses, and map only a single data IP address.

---

To access the **Target IP Mapping** page, on the **OST** page, click the **Target IP Mapping** tab (see [Figure 158](#)).

Figure 158 Target IP Mapping  
Page

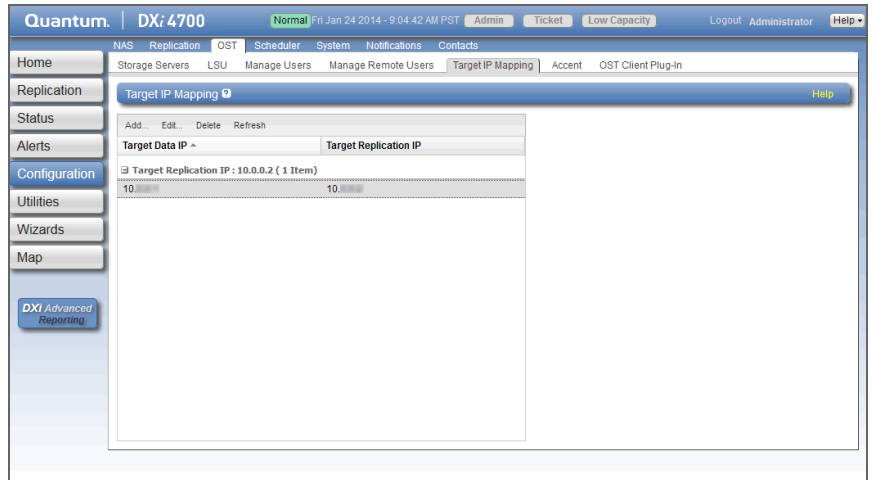

Use the **Target IP Mapping** page to perform the following tasks:

- View information about mapped data and replication IP addresses (see [Target IP Mapping List](#) on page 296).
- Map a target data IP address to a replication IP address (see [Mapping a Target IP Address](#) on page 297).
- Edit the mapping for a target data IP address (see [Editing a Mapped IP Address](#) on page 297).
- Delete the mapping for a target data IP address (see [Deleting a Mapped IP Address](#) on page 298).

### Target IP Mapping List

The **Target IP Mapping** list displays the following information for all mapped IP addresses:

- **Target Data IP** - The mapped target data IP address.
- **Target Replication IP** - The replication IP address to which the data IP address is mapped.

By default, items in the list are grouped by target replication IP address. To turn off grouping, click the arrow to the right of a column heading and clear the **Show in groups** check box.

---

**Note:** To update the list with the latest information, click **Refresh**.

---

## Mapping a Target IP Address


Add mapping for a target data IP address to route all network traffic sent to the address to the specified replication IP address instead.

To map a target IP address:

- 1 Click **Add**.

The **Add Target Data IP Mapping** window displays (see [Figure 159](#)).

Figure 159 Add Target Data IP Mapping

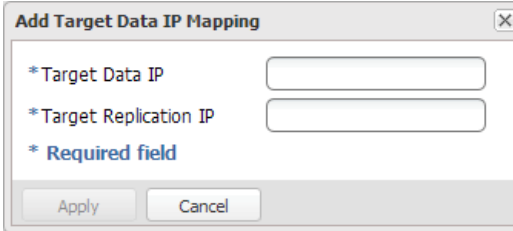

The screenshot shows a dialog box titled "Add Target Data IP Mapping" with a close button (X) in the top right corner. Inside the dialog, there are two text input fields. The first is labeled "\* Target Data IP" and the second is labeled "\* Target Replication IP". Below these fields, the text "\* Required field" is displayed. At the bottom of the dialog, there are two buttons: "Apply" and "Cancel".

- 2 Enter information about the mapping:
  - **Target Data IP** - The target data IP address to map.
  - **Target Replication IP** - The replication IP address to map the data IP address to.
- 3 Click **Apply**.

## Editing a Mapped IP Address


Edit a mapped IP address to route traffic sent to the target data IP address to a different replication IP address.

To edit a mapped IP address:

- 1 Select the mapped IP address and click **Edit**.

The **Edit Target Data IP Mapping** window displays (see [Figure 160](#)).

Figure 160 Edit Target Data IP Mapping

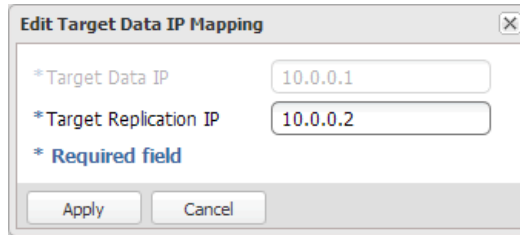

- 2 In the **Target Replication IP** box, enter the replication IP address to map the data IP address to.

---

**Note:** If you are editing a mapped IP address, you cannot change the target data IP address.

---

- 3 Click **Apply**.

### Deleting a Mapped IP Address

Delete a mapped IP address if traffic sent to the target data IP address no longer needs to be routed to a replication IP address

To delete a mapped IP address, select the IP address and click **Delete**.

---

**Note:** You can select multiple mapped IP addresses to delete at once.

---

---


## DXi Accent

---

Use the **Accent** page to enable or disable DXi Accent. Quantum's DXi Accent software accelerates backups and reduces network bandwidth requirements by distributing deduplication between the backup server and the DXi. OST data sent from the media server to the DXi can be encrypted using AES (Advanced Encryption Standard) encryption methods.

To access the **Accent** page, on the **OST** page, click the **Accent** tab (see [Figure 161](#)).

Figure 161 Accent Page

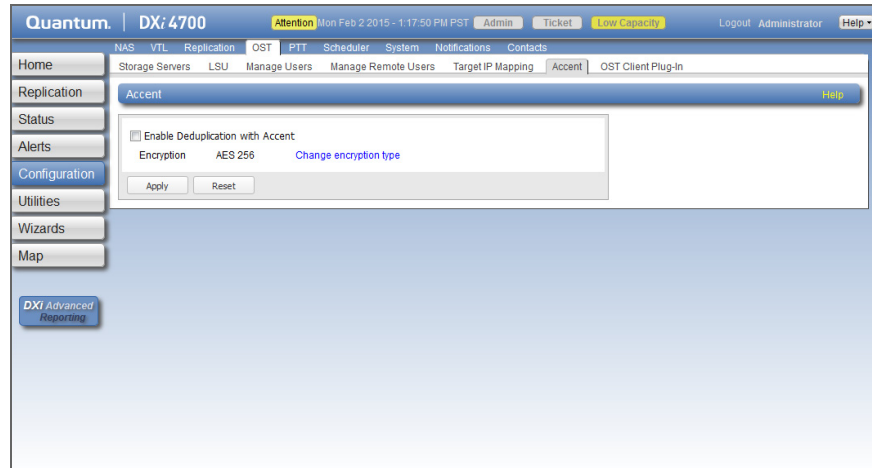

To configure DXi Accent:

- 1 To enable DXi Accent, select the **Enable Deduplication with Accent** check box.

Or to disable DXi Accent, clear the **Enable Deduplication with Accent** check box.

---

**Note:** You cannot use DXi Accent if you are currently using NetBackup Accelerator or Optimized Synthetic Backups. If you are using Accelerator, please make sure that Accent is not enabled. For more information on using NetBackup Accelerator, see the *DXi-Series Configuration and Best Practices Guide for NetBackup from Symantec* (6-67850).

---

- 2 Click **Apply**.

---

**Note:** Click the **Change Encryption Type** link to change the OST data encryption type (see [Data Encryption](#) on page 341).

---



---

**Note:** To use DXi Accent, you must install the Quantum OST Client Plug-in on the media server. For information about installing the OST Plug-in and using DXi Accent, see the *DXi-Series NetBackup and Backup Exec OST Configuration Guide* (6-67079).

---

---

## OST Client Plug-In

---

Use the **OST Client Plug-In** page to download the Quantum OST Plug-in.

OST (OpenStorage) technology allows Symantec NetBackup and Backup Exec to seamlessly integrate with the DXi4700. Using OST, NetBackup and Backup Exec can manage backups through the DXi4700 and can take advantage of the system's capabilities, such as data deduplication and replication. To use OST, you must first download the OST Plug-in and install it on the NetBackup or Backup Exec media server.

To download the OST Plug-in, click **Client Plug-in Download**. On the download page, download the correct OST Plug-in for your backup application and operating system. Also on the download page, click **Installation Instructions**, to download the *OST Plug-in Installation Instructions*. Follow the included instructions to install the OST Plug-in on your media server.

---

**Note:** For information about configuring and using OST with the DXi4700, see the *DXi-Series NetBackup and Backup Exec OST Configuration Guide* (6-67079).

---

---

## PTT

The **PTT** page allows you to configure the path to tape (PTT) feature of the DXi4700. There are two types of path to tape:

---

**Note:** Path to tape is available only on the DXi4700 Multi-Protocol configuration.

---

- Backup application specific path to tape allows you to move data from the DXi to physical tape cartridges in an attached physical tape library using an NDMP (Network Data Management Protocol) connection. The DXi supports NDMP V4.
- OST path to tape (also called Direct To Tape) allows you to use Symantec NetBackup to copy LSUs from a storage server on the DXi to a physical tape library.

For information about working with storage servers and LSUs, see [OST](#) on page 269. For detailed information about configuring and using OST path to tape, see the *DXi-Series NetBackup and Backup Exec OST Configuration Guide (6-67079)*.

---

**Note:** OST path to tape options can only be configured when the **OST** and **Backup Application Specific** licenses have been enabled (see [License Keys](#) on page 392).

---

To access the **PTT** page, click the **Configuration** menu, and then click the **PTT** tab.

The **PTT** page contains the following tabs:

- [Physical Device Discovery](#)
- [Backup Application Specific](#)

---

## Physical Device Discovery


---

The **Physical Device Discovery** page allows you to discover attached physical tape libraries and tape drives. After you discover the libraries and drives, you can use them for path to tape data movement.

To access the **Physical Device Discovery** page, on the **PTT** page, click the **Physical Device Discovery** tab (see [Figure 162](#)).

---

Figure 162 Physical Device Discovery Page

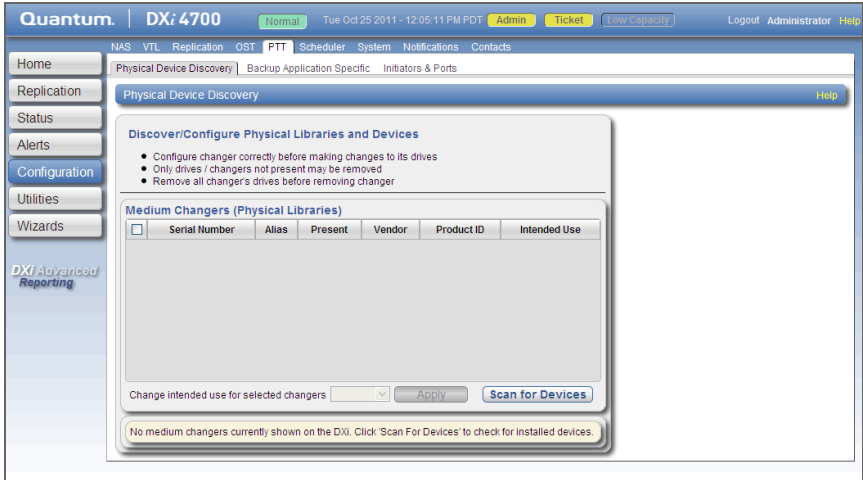

The **Physical Device Discovery** page displays the following information for all discovered physical libraries and tape drives:

- **Last scan time** - The date and time a scan for attached libraries was last performed.
- **Serial Number** - The serial number of the library or drive.
- **Vendor** - The vendor of the library or drive.
- **Product ID** - The product ID (name) of the library or drive.
- **State** - The state of the library or drive (**Enabled** or **Disabled**).
- **Drive Type** - (Tape drives only) The drive type of the drive.
- Use the **Physical Device Discovery** page to perform the following tasks: To discover an attached physical tape library and tape drives, click **Scan**. Attached physical libraries display in the list.
- To enable or disable a physical library, select it in the list, and then click **Enable** or **Disable**. (You can also right-click a library to enable or disable it.)

---

**Note:** To use a physical library, it must be enabled. If you enable or disable a library, all tape drives in the library are also enabled or disabled.

---

- To view the drives in an attached library, select the library in the list. All drives in the selected library display below.
- To enable or disable tape drives, select one or more drives in the list, and then click **Enable** or **Disable**. (You can also right-click a drive to enable or disable it.)

---

**Note:** To use a tape drive, it must be enabled. To enable a drive, the parent library must be enabled.

---

- To remove a physical library from the list, first disconnect the Fibre Channel cables that connect the library to the DXi4700, and then click **Scan**.
- To update the libraries or drives list with the latest information, click **Refresh**.



---

## Backup Application Specific

---

The **Backup Application Specific** page allows you to create and manage authenticated users for use with the path to tape capability.

The following applications are supported for backup application specific path to tape:

- Symantec NetBackup
- Symantec Backup Exec
- EMC NetWorker

---

**Note:** EMC NetWorker 8.1 and later do not support Backup Application Specific Path to Tape.

---

- Oracle Secure BackupASG-Time Navigator

---

**Note:** You must dedicate a partition within the DXi4700 for use with NetBackup Direct to Tape (Path to Tape). The partition cannot be shared with another backup application.

---


---

**Caution:** The virtual media changer and tape drives *must* be assigned to the backup server (on the SAN) being used for Backup Application Specific path to tape functionality.

---

To access the **Backup Application Specific** page, on the **PTT** page, click the **Backup Application Specific** tab (see [Figure 163](#)).

Figure 163 Backup Application Specific Page

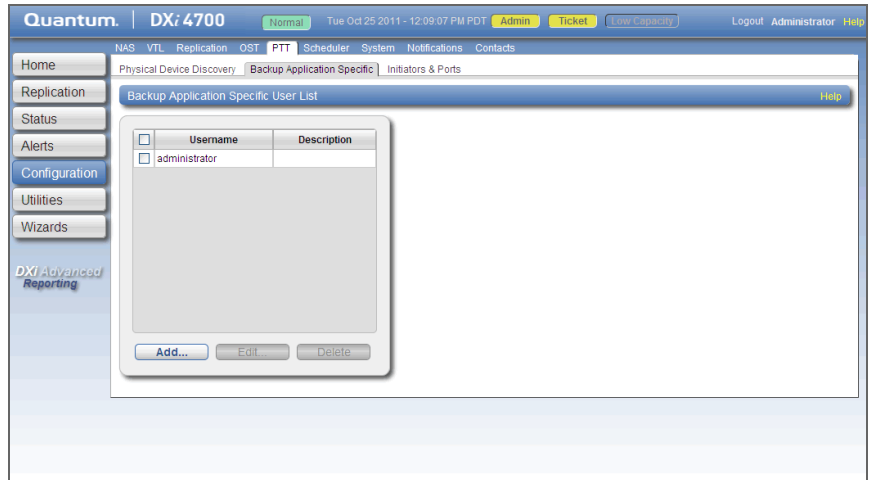

Use the **Backup Application Specific** page to perform the following tasks:

- View information about backup application specific users (see [Backup Application Specific User List](#) on page 304).
- Add a backup application specific user (see [Adding a Backup Application Specific User](#) on page 305).
- Edit a backup application specific user (see [Editing a Backup Application Specific User](#) on page 305).
- Delete a backup application specific user (see [Deleting a Backup Application Specific User](#) on page 306).

### Backup Application Specific User List

The **Backup Application Specific User** section displays the following information for all backup application specific users:

- **Username** - The name of the backup application specific user.
- **Description** - A brief description of the backup application specific user (if available).

---

**Note:** To update the list with the latest information, click **Refresh**.

---

## Adding a Backup Application Specific User


Add a backup application specific user to create user credentials. The user credentials are required to authenticate devices on a media server.

To add a backup application specific user:

- 1 Click **Add**.

The **Add Backup Application Specific User** page displays (see [Figure 164](#)).

Figure 164 Add Backup Application Specific User Page

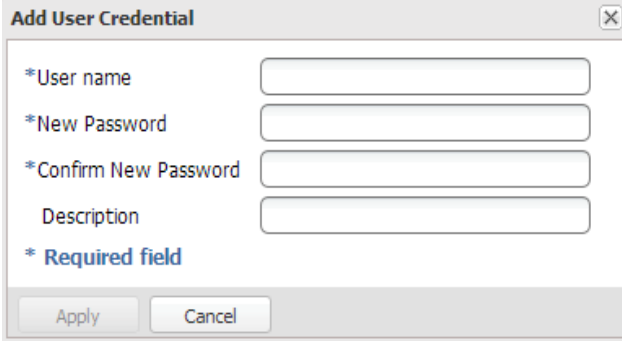

The screenshot shows a dialog box titled "Add User Credential" with a close button in the top right corner. It contains four text input fields: "\*User name", "\*New Password", "\*Confirm New Password", and "Description". Below the fields is a legend indicating "\* Required field". At the bottom are "Apply" and "Cancel" buttons.

- 2 Enter information about the backup application specific user:
  - **Username** - Enter the name of the backup application specific user.
  - **New Password** - Enter the password for the backup application specific user.
  - **Confirm Password** - Enter the password again to confirm it.
  - **Description** - (Optional) Enter a brief description of the backup application specific user.
- 3 Click **Apply**.

## Editing a Backup Application Specific User


Edit a backup application specific user to change the user's password or description.

To edit a backup application specific user:

- 1 Select the user and click **Edit**.

The **Edit Backup Application Specific User** page displays (see [Figure 165](#)).

Figure 165 Edit Backup  
Application Specific User Page

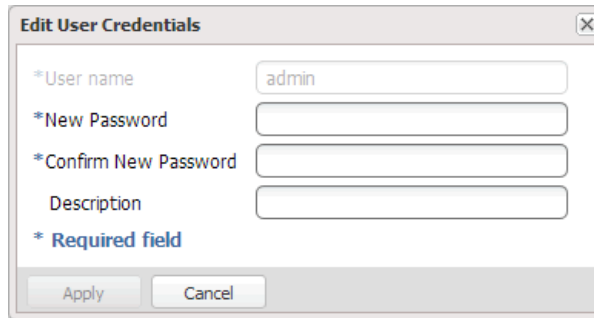

The screenshot shows a dialog box titled "Edit User Credentials". It contains the following fields and controls:

- \*User name: Input field containing "admin"
- \*New Password: Empty input field
- \*Confirm New Password: Empty input field
- Description: Empty input field
- \* Required field: Legend for the asterisked fields
- Apply: Button
- Cancel: Button

2 Enter information about the backup application specific user:

---

**Note:** If you are editing a backup application specific user, you cannot change the **Username**.

---

- **Username** - (Optional) Select a different backup application specific user to edit.
- **New Password** - Enter the password for the backup application specific user.
- **Confirm New Password** - Enter the password again to confirm it.
- **Description** - (Optional) Enter a brief description of the backup application specific user.

3 Click **Apply**.

### Deleting a Backup Application Specific User

Delete a backup application specific user if the user credentials are no longer needed to authenticate devices on a media server.

To delete a backup application specific user, select the user and click **Delete**.

---

**Note:** You can select multiple users to delete at once.


---

# Scheduler

The **Scheduler** page allows you to manage scheduled events on the DXi4700, including replication and replication throttling, e-mail reports, healthchecks, and space reclamation. With schedules, you specify when certain events should occur, and the system automatically performs those events at the specified time. Events can be one-time only, or they can reoccur at defined intervals.

To access the **Scheduler** page, click the **Configuration** menu, and then click the **Scheduler** tab (see [Figure 166](#)).

Figure 166 Scheduler Page

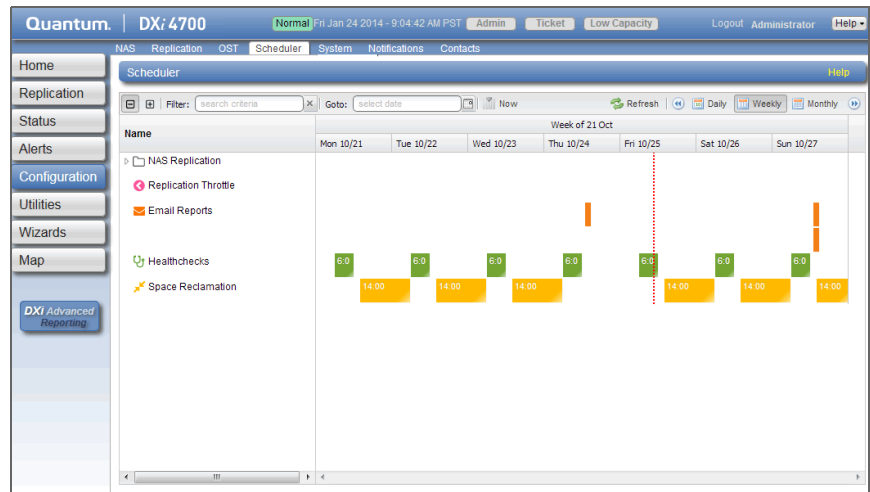

Use the **Scheduler** page to perform the following tasks:

- View currently scheduled events (see [Viewing Scheduled Events](#) on page 308).
- Add a new scheduled event or edit an existing event (see ).
- Configure NAS shares or VTL partitions for scheduled replication (see [Scheduling a Share or Partition for Replication](#) on page 311).
- Configure replication throttle events (see [Scheduling Replication Throttling](#) on page 312).

- Configure the DXi4700 to send status and configuration reports (see [Scheduling E-mail Reports](#) on page 314).
- Configure the DXi4700 to run healthchecks (see [Scheduling Healthchecks](#) on page 314).
- Configure the DXi4700 to run space reclamation (see [Scheduling Space Reclamation](#) on page 315).
- Specify when and how often an event reoccurs (see [Setting Recurrence for a Scheduled Event](#) on page 316).
- Remove an event occurrence or event series from the schedule (see [Deleting a Scheduled Event](#) on page 316).

## Viewing Scheduled Events

The **Scheduler** page displays all replication, replication throttle, e-mail report, healthchecks, and space reclamation events scheduled to occur in a selected time period. To view scheduled replication events for NAS shares or VTL partitions, click the arrow next to the folder to display all shares or partitions.

Use the following toolbar controls to adjust the schedule view (see [Figure 166](#)):


- To show or hide all shares or partitions, click the plus [ + ] or minus [ - ] icons.
- To filter shares or partitions based on name, begin typing in the **Filter** box. Click the x to clear the filter.
- To view the schedule for a specific day, select it in the **Goto** pop-up calendar.
- To view the schedule for today, click **Now**.
- To update the schedule view with the latest data, click the **Refresh** icon.
- To move the view backward or forward in time, click the arrows.
- To change the number of days displayed at a time, click **Daily**, **Weekly**, or **Monthly**.

---

**Note:** The thickness of the bars on the schedule view varies based on the type of event and the selected time frame. Healthcheck events have an estimated span of 6 hours. Space Reclamation events have an estimated span of 16 hours. All other open-ended events have a default span of 2 hours.

---

Figure 167 Scheduler Toolbar

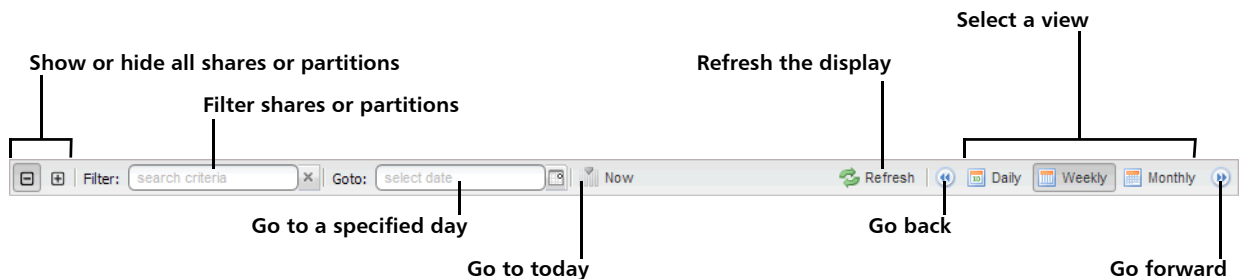

## Adding or Editing a Scheduled Event

To add or edit a scheduled event:

- 1 On the **Scheduler** page, adjust the schedule view to display the time period when the event will occur (see [Viewing Scheduled Events](#) on page 308). Then do one of the following actions (see [Figure 168](#)):
  - To add a new event, click and drag on the schedule in the row for the type of event to add. A new event is added where you dragged the cursor.

To schedule replication for NAS shares or VTL partitions, click the arrow next to the folder to display all shares or partitions. Then click and drag in the row for the share or partition to schedule.

---

**Note:** The new event must begin after the current time, which is indicated by the dotted vertical line.

---

- To edit an existing event, double-click the event. If the event is recurring, select **Open this occurrence** to edit only the one instance of the event, or select **Open the series** to edit the entire recurring series, and then click **OK**.

---

**Note:** You cannot edit an event that occurred in the past.


---

---

**Note:** You can also right-click an existing event to see options for editing an event.

---

Figure 168 Adding a New Event

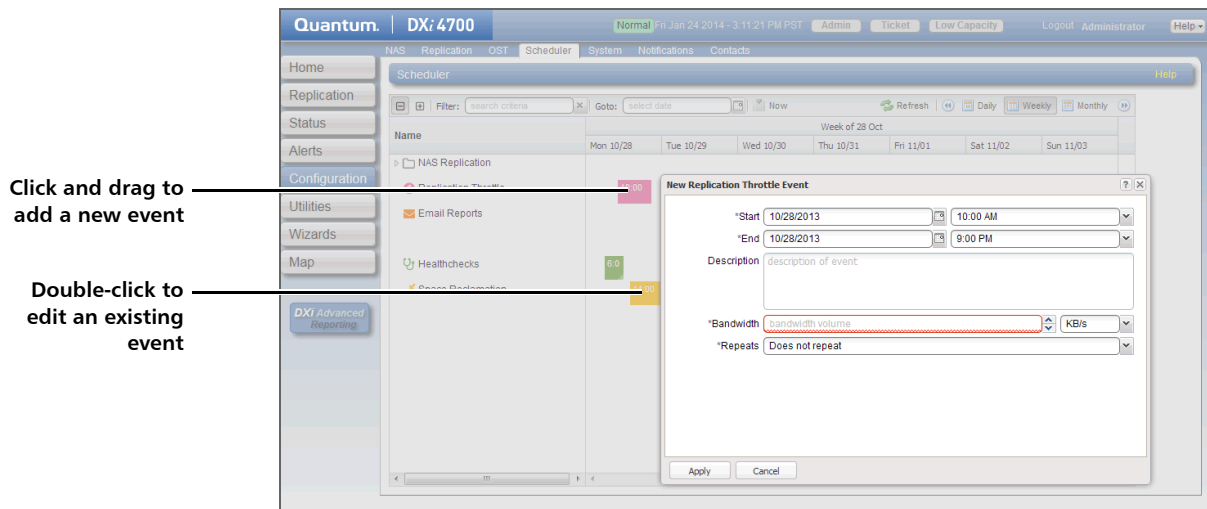

2 Define the start and, if applicable, the end of the event.

- Specify the **Start Date** and **Start Time** using the pop-up calendar and drop-down box.
- (Replication throttle events only) Specify the **End Date** and **End Time**. The end date and time must occur after the start date and time.

---

**Note:** For a new event, you can click and drag to adjust the start and end time. For an existing event, you can drag the event to change when it occurs. You can also drag the left or right edge of the event to adjust the start or end time.

---

3 Enter a brief description of the event in the **Description** box. (This description will display on the schedule view.)



- 4 Specify options specific to the type of event. See the following sections:
  - [Scheduling a Share or Partition for Replication](#) on page 311
  - [Scheduling Replication Throttling](#) on page 312
  - [Scheduling E-mail Reports](#) on page 314
  - [Scheduling Healthchecks](#) on page 314
  - [Scheduling Space Reclamation](#) on page 315
- 5 (Required for healthchecks and space reclamation) Specify when and how often the event reoccurs (see [Setting Recurrence for a Scheduled Event](#) on page 316).
- 6 Click **Apply**.
- 7 Refresh the browser window to make sure the event settings are applied.

---

---

**Caution:** When adding multiple events of the same type, make sure the events do not overlap. If two events of the same type overlap, the later event takes precedence over the earlier event.

---

---

---

**Note:** After a system reboot, all open-ended events (for example, replication) will restart at their next scheduled time. Events with end times (for example, replication throttle) that are past their start time will have their end action occur.

---

## Scheduling a Share or Partition for Replication

Configure a replication schedule for a NAS share or VTL partition to automatically replicate the share or partition data to the target system at regular intervals. Disable scheduled replication if you do not want to automatically replicate the share or partition data to the target.

---

**Note:** Note: To schedule a share or partition for replication, you must first add one or more replication targets (see [Replication Configuration](#) on page 258). In addition, you must add one or more shares or partitions with deduplication enabled and at least one target selected (see [NAS Summary](#) on page 212 or [Partitions](#) on page 229).

---

**Note:** Disabling replication for a share or partition, or deleting a share or partition, does not delete any scheduled replication events for that share or partition. If you no longer want to schedule the share or partition for replication, manually delete the schedule (see [Deleting a Scheduled Event](#) on page 316).

---

To configure a replication schedule for a share or partition:

- 1 On the **Scheduler** page, add or edit an event in the **NAS Replication** or **VTL Replication** row (see [Adding or Editing a Scheduled Event](#) on page 309).

- 2 In the **Share or Partition** drop-down box, select the share or partition to schedule for replication.

Only shares or partitions that are enabled for deduplication appear in the drop-down box.

---

**Note:** Scheduling a share or partition that has replication disabled will automatically enable replication.

---

- 3 In the **Target** drop-down box, select the replication target you want to replicate the share or partition to.

- 4 Click **OK**.

- 5 (Optional) Specify when and how often the event reoccurs (see [Setting Recurrence for a Scheduled Event](#) on page 316).

- 6 Click **Apply**.

## Scheduling Replication Throttling

During replication throttling, the DXi4700 limits the amount of source replication data it sends to not exceed a specified maximum bandwidth. Schedule replication throttling to control the amount of network bandwidth used by source replication at certain times. For example, you

might configure replication throttling to occur during planned backup times to avoid network contention.

---

**Note:** For more information about configuring the DXi4700 for replication, see [DXi4700 Replication](#) on page 121.

---

To schedule replication throttling:

- 1 On the **Scheduler** page, add or edit an event in the **Replication Throttle** row (see [Adding or Editing a Scheduled Event](#) on page 309).
- 2 Specify the maximum allowed bandwidth by entering a value in the **Bandwidth** box and selecting the units in the drop-down box (**KB/s** or **MB/s**). The lowest value you can set is 32 KB/s. The highest value you can set is 125 MB/s.

---

**Caution:** Do not set the maximum allowed bandwidth to a value that is lower than necessary. If the maximum allowed bandwidth is set to the lowest value, large replication jobs may fail.

---

During the replication throttle event, the DXi will limit the amount of data it sends during source replication so that it does not exceed the specified bandwidth. After the replication throttle event ends, the DXi will no longer throttle the sending of source replication data (until the next replication throttle event occurs).

Do *not* configure a throttle schedule if a constant throttle is enabled (see [Enabling System Throttling](#) on page 265). The scheduled replication throttling bandwidth settings take precedence over the constant throttle value. (The currently active replication throttle rate appears on the **Home** page under **Current Activity**.)

- 3 (Optional) Specify when and how often the event reoccurs (see [Setting Recurrence for a Scheduled Event](#) on page 316).
- 4 Click **Apply**.

### About Replication Throttling Statistics

Keep in mind the following information when observing actual network bandwidth usage during a replication throttle event:

- During a replication throttle event, only outgoing replication data traffic is throttled, not other outgoing traffic. Because of this, you

may observe network usage to be higher than the specified maximum bandwidth. Differences in the sampling time period may also cause discrepancies between the specified maximum bandwidth and observed traffic.

- If the DXi is configured to use a bonded network interface for replication traffic, load balancing is determined independently by the bonding mode selected for the interface (see [Network](#) on page 317). Because of this, you may need to sum the values for all slave devices in the bonded interface to calculate the overall outgoing traffic rate.
- The replication throttle bandwidth maximum is specified in KB/s or MB/s, so depending on the statistic or report you are observing, you may need to convert the bandwidth maximum to Kb/s or Mb/s in order to correctly compare it to the observed values.

## Scheduling E-mail Reports

The DXi4700 can automatically generate a report with system status data or with configuration data and send it to all configured e-mail recipients.

---

**Note:** To enable the DXi4700 to send e-mail, you must specify an outgoing e-mail server (see [Server](#) on page 357). In addition, you must specify one or more recipients (see [Email Reports](#) on page 360).

---

To configure a schedule for e-mail reports:

- 1 On the **Scheduler** page, add or edit an event in the **Email Reports** row (see [Adding or Editing a Scheduled Event](#) on page 309).
- 2 In the **Report Type** drop-down box, select the type of e-mail report to schedule (**Status** or **Configuration**).
- 3 (Optional) Specify when and how often the event reoccurs (see [Setting Recurrence for a Scheduled Event](#) on page 316).
- 4 Click **Apply**.

## Scheduling Healthchecks

During healthchecks, the DXi4700 performs tests to verify the health and integrity of the data deduplication blockpool. Schedule

healthchecks regularly to make sure the system is healthy and operating correctly. When you schedule healthchecks, only the healthchecks that are currently enabled are run.

---

**Note:** For more information about enabling healthchecks, see [Healthchecks](#) on page 382.

---

To configure a schedule for healthchecks:

- 1 On the **Scheduler** page, add or edit an event in the **Healthchecks** row (see [Adding or Editing a Scheduled Event](#) on page 309).
- 2 Specify when and how often the event reoccurs (see [Setting Recurrence for a Scheduled Event](#) on page 316).

---

**Caution:** For correct system operation, healthchecks *must* be run at regular intervals (at least once a week). You can schedule healthchecks to occur daily or weekly but not monthly or yearly. Also, recurrence is required.

---

- 3 Click **Apply**.

## Scheduling Space Reclamation

During space reclamation, the DXi4700 deletes unneeded tags from the blockpool to free up disk space. Schedule space reclamation regularly to make sure there is enough disk space to store data.

---

**Caution:** Because space reclamation can affect system performance, avoid running space reclamation during known backup periods.

---

---

**Note:** For more information about space reclamation, see [Space Reclamation](#) on page 389.

---

To configure a schedule for space reclamation:

- 1 On the **Scheduler** page, add or edit an event in the **Space Reclamation** row (see [Adding or Editing a Scheduled Event](#) on page 309).
- 2 Specify when and how often the event reoccurs (see [Setting Recurrence for a Scheduled Event](#) on page 316).

---

---

**Caution:** For correct system operation, space reclamation *must* be run at regular intervals (at least once a week). You can schedule space reclamation to occur daily or weekly but not monthly or yearly. Also, recurrence is required.

---

---

3 Click **Apply**.

### Setting Recurrence for a Scheduled Event

To specify when and how often the event reoccurs:

- 1 On the **Scheduler** page, add or edit an event (see [Adding or Editing a Scheduled Event](#) on page 309).
- 2 In the **Repeats** drop-down box, select **Does not repeat** to disable recurrence. Or to enable recurrence, select how often the event reoccurs:

---

**Note:** Healthchecks and space reclamation must occur at least every seven days or once a week.

---

- **Daily** - Specify the recurrence interval in days.
  - **Weekly** - Specify the recurrence interval in weeks, and select the days the event occurs on.
- 3 For recurring events, specify how long the recurrence continues (**forever**, for a certain number of occurrences, or **until** a specific date).

---

**Note:** For healthchecks and space reclamation, recurrence is always **forever**.

---

4 Click **Apply**.

### Deleting a Scheduled Event

To delete an event occurrence or event series.

- 1 On the **Scheduler** page, right-click an event.
- 2 On the pop-up menu, select an option:

- **Delete this occurrence** - Remove the selected occurrence in an event series from the schedule.
- **Delete all occurrences** - Remove the entire event series from the schedule.

The event or series is deleted from the schedule and will no longer occur.

---

## System

The **System** page allows you to configure system settings for the DXi4700, including network settings, system date and time, and security settings.

To access the **System** page, click the **Configuration** menu, and then click the **System** tab.

The **System** page contains the following tabs:

- [Network](#)
- [Date & Time](#)
- [Security](#)

---

## Network

---

The **Network** page allows you to view and change network configuration information for the DXi4700. The DXi4700 uses this information to connect to the network.

Network configuration information is entered during initial setup DXi4700. You should consult your network administrator before making any changes to the network settings.

---


**Caution:** Changing the network configuration requires a system reboot to allow all system services to function correctly. Changing the network configuration requires a system reboot immediately after the changes are applied.

---

**Note:** Rebooting the system can take several minutes. After the new network configuration is saved, close your Web browser and wait 15 minutes before logging in again. If you change the IP address that you use to log in to the system, you will temporarily lose your connection to the remote management console. Because of this, you might not see a confirmation page informing you that the new settings have been saved.

To access the **Network** page, on the **System** page, click the **Network** tab (see [Figure 169](#)).

Figure 169 Network Configuration

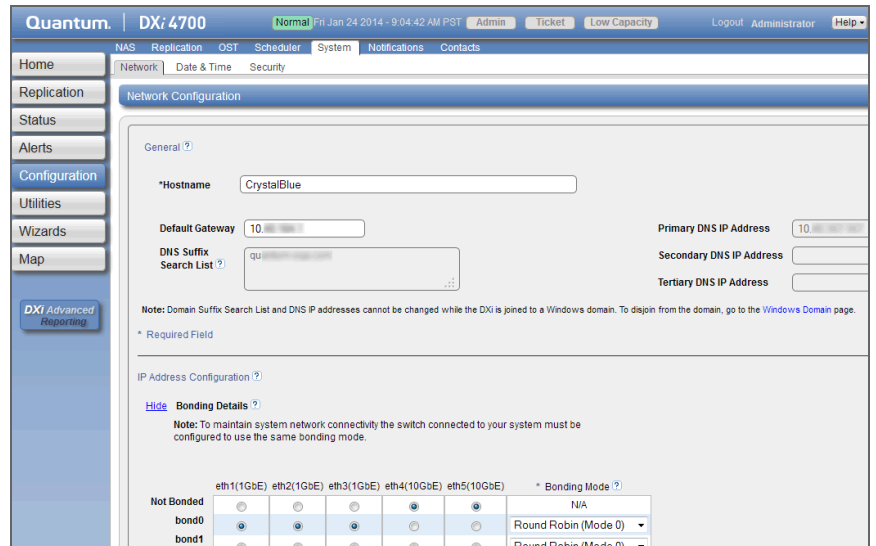

## Configuring the Network

Using the **Network** page, each physical Ethernet port in the DXi can be configured as a separate device. In addition, you can create bonded devices (logical ports) consisting of two or more physical ports of the same link speed (1GbE or 10GbE). For each port or device, you can specify the MTU (Maximum Transmission Unit) frame size.

After you define devices (single port or bonded), you can create up to ten network interfaces for each device. Each interface has its own IP address information. In addition, you can configure the following options for each interface:



- Assign the interface to a VLAN (Virtual Local Area Network).
- Indicate whether the interface IP address will be used to externally identify the system (external host IP address).
- Specify the types of traffic allowed on the interface (management, replication, or data).
- Specify the NAT address that the interface is mapped to if it is used for replication through a NAT firewall.
- Add routing information for an interface to enable connectivity with devices on different subnets.

---

**Note:** You can choose to allow any traffic type (management, replication, or data) on an interface. In this case, the routing of different traffic types, as well as firewall capability, must be controlled using the network infrastructure (routers and switches) that the DXi is connected to.

---

Configuring the network includes the following major steps:

---

**Note:** Before configuring the network, work with your network administrator to determine the network settings that will be required to properly integrate the DXi4700 with your company's network.

---

- 1 [Configuring General Network Settings](#) on page 319
- 2 [Configuring Bonding Details](#) on page 321
- 3 [Configuring Interface Details](#) on page 323
- 4 [Configuring Interface IP Addresses](#) on page 323
- 5 [Configuring Interface Routing](#) on page 327
- 6 [Applying Network Settings](#) on page 328

### Configuring General Network Settings

Under **General**, enter the following network information as provided by your network administrator (see [Figure 170](#)):

Figure 170 Network Page: General

General (?)

\*Hostname

Default Gateway

DNS Suffix Search List (?)

Primary DNS IP Address  (?)

Secondary DNS IP Address

Tertiary DNS IP Address

Note: Domain Suffix Search List and DNS IP addresses cannot be changed while the DXi is joined to a Windows domain. To disjoin from the domain, go to the [Windows Domain](#) page.

\* Required Field

---

**Note:** When entering IP addresses, never use an address that is in a reserved IP address range. To see a list of reserved IP address ranges, click the quick tip icon [?] located near the IP address field.

---

- **Hostname** - The hostname of the DXi4700.

The **Hostname** cannot be blank and must contain only letters [ A–Z, a–z ], numbers [ 0–9 ], and hyphens [ - ].

- **Default Gateway** - The default gateway IP address.

Specifying a default gateway is optional if all access is local to a particular subnet. For example, if the DXi4700 and all of its clients are on the same subnet, you do not need to specify a default gateway.

---

**Caution:** Specifying a default gateway is required to enable connectivity with all subnets other than those that the DXi4700 is directly connected to. For example, if the DXi4700 and its clients are on different subnets, or you are using an external NTP server, you must specify a default gateway.

---

- **DNS Suffix Search List** - (Optional) The domain list to search when resolving domain names.

The list may be either a single domain name or a comma-separated list of up to 6 domain names. The first domain name listed is used as the local domain. Domain names must contain only letters [ A–Z, a–z ], numbers [ 0–9 ], dots [ . ], and hyphens [ - ].

- **Primary, Secondary, and Tertiary DNS IP Address - (Optional)** The IP addresses of up to three DNS servers used to resolve domain names and translate them into IP addresses.

---

**Note:** You must specify a DNS IP address if you plan to use hostname format when configuring an NTP time server, outgoing e-mail server, replication sources and targets, and other information.

---



---


**Note:** The **DNS Suffix Search List** and **DNS IP Addresses** cannot be modified if the DXi4700 is currently joined to a Windows domain. To disjoin a Windows domain, see [Windows Domain](#) on page 219.

---

### Configuring Bonding Details

Under **IP Address Configuration > Bonding Details**, configure bonded devices (see [Figure 171](#)):

Figure 171 Network Page: Bonding Details

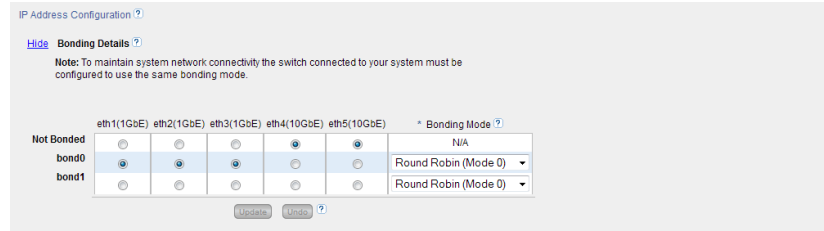

- 1 If necessary, click the **Show** link to show the bonding details table.
- 2 For each available bonded device (**bond0**, **bond1**, and so on), select two or more Ethernet ports with the same link speed to assign to the bond. Or select **Not Bonded** to leave a port unassigned to any bond.

If no ports are assigned to a bond, the bond cannot be configured. That is, settings cannot be entered for the bond in the **Interface Details** or **IP Address** tables because no Ethernet ports are assigned to the device.

All ports assigned to the same device are bonded together into a single logical port. For example, if you select **bond0** for port **eth0**

and port **eth1**, both ports are bonded together in the **bond0** device. A bonded device can contain two or more ports.

---

**Note:** All ports associated with a bond must have the same link speed (1GbE or 10GbE).

---

**3** For each bonded device, specify the bonding mode:

---

**Note:** To maintain network connectivity, the switch connected to the DXi4700 must be configured to use the same bonding mode. The best time to change the bonding mode on the switch is during the next reboot of your system, after saving the new network settings. Changing the bonding mode on the switch before saving these settings and rebooting may result in the loss of network connectivity to the system.

---

- **Round Robin (Mode 0)** - This option sends Ethernet frames using the bonded Ethernet ports with a valid MII link. Frames are sent in a round-robin fashion, starting with the first slave device and then the rest of the devices. This only applies to the traffic sent from the DXi4700. The Ethernet switch needs to aggregate the ports, so the connected ports are treated as a logical port. The DXi frame reception is completely dependent on the transmission algorithm of the Ethernet switch. The bonding mechanism does not balance the frame reception.
- **LACP (Mode 4)** - This option (Link Aggregation Control Protocol) is based on the 802.3ad IEEE standard for aggregating Ethernet ports. If the bonding algorithm is set to LACP, the Ethernet switch ports must be configured in a 802.3ad based Link Aggregation group (LAG) in LACP mode. The DXi frame reception and transmission is controlled by the LACP between the bonded ports and the Ethernet switch ports.
- **Active Backup (Mode 1)** - This option does not require switch configuration but may not provide the same level of load balancing and performance as other bonding modes. Only one port in the bond is active at a time. If the active port fails, another port becomes active to take its place. Because only the MAC address of the active port is visible to the Ethernet switch, the switch does not require additional configuration.

- 4 Click **Update** to save the changes you made to the **Bonding Details** table. (Clicking **Update** does not yet apply the new network settings to the DXi4700.)

Click **Undo** to revert to all current Bonding Details changes to the last update.

### Configuring Interface Details

Under **IP Address Configuration > Interface Details**, configure jumbo Ethernet frame settings for each port or device (see [Figure 172](#)):

Figure 172 Network Page: Interface Details

	Physical Ports	Bonding Mode	Link Speed	Link Status	Carrier Status	Jumbo Frame MTU Size
eth4	eth4	N/A	10GbE	Down	No Carrier	1500
eth5	eth5	N/A	10GbE	Down	No Carrier	1500
bond0	eth1,eth2,eth3	Round Robin (Mode 0)	1GbE	Up	Up	1500

Buttons:   ?

- 1 If necessary, click the **Show** link to show the interface details table.
- 2 For each device, select the MTU (Maximum Transmission Unit) frame size in the **Jumbo Frame MTU Size** drop-down box.
  - **1500 MTU** - (Default) The standard (STD) MTU frame size of 1,500 bytes is used.
  - **9000 MTU** - The jumbo MTU frame size of 9,000 bytes is used. (For best performance, make sure the entire network path to the DXi is configured to use 9000 MTU.)
- 3 Click **Update** to save the changes you made to the **Interface Details** table. (Clicking **Update** does not yet apply the new network settings to the DXi4700.)

Click **Undo** to revert to all current Interface Details changes to the last update.

### Configuring Interface IP Addresses

Under **IP Address Configuration > IP Address Table**, configure one or more network interfaces for each port or device (physical Ethernet port or bonded device) (see [Figure 173](#)):

Figure 173 Network Page: IP Address Table

**IP Address Table**

Note: A maximum of 10 IP addresses per interface are allowed.

If replication is performed across public network with source and target DXi behind NAT routers, you must configure this DXi's NAT IP Address.

IP Config	External			Replication NAT IP Config ?			Traffic Type Allowed ?						
	Type	Interface	VLAN ID	Host IP ?	* IP Address	* Netmask	* Gateway	NATed	NAT IP Address	Mgmt	Repl	Data	Any
eth4	Static	<input type="button" value="Add IP"/>											
eth5	Static	<input type="button" value="Add IP"/>											
bond0	Static	<input checked="" type="radio"/> bond0:2 <input type="button" value="Add IP"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	10.10.10.10	255.255.255.0	10.10.10.1	<input type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>

?

- 1 Click **Add IP** to add a network interface to a device.

Or select an interface to edit the IP address, netmask, gateway and traffic type. (To select an interface, click the radio button next to the interface index name, for example, **bond0:2**.)

---

**Note:** A maximum of 10 IP addresses are allowed per device. All IP addresses in the IP Address Table (added or modified) must be valid and unique, and must have a valid gateway and netmask.

---

- 2 In the **VLAN ID** column, select the check box to enable VLAN tagging for the interface. (Or clear the check box to disable VLAN tagging for the interface.)

VLAN tagging allows you to assign an interface to a virtual local area network (VLAN). With VLAN tagging, you can route different traffic types (management, data, and replication) over different VLANs, making sure traffic types do not mix.

If VLAN tagging is enabled, enter the **VLAN Tag ID** for the interface. (Valid values are 2 to 4094. You can assign only one tag ID to an interface.)

---

**Note:** The maximum allowed number of VLAN tag IDs is 64. If you attempt to add more than 64 VLAN tag IDs, an error displays.

---

---

**Note:** To maintain connectivity, the switch ports connected to the DXi must be configured to accept the correct VLAN tag ID.

---

---

**Caution:** If VLAN tagging is enabled for an interface, DXi Advanced Reporting is unable to collect and record statistics for traffic moving over the VLAN interface (for example, eth1.400). Statistics are still collected for the base device (for example, eth1.)

---

- 3 In the **External Host IP** column, select the check box to designate the interface as an external host IP. This associates the interface IP address with the host name of the DXi, and the DXi is externally identified by the host IP. The following restrictions apply:
  - You can designate only one external host IP for the network configuration.
  - You must specify a traffic type of **Mgmt** (management) or **Any** for the external host IP interface.
  - You must specify a valid **Default Gateway** in the **General** section. In addition, the external host IP must be on the same subnet as the **Default Gateway** to ensure external communication.
- 4 Enter the following network information as provided by your network administrator (all fields are required):
  - **IP Address** - The IP address of the interface.
  - **Netmask** - The network mask of the interface.
  - **Gateway** - The gateway of the DXi4700. (This is usually not the same as the default gateway.)
- 5 If necessary, specify NAT (Network Address Translation) settings for the interface:

---

**Note:** If the DXi4700 is a replication target and is behind a NAT router, you *must* configure a NAT IP Address

---

- **NATed** - Select the check box if the IP address of the DXi is translated by a firewall to a NAT IP address when the DXi communicates to the outside world.

- **NAT IP Address** - The IP address used to access the DXi from the public network. The router that connects the DXi to the Internet performs Network Address Translation that maps the IP address of the DXi to the NAT IP address, providing a valid replication interface for a source DXi.

6 Select the check box for each type of network traffic allowed on the interface (segmentation):

---

**Note:** At least one interface must allow management traffic.

---

---

**Note:** If the DXi is configured for source or target replication, you should configure at least one interface to allow replication traffic (select **Repl** or **Any**) before applying changes to network settings.

---

---

**Note:** If you configure segmentation for non-bonded interfaces (Ethernet ports) that are on the same subnet, all traffic will use the lowest numbered Ethernet port first, no matter how segmentation is configured. To avoid this issue, create bonded interfaces, and then select the desired traffic type for each bonded interface.

---

- **Mgmt** - Select to allow management traffic.
- **Repl** - Select to allow replication traffic.
- **Data** - Select to allow data traffic.
- **Any** - Select to allow all types of traffic (management, replication, and data).

7 Click **Update** to save the changes you made to the **IP Address** table. (Clicking **Update** does not yet apply the new network settings to the DXi4700.)

Click **Delete** to remove IP address information for the selected interface. Or click **Undo** to revert all current IP Address Table changes to the last update.




**Note:** When you add a network interface, a default route (via the default gateway) is automatically created for the interface after network settings are applied and the DXi reboots. For example, if you add an interface with IP address 10.20.185.172, a route with the destination IP address 10.20.185.0 is automatically added. If you delete the default route, it is automatically added again the next time network settings are applied and the DXi reboots. For more information about interface routing, see [Understanding Interface Routing](#) on page 329.

### Configuring Interface Routing

Some network configurations require that you specify routing details for an interface. You need to specify routing details if the host or client the interface connects to is on a different subnet that is not reachable using the default gateway. You also need to specify routing details if you have configured multiple network segments (replication, data, or management) on the same subnet. For more information and examples, see [Understanding Interface Routing](#) on page 329.

Under **IP Address Configuration > Routing Details**, enter routing information for one or more interfaces (see [Figure 174](#)):

Figure 174 Network Page: Routing Details

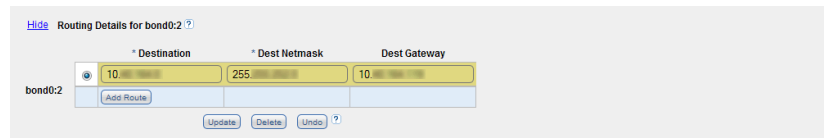

- 1 In the **IP Address Table** (above routing details), select an interface to add or modify routing data. (To select an interface, click the radio button next to the interface index name, for example, **bond0:2**.)

After selecting an interface in the **IP Address Table**, the **Routing Details** table below expands to display available routes (if any).

**Note:** A maximum of 8 routes per interface are allowed.

- 2 If necessary, click the **Show** link to show the routing details table.
- 3 Click **Add Route** to add a route to the selected interface.

Or select a route to edit its settings.

- 4 Enter the following network information as provided by your network administrator:
  - **Destination** - The destination network for the route.
  - **Dest Netmask** - The network mask for the route.
  - **Dest Gateway** - The gateway IP address used for *outgoing* traffic sent from the interface to a host or client. (This is usually not the same as the default gateway.)

---

**Note:** The destination gateway of each route *must* match the subnet of at least one configured IP address listed in the **IP Address Table**. If no match is found, an error displays stating that the route's destination gateway is not reachable.

---

---

**Note:** In the example shown in [Figure 175](#), to reach a host on the 10.50.50.x subnet, you would enter 10.50.50.0 for destination network, 255.255.255.0 for the destination netmask, and 10.20.20.1 as the destination gateway.

---

- 5 Click **Update** to save the changes you made to the **Routing Details** table. (Clicking **Update** does not yet apply the new network settings to the DXi4700.)

Click **Delete** to remove IP routing information for the selected interface. Or click **Undo** to revert all current Routing Details changes to the last update.

### Applying Network Settings

For network changes to take effect, you must apply the changes, finalize the confirmation, and reboot the system. To apply all changed settings on the **Network** page to the DXi4700, click **Apply** at the bottom of the page. Follow the prompts to confirm the changes and reboot the system.

---

**Note:** To revert all network settings to the initial state and undo all changes, click the **Reset** button.

---

## Understanding Interface Routing

For a network on the interface to communicate with a host located on a different subnet, you must specify routing information in the **Routing Details** section. Routing is used to direct outgoing traffic from a network interface on the DXi to an IP address in another subnet by means of a destination gateway. Responses from the destination are routed back to the DXi using the gateway specified for the interface in the **IP Address Table** section.

In addition, when configuring segmented network interfaces, if the source DXi replication, data, and management interfaces are on the same subnet, you must add a host route on the source DXi to make sure the replication interface is correctly selected when replicating data to the target DXi.

See the following examples for details:

- [Example 1: Segments and Target on Different Subnets](#)
- [Example 2: Segments and Target on the Same Subnet](#)
- [Example 3: Segments on the Same Subnet and Target on a Different Subnet](#)

### Example 1: Segments and Target on Different Subnets

In the example below (see [Figure 175](#)), the DXi has two segmented interfaces, one for management traffic and one for data traffic:

- The management interface is assigned to the 10.30.24.x subnet in the **IP Address Table** section. This subnet connects to the corporate network by mean of the default gateway (10.30.24.1).
- The data interface is assigned to the 10.20.20.x subnet in the **IP Address Table** section. This subnet connects to a gateway at 10.20.20.1.
- Using the data interface, the DXi needs to connect to a backup host that is on the 10.50.50.x subnet. Because this host is not on the same subnet as the data interface, the DXi cannot communicate with the host unless you specify routing information in the **Routing Details** section.


In this example, you would specify 10.50.50.0 for destination network, 255.255.255.0 for the destination netmask, and 10.20.20.1 as the destination gateway.

---

**Note:** The gateway specified in the **IP Address Table** section is for *incoming* traffic to the interface. The gateway specified in the **Routing Details** section is for *outgoing* traffic from the interface.

---

Figure 175 Interface Routing: Example 1

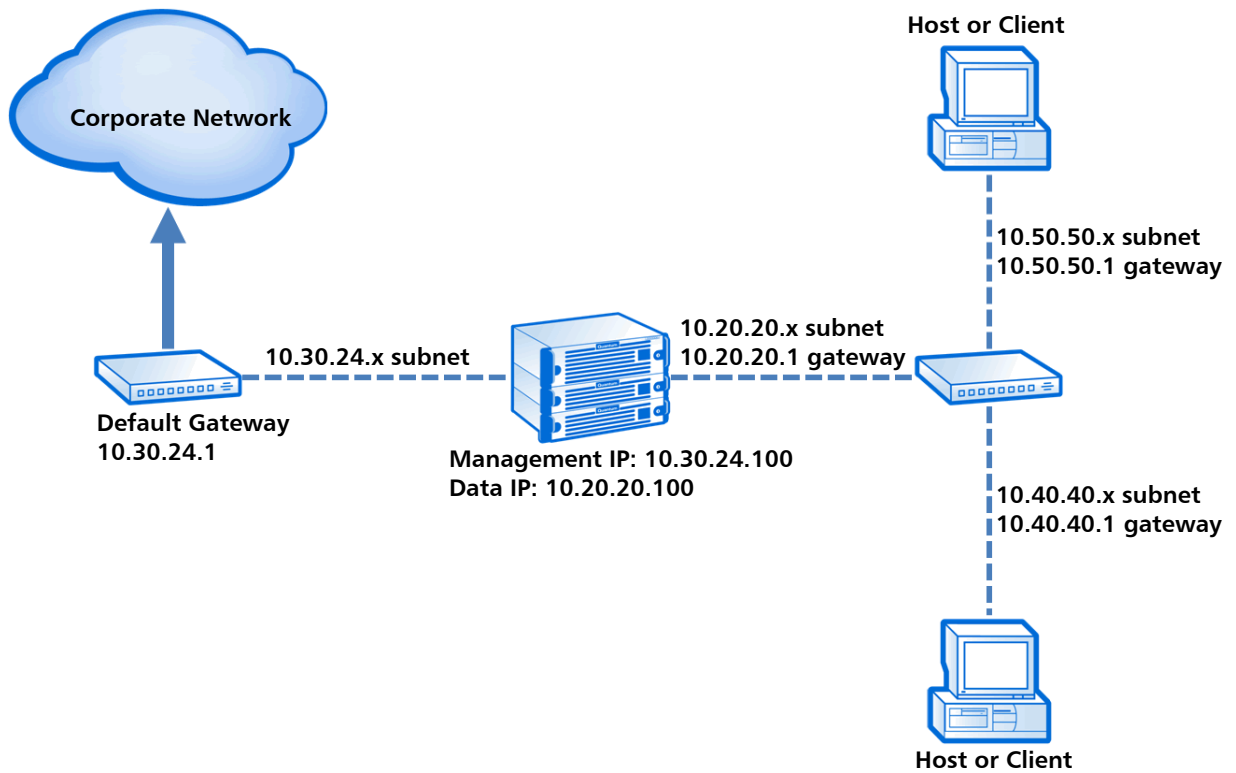

### Example 2: Segments and Target on the Same Subnet


In the example below (see [Figure 176](#)), the DXi has two segmented interfaces, one for data and management traffic, and one for replication traffic:

- The source DXi management/data IP address, the source DXi replication IP address, and the target DXi IP address are all on the same subnet (192.168.10.x).
- To make sure the replication segment is used when communicating with the target DXi, you must add a host route in the **Routing Details** section on the source DXi.

In this example, you would specify the following routing details for the replication interface on the source DXi:

- **Destination** - Use the IP address of the target DXi (192.168.10.200).
- **Dest Netmask** - Use 255.255.255.255.
- **Dest Gateway** - Use the replication IP address of the source DXi (192.168.10.100).

Figure 176 Interface Routing: Example 2

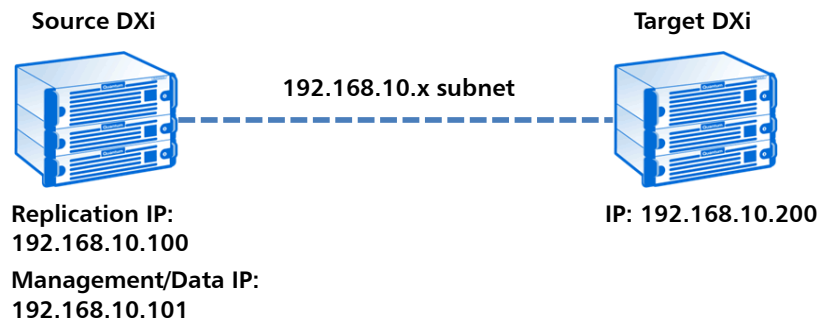

### Example 3: Segments on the Same Subnet and Target on a Different Subnet

In the example below (see [Figure 177](#)), the DXi has two segmented interfaces, one for data and management traffic, and one for replication traffic:

- The source DXi management/data IP address and the source DXi replication IP address are on the same subnet (192.168.10.x). The target DXi IP address is on a different subnet (192.168.20.x)

- To make sure the replication segment is used when communicating with the target DXi, you must add a network route in the **Routing Details** section on the source DXi.


In this example, you would specify the following routing details for the replication interface on the source DXi:

- **Destination** - Use the subnet of the target DXi (192.168.20.0).
  - **Dest Netmask** - Use 255.255.255.0.
  - **Dest Gateway** - Use the IP address of the gateway (192.168.10.1).
- In addition, to enable communication with the target DXi by means of the gateway, you must add a second host route in the **Routing Details** section on the source DXi.

In this example, you would specify a second set of routing details for the replication interface on the source DXi:

- **Destination** - Use the IP address of the gateway (192.168.10.1).
- **Dest Netmask** - Use 255.255.255.255.
- **Dest Gateway** - Use the replication IP address of the source DXi (192.168.10.100).

Figure 177 Interface Routing: Example 3

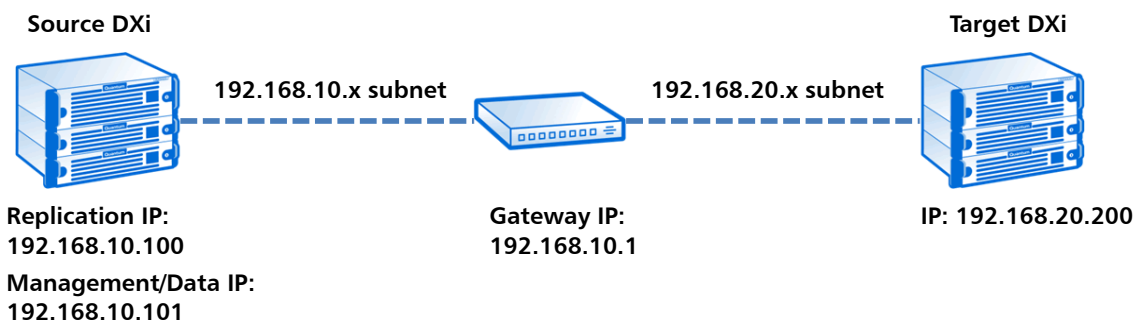


## Backpanel Locations

The **Backpanel Locations** section at the bottom of the **Network** page displays a graphical representation of the Ethernet ports as they appear on the rear of the system (see [Figure 178](#)).

The diagram indicates the current bonding configuration and connectivity status for all Ethernet ports.

- Ports that are bonded together in an interface are shaded the same color.
- A green border indicates a port is connected to a network.
- A red border indicates a port is configured but is not connected to a network.
- Click **Update Port View** to update the information on the diagram.

Figure 178 Network Page:  
Backpanel Locations

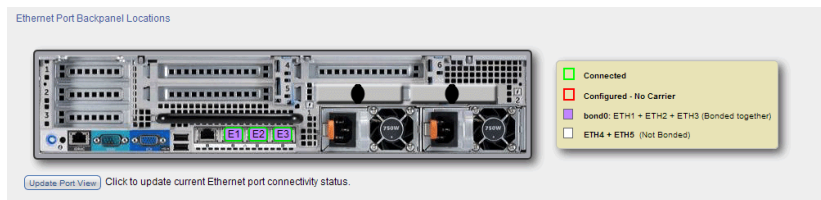

## Date & Time

The **Date & Time** page allows you to set the system date and time of the DXi4700. You can specify a Network Time Protocol (NTP) server to synchronize the system time with, or you can manually enter the date and time.

---

**Caution:** Changing the date and time settings requires a system reboot immediately after the changes are applied. Wait for at least 15 minutes before logging back in.

---




---

**Note:** If you intend to join the DXi4700 to a Windows network using Active Directory for NAS storage, Quantum recommends using an NTP Server to set the system date and time (see [Windows Domain](#) on page 219).

---

To access the **Date & Time** page, on the **System** page, click the **Date & Time** tab (see [Figure 179](#)).

Figure 179 Date & Time Page

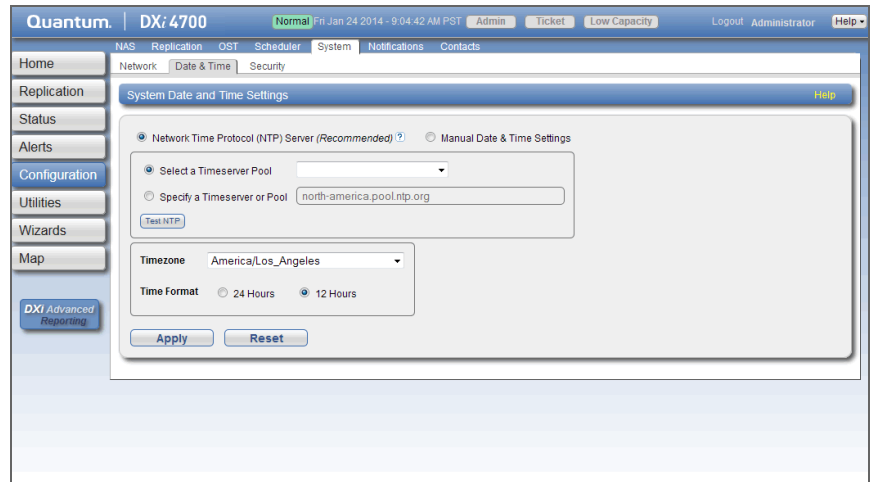

To set the system date and time:

1 Select one of the following options:

- **Network Time Protocol (NTP) Server - (Recommended)** Select this option to synchronize the DXi4700 with an NTP timeserver or pool. Then select or specify a timeserver or pool.
- **Select a Timeserver Pool - (Recommended)** Select one of the well-known, geographically-based NTP timeserver pools in the drop-down box.

---

**Note:** To select a timeserver pool, you must first specify at least one DNS IP address on the **Network** page (see [Network](#) on page 317). Otherwise, you must specify the IP address of the timeserver pool.

---

- **Specify a Timeserver or Pool -** Type the name or IP address of the NTP server or pool. (See <http://support.ntp.org> for information about publicly available NTP servers)

To verify that the DXi4700 can communicate with the NTP server or pool, click **Test NTP**.



- **Manual Date & Time Settings** - Select this option to manually set the system date and time.

Specify the **New System Date** by clicking the calendar icon.  
Specify the **New System Time** using the drop-down boxes.

- 2 In the **Timezone** drop-down box, select the time zone where the DXi4700 is located.
- 3 Next to **Time Format**, select the format to use when displaying times (**24 hours** or **12 hours**).
- 4 Click **Apply**.

---

## Security

---

The **Security** page allows you to configure security settings for the DXi4700, including access passwords, SSL settings, and the inactivity timeout.

To access the **Security** page, click the **Configuration** menu, and then click the **Security** tab.

The **Security** page contains the following tabs:

- [Web & CLI Passwords](#)
- [SSL](#)
- [Data Encryption](#)
- [Login Session](#)
- [Security Notice](#)
- [Data-at-Rest Encryption](#)

### Web & CLI Passwords

The **Web & CLI Passwords** page allows you to change the account passwords for the remote management console (**Web**) and the command line interface (**CLI**). You can also enable or disable the CLI account.


The DXi4700 has two access levels for logging onto the remote management console or the CLI:

- **Monitor** - Allowed to view information on the DXi4700 remote management console or the CLI but cannot make changes.

- **Administrator** - Allowed to view and change information on the DXi4700 remote management console or the CLI.

To access the **Web & CLI Passwords** page, on the **Security** page, click the **Web & CLI Passwords** tab (see [Figure 180](#)).

Figure 180 Web & CLI Passwords Page

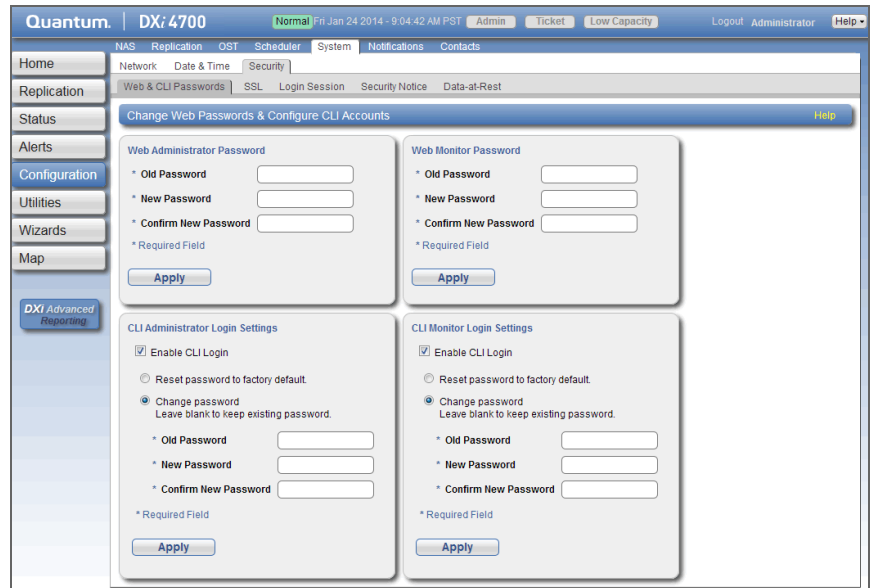

Use the **Web & CLI Passwords** page to perform the following tasks:

- Change the administrator or monitor password for Web access (see [Changing Web Passwords](#) on page 336).
- Enable or disable CLI access for the administrator or monitor account (see [Enabling CLI Accounts](#) on page 337).
- Change the administrator or monitor password for CLI access (see [Changing CLI Passwords](#) on page 337).
- Reset the CLI administrator or monitor password to the factory default (see [Resetting CLI Passwords](#) on page 338).

### Changing Web Passwords

Use the Web passwords when logging onto the remote management console as an administrator or monitor (see [Accessing Remote Management](#) on page 50).

To change the Web passwords:

- 1 Under **Web Administrator Password** or under **Web Monitor Password**, enter the following information:
  - **Old Password** - Enter the old password.
  - **New Password** - Enter the new password.
  - **Confirm New Password** - Enter the new password again to confirm it.

---

**Note:** The default password is **password**.

---

---

**Note:** Passwords are limited to 15 characters. Alphanumeric characters and special characters are allowed.

---

- 2 Click **Apply**.

### Enabling CLI Accounts

The CLI accounts provide access to the DXi4700 command line interface as an administrator or monitor.

---

**Note:** For more information about using the CLI, see the *DXi4700 Command Line Interface (CLI) Guide*.

---

To enable or disable the CLI accounts:

- 1 Under **CLI Administrator Login Settings** or under **CLI Monitor Login Settings**, do one of the following steps:
  - Select the **Enable CLI Login** check box to enable the CLI account.
  - Clear the **Enable CLI Login** check box to disable the CLI account.

- 2 Click **Apply**.

### Changing CLI Passwords

Use the CLI passwords when logging onto the command line interface as an administrator or monitor.

To change the CLI passwords:

- 1 Under **CLI Administrator Login Settings** or under **CLI Monitor Login Settings**, select the **Change password** option.
- 2 Enter the following information:
  - **Old Password** - Enter the old password.
  - **New Password** - Enter the new password.
  - **Confirm New Password** - Enter the new password again to confirm it.

---

**Note:** The default password for the CLI Administrator account is **cliadmin**. The default password for the CLI Monitor account is **cliviewer**.

---

---

**Note:** Passwords are limited to 15 characters. Alphanumeric characters and special characters are allowed.

---

- 3 Click **Apply**.

### Resetting CLI Passwords

The default password for the CLI Administrator account is **cliadmin**. The default password for the CLI Monitor account is **cliviewer**.

To reset the CLI account passwords to their default values:


- 1 Under **CLI Administrator Login Settings** or under **CLI Monitor Login Settings**, select the **Reset password to factory default** option.
- 2 Click **Apply**.

### SSL

The **SSL** page allows you to enable or disable SSL on the DXi4700. You can also install a new SSL certificate to replace the Quantum default SSL certificate.

To access the **SSL** page, on the **Security** page, click the **SSL** tab (see [Figure 181](#)).

Figure 181 SSL Page

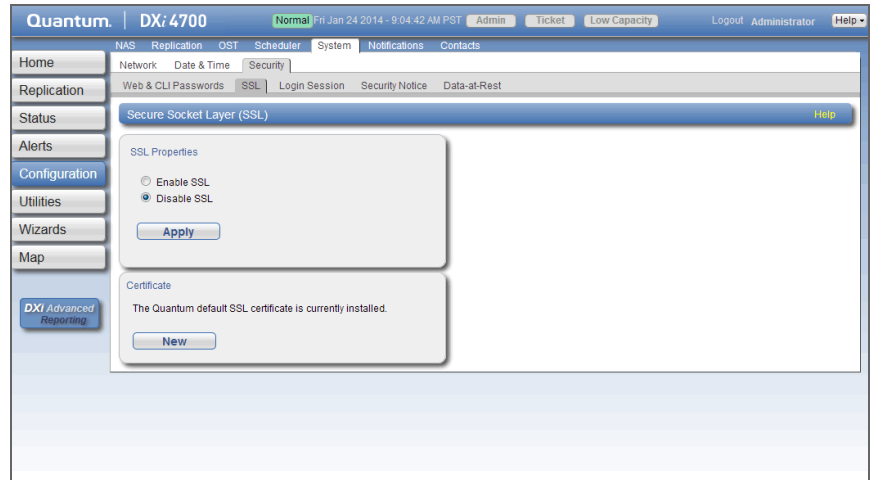

Use the **SSL** page to perform the following tasks:

- Enable or disable SSL on the DXi4700 (see [Enabling SSL](#) on page 339).

---

**Note:** If you enable SSL, see [Server Authentication Warnings](#) on page 340 for important information about Web browser settings.

---

- Install a new SSL certificate (see [Installing an SSL Certificate](#) on page 340).

### Enabling SSL

SSL (Secure Sockets Layer) is a protocol that provides security and privacy over the Internet by negotiating encryption keys before transmitting data between a client and a server.

To establish a secure connection, the DXi4700 must have an encryption key assigned to it by a Certification Authority in the form of a certificate file, private key file, and pass phrase. After you install these components, you can establish a secure connection using the SSL protocol. The DXi4700 comes with a Quantum default SSL certificate.

To enable or disable SSL:

- 1 Under **SSL Properties**, select the **Enable SSL** option to enable SSL.  
Or select the **Disable SSL** option to disable SSL.

---

**Note:** The default setting is disabled.

---

2 Click **Apply**.

### Server Authentication Warnings

Enabling SSL with the default Quantum certificate allows you to securely communicate with the DXi4700 Web-based interface using SSL encryption. However, you may receive a warning from your Web browser and network security scanners stating that the server you are attempting to connect to does not match the server embedded within the certificate.

This is expected behavior because the default certificate can only be used for encryption and not server authentication. Quantum recommends the default Quantum certificate be replaced with your own official certificate specific to your DXi system. You can install your own custom certificate in order to take advantage of server authentication in addition to encrypted communication.

To suppress server authentication warnings for the default certificate:

- **Internet Explorer** - If a dialog box displays warning you of a possible certificate error, add the IP address for the DXi4700 to the **Trusted Sites** list (**Tools > Internet Options > Security > Trusted Sites**). If subsequent warning pages display along with an option to close your Web browser or continue to the Web site, click **Continue**. This suppresses the warnings until you restart your Web browser.
- **Firefox** - If the **Secure Connection Failed** dialog box displays, click the link at the bottom of the dialog box and follow the instructions to add an exception for your DXi4700.

### Installing an SSL Certificate


You can purchase and install your own custom SSL certificate in order to take advantage of server authentication in addition to encrypted communication on the DXi4700.

To install an SSL certificate:

1 Under **Certificate**, click **New**.

The **Install New Certificate** page displays (see [Figure 182](#)).

Figure 182 Install New Certificate Page

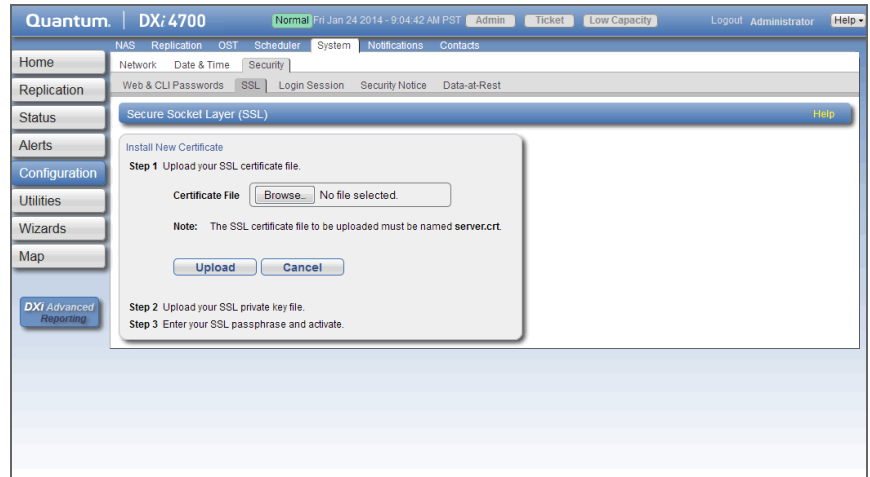

2 In the **Certificate File** box, type the location and filename of the new SSL certificate file.

Or click **Browse** to browse the system and locate the SSL certificate file. The SSL certificate file must be named **server.crt**.

3 Click **Upload**.

4 Type your SSL private key and press **<Enter>**.

5 Type your SSL passphrase and press **<Enter>**.

A **Successful Upload** page displays stating that the SSL certificate file has been installed on the system.

6 Click **OK**.

The certificate displays in the **Certificate** section.


## Data Encryption

The **Data Encryption** page allows you to select the type of encryption to use for OST data transfers. OST data sent from the media server to the DXi can be encrypted using AES (Advanced Encryption Standard) encryption methods.

This setting does not apply to data transfers during replication. For replication, specify encryption settings when configuring the replication or failback targets (see [DXi4700 Replication](#) on page 121).

To access the **Data Encryption** page, on the **Security** page, click the **Data Encryption** tab (see [Figure 183](#)).

Figure 183 Data Encryption Page

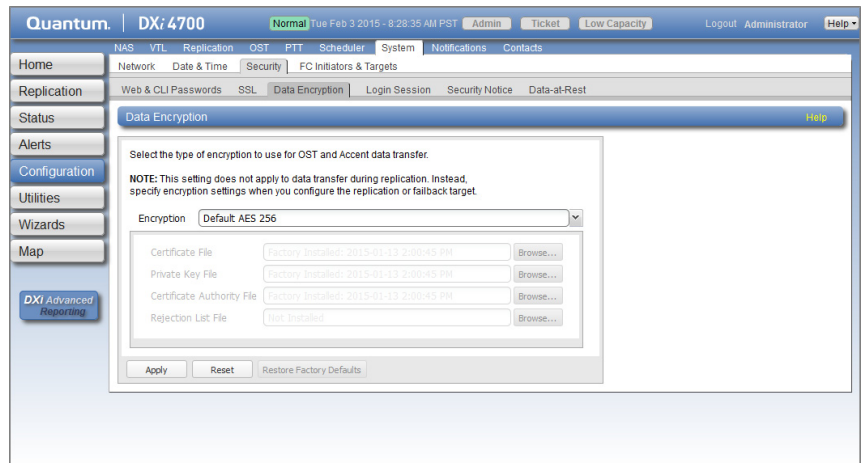

To enable or disable data encryption:

1 Select an option in the **Encryption** drop-down box:

- **None** - OST data is not encrypted.
- **Default AES 128** - OST data is encrypted using AES 128-bit encryption.
- **Default AES 256** - OST data is encrypted using AES 256-bit encryption.
- **TLS with AES 256** - OST data is encrypted using AES 256-bit encryption with Transport Layer Security (TLS).

---

**Note:** AES encryption options are available only if the Data-in-Flight license is installed (see [License Keys](#) on page 392).

---

2 If you selected the **TLS with AES 256** encryption option, you must install the required certificate and key files on the DXi:

- Certificate File
- Private Key File
- Certificate Authority File



- Rejection List File

---

**Note:** The certificate and key files installed on the DXi system must match the files on the OST media server. For more information on certificate and key files, see the *OST Plug-in Installation Instructions (6-67074)*.

---

To install a file, click the **Browse** button to browse the system and locate the file, and then click **Open**.

---

**Caution:** Installing certificate files requires a system reboot immediately after the changes are applied. Wait for at least 15 minutes before logging back in.

---

---

**Note:** You can install new certificate and key files at any time, as long as there are no active network connections between the OST media server and the DXi.

---

### 3 Click **Apply**.

---

**Note:** To clear all changes without saving them, click **Reset**. To remove user installed certificate and key files, click **Restore Factory Defaults**.

---


## Login Session

The **Login Session** page allows you to specify the inactivity timeout for the DXi4700 remote management console. The default timeout is 30 minutes.

When the remote management console is inactive for the specified period of time, the user is automatically logged off and must log back on to continue (see [Accessing Remote Management](#) on page 50).

To access the **Login Session** page, on the **Security** page, click **Login Session** (see [Figure 184](#)).

Figure 184 Login Session Page

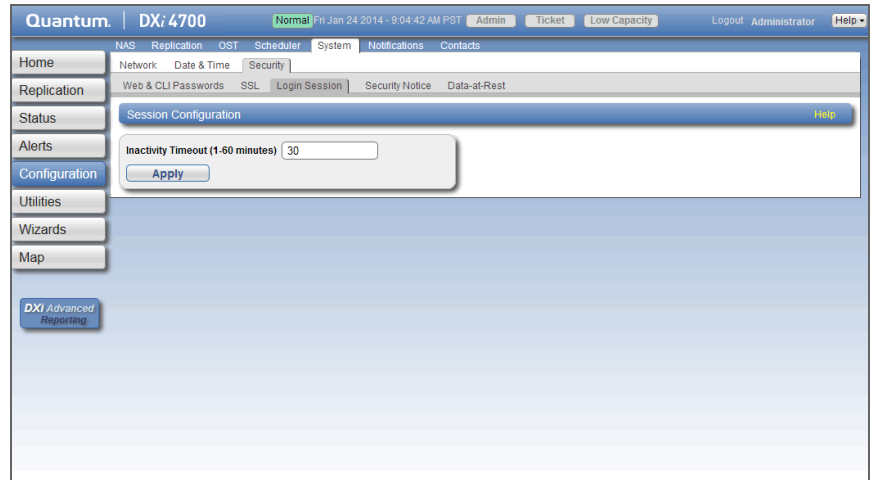

To specify the inactivity timeout:

- 1 In the **Inactivity Timeout** box, enter the number of minutes of inactivity before a user is automatically logged off (1–60 minutes).
- 2 Click **Apply**.


## Security Notice

The **Security Notice** page allows you to specify a message that will appear to all users when logging on to the remote management console or the CLI (command line interface).

If a security notice message has been specified, the user must accept the message in order to begin using the system. If no security notice has been specified, the user can use the system immediately after logging on.

To access the **Security Notice** page, on the **Security** page, click **Security Notice** (see [Figure 185](#)).

Figure 185 Security Notice Page

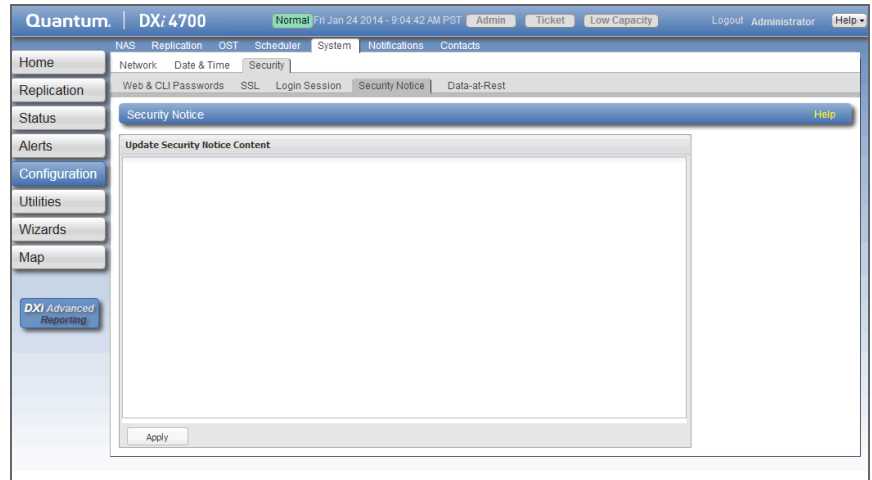

To add or update a security notice message, enter the message in the box and click **Apply**.

## Data-at-Rest Encryption

The **Data-at-Rest** page allows you to enable Data-at-Rest Encryption on the DXi4700 and manage security keys.

Data-at-Rest Encryption uses Self Encrypting Drive (SED) technology to secure all data stored on the DXi4700. This includes file data and metadata, configuration files, and the DXi software and operating system. To enable Data-at-Rest Encryption, you must supply a passphrase. The passphrase ensures that all physical disks are paired with their respective controllers, and that data can only be read back from the disk by the same controller that wrote it. If a controller must be replaced, the passphrase is needed to enable the new controller to access the data on the physical disks.

To enable Data-at-Rest Encryption, the feature must be licensed, and all of the drive controllers and hard drives (active and hot spares) in the DXi must support Self Encrypting Drive (SED) technology (not available in all regions). A DXi4700 configuration with all 4TB SED hard drives meets the requirements for Data-at-Rest Encryption.

---

**Note:** The **Data-at-Rest** page displays only if the Data-at-Rest Encryption feature is supported on the DXi4700 and is licensed for use. For information about installing the Data-at-Rest Encryption license, see [Licensing Data-at-Rest Encryption](#) on page 396.

---


---

**Caution:** After you enable Data-at-Rest Encryption, you cannot disable it or turn it off. Make sure to back up your passphrase and recovery files, as they may be required for future capacity expansion or in certain, rare hardware failure scenarios (see [Managing Recovery Files](#) on page 348).

---

To access the **Data-at-Rest** page, on the **Security** page, click the **Data-at-Rest** tab (see [Figure 186](#)).

Figure 186 Data-at-Rest Page

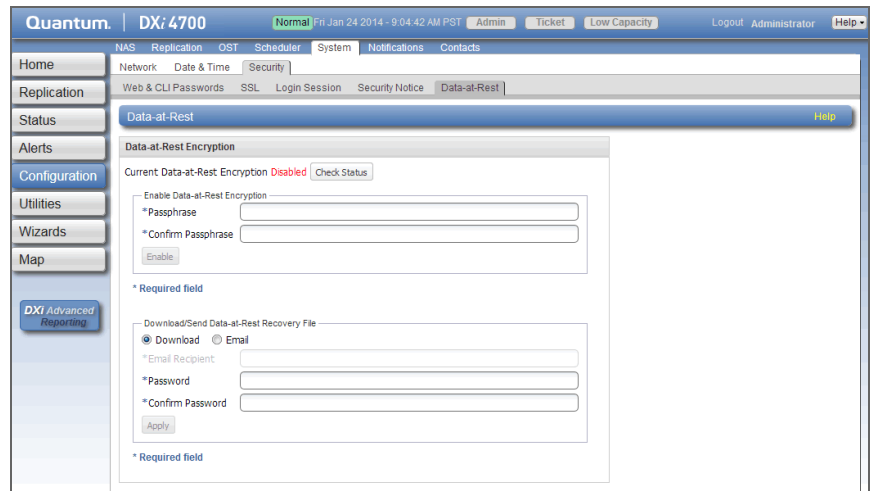

Use the **Data-at-Rest** page to perform the following tasks:

- Check the current status of Data-at-Rest Encryption (see [Checking Data-at-Rest Encryption Status](#) on page 347).
- Enable Data-at-Rest Encryption for all hard drives in the DXi4700 (see [Enabling Data-at-Rest Encryption](#) on page 347).
- Save or e-mail a Data-at-Rest Recovery file to back up your encryption keys (see [Managing Recovery Files](#) on page 348).

### Checking Data-at-Rest Encryption Status

The current status of Data-at-Rest Encryption can be **Disabled** (default) or **Enabled**. If it is enabled, all drives in the DXi4700 are securely encrypted and cannot be read if removed from the system.

Click **Check Status** to view detailed information about the status of Data-at-Rest Encryption and to see if the DXi4700 supports all requirements for enabling the feature.

### Enabling Data-at-Rest Encryption

When Data-at-Rest Encryption is enabled, all hard drives in the DXi4700 are paired to their respective RAID controllers using encryption keys. These keys are generated using a passphrase that you supply.

---

**Note:** Before you can enable Data-at-Rest Encryption, you must install the required license (see [Licensing Data-at-Rest Encryption](#) on page 396).

---

---

---

**Caution:** Make sure you are certain you want to enable Data-at-Rest Encryption before proceeding. After you enable Data-at-Rest Encryption, you cannot disable it or turn it off.

---

---

To enable Data-at-Rest Encryption:

- 1 Verify that the system is in an optimal state:
  - All hardware statuses on the system are **Normal** (see [Hardware](#) on page 174).

---

---

**Caution:** All storage arrays *must* show **Normal** condition (see [Storage Arrays](#) on page 179). If any storage arrays are degraded, do *not* enable Data-at-Rest Encryption.

---

---

- All outstanding administration alerts are deleted (see [Admin Alerts](#) on page 201).
  - All service tickets are closed (see [Service Tickets](#) on page 203).
- 2 Under **Enable Data-at-Rest Encryption**, type a security passphrase in the **Passphrase** box.

---

**Caution:** If you are re-enabling Data-at-Rest Encryption, you *must* enter the same passphrase that was used when encryption was originally enabled.

---

The passphrase must meet all of the following requirements:

- Must be 8–32 characters long.
- Must contain at least 1 digit [0–9].
- Must contain at least 1 uppercase letter [A–Z].
- Must contain at least 1 lowercase letter [a–z].
- Must contain at least 1 non-alphanumeric character, for example, '+' or '@'.

---

**Note:** An underscore [ \_ ] is considered an alphanumeric character.

---

- Must *not* contain a space, tab, single quote ['], double quote ["], or dollar sign [\$].

3 Enter the passphrase again in the **Confirm Passphrase** box.

4 Click **Enable**.

Data-at-Rest Encryption is now enabled, and all hard drives are secured so that, if they are removed from the DXi4700, they cannot be read using another system or device.

---

**Note:** Be sure to record the passphrase in a safe location. You should also save a backup copy of the Data-at-Rest Recovery file (see [Managing Recovery Files](#) on page 348).

---

### Managing Recovery Files

When Data-at-Rest Encryption is enabled, the system generates security keys based on the supplied passphrase. The DXi4700 maintains a copy

of the security keys on the system, and they are accessed automatically as needed.

There are a few, rare situations which may require manual entry of the passphrase or security key, such as performing a capacity expansion, or in the case of certain hardware failure scenarios. For this reason, you should record the passphrase in a safe location. In addition, you should back up the security keys by downloading or sending a Data-at-Rest Recovery file.

To download or send a copy of the recovery file:

1 Under **Download/Send Data-at-Rest Recovery File**, select an option:

- **Download** - Downloads a copy of the recovery file using the Web browser.
- **Email** - Sends a copy of the recovery file using e-mail. If selecting this option, type the e-mail address where you want to send the recovery file in the **Email Recipient** box.

---

**Note:** For the DXi4700 to send an e-mail, you must specify an outgoing e-mail server (see [Server](#) on page 357).

---

2 Type a security password in the **Password** box, and type it again in the **Confirm Password** box.

This password is used to protect the recovery file. You will be prompted for this password when opening the recovery file.

The password must meet all of the following requirements:

- Must be 8–32 characters long.
- Must contain at least 1 digit [0–9].
- Must contain at least 1 uppercase letter [A–Z].
- Must contain at least 1 lowercase letter [a–z].
- Must contain at least 1 non-alphanumeric character, for example, '+' or '@'.

---

**Note:** An underscore [ \_ ] is considered an alphanumeric character.

---

- Must *not* contain a space, tab, single quote ['], double quote ["], or dollar sign [\$].

### 3 Click **Apply**.

For the download option, click **OK** or **Save** to save the recovery file to your computer. For the e-mail option, the recovery file is automatically sent to the e-mail address you specified.

Keep a copy of the recovery file in a safe location in case it is needed later. The recovery file is a password-protected ZIP format file. To unzip the file, you must enter the password specified in step 2 above. The recovery file contains the passphrase used to enable Data-at-Rest Encryption as well as the security keys.

---

## FC Initiators and Targets

---

The **FC Initiators & Targets** page allows you to see all path to tape initiator and target ports and their associated World Wide Port Numbers (WWPNs). You can also change a Fibre Channel port to initiator or target mode.

---

**Note:** Fibre Channel ports are available in DXi4700 VTL and Multi-Protocol configurations only.

---

To access the **FC Initiators & Targets** page, on the **System** page, click the **FC Initiators & Targets** tab (see [Figure 187](#)).

---

Figure 187 FC Initiators and Targets Page

Use the **FC Initiators & Targets** page to perform the following tasks:

- View information about initiator and target Fibre Channel ports (see [Fibre Channel Initiators and Targets List](#) on page 350).
- Change the mode of a Fibre Channel port (see [Editing the Fibre Channel Port Type](#) on page 351).

### Fibre Channel Initiators and Targets List

The **Fibre Channel Initiators & Targets** section displays the following information for all Fibre Channel ports:

- **Alias** - The alias of the Fibre Channel port.
- **WWPN** - The World Wide Port Number of the Fibre Channel Port.
- **Port Type** - The current mode of the Fibre Channel port (**Initiator** or **Target**).



---

**Note:** Click **Refresh** to update the list with the latest port information.

---

The **Backpanel Locations** section displays a graphical representation of the Fibre Channel ports as they appear on the rear of the system. The diagram shows the status of each Fibre Channel port: **Mapped Target** (green), **Unmapped Target** (yellow), **Active Initiator** (blue), or **Inactive Initiator** (orange).

### Editing the Fibre Channel Port Type

Edit the port type to change the mode of a Fibre Channel port to initiator or target mode. You can change the port mode only on inactive connections:

- Before changing a Fibre Channel port type from initiator to target, unplug the Fibre Channel port wire connection.
- Before changing a Fibre Channel port type from target to initiator, un-map any host mapping on the Fibre Channel port, and unplug the Fibre Channel port wire connection.

To edit the Fibre Channel Port type:

- 1 Select the port in the list and click **Edit**.
- 2 Select the new port mode (**Initiator** or **Target**) in the drop-down box (see [Figure 187](#)).
- 3 Click **Update**.

---

# Notifications

The **Notifications** page allows you to manage the methods the DXi4700 uses to send notifications. The DXi4700 can send notifications by e-mail, or using SNMP (Simple Network Management Protocol).

To access the **Notifications** page, click the **Configuration** menu, and then click the **Notifications** tab.

The **Notifications** page contains the following tabs:

- [Email](#)
- [SNMP](#)

---

## Email

---

The **Email** page allows you to specify the recipients to notify by e-mail when administration alerts or service tickets occur. You can specify e-mail recipients, notification levels, and information about your e-mail configuration. You can also configure the DXi4700 to generate and send configuration and status reports.

---

**Note:** For more information about administration alerts and service tickets, see [DXi4700 Alerts](#) on page 201.

---

To access the **Email** page, on the **Notifications** page, click the **Email** tab.

The **Email** page contains the following tabs:

- [Recipients](#)
- [Server](#)
- [Test](#)
- [Email Reports](#)


### Recipients

The **Recipients** page allows you to manage the e-mail recipients the DXi4700 sends notifications to. You can add, edit, and delete e-mail recipients, and you can specify the types of notifications to send.

**Note:** To enable the DXi4700 to send e-mail, you must specify an outgoing e-mail server (see [Server](#) on page 357).

To access the **Recipients** page, on the **Email** page, click the **Recipients** tab (see [Figure 188](#)).

Figure 188 Recipients Page

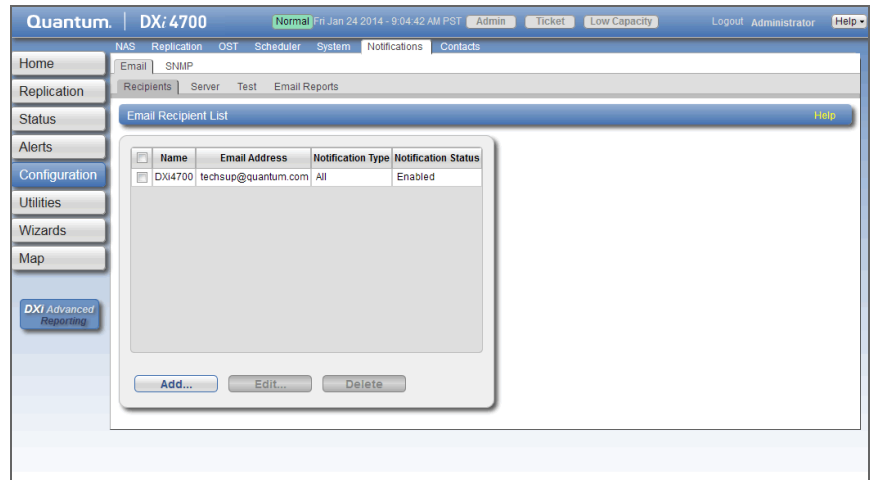

Use the **Recipients** page to perform the following tasks:

- View information about e-mail recipients (see [Email Recipient List](#) on page 353).
- Add an e-mail recipient (see [Adding an E-mail Recipient](#) on page 354).
- Edit an e-mail recipient (see [Editing an E-mail Recipient](#) on page 355).
- Delete an e-mail recipient (see [Deleting an E-mail Recipient](#) on page 357).

### Email Recipient List

The **Email Recipient List** displays the following information about e-mail recipients:

- **Name** - The name of the recipient.
- **Email Address** - The e-mail address of the recipient.

- **Notification Type** - The types of notifications sent to the recipient (**High, High and Medium, or All**).
- **Notification Status** - The status of e-mail notifications for the recipient (**Enabled or Disabled**).

### Adding an E-mail Recipient


Add an e-mail recipient to send notifications about administration alerts or service tickets to the recipient by e-mail.

To add an e-mail recipient:

- 1 Click **Add**.

The **Add Email Recipient** page displays (see [Figure 189](#)).

Figure 189 Add Email  
Recipient Page

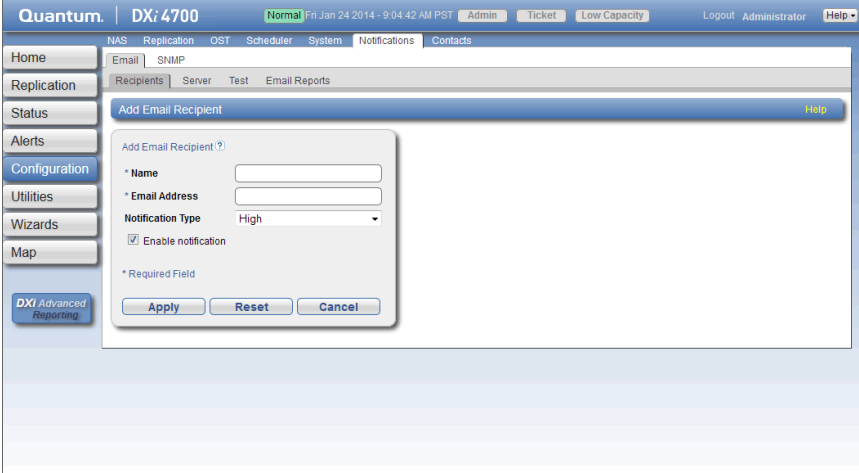

The screenshot shows the Quantum DXi4700 web interface. The top navigation bar includes 'Quantum | DXi4700' and a status indicator 'Normal Fri Jan 24 2014 - 9:04:42 AM PST'. The main menu on the left lists 'Home', 'Replication', 'Status', 'Alerts', 'Configuration', 'Utilities', 'Wizards', and 'Map'. The 'Configuration' menu is expanded, showing 'Email | SNMP'. The 'Email' sub-menu is active, displaying 'Recipients | Server | Test | Email Reports'. The 'Add Email Recipient' dialog box is open, featuring the following elements:

- Field: \* Name (text input)
- Field: \* Email Address (text input)
- Field: Notification Type (dropdown menu, currently set to 'High')
- Field:  Enable notification
- Text: \* Required Field
- Buttons: Apply, Reset, Cancel

- 2 Enter information about the recipient:

- **Name** - The name of the recipient.
- **Email Address** - The e-mail address of the recipient.
- **Notification Type** - Select the types of notifications to send to the recipient:
  - **High** - Send e-mail notifications for High service tickets. High service tickets indicate that a critical problem has occurred and needs to be resolved immediately. The

operation and performance of the DXi4700 are degraded, and there is a risk of system failure or data loss.

- **High and Medium** - Send e-mail notifications for High and Medium service tickets.

Medium service tickets indicate that a serious problem occurred and needs to be resolved, but it does not necessarily need to be fixed immediately. The operation and performance of the DXi4700 may be degraded.

- **All** - Send e-mail notifications for High, Middle, and Low service tickets, as well as any administration alerts.

Low service tickets indicate that a minor problem occurred and needs to be resolved, but the operation and performance of the DXi4700 are not significantly affected.

- 3 Select the **Enable notification** check box to enable sending of notifications to the recipient.

Or clear the **Enable notification** check box to disable sending of notifications to the recipient.

- 4 Click **Apply**.

### Editing an E-mail Recipient


Edit an e-mail recipient to change the recipient's e-mail address or the types of notifications sent to the recipient. You can also enable or disable sending of notifications to the recipient.

To edit an e-mail recipient:

- 1 Click **Edit**.

The **Edit Email Recipient** page displays (see [Figure 190](#)).

Figure 190 Edit Email  
Recipient Page

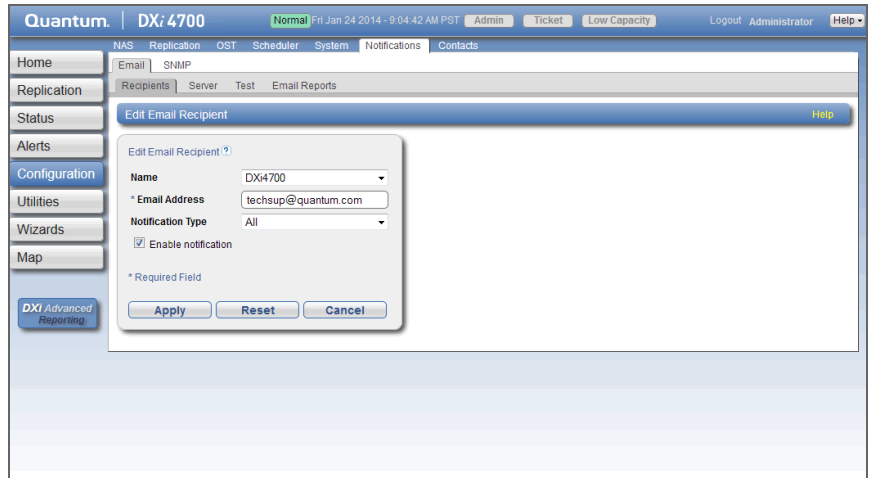

## 2 Enter information about the recipient:

**Note:** If you are editing an e-mail recipient, you cannot change the **Name**.

- **Name** - (Optional) Select a different e-mail recipient to edit.
- **Email Address** - The e-mail address of the recipient.
- **Notification Type** - Select the types of notifications to send to the recipient:
  - **High** - Send e-mail notifications for High service tickets.  
High service tickets indicate that a critical problem has occurred and needs to be resolved immediately. The operation and performance of the DXi4700 are degraded, and there is a risk of system failure or data loss.
  - **High and Medium** - Send e-mail notifications for High and Medium service tickets.  
Medium service tickets indicate that a serious problem occurred and needs to be resolved, but it does not necessarily need to be fixed immediately. The operation and performance of the DXi4700 may be degraded.
  - **All** - Send e-mail notifications for High, Middle, and Low service tickets, as well as any administration alerts.

Low service tickets indicate that a minor problem occurred and needs to be resolved, but the operation and performance of the DXi4700 are not significantly affected.

- 3 Select the **Enable notification** check box to enable sending of notifications to the recipient.

Or clear the **Enable notification** check box to disable sending of notifications to the recipient.

- 4 Click **Apply**.

### Deleting an E-mail Recipient

Delete an e-mail recipient if you no longer want the DXi4700 to send e-mail notifications to the recipient.

To delete an e-mail recipient, select the recipient and click **Delete**.

---

**Note:** You can select multiple recipients to delete at once.


---

### Server

The **Server** page allows you to specify the server for outgoing e-mail. The DXi4700 cannot send e-mail notifications until you specify the outgoing e-mail server.

To access the **Server** page, on the **Email** page, click the **Server** tab (see [Figure 191](#)).

Figure 191 Server Page

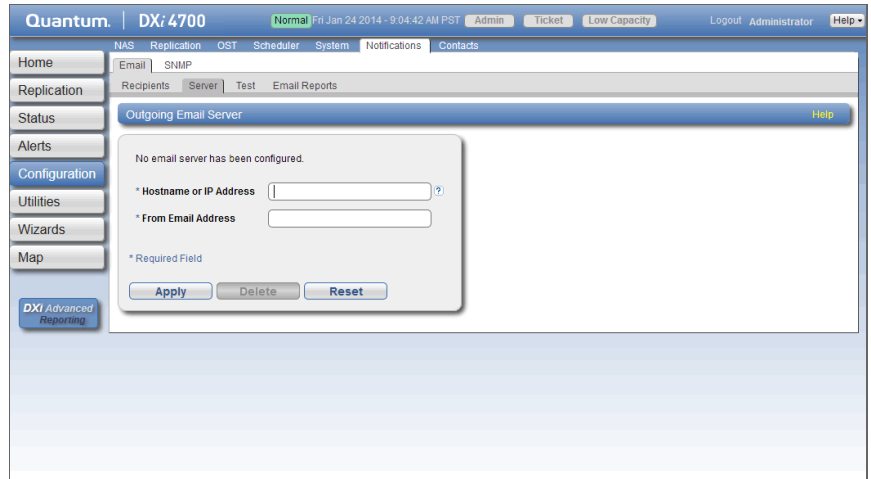

To specify the outgoing e-mail server:

- 1 In the **Hostname or IP Address** box, enter the hostname or IP address of the outgoing e-mail server.

---

**Note:** When entering IP addresses, never use an address that is in a reserved IP address range. To see a list of reserved IP address ranges, click the quick tip icon [?] located near the IP address field.

---

**Note:** To use hostname format, you must specify at least one DNS IP address on the **Network** page (see [Network](#) on page 317).

---

- 2 In the **From Email Address** box, enter the return e-mail address displayed in e-mails sent by the DXi4700.

Specify a return address that lets you easily identify the system that generated the e-mail (for example, systemname@any-domain.com). The return address must contain an @ symbol and a valid domain name, including a period.

- 3 (Optional) Select the **Enable Admin Alerts about Email Server not configured** check box to have system generate administration alerts to notify you if an e-mail server is not configured.
- 4 (Recommended) Select the **Enable automatic emails to Quantum** check box to periodically send system configuration and status



information to Quantum, including any software upgrades you have installed using the **Software Upgrade Utility**. Quantum Support can use this information to provide a better support experience in the future.

---

**Note:** Automatic e-mails contain configuration and status information only, and do not contain any customer data stored on the system.

---


5 Click **Apply**.

### Test

The **Email Test** page allows you to send a test e-mail to verify that e-mail notifications are correctly configured on the DXi4700.

To access the **Email Test** page, on the **Email** page, click the **Test** tab (see [Figure 192](#)).

Figure 192 Email Test Page

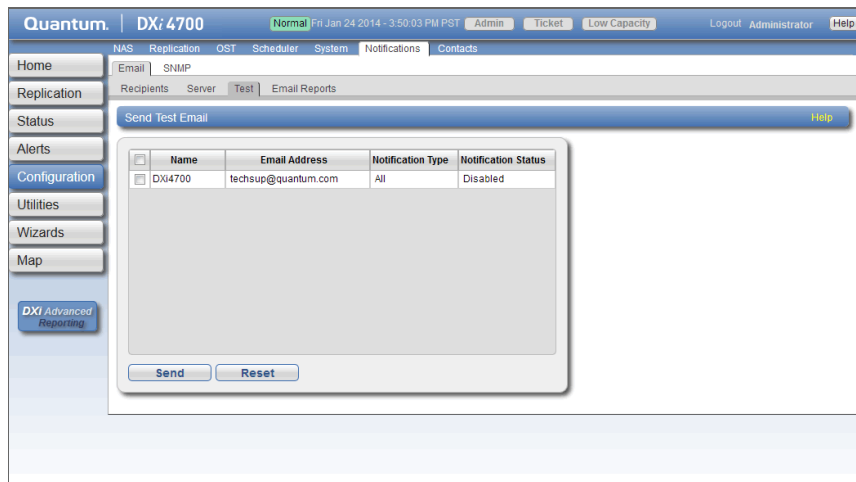

To send a test e-mail, select a recipient in the list and click **Send**. If the recipient does not receive the e-mail, make sure that the recipient's e-mail address is correct (see [Editing an E-mail Recipient](#) on page 355). Also make sure that the outgoing e-mail server is correct (see [Server](#) on page 357).

## Email Reports

The **Email Reports** page allows you to specify the e-mail recipients for automatically generated reports. You can also generate reports on demand.

The system can generate a report with system status data or with configuration data. Each report also includes the system serial number, date and time, and a message that informs the recipient that the e-mail is automated and they should not respond to it.

---

**Note:** To enable the DXi4700 to send e-mail, you must specify an outgoing e-mail server (see [Server](#) on page 357).

---

To access the **Email Reports** page, on the **Email** page, click the **Email Reports** tab.

The **Email Reports** page contains the following tabs:

- [Recipients](#)
- [On Demand](#)

### Recipients

The **Recipients** page allows you to specify the e-mail recipients who will receive all scheduled status data and configuration data reports.


---

**Note:** To configure the schedule when e-mail reports are sent, use the **Configuration > Scheduler** page (see [Scheduling E-mail Reports](#) on page 314).

---

To access the **Recipients** page, on the **Email Reports** page, click the **Recipients** tab (see [Figure 193](#)).

Figure 193 Recipients Page

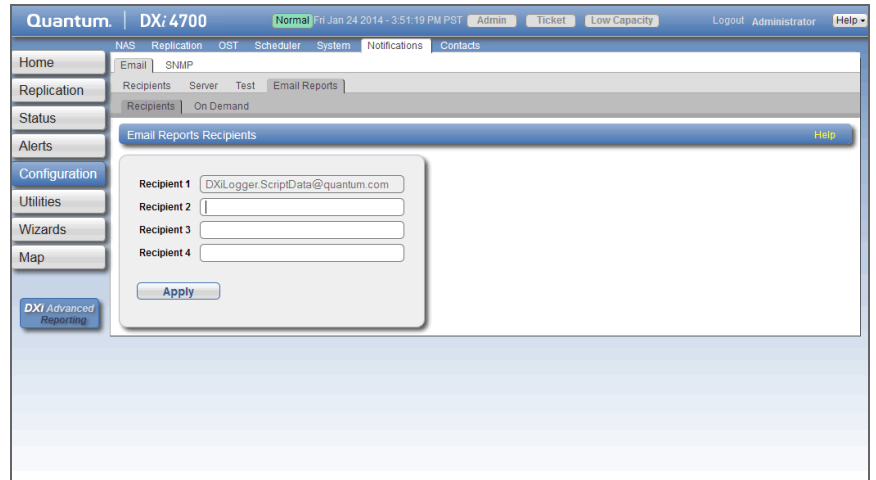


Enter the e-mail addresses of up to four recipients in the boxes, and then click **Apply**. When the DXi generates scheduled e-mail reports, they will be sent to the specified addresses.

### On Demand

The **On Demand** page allows you to manually generate a status data or configuration data report. The report is immediately sent to the specified e-mail recipient. You can also view configuration data.

To access the **On Demand** page, on the **Email Reports** page, click the **On Demand** tab (see [Figure 194](#)).

Figure 194 On Demand Page

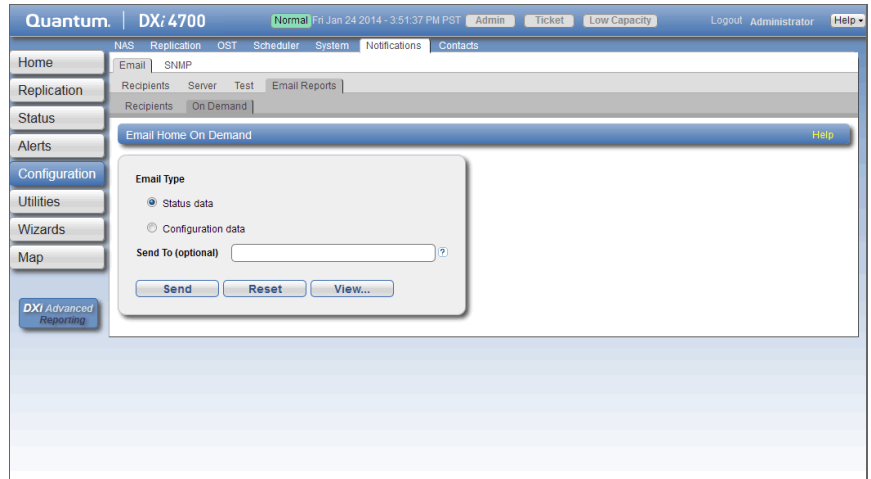

Use the **On Demand** page to perform the following tasks:

- Manually send a status data or configuration data report (see [Sending a Report](#) on page 362).
- View a configuration data report (see [Viewing Configuration Data](#) on page 362).

### *Sending a Report*

To manually send a status data or configuration data report:

- 1 Under **Email Type**, select the type of report to send (**Status data** or **Configuration data**).
- 2 In the **Send To** box, enter the e-mail address of the recipient.
- 3 Click **Send**.

### *Viewing Configuration Data*

To view a configuration data report:

- 1 Under **Email Type**, select **Configuration data**.
- 2 Click **View**.

The **System Configuration Report** window displays.

- 3 (Optional) Click **Save** to save a local copy of the report in TXT format.

---

## SNMP

---

The **SNMP** page allows you to configure the DXi4700 to send status messages using SNMP (Simple Network Management Protocol). The DXi4700 supports SNMP v1 and v2c.

SNMP works by sending messages, called protocol data units (PDUs), to different parts of a network, or communities. SNMP compliant devices, called agents, store data about themselves in Management Information Bases (MIBs) and return this data to the SNMP requesters.

You can configure the DXi4700 to act as an agent and send traps to a specified destination. You can also add SNMP community information.

To access the **SNMP** page, on the **Notifications** page, click the **SNMP** tab.

The **SNMP** page contains the following tabs:


- [Destinations](#)
- [Community](#)
- [Test](#)

### Destinations

The **Destinations** page allows you to manage the destinations the DXi4700 sends SNMP traps to. You can add, edit, and delete SNMP destinations, and you can specify the types of traps to send.

To access the **Destinations** page, on the **SNMP** page, click the **Destinations** tab (see [Figure 195](#) on page 364).

Figure 195 Destinations Page

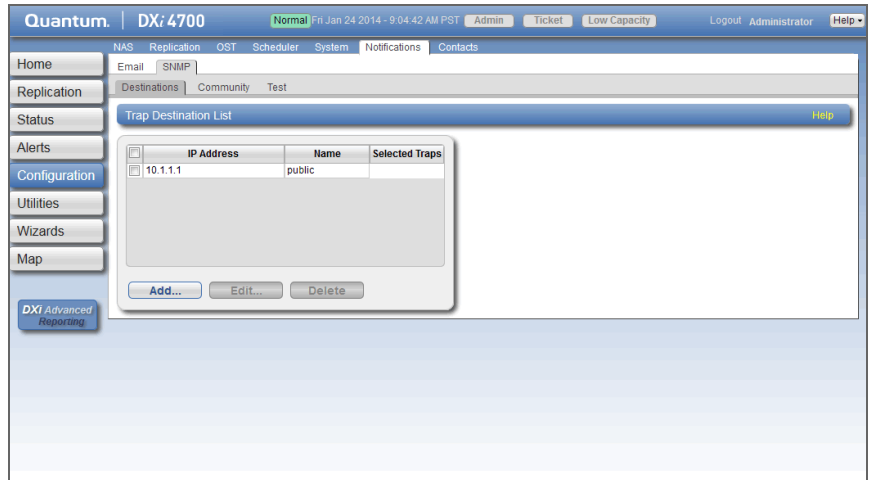

Use the **Destinations** page to perform the following tasks:

- View information about SNMP destinations (see [Trap Destination List](#) on page 364).
- Add an SNMP destination (see [Adding a Destination](#) on page 364).
- Edit an SNMP destination (see [Editing a Destination](#) on page 366).
- Delete an SNMP destination (see [Deleting a Destination](#) on page 367).

### Trap Destination List

The **Trap Destination List** displays the following information about SNMP destinations:

- **IP Address** - The IP address of the destination.
- **Name** - The name of the destination.
- **Selected Traps** - The traps the DXi4700 sends to the destination (**Failure**, **Warning**, **Informational**, **Available**, or **Unavailable**).

### Adding a Destination

Add an SNMP destination to send traps from the DXi4700 to the destination.

---

**Note:** You can add up to 5 destinations.


---

To add a destination:

- 1 Click **Add**.

The **Add Trap Destination** page displays (see [Figure 196](#)).

Figure 196 Add Trap Destination Page

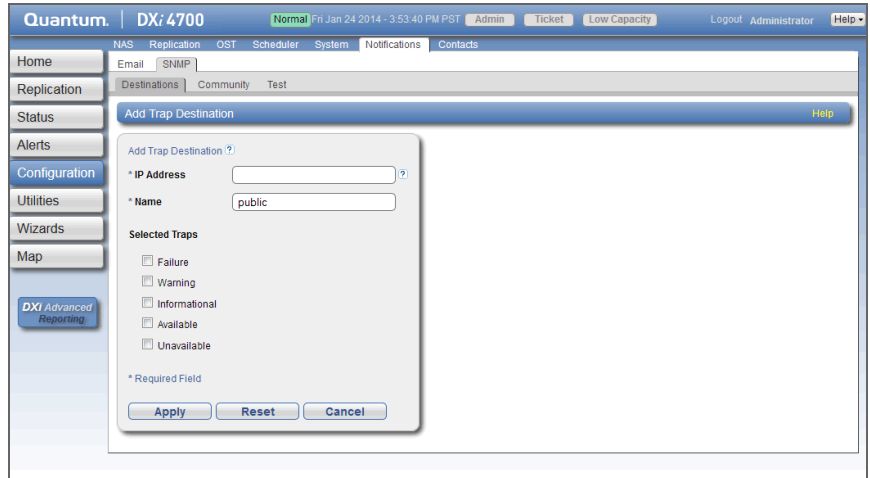

- 2 Enter information about the destination:

- **IP Address** - Enter the IP address of the system that will receive the traps generated by the DXi4700.

---

**Note:** When entering IP addresses, never use an address that is in a reserved IP address range. To see a list of reserved IP address ranges, click the quick tip icon [?] located near the IP address field.

---

---

**Note:** To use hostname format, you must specify at least one DNS IP address on the **Network** page (see [Network](#) on page 317).

---

- **Name** - Enter the name of the destination.

- 3 Select one or more traps to send to the destination:

- **Failure** - Sends failure traps.
- **Warning** - Sends warning traps.
- **Informational** - Sends informational traps.

- **Available** - Sends a trap when the system transitions from an unavailable to an available state.
- **Unavailable** - Sends a trap when the system transitions from an available to an unavailable state.

4 Click **Apply**.

### Editing a Destination


Edit an SNMP destination to change the name of the destination or the types of traps the DXi4700 sends to the destination.

To edit a destination:

1 Click **Edit**.

The **Edit Trap Destination** page displays (see [Figure 197](#)).

Figure 197 Edit Trap Destination Page

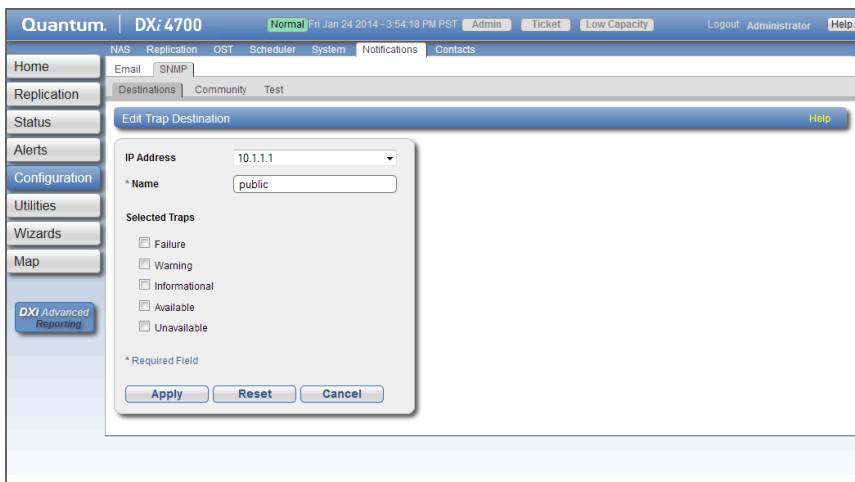

2 Enter information about the destination:

---

**Note:** If you are editing a destination, you cannot change the **IP Address**.

---

- **IP Address** - (Optional) Select a different destination to edit.
- **Name** - Enter the name of the destination.

3 Select one or more traps to send to the destination:



- **Failure** - Sends failure traps.
- **Warning** - Sends warning traps.
- **Informational** - Sends informational traps.
- **Available** - Sends a trap when the system transitions from an unavailable to an available state.
- **Unavailable** - Sends a trap when the system transitions from an available to an unavailable state.

4 Click **Apply**.

### Deleting a Destination

Delete an SNMP destination if you no longer want the DXi4700 to send traps to the destination.

To delete a destination, select the destination and click **Delete**.

---

**Note:** You can select multiple destinations to delete at once.


---

## Community

The **Community** page allows you to manage SNMP community information for the DXi4700. You can add, edit, and delete communities, and you can specify the community access type.

To access the **Community** page, on the **SNMP** page, click the **Community** tab (see [Figure 198](#)).

Figure 198 Community Page

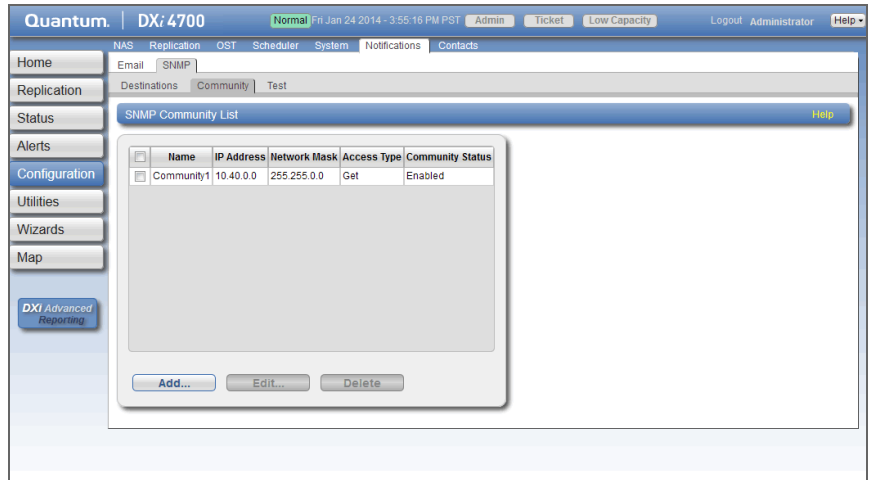

Use the **Community** page to perform the following tasks:

- View information about SNMP communities (see [SNMP Community List](#) on page 368).
- Add an SNMP community (see [Adding a Community](#) on page 368).
- Edit an SNMP community (see [Editing a Community](#) on page 370).
- Delete an SNMP community (see [Deleting a Community](#) on page 372).

### SNMP Community List

The **SNMP Community List** displays the following information about SNMP communities:

- **Name** - The name of the community.
- **IP Address** - The IP address of the community.
- **Network Mask** - The network mask of the community.
- **Access Type** - The access type of the community (**Get** or **Get/Set**).
- **Community Status** - The status of the community (**Enabled** or **Disabled**).

### Adding a Community

Add an SNMP community to include the DXi4700 in a group of devices that are monitored by a common management station.


**Note:** If no communities are defined, the SNMP agent is not accessible.

To add a community:

- 1 Click **Add**.

The **Add SNMP Community** page displays (see [Figure 199](#)).

Figure 199 Add SNMP Community Page

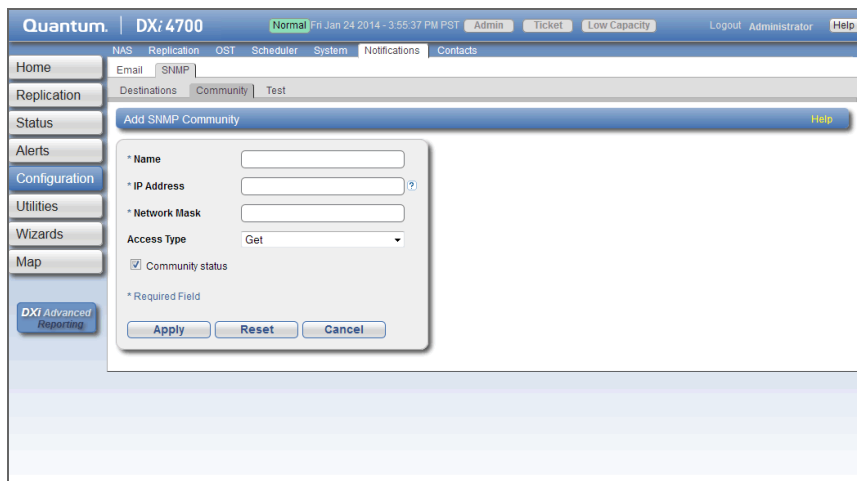

- 2 In the **Name** box, enter a unique **Name** for the community (up to 20 characters).

Valid characters are letters, numbers, hyphens, and underscores.

- 3 Enter a valid **IP Address** and **Network Mask** pair.

A pair is valid if performing a logical bitwise **AND** operation on the IP address and the network mask results in the IP address. See the table below for examples:

IP Address / Network Mask	Result
10.40.166.87 255.255.255.255	Allows access only from 10.40.166.87
10.40.166.87 10.40.166.87	Allows access only from 10.40.166.87

IP Address / Network Mask	Result
10.40.166.87 10.40.166.0	Invalid because the logical bitwise operation (address <b>AND</b> mask) is not equal to the address
10.40.166.87 255.255.0.0	Invalid because the logical bitwise operation (address <b>AND</b> mask) is not equal to the address
10.40.0.0 255.255.0.0	Allows access from any client with address 10.40.xx.xx

---

**Note:** If you define a single community and set both the IP address and network mask to 0.0.0.0 (or leave both blank), then IP address-based access control is disabled. In this case, the SNMP agent is accessible from any IP address.

---

**Note:** When entering IP addresses, never use an address that is in a reserved IP address range. To see a list of reserved IP address ranges, click the quick tip icon [?] located near the IP address field.

---

- 4 In the **Access Type** drop-down box, select the access type for the community:
  - **Get** - Allows SNMP get operations.
  - **Get/Set** - Allows both SNMP **get** and **put** operations.
- 5 Select the **Community status** check box to enable the community.  
Or clear the **Community status** check box to disable the community.
- 6 Click **Apply**.

### Editing a Community


Edit an SNMP community to change the IP address or access type for the community. You can also enable or disable the community.

To edit a community:

1 Click **Edit**.

The **Edit SNMP Community** page displays (see [Figure 199](#)).

Figure 200 Edit SNMP Community Page

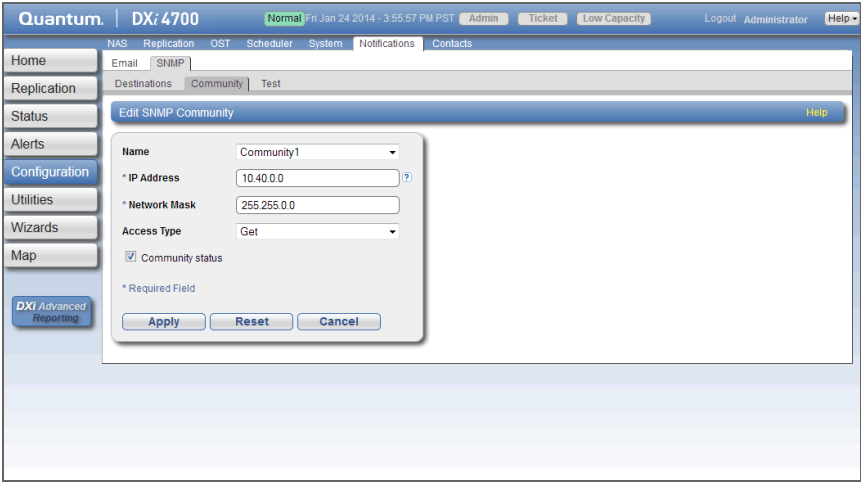

2 (Optional) In the **Name** box, select a different community to edit.

3 Enter a valid **IP Address and Network Mask** pair.

A pair is valid if performing a logical bitwise **AND** operation on the IP address and the network mask results in the IP address. See the table below for examples:

IP Address / Network Mask	Result
10.40.166.87 255.255.255.255	Allows access only from 10.40.166.87
10.40.166.87 10.40.166.87	Allows access only from 10.40.166.87
10.40.166.87 10.40.166.0	Invalid because the logical bitwise operation (address <b>AND</b> mask) is not equal to the address

IP Address / Network Mask	Result
10.40.166.87 255.255.0.0	Invalid because the logical bitwise operation (address <b>AND</b> mask) is not equal to the address
10.40.0.0 255.255.0.0	Allows access from any client with address 10.40.xx.xx

---

**Note:** If you define a single community and set both the IP address and network mask to 0.0.0.0 (or leave both blank), then IP address-based access control is disabled. In this case, the SNMP agent is accessible from any IP address.

---

---

**Note:** When entering IP addresses, never use an address that is in a reserved IP address range. To see a list of reserved IP address ranges, click the quick tip icon [?] located near the IP address field.

---

- 4 In the **Access Type** drop-down box, select the access type for the community:
  - **Get** - Allows SNMP get operations.
  - **Get/Set** - Allows both SNMP **get** and **put** operations.
- 5 Select the **Community status** check box to enable the community.  
Or clear the **Community status** check box to disable the community.
- 6 Click **Apply**.

### Deleting a Community

Delete an SNMP community if you no longer want the DXi4700 to belong to a group of devices that are monitored by a common management station.

To delete a community, select the community and click **Delete**.

---

**Note:** You can select multiple communities to delete at once.


---

### Test

The **SNMP Test** page allows you to send a test SNMP trap to verify that SNMP is correctly configured on the DXi4700.

To access the **SNMP Test** page, on the **SNMP** page, click the **Test** tab (see [Figure 201](#)).

Figure 201 SNMP Test Page

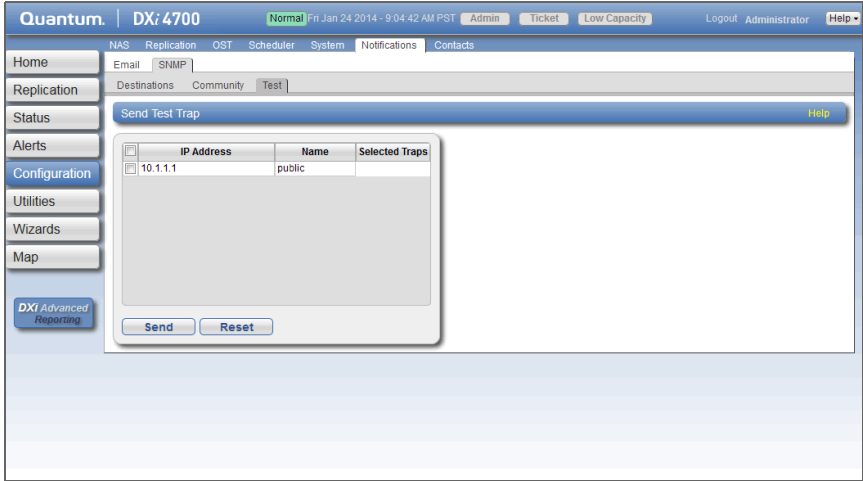

To send a test SNMP trap, select a destination in the list and click **Send**. If the destination does not receive the SNMP trap, make sure that the destination IP address is correct (see [Editing a Destination](#) on page 366). Also make sure that the community information is correct (see [Community](#) on page 367).

## Contacts

The **Contacts** page allows you to enter company information. You can also enter individual contact information for primary and secondary contacts.

To access the **Contacts** page, click the **Configuration** menu, and then click the **Contacts** tab.

The **Contacts** page contains the following tabs:


- [Company](#)
- [Primary and Secondary](#)

### Company

The **Company** page allows you to enter information about the company and location of the DXi4700.

To access the **Company** page, on the **Contacts** page, click the **Company** tab (see [Figure 202](#)).

Figure 202 Company Page

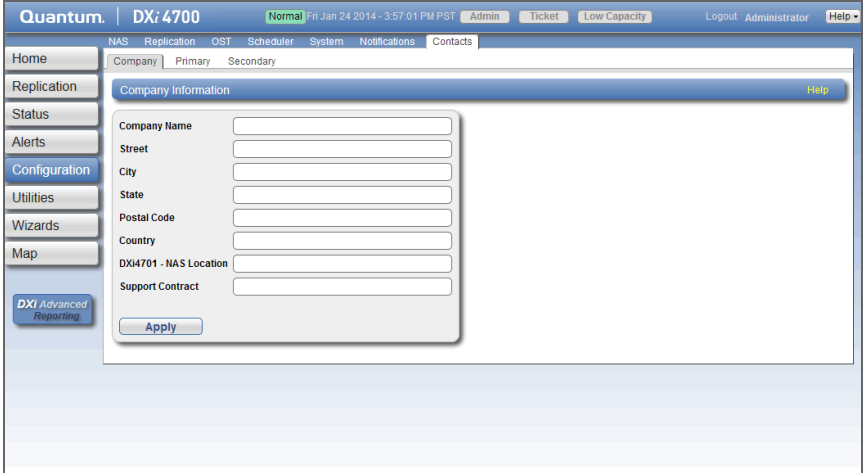

The screenshot shows the Quantum DXi4700 web interface. The top navigation bar includes the Quantum logo, the device name 'DXi:4700', the status 'Normal', the date and time 'Fri Jan 24 2014 - 3:57:01 PM PST', and user options 'Admin', 'Ticket', 'Low Capacity', 'Logout', 'Administrator', and 'Help'. Below the navigation bar, there are tabs for 'Company', 'Primary', and 'Secondary'. The 'Company' tab is selected, and the 'Company Information' form is displayed. The form contains the following fields: 'Company Name', 'Street', 'City', 'State', 'Postal Code', 'Country', 'DXi4701 - NAS Location', and 'Support Contract'. An 'Apply' button is located at the bottom of the form. On the left side of the interface, there is a vertical menu with options: 'Home', 'Replication', 'Status', 'Alerts', 'Configuration', 'Utilities', 'Wizards', and 'Map'. A 'DXi Advanced Reporting' button is also visible in the bottom left corner.

To enter company information:

- 1 Enter the following information:



- **Company Name** - Enter the company name.
- **Street** - Enter the company street address.
- **City** - Enter the company city.
- **State** - Enter the company state.
- **Postal Code** - Enter the company postal code.
- **Country** - Enter the company country.
- **DXi4700 Location** - Enter the physical location of the DXi4700 (for example, data center).
- **Support Contract** - Enter the support contract number for the DXi4700.


2 Click **Apply**.

## Primary and Secondary

The **Primary** and **Secondary** pages allow you to enter information about the primary and secondary contacts for the DXi4700.

To access the **Primary** or **Secondary** page, on the **Contacts** page, click the **Primary** or **Secondary** tab (see [Figure 203](#)).

Figure 203 Primary and Secondary Pages

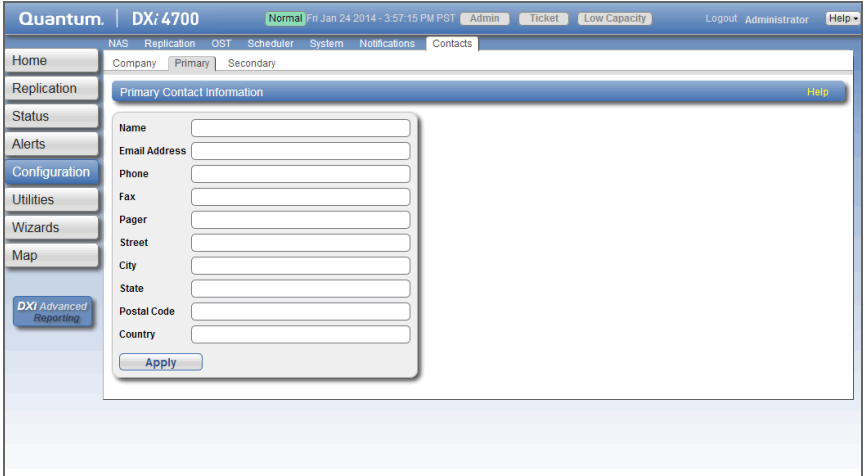


The screenshot displays the Quantum DXi4700 web interface. The top navigation bar includes the Quantum logo, the product name 'DXi4700', and system status indicators such as 'Normal', 'Admin', 'Ticket', 'Low Capacity', 'Logout', 'Administrator', and 'Help'. Below the navigation bar, a menu on the left lists various system functions: Home, Replication, Status, Alerts, Configuration (highlighted), Utilities, Wizards, and Map. The main content area shows the 'Contacts' page with tabs for 'Company', 'Primary', and 'Secondary'. The 'Primary' tab is active, displaying a 'Primary Contact Information' form with the following fields: Name, Email Address, Phone, Fax, Pager, Street, City, State, Postal Code, and Country. An 'Apply' button is located at the bottom of the form.

To enter primary or secondary contact information:

- 1 Enter the following information:

- **Name** - Enter the contact name.
- **Email Address** - (Required) Enter the contact e-mail address.
- **Phone** - Enter the contact phone number.
- **Fax** - Enter the contact fax number.
- **Pager** - Enter the contact pager number.
- **Street** - Enter the contact street address.
- **City** - Enter the contact city.
- **State** - Enter the contact state.
- **Postal Code** - Enter the contact postal code.
- **Country** - Enter the contact country.

2 Click **Apply**.

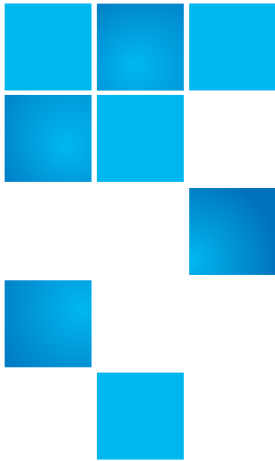

## Chapter 10

# DXi4700 Utilities

---

The **Utilities** pages to perform maintenance tasks on the DXi4700, such as generating and downloading diagnostic files, analyzing disk and network performance, managing space reclamation, and securely erasing the system. You can also install license keys, upgrade the system software, and reboot or shut down the DXi4700.

To access the **Utilities** pages, click the **Utilities** menu.

The **Utilities** pages contain the following tabs:

- [Diagnostics](#)
- [Analyzer](#)
- [Space Reclamation](#)
- [Secure Shred](#)
- [License Keys](#)
- [Software Upgrades](#)
- [Reboot & Shutdown](#)

---

# Diagnostics

The **Diagnostics** page allows you to generate and download diagnostic files. You can also perform healthchecks to verify the health and integrity of the data deduplication blockpool.

The diagnostic files are helpful when troubleshooting problems on the DXi4700. Generate and download the diagnostic files before contacting Quantum customer support.

To access the **Diagnostics** page, click the **Utilities** menu, and then click the **Diagnostics** tab.

The **Diagnostics** page contains the following tabs:

- [System Diag File](#)
- [Storage Array Diag File](#)
- [DSET](#)
- [Healthchecks](#)

---

## System Diag File

---

The **System Diag File** page allows you to generate and download a system diagnostics file. This file contains the diagnostic logs for all of the system components.

To access the **System Diag File** page, on the **Diagnostics** page, click the **System Diag File** tab (see [Figure 204](#)).

Figure 204 System Diag File  
Page



To generate and download a system diagnostics file:

- 1 Click **Generate New** to generate a new system diagnostics file.

The system generates a new diagnostics file. This can take several minutes.

- 2 After the file finishes generating, click the link to enable the **Download Current** button.

- 3 To download the generated diagnostics file, click **Download Current**.

A dialog box displays asking if you want to open or save the file.

- 4 Click **Save** or **OK** to download the file.

## Storage Array Diag File

The **Storage Array Diag File** page allows you to generate and download a storage array diagnostics file. This file contains the diagnostic logs for the storage arrays.

To access the **Storage Array Diag File** page, on the **Diagnostics** page, click the **Storage Array Diag File** tab (see [Figure 205](#)).

Figure 205 Storage Array Diag  
File Page



To generate and download a system diagnostics file:

- 1 Click **Generate New** to generate a new storage array diagnostics file.

The system generates a new diagnostics file. This can take several minutes.

- 2 After the file finishes generating, click the link to enable the **Download Current** button.
- 3 To download the generated diagnostics file, click **Download Current**.

A dialog box displays asking if you want to open or save the file.

- 4 Click **Save** or **OK** to download the file.


## DSET

The **DSET** page allows you to generate a DSET report. DSET is a hardware diagnostic utility included with the DXi4700. A DSET report contains an array of status information about the DXi4700 hardware. A Quantum customer support representative can use this information to help identify and diagnose problems.

**Note:** Generate a DSET report only if directed to do so by a Quantum customer support representative.

To access the **DSET** page, on the **Diagnostics** page, click the **DSET** tab (see [Figure 206](#)).

Figure 206 DSET Page

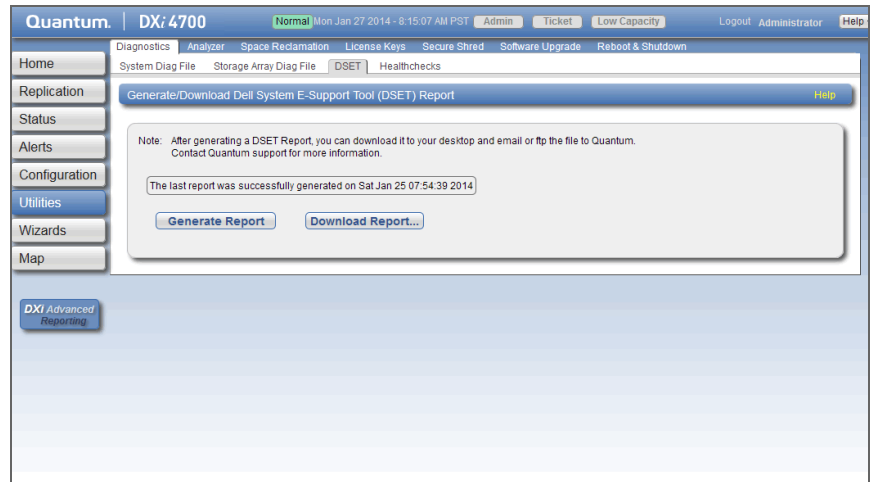

To generate a DSET report:

**1 Click Generate Report.**

Click **OK** to continue. The system generates a new DSET report. This can take several minutes.

---

**Note:** You may see error or warning messages in the status text as the DSET report is generated. This is expected and does not indicate a problem with the report.

---

**2 To download the newly generated DSET report, click Download Report.**

A dialog box displays asking if you want to open or save the file.

**3 Click Save or OK to download the file.**

The DSET report is saved as a compressed zip file to the specified location.

**4 Locate the DSET report you downloaded and send it to the e-mail or FTP address provided by Quantum Customer Support.**

## Healthchecks

The **Healthchecks** page allows you to perform tests that verify the health and integrity of the data deduplication blockpool. You can also enable and disable healthchecks.

**Note:** To configure the DXi4700 to automatically run the healthchecks at specified intervals, use the **Configuration > Scheduler** page (see [Scheduling Healthchecks](#) on page 314).

To access the **Healthchecks** page, on the **Diagnostics** page, click the **Healthchecks** tab.

The **Healthchecks** page contains the following tabs:


- [General](#)
- [Status](#)

### General

The **General** page allows you to start running the healthchecks or stop them if they are already running. When you start the healthchecks, only the healthchecks that are currently enabled are run (see [Status](#) on page 383).

To access the **General** page, on the **Healthchecks** page, click the **General** tab (see [Figure 207](#)).

Figure 207 General Page

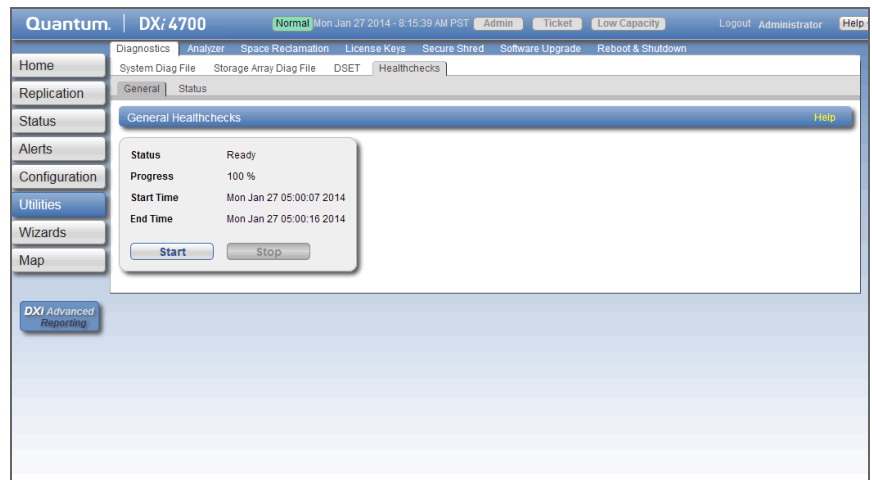



The **General** page displays the following information about the most recently run healthchecks:

- **Status** - The status of the healthchecks (**In Progress**, **Success**, **Failed**, or **Interrupted**).
- **Progress** - The percentage complete of the healthchecks.
- **Start Time** - The time the healthchecks started.
- **End Time** - The time the healthchecks ended.

Use the **General** page to perform the following tasks:

- To start all enabled healthchecks, click **Start**.
- To stop all healthchecks in progress, click **Stop**.

## Status


The **Status** page allows you to view information about the most recent test results for each healthcheck. You can also enable or disable a healthcheck.

The following healthchecks are available:

- **De-Duplication** - Checks the overall health of the blockpool. This healthcheck verifies that the metadata in the namespace file and the data tags in the blockpool are correctly in sync.
- **Integrity** - Checks the integrity of data in the blockpool. This healthcheck examines a sample of data tags in the blockpool and verifies that the data has been properly stored without errors or corruption.

To access the **Status** page, on the **Healthchecks** page, click the **Status** tab (see [Figure 208](#)).

Figure 208 Status Page

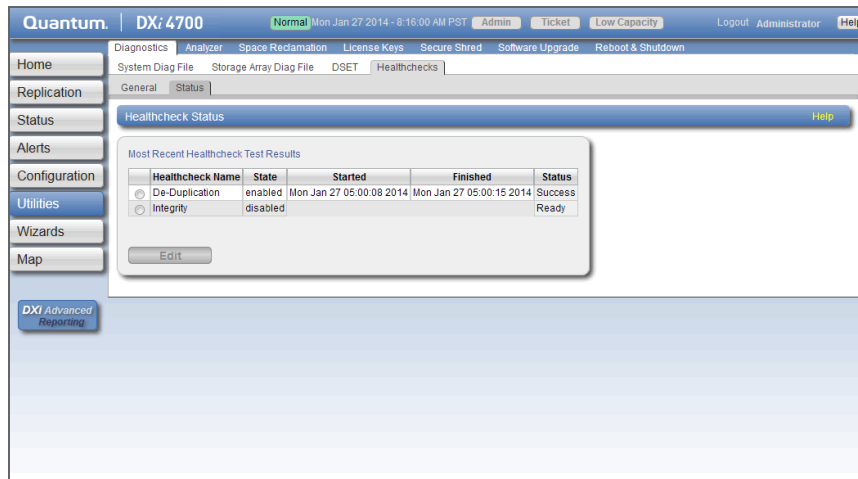

The **Status** page displays the following information about the most recently run test for each healthcheck:

- **Healthcheck Name** - The name of the healthcheck.
- **State** - The state of the healthcheck (**enabled** or **disabled**).
- **Started** - The time the healthcheck started.
- **Finished** - The time the healthcheck ended.
- **Status** - The status of the healthcheck (**Success** or **Failed**).

---

**Note:** If running a healthcheck results in the Contact Support status, contact Quantum Customer Support for further assistance.


---

To enable or disable a healthcheck:

- 1 Select the healthcheck and click **Edit**.

The **Edit Healthcheck** page displays (see [Figure 209](#)).

Figure 209 Edit Healthcheck  
Page

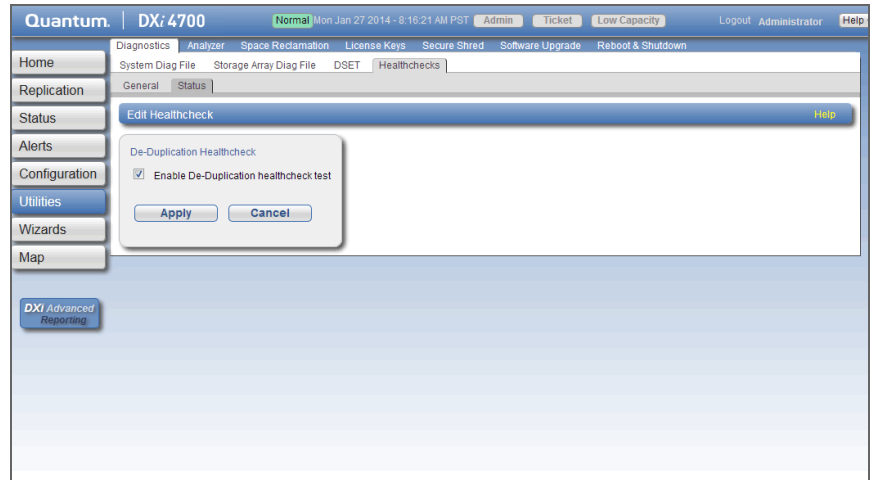

- 2 Select the check box to enable the healthcheck.  
Or clear the check box to disable the healthcheck.
- 3 Click **Apply**.

---

**Note:** When healthchecks are run (manually or scheduled), only enabled healthchecks are run.

---

---

**Caution:** If a healthcheck fails when it is run, there may be a problem in the blockpool that could cause replication or restore operations to fail. Contact Quantum customer support if a healthcheck fails.

---

## Analyzer

The **Analyzer** page allows you to analyze the network and disk performance of the DXi4700.

To access the **Analyzer** page, click the **Utilities** menu, and then click the **Analyzer** tab.

The **Analyzer** page contains the following tabs:

- [Network](#)
- [Disk](#)

---

## Network

---

The **Network Analyzer** page allows you to analyze network performance by measuring network throughput between the DXi4700 and another system (such as another DXi system).

To access the **Network Analyzer** page, on the **Analyzer** page, click the **Network** tab.

The **Network Analyzer** page contains the following tabs:

- [Performance](#)
- [Settings](#)


## Performance

The **Performance** page allows you to perform network analysis with another system (the target). You can also view results from the most recently run test

To access the **Performance** page, on the **Network Analyzer** page, click the **Performance** tab (see [Figure 210](#)).

---

Figure 210 Performance Page

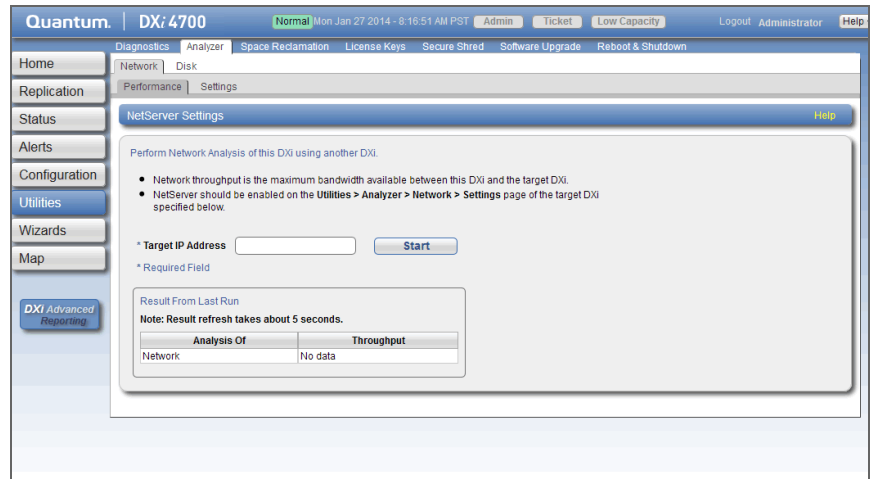

To perform network analysis:

- 1 In the **Target IP Address** box, enter the IP address of the system to perform network analysis with.

The target system must have NetServer enabled (see [Settings](#) on page 387).

- 2 Click **Start**.

The throughput result is displayed under **Result From Last Run** in MB/s.

---

**Note:** It takes approximately 5 seconds to refresh the results.


---

## Settings

The **Settings** page allows you to enable or disable NetServer on the DXi4700. NetServer must be enabled on the target DXi system to perform network analysis with the system (see [Performance](#) on page 386).

To access the **Settings** page, on the **Network Analyzer** page, click the **Settings** tab (see [Figure 211](#)).

Figure 211 Settings Page

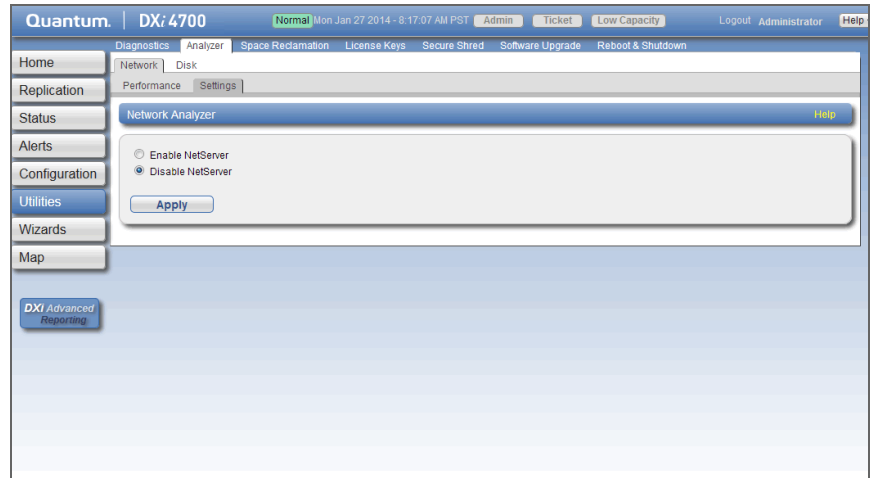

To enable or disable NetServer on the target DXi4700:

- 1 Select **Enable NetServer** to enable NetServer.  
Or select **Disable NetServer** to disable NetServer.

2 Click **Apply**.

---

**Note:** You should disable NetServer on the target system when you are done analyzing network performance.

---

---

## Disk

---

The **Disk Analyzer** page allows you to analyze disk performance by measuring disk read and write throughput.

To access the **Disk Analyzer** page, on the **Analyzer** page, click the **Disk** tab (see [Figure 212](#)).

---

Figure 212 Disk Analyzer Page



To perform disk analysis, click **Start**. The throughput result is displayed under **Result From Last Run** in KB/s.

---

**Note:** It takes approximately 5 seconds to refresh the results.

---

## Space Reclamation

The **Space Reclamation** page allows you to manage space reclamation activity on the DXi4700. You can start or stop space reclamation. You can also monitor the progress of space reclamation activity.

During space reclamation, the DXi4700 searches the blockpool for tags that are no longer referenced and then deletes the unneeded tags to free up space.

In addition, the DXi automatically compacts reclaimable space in the following ways:

- During data ingest, reclaimable space is compacted as needed to provide space for new, deduplicated data.
- If the DXi is not in Low Space state, compaction starts when used disk space reaches a high level and there is sufficient reclaimable space. Compaction stops when used disk space falls below the high threshold state. The reclaimed space can be used to store new deduplicated or non-deduplicated data.
- If the DXi is in Low Space state, compaction starts and continues to run until the DXi exits Low Space state. The reclaimed space can be used to store new deduplicated or non-deduplicated data.

---

**Note:** The current compaction status is displayed on the **Home** page (see [DXi4700 Home Page](#) on page 109).

---

---

**Caution:** For correct system operation, space reclamation *must* be run at regular intervals (at least once a week). Quantum recommends creating a schedule to automatically run space reclamation (see [Scheduling Space Reclamation](#) on page 315). Because space reclamation can affect system performance, avoid running space reclamation during known backup periods.

---

The space reclamation process can include up to four stages (see [Space Reclamation Status](#) on page 391).


- **New or Normal Mode** - To increase performance, when space reclamation is initiated on the **Space Reclamation** page or as a

scheduled event, only Stage 2 (Calculating Deletion Candidates) and Stage 3 (Deleting New Candidates) are run.

- **Low Space or Legacy Mode** - When disk capacity is low, space reclamation is automatically started to free up disk space. In this case, all four stages of space reclamation are run.

To access the **Space Reclamation** page, click the **Utilities** menu, and then click the **Space Reclamation** tab (see [Figure 213](#)).

Figure 213 Space Reclamation Page

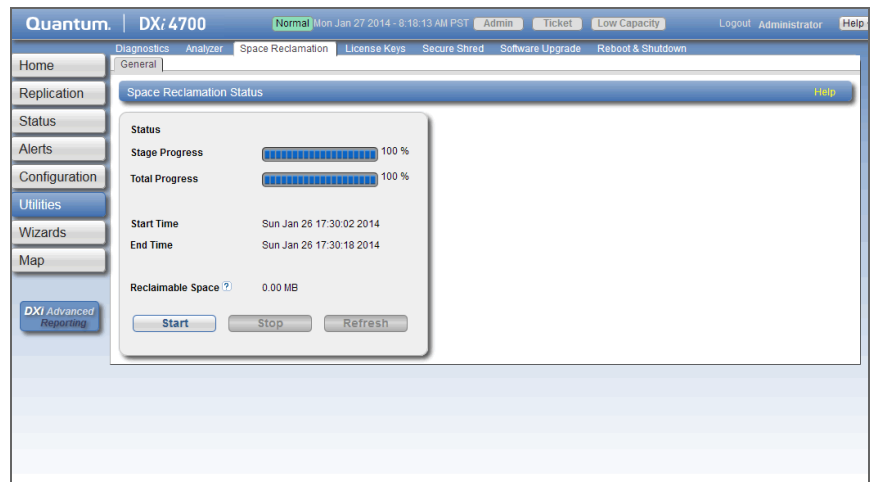

The **Space Reclamation** page displays the following information about the current or most recent space reclamation activity:

- **Status** - The status of space reclamation (see [Space Reclamation Status](#) on page 391).
- **Stage Progress** - The progress of the current space reclamation stage.
- **Total Progress** - The overall progress of space reclamation activity.
- **Start Time** - The time space reclamation started.
- **End Time** - The time space reclamation ended.
- **Reclaimable Space** - The disk space that is occupied by outdated deduplicated data and which will be automatically reused if additional space for new deduplicated data is needed. Displays **Pending** when space reclamation is running.



---

**Note:** Because the DXi can automatically use reclaimable space to store new deduplicated data, space reclamation statistics may be affected (appear lower) if ingest occurs at the same time as space reclamation.

---

Use the **Space Reclamation** page to perform the following tasks:

- To start space reclamation, click **Start**.
- To stop space reclamation, click **Stop**.
- To update the display while space reclamation is running, click **Refresh**.

### Space Reclamation Status

Space reclamation can have one of the following statuses:

- **Reclamation Completed** - Space reclamation completed without errors.
- **Reclamation Started by User** - Space reclamation was started manually by a user.
- **Reclamation Interrupted** - Space reclamation was interrupted and must be restarted.
- **Reclamation Interrupted by User** - Space reclamation was interrupted by a user and must be restarted.
- **Reclamation Interrupted - Error Encountered** - Space reclamation was interrupted because an error was encountered and must be restarted.
- **Reclamation Interrupt by User - Cannot be interrupted at this time** - Because the system is in a Low Space state, space reclamation cannot be stopped. Wait for space reclamation to finish freeing up disk space.
- **Reclamation Completed - No Candidates To Delete** - Space reclamation completed, but there were no candidates for reclamation.
- **Reclaim Existing Blockpool Freed Space** - The existing blockpool space has been reclaimed for use.
- **Stage 1 of 4 - Reclaim Disk Space (Initial)**.

- **Stage 2 of 4** - Calculating Deletion Candidates.
- **Stage 3 of 4** - Deleting New Candidates.
- **Stage 4 of 4** - Reclaim Disk Space.

## License Keys

The **License Keys** page allows you to add a license key to the DXi4700 to enable new functionality. You can also view a list of available licenses and see the licenses that are installed on the system.

For all DXi4700 systems, you can add a storage capacity upgrade license key to enable installed hardware capacity. For more information, see [Adding a License Key](#) on page 394.

For DXi4700 systems configured with all 4TB hard drives that support Self Encrypting Drive (SED) technology, you can add a license for Data-at-Rest Encryption (not available in all regions). For more information, see [Licensing Data-at-Rest Encryption](#) on page 396.

To access the **License Keys** page, click the **Utilities** menu, and then click the **License Keys** tab (see [Figure 214](#)).

Figure 214 License Keys Page

Quantum. DXi 4700 Normal Mon Jan 27 2014 - 8:18:52 AM PST Admin Ticket Low Capacity Logout Administrator Help

Home Replication Status Alerts Configuration Utilities Wizards Map

DXi Advanced Reporting

License Keys

License Key List

Click on License Name for additional information.

Name	Installed	Date Installed	Description
NAS	Yes	2014-01-07 15:01:11	Enables NAS (NFS, CIFS) connectivity
Data Deduplication	Yes	2014-01-07 15:05:28	Enables data deduplication and compression
Replication	Yes	2014-01-07 15:06:20	Enables replication to other DXi
Storage Capacity	Yes	2014-01-07 15:04:38	Enables storage capacity
OST	Yes	2014-01-07 15:07:15	Enables Open Storage backup with Symantec OST
Data-at-Rest Encryption	Yes	2014-01-07 15:08:07	Enables Data-at-Rest encryption

Serial Number SV1402BVT12543

License Key

New Key

No License Name selected for display.

Use the **License Keys** page to perform the following tasks:

- View information about available and installed licenses (see [License Key Information](#) on page 393).
- Add a license key (see [Adding a License Key](#) on page 394).
- License the Data-at-Rest Encryption feature ([Licensing Data-at-Rest Encryption](#) on page 396).

---

## License Key Information

---

The **License Key List** displays the following information about licenses that are available for the DXi4700:

- **Name** - The name of the license.  
To display details for a license, click the license name. For a description of the licenses that are available on the DXi4700, see [Available Licenses](#) on page 393.
- **Installed** - The state of the license (**Yes** if the license is installed, **No** if the license is not installed).
- **Date Installed** - If installed, the date the license was installed.
- **Description** - A brief description of the license.

### Available Licenses

The following licenses are available from Quantum:

- **VTL** - Enables the VTL interface to hosts. Additional virtual tape drives licenses are added through the VTL license area. (License key for 32 VTDs is pre-installed on DXi4700 VTL and Multi-Protocol configurations.)
- **NAS** - Enables NAS (NFS, CIFS) connectivity. (License key is pre-installed on DXi4700 NAS and Multi-Protocol configurations.)
- **Data Deduplication** - Enables data deduplication and compression. (License key is pre-installed on all DXi4700 models.)
- **Replication** - Enables replication to other DXi systems. (License key is pre-installed on all DXi4700 models.)
- **Storage Capacity** - Enables the purchased storage capacity for the system. (License key for 5 TB storage capacity is pre-installed on all DXi4700 configurations.)

For configurations larger than 5 TB, a license for the total purchased storage capacity ships with the system. In addition, usable storage capacity can be upgraded at any time after purchase by adding a storage capacity upgrade license to enable installed hardware capacity, up to a total of 135 TB.

---

**Note:** If you purchase a storage capacity upgrade, you will receive a License Certificate you can use to enable the additional capacity (see [Adding a License Key](#) on page 394).

---

- **OST** - Enables OpenStorage backup with Symantec OST. (License key is pre-installed on on DXi4700 NAS and Multi-Protocol configurations.)
- **Data-at-Rest Encryption** - Enables the use of the Data-at-Rest Encryption capability to secure all data stored on the DXi4700.  
For more information, see [Licensing Data-at-Rest Encryption](#) on page 396.
- **Data-in-Flight Encryption** - Enables use of AES encryption (128-bit or 256-bit) when sending data to another system using DXi replication or OST Accent. (Not available in all regions.)

---

## Adding a License Key

---

Add a license key to enable additional storage capacity on the DXi4700. To add a license key, you must first obtain a License Certificate containing an authorization code.


To purchase a storage capacity upgrade license, contact your Quantum sales representative. You will receive a License Certificate containing an authorization code.

To add a license key, locate the License Certificate, and then perform the following steps:

- 1 Open a Web browser on a computer with Internet access.
- 2 Enter <http://www.quantum.com/licensekeys> in the browser address box.

The **License Key Management** page displays (see [Figure 215](#)).

Figure 215 License Key Management Page

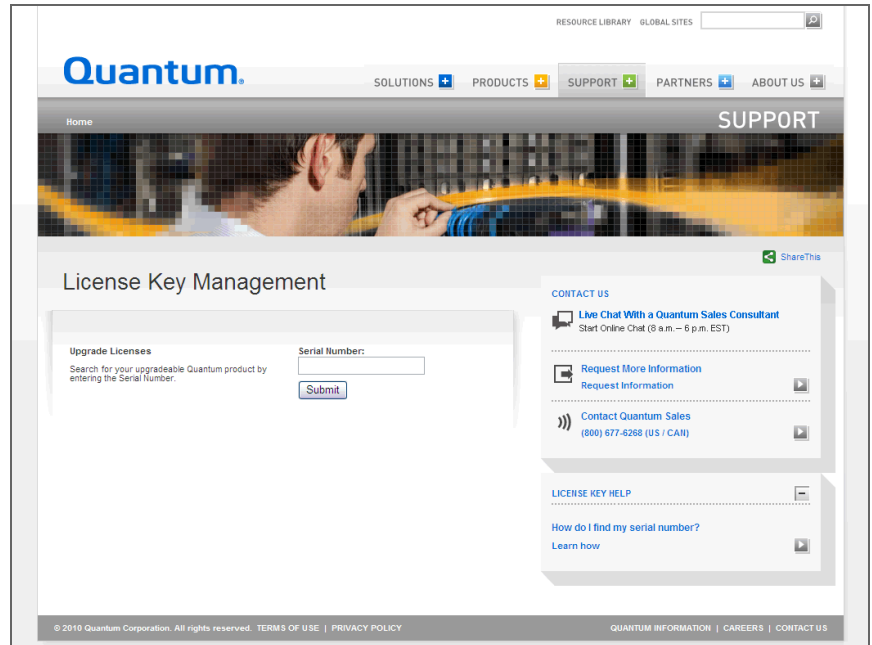

- 3 Enter the DXi system serial number in the **Serial Number** box and click **Submit**.

The **Licensed Feature** page displays.

---

**Note:** The serial number displays on the **License Keys** page, above the **New Key** box.

---

- 4 Enter the authorization code (printed on the License Certificate) and click **Get License Key**.  
The **Licensed Feature** page returns a license key. Print out or write down the license key, or save it to a text file.
- 5 Access the DXi remote management console (see [Accessing Remote Management](#) on page 50).
- 6 Click the **Utilities** menu, and then click the **License Keys** tab.  
The **License Keys** page displays (see [Figure 214](#)).
- 7 Enter the license key in the **New Key** box, and then click **Add**.  
The license key is added to the system.

---

**Note:** When adding a **Storage Capacity** license, it may take up to 10 minutes for the system to recognize the new storage capacity.

---

---

## Licensing Data-at-Rest Encryption

---

Data-at-Rest Encryption secures all data stored on the DXi4700, including file data and metadata, configuration files, and the DXi software and operating system (see [Data-at-Rest Encryption](#) on page 345).

Before you can enable Data-at-Rest Encryption to encrypt all hard drives, you must add the Data-at-Rest Encryption license. Contact your Quantum sales representative to obtain a Data-at-Rest Encryption license. After you obtain the license, you will receive a License Certificate containing an authorization code.

To add the license key to the DXi4700, locate the License Certificate, and then perform the following steps:

- 1 Open two Web browser windows on a computer with Internet access.

---

**Note:** During this procedure, you can copy and paste required numbers between these two windows.

---

- a In one browser, navigate to the **Utilities > License Keys** page in the DXi remote management console.  
  
Note that the system serial number displays directly above the **New Key** box.
  - b In the other browser, enter the address for the **License Key Management** Web site (see [Figure 215](#)):  
  
<http://www.quantum.com/licensekeys>
- 2 On the **License Key Management** Web site, perform the following steps:
    - a Enter the system serial number in the **Serial Number** box and click **Submit**.
    - b Enter the authorization code (printed on the License Certificate) and click **Get License Key**.

The **License Key Details** section displays the Data-at-Rest Encryption license key. Print out or write down the license key, or save it to a text file.

- 3 In the DXi remote management console, on the **Utilities > License Keys** page, enter the Data-at-Rest Encryption license key in the **New Key** box, and then click **Add**.

The Data-at-Rest Encryption license key is added to the system.

- 4 In the DXi remote management console, navigate to the **Configuration > System > Security > Data-at-Rest** page and perform the following steps:
  - a Enable Data-at-Rest Encryption for all hard drives in the DXi4700 (see [Enabling Data-at-Rest Encryption](#) on page 347).
  - b Make a backup copy of your encryption keys (see [Managing Recovery Files](#) on page 348).

---

## Secure Shred

The **Secure Shred** page allows you to securely and permanently erase sensitive data stored on the DXi4700. To securely erase data, first delete files on NAS shares or storage servers, or erase tape cartridges on VTL partitions, then start secure shred. During secure shred, all residual data associated with the deleted files or cartridges is securely erased from the disk drives by performing a single-pass overwrite with zeros.

While secure shred is running, the DXi4700 operates in limited mode. This means you cannot perform backups or restores, all scheduled jobs (including replication jobs) are stopped, and you cannot access or use any other features of the DXi. If necessary, you can cancel secure shred at any time and return the DXi to normal operation.


---

**Caution:** The secure shred process can take multiple days to complete.

---

To access the **Secure Shred** page, click the **Utilities** menu, and then click the **Secure Shred** tab (see [Figure 216](#)).

Figure 216 Secure Shred Page

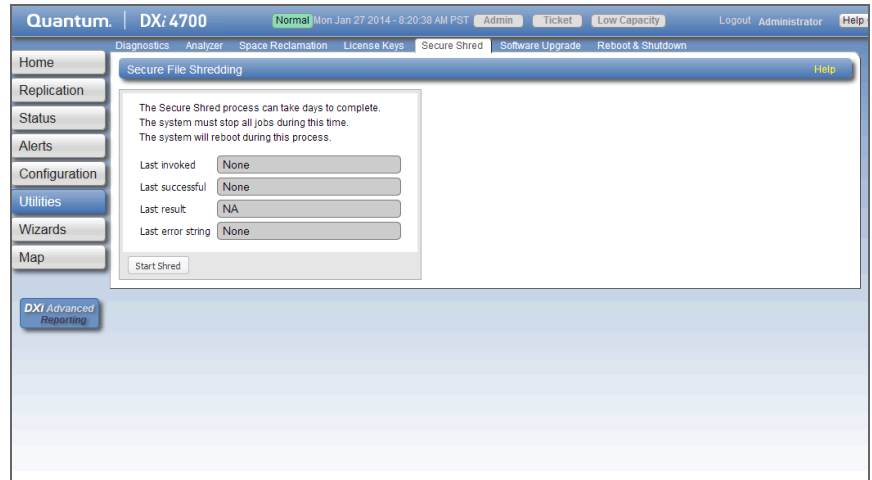

To securely erase data on the DXi4700:

- 1 Delete the data you want to securely erase:
  - Delete files on NAS shares, or delete the shares (see [NAS](#) on page 212).
  - Delete backup images on OST logical storage units (LSUs), or delete the LSUs and storage servers (see [OST](#) on page 269).
  - Recycle (erase) tape cartridges on VTL partitions, or delete the partitions (see [VTL](#) on page 229).
- 2 Run space reclamation from the **Utilities > Space Reclamation** page (see [Space Reclamation](#) on page 389).
- 3 Make sure all replication and backup jobs are completed (see [DXi4700 Replication](#) on page 121).
- 4 On the **Secure Shred** page, click **Start Shred**.  
A warning message displays.
- 5 Click **Yes**.  
The system reboots and begins the secure shred process. This process can take multiple days to complete.
- 6 To check the status of secure shred, log onto the DXi4700 to view the limited **Secure Shred Mode** interface (see [Figure 217](#)).
  - The **Secure File Shred Log** displays details about the secure shred progress. Click **Hide** to hide the log.



- To cancel the secure shred process, click **Cancel**. The DXi reboots and resumes normal operation.
- When the secure shred process is complete, the **Reboot** button displays.


---

**Note:** You must log on as an Admin user to cancel secure shred or reboot the system.

---

Figure 217 Secure Shred Mode Interface

When secure shred is complete, Cancel changes to Reboot

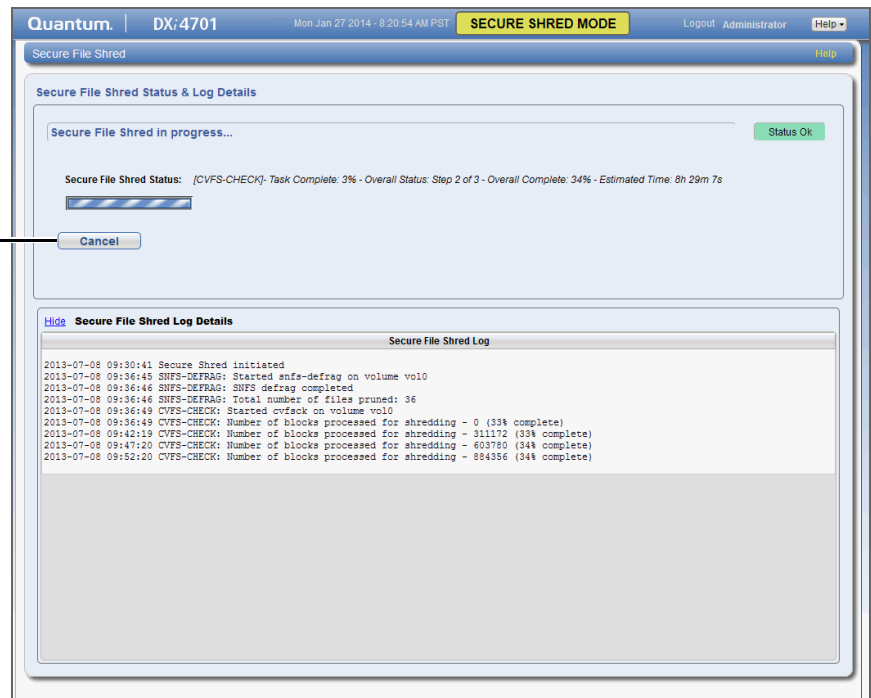

- 7 Click **Reboot** to finalize the secure shred process and reboot the DXi.

After the DXi finishes rebooting, you can resume normal system operation.

## Software Upgrades

Software upgrades allow you to update the software running on the DXi4700 to the latest version. Software upgrades can include new features as well as bug fixes.

There are two methods for upgrading the DXi software:

- **Check for an upgrade (Home page)** - The DXi can automatically check for software upgrades on the **Home** page, or you can manually perform an upgrade check (see [Checking For Software Upgrades](#) on page 400). If an upgrade is found, you can choose to download and install it.

This is the recommended method for upgrading, but it requires that the DXi be able to access the Internet.

---

---

**Caution:** Configure your firewall so that the DXi can send data to and received data from updates.quantum.com using port 80 (HTTP).

---

---

- **Upload a software upgrade file (Software Upgrade page)** - You can download a software upgrade file from the Quantum Service and Support Web site and then manually upload it to the DXi using the **Software Upgrade** page (see [Uploading a Software Upgrade File](#) on page 405).

You can use this method if the DXi cannot access the Internet.

---

**Note:** Uploading a software upgrade file may be useful if you are upgrading multiple DXi systems, as the file only needs to be downloaded once. Also, this method assures that all systems will be running the same software version following the upgrade.

---

---

### Checking For Software Upgrades


---

The **Software Upgrade Utility** (accessible from the **Home** page) allows you to check for available DXi software upgrades and, if available, download and install them. You can also configure the DXi4700 to automatically check for software upgrades.

**Note:** To check for and download software upgrades, the DXi must be able to access the Internet. If the DXi cannot access the Internet, see [Uploading a Software Upgrade File](#) on page 405.

To access the **Software Upgrade Utility**, click **Home** on the main menu, and then click the **Software Upgrade** link (see [Figure 218](#)).

Figure 218 Software Upgrade Utility

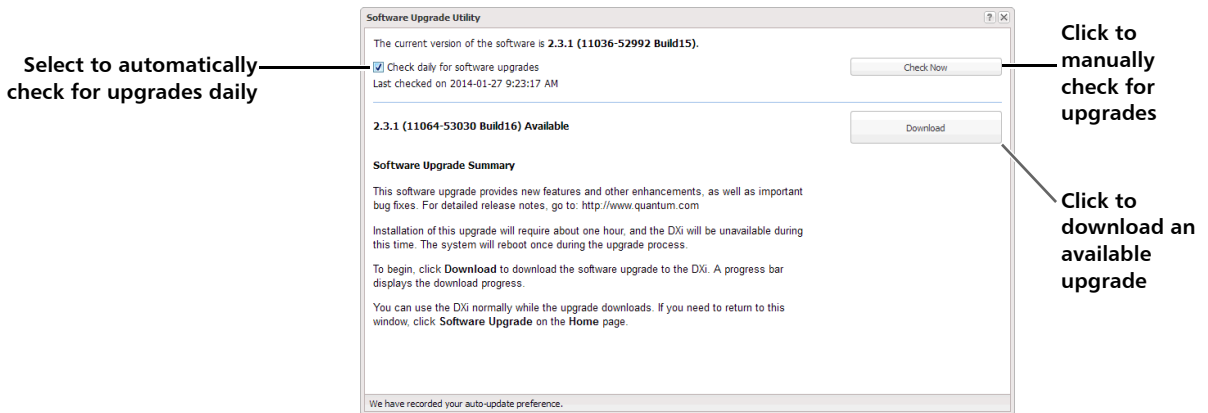

Use the **Software Upgrade Utility** to perform the following tasks:


- Configure the DXi4700 to automatically check for software upgrades (see [Automatically Checking for Upgrades](#) on page 401).
- Manually check for software upgrades (see [Manually Checking for Upgrades](#) on page 402).
- Download and install available software upgrades (see [Downloading and Installing Upgrades](#) on page 402).

### Automatically Checking for Upgrades

The DXi4700 can automatically check for available software upgrades on a daily basis. If a software upgrade is found, you will be notified by an admin alert as well as by a Quick Tip icon on the **Home** page, next to the current software version (see [Figure 219](#)).

On the **Software Upgrade Utility**, select the **Check daily for software upgrades** check box to enable automatic upgrade checking. Automatic upgrade checking is enabled by default. To disable automatic upgrade checking, clear the **Check daily for software upgrades** check box (not recommended).

Figure 219 Home Page -  
Software Upgrade Available

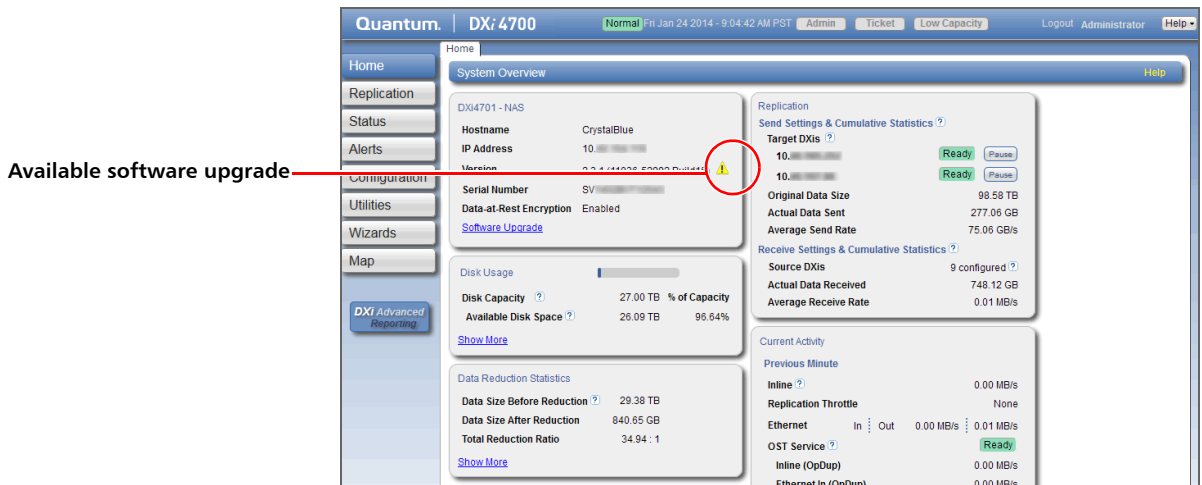

## Manually Checking for Upgrades

To check for available software upgrades at any time, on the **Software Upgrade Utility**, click **Check Now**.

If a software upgrade is available, you can read information about the contents of the upgrade and, if you choose, download and install it.

## Downloading and Installing Upgrades

If a software upgrade is available (after automatically or manually checking for upgrades), a summary describing the upgrade displays on the **Software Upgrade Utility**.


To download and install an available software upgrade:

- 1 On the **Software Upgrade Utility**, click **Download**.

The bottom status bar displays download progress. It will take several minutes to download the upgrade, depending on network speeds. You can use the DXi normally while the upgrade downloads. If you need to return to this window, click **Software Upgrade** on the **Home** page.

When the download is complete, a list of pre-upgrade actions displays (see [Figure 220](#)). These are important actions you should take prior to installing the upgrade.

Figure 220 Software Upgrade Utility - Software Upgrade Downloaded

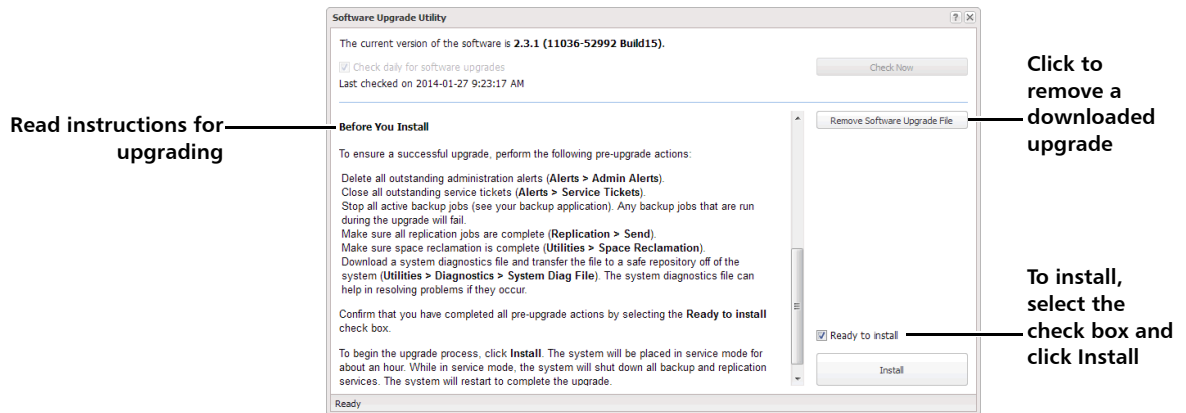

2 To ensure the system is healthy before upgrading, read and follow the instructions in each of the pre-upgrade actions. The pre-upgrade actions can differ depending on the type of upgrade, but typical actions include the following:

- Address and delete all outstanding administration alerts (see [Admin Alerts](#) on page 201).
- Resolve and close all outstanding service tickets (see [Service Tickets](#) on page 203).

---

**Note:** Quantum recommends taking the following actions before upgrading.

---

- Stop all active backup jobs (see your backup application). Any backup jobs that are run during the upgrade will fail.
  - Make sure all replication jobs are complete (see [DXi4700 Replication](#) on page 121). If replication or synchronization jobs are nearly complete, Quantum recommends allowing them to complete before upgrading.
  - Make sure space reclamation is complete (see [Space Reclamation](#) on page 389). If space reclamation is nearly complete, Quantum recommends allowing it to complete before upgrading.
  - Download a system diagnostics file and transfer the file to a safe repository off of the DXi (see [System Diag File](#) on page 378). The system diagnostics file can help in resolving problems if they occur.
- 3 Confirm that you have completed all pre-upgrade actions by selecting the **Ready to install** check box.

---

**Note:** The **Ready to install** check box and the **Install** button are disabled if there are any outstanding administration alerts or service tickets.

---

- 4 To begin the upgrade process, click **Install**.

Read the onscreen information to learn what to expect during the upgrade. The bottom status bar displays installation progress, and a message displays if a reboot is required.

Depending on the type of upgrade, the DXi may be placed in service mode for about an hour. While in service mode, the system will shut down all backup and replication services. If necessary, the DXi will restart one or more times to complete the upgrade.

---

**Note:** If you decide not to install the software upgrade after downloading it, click **Remove Software Upgrade File** to remove the current download from the DXi.

---

---

**Note:** Clear your Web browser cache before logging on to the remote management console for the first time following the software upgrade. This will ensure the remote management console displays correctly.

---

## Uploading a Software Upgrade File

The **Software Upgrade** page allows you to upload and install a software upgrade file on the DXi4700. Use this upgrade method if the DXi cannot access the Internet.

Before you begin, download the software upgrade file on a computer connected to the Internet, and then copy the software upgrade file (.fw) to the computer you will use to access the DXi remote management console. You can download the software upgrade file and release notes from the Quantum Service and Support Web site:

<http://www.quantum.com/ServiceandSupport/Index.aspx>

To access the **Software Upgrade** page, click the **Utilities** menu, and then click the **Software Upgrade** tab (see [Figure 221](#)).

Figure 221 Software Upgrade Page



To upload a software upgrade file:


- 1 Click the **Browse** button to browse the system and locate the software upgrade file.
- 2 Click **Upload**.
- 3 Click **Start** to begin the upload process.

Do not close the window until the uploading and unpacking process is complete. An **Information** message displays stating the software upgrade file was uploaded successfully.

- 4 Click **OK**.

The **Software Upgrade** page indicates that a software upgrade file has been uploaded (see [Figure 222](#)).

Figure 222 Software Upgrade Page - Software Upgrade File Uploaded

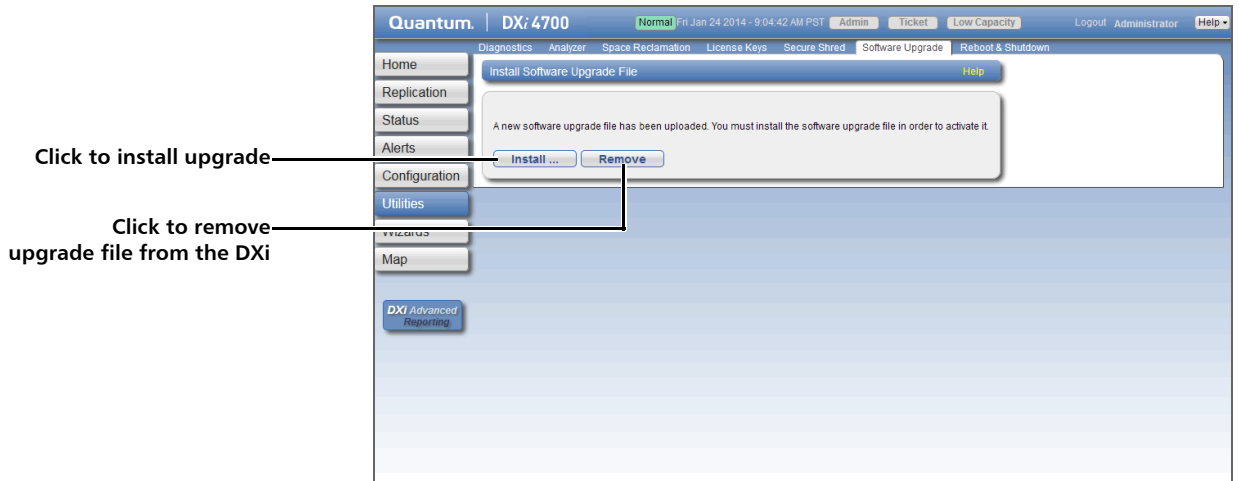

### 5 Click Install.

---

**Note:** If necessary, click the link to delete any outstanding administration alerts before proceeding.

---

---


**Note:** If you decide not to install the software upgrade file after uploading it, click **Remove** on the **Utilities > Software Upgrade** page to remove the uploaded software upgrade file from the DXi.

---

The **Software Upgrade Utility** displays (see [Figure 223](#)).



Figure 223 Software Upgrade Utility - Software Upgrade File Uploaded

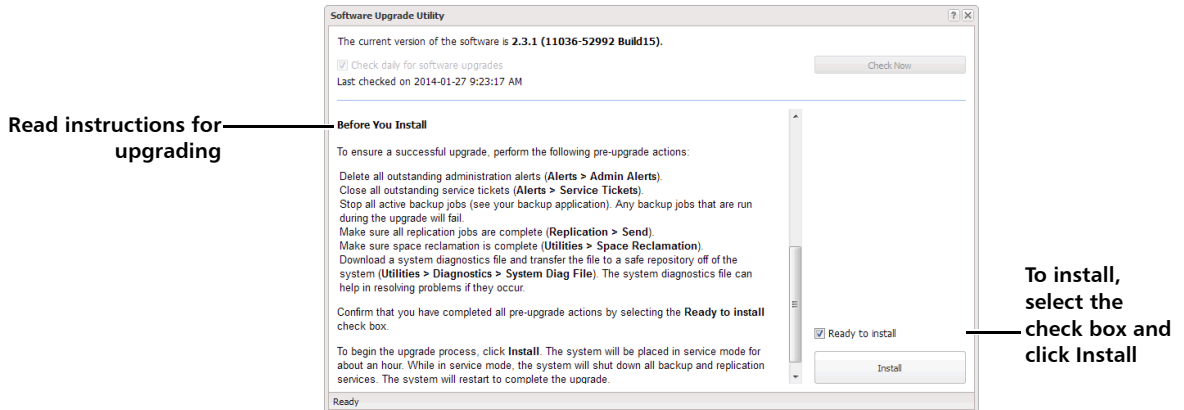

6 To ensure the system is healthy before upgrading, read and follow the instructions in each of the pre-upgrade actions. The pre-upgrade actions can differ depending on the type of upgrade, but typical actions include the following:

- Address and delete all outstanding administration alerts (see [Admin Alerts](#) on page 201).
- Resolve and close all outstanding service tickets (see [Service Tickets](#) on page 203).

---

**Note:** Quantum recommends taking the following actions before upgrading.

---

- Stop all active backup jobs (see your backup application).
- Make sure all replication jobs are complete (see [DXi4700 Replication](#) on page 121). If replication or synchronization jobs are nearly complete, Quantum recommends allowing them to complete before upgrading.
- Make sure space reclamation is complete (see [Space Reclamation](#) on page 389). If space reclamation is nearly complete, Quantum recommends allowing it to complete before upgrading.

- Download a system diagnostics file and transfer the file to a safe repository off of the DXi (see [System Diag File](#) on page 378). The system diagnostics file can help in resolving problems if they occur.
- 7 After you have completed all pre-upgrade actions, confirm that you are ready to continue by selecting the **Ready to install** check box.

---

**Note:** The **Ready to install** check box and the **Install** button are disabled if there are any outstanding administration alerts or service tickets.

---

- 8 To begin the upgrade process, click **Install**.

Read the on-screen information to learn what to expect during the upgrade. The bottom status bar displays installation progress, and a message displays if a reboot is required.

Depending on the type of upgrade, the DXi may be placed in service mode for about an hour. While in service mode, the system will shut down all backup and replication services. If necessary, the DXi will restart one or more times to complete the upgrade.

---

**Note:** Clear your Web browser cache before logging on to the remote management console for the first time following the software upgrade. This will ensure the remote management console displays correctly.

---

## Reboot & Shutdown

The **Reboot & Shutdown** page allows you to reboot or shut down the DXi4700.


To access the **Reboot & Shutdown** page, click the **Utilities** menu, and then click the **Reboot & Shutdown** tab (see [Figure 224](#)).

---

**Caution:** Before shutting down the DXi4700, make sure that all backup and replication jobs are finished, and that space reclamation activity is complete.

---

Figure 224 Reboot & Shutdown Page

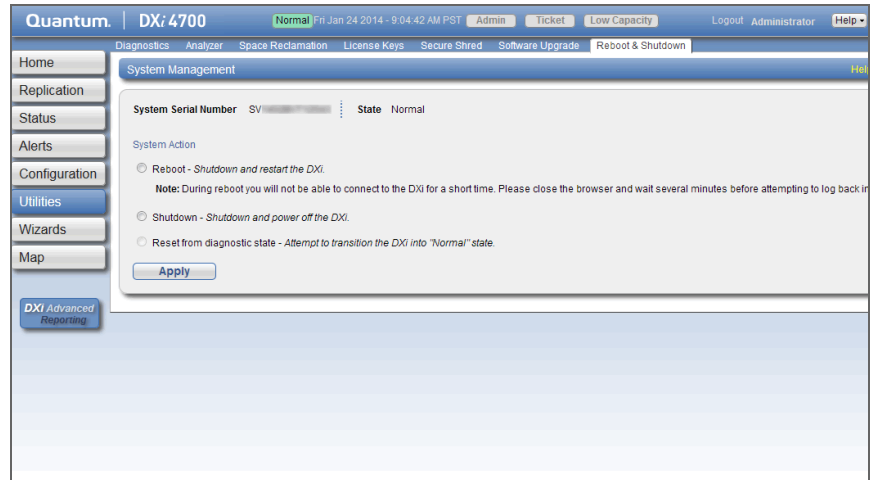

To reboot or shutdown the DXi4700:

1 Under **System Action**, select an option:

- **Reboot** - Reboots the DXi4700.  
Rebooting the system closes the Web browser connection. You must log on again after the system has rebooted.
- **Shutdown** - Shuts down the DXi4700.
- **Reset from diagnostic state** - (Only available when the node is in degraded mode) Restarts the services on the node without rebooting the system.

2 Click **Apply**.

3 Close the browser window.

---

**Note:** Shutting down the system can take up to 15 minutes. Only the node will completely shut down. When rebooting, the system can take approximately 30 minutes to start up, depending on the amount of installed storage capacity.

---





# Appendix A

## DXi4700 System Specifications

---

This appendix lists specifications of the DXi4700. Refer to the following sections:

- [DXi4700 Physical Characteristics](#)
- [DXi4700 Environmental Specifications](#)

---

**Note:** For hard drive specifications see the appropriate hard drive product manual.

---

---

### DXi4700 Physical Characteristics

---

The following tables provide dimensions and other physical characteristics of the DXi4700 system components:

- [Table 11 - DXi4700 Physical Characteristics](#)
- [Table 12 - DXi4700 Storage Capacity](#)
- [Table 13 - DXi4700 Cable Drops](#)
- [Table 14 - DXi4700 Interfaces](#)
- [Table 15 - DXi4700 Power Requirements](#)

---

 Table 11 DXi4700 Physical Characteristics

	DXi4700 Node	DXi4700 Expansion Module (JBOD)
<b>Height</b>	2U, 3.4 inches (8.7 cm)	3.4 inches (8.7 cm)
<b>Width (side to side)</b>	17.5 inches (44.4 cm)	17.6 inches (44.6 cm)
<b>Depth (front to back)</b>	28.6 Inches (72.6 cm)	23.7 inches (60.2 cm)
<b>Weight (stand alone)</b>	61.0 pounds (27.7 kg)	62.6 pounds (28.4 kg)
<b>Rack Space Required</b>	2U	2U
<b>Air clearance</b>	Open 4 in (10.2 cm) behind unit for proper air flow	

---


 Table 12 DXi4700 Storage Capacity

<b>DXi4700 Storage Capacity</b>	
<b>Usable capacity*</b>	From 5 TB to 135 TB

\* Usable storage capacity can be upgraded at any time after purchase by adding a storage capacity upgrade license to enable installed hardware capacity, or by adding additional hardware capacity to the system. For information about upgrade options, see the *DXi4700 Capacity Upgrade Guide* (6-68107), or contact your Quantum sales representative.

---

Table 13 DXi4700 Cable Drops

DXi4700 Cable Drops				
<b>Ethernet Cable Drops</b>	<p>The following Ethernet connections are available for NAS or OST connectivity, replication, and remote management.</p> <p><b>(Standard) 3 x 1 GbE Ports</b></p> <ul style="list-style-type: none"> <li>• One to three 1 GbE Ethernet connections.</li> </ul> <p><b>(Optional) 2 x 10 GbE ports or 2 x 10 GBase-T Ports</b></p> <ul style="list-style-type: none"> <li>• Two 10 GbE Ethernet connections (optical or Twinax)</li> <li>• Two 10 GBase-T CAT6 Ethernet connections.</li> </ul> <p><b>Note:</b> For Cisco 5000 Series Data Center Class switches, Quantum recommends using the approved 5 meter Twinax cable type that is shipped with the DXi4700 system. Otherwise, Quantum recommends using optical (SFP+) connectivity.</p> <hr/> <p><b>Note:</b> The 10 GbE Copper (Twinax) cable options that Quantum provides do not support all switches. Please note the supported switches during the purchase-configuration process, and if the Twinax cables supplied by Quantum are <i>not</i> compatible with your switch, then you will need to provide your own compatible Twinax cables from your switch vendor. Be sure to have these available before the system installation takes place.</p> <hr/> <table border="0" data-bbox="464 1032 1256 1058"> <tr> <td style="text-align: center;">10GbE Optical Cable</td> <td style="text-align: center;">10GbE Copper (Twinax) Cable</td> <td style="text-align: center;">10GBaseT CAT6 Cable</td> </tr> </table> <div data-bbox="439 1119 1268 1367" style="text-align: center;">  </div>	10GbE Optical Cable	10GbE Copper (Twinax) Cable	10GBaseT CAT6 Cable
10GbE Optical Cable	10GbE Copper (Twinax) Cable	10GBaseT CAT6 Cable		
<b>Fibre Channel Drops</b>	<p>(DXi4700 VTL and Multi-Protocol configurations only) 1 to 2 Fibre Channel connections for data transfer.</p>			

---

**DXi4700 Cable Drops**


---

<b>Power Outlets</b>	<p><b>Node</b> - 2 USA type 3-prong power outlets (<b>Nema 5-15</b>) or 2 C13 type 3-prong power outlets (<b>IEC320 C13</b>). For additional information, see <a href="#">Table 15</a>.</p> <p><b>Expansion Module (each)</b> - 2 USA type 3-prong power outlets (<b>Nema 5-15</b>) or 2 C13 type 3-prong power outlets (<b>IEC320 C13</b>). For additional information, see <a href="#">Table 15</a>.</p>
----------------------	--

---



---

Table 14 DXi4700 Interfaces

---

**DXi4700 Virtual Device Limits and Hardware Interfaces**




---

<b>Interfaces</b>	<p><b>VTL backup target (DXi4700 VTL configurations only):</b> 64 partitions maximum, 64 virtual tape drives (VTDs) maximum (no more than 32 VTDs active at any one time)</p> <p><b>NAS backup target (DXi4700 NAS and Multi-Protocol configurations only):</b> 128 shares maximum (NFS or CIFS)</p> <p><b>OST backup target (DXi4700 NAS and Multi-Protocol configurations only):</b> 100 storage servers maximum</p> <p><b>Note:</b> NFS version: NFSv2 and NFSv3</p> <p><b>Note:</b> Samba version: 3.6.12</p>
<b>Hardware</b>	<p><b>(Standard) 3 ports 100/1000BASE-T Ethernet:</b> RJ45 connector</p> <p><b>(Optional) 2 ports 10 GbE Ethernet:</b> Optical 10GBASE-SR via LC connector or Twinax copper 10GBASESFP+Cu via SFP+</p> <p><b>(Optional) 2 ports 10 GBase-T CAT6 Ethernet:</b> RJ45 connector</p> <p><b>(VTL and Multi-Protocol) 2-4 ports 8 Gb Fibre Channel:</b> LC connector</p> <p>DXi4700 systems can contain either the optional 10 GbE Ethernet or 10 GBase-T CAT6 Ethernet hardware, but not both.</p>

---



Table 15 DXi4700 Power Requirements

<b>DXi4700 Power Requirements</b>		
<b>Power Supplies and Cords</b>	<b>Node Expansion Module (JBOD)</b>	Two (2) hot-swappable redundant power supplies
		Two (2) USA type 3-prong power cords with IEC320 C13 to Nema 5-15 connectors: 
		Two (2) C13 to C14 type 3-prong power cords with IEC320 C13 to IEC320 C14 connectors: 
<b>Voltage</b>	<b>Node</b>	100–240 VAC
	<b>Expansion Module (JBOD)</b>	100–240 VAC
<b>Frequency</b>	<b>Node</b>	50–60Hz
	<b>Expansion Module (JBOD)</b>	50–60Hz

<b>Inrush</b>	<b>Node</b>	8.3A @ 100V 4.7A @ 240V
	<b>Expansion Module (JBOD)</b>	16.1A @ 100V 4.7A @ 240V
<b>Maximum Operating</b>	<b>Node</b>	4.4A @ 100V 1.8A @ 240V 440W 1501 BTU/Hr
	<b>Expansion Module (JBOD)</b>	2.5A @ 100V 1.2A @ 240V 264W 901 BTU/Hr

---



---

**Caution:** To safeguard backups in the event of a power outage, Quantum recommends that you connect the DXi4700 to a UPS (uninterruptable power supply).

---



---

## DXi4700 Environmental Specifications

[Table 16](#) provides various DXi4700 environmental specifications.

Table 16 DXi4700  
Environmental Specifications

DXi4700 Climatic Environment		
Temperature	Operating	10° to 35°C (50° to 95°F) with a maximum temperature gradient of 10°C per hour <b>Note:</b> 35°C (95°F) is the maximum temperature for the DXi4700 at sea level. For every 1,000 feet (305 meters) of altitude, the maximum temperature is reduced by 0.9°C.
	Shipping and storage	–20° to 60°C (4° to 140°F) with a maximum temperature gradient of 20°C per hour
Relative humidity	Operating	20% to 80% (non-condensing) with a maximum humidity gradient of 10% per hour
	Shipping and storage	5% to 95% (non-condensing) with a maximum humidity gradient of 10% per hour
Altitude	Operating	–16m to 3048 m (–50 to 10,000 ft)
	Shipping and storage	–16m to 10,600 m (–100 to 35,000 ft)
DXi4700 Vibration and Shock		
Sine Vibration	Operating	Random 0.26 G's, 5–350 Hz, Operational axis 10 minutes, psd: 0.0002 G <sup>2</sup> /Hz
	Non-operating	Random 0.5 G's, 5–350 Hz, Operational axis 10 minutes, psd: 0.0007 G <sup>2</sup> /Hz
Shock Vibration	Operating	2 G's for 11 ms, half-sine input, 3 shock pulses in both + and – directions operational axis
	Non-operating	3.5 G's for 11 ms, half-sine input, 3 shock pulses in both + and – directions operational axis

<b>DXi4700 Acoustic</b>		
Acoustic output	Operating	Sound Pressure Level 72 dbA maximum at any operation position
<b>DXi4700 Agency Approvals</b>		
EMC/Safety	47 CFR part 15 Class A CNS 13438 Class A CISPR 22 Class A CISPR 24 Class A EN 55022 Class A EN 55024 EN 61000-3-2 EN 61000-3-3 ICES-003 Class A VCCI V-3/2000 Class A AS/NZS 3548 Class A KCC RRL Class A	
Immunity Tests	IEC 61000-4-2 (Ed. 2.0 2008-12) - Electrostatic Discharge (ESD) IEC 61000-4-3 (Ed. 3.1 2008-04) - Radiated RF Immunity Standards: EN55024: 1998 +A1: 2001 +A2:2003 KN24 IEC 61000-4-4 (Ed. 2.0 2004-07) - Electrical Fast Transient/Burst IEC 61000-4-5 (Ed. 2.0 2005-11) - Surge Immunity IEC 61000-4-6 (Ed. 2.2 2006-05) - Conducted RF Immunity IEC 61000-4-8 (Ed. 1.1 2001-03) - Magnetic Field IEC 61000-4-11 (Ed. 2.0 2004-03) - AC Dips and Interrupts	

---

**Caution:** The DXi4700 system is designed to be installed in a rack enclosure. Ensure that the operating temperature inside the rack enclosure does not exceed the maximum rated ambient temperature. Do not restrict air flow to the DXi components.

---



## Appendix B

# Troubleshooting

---

This appendix describes the status and problem reporting features of the DXi4700 as well as problems you might encounter during setup and operation of the system. Corrective information is provided to help you resolve these problems.

For information about troubleshooting the DXi4700, see the following sections:

- [DXi4700 Status and Problem Reporting](#)
- [General Troubleshooting Actions](#)
- [Common Problems and Solutions](#)

---

## DXi4700 Status and Problem Reporting

To maintain system health and help you identify and correct problems that occur, the DXi4700 constantly performs the following actions:

- Monitors the system software and hardware components.
- Detects system problems.
- Attempts to isolate each problem to a specific field replaceable component.

- Attempts to recover from the problem.
- Logs the problem.
- If the problem requires service, the system reports the problem in a service ticket associated with the field replaceable component.

---

## General Troubleshooting Actions

For information about general troubleshoot actions you can take, see the following sections:

- [Viewing Service Tickets](#)
- [Checking Hardware Status](#)
- [Downloading a System Diagnostics File](#)

---

### Viewing Service Tickets

---

Service tickets include time and date information, status (open or closed), information about each error, and links to recommended troubleshooting procedures. The DXi4700 generates service tickets according to the following scenarios:

- If the component associated with the problem does not have an open service ticket, the DXi4700 opens a service ticket for the component and reports the problem in a service ticket.
- If the problem reoccurs, the DXi4700 logs the number of times that it detects the problem in the existing report.
- If a different problem occurs with the same component, the DXi4700 adds a new report to the same service ticket.
- If a problem occurs with a different component, the DXi4700 uses the above scenario to open a new service ticket for the component or report the problem in an existing service ticket associated with the component.

To access the **Service Tickets** page, click the **Alerts** menu, and then click the **Service Tickets** tab.

For more information about working with service tickets, see [Service Tickets](#) on page 203.

---

## Checking Hardware Status

---

The **Hardware** page allows you to view information about the hardware components of the DXi4700. You can view the overall status of the node as well as detailed status information for components such as the system board, Fibre Channel adapters, network ports and storage arrays.

To access the **Hardware** page, click the **Status** menu, and then click the **Hardware** tab.

For information about using the **Status** page, see [Hardware](#) on page 174.

---

## Downloading a System Diagnostics File

---

The **System Diag File** page allows you to generate and download a system diagnostics file. This file contains the diagnostic logs for all of the system components.

To access the **System Diag File** page, on the **Diagnostics** page, click the **System Diag File** tab.

For information about downloading the system diagnostics file, see [System Diag File](#) on page 378.

---

# Common Problems and Solutions

The troubleshooting information in this section covers the following topics:

- [Start-up Problems](#)
- [Hardware Problems](#)
- [Ethernet Network Problems](#)
- [Replication Problems](#)
- [Temperature Problems](#)

---

## Start-up Problems

---

[Table 17](#) describes problems that can occur during system start-up.

Table 17 Start-up Problems

Problem	Corrective Action
FATAL ERROR Unable to start SNFS! Message displays.	Contact your Quantum Customer Support representative (see <a href="#">Getting More Information or Help</a> on page xxviii).
FATAL ERROR Unable to start blockpool! Message displays.	Contact your Quantum Customer Support representative (see <a href="#">Getting More Information or Help</a> on page xxviii).

## Hardware Problems

[Table 18](#) describes corrective actions for problems occurring with the system hardware.

Table 18 Hardware Problems

Problem	Corrective Action
The system does not power on.	Make sure the power cords are connected to a grounded electrical outlet and the power switches located on the back of the power supplies are on. If the problem persists, contact your Quantum Customer Support representative to arrange for service (see <a href="#">Getting More Information or Help</a> on page xxviii).
One power supply is not functioning.	Determine which power supply has failed by observing the fault LED on the power supply. Contact your Quantum Customer Support representative to arrange for service (see <a href="#">Getting More Information or Help</a> on page xxviii).
Both power supplies are not functioning.	Determine which power supply has failed by observing the fault LED on the power supply. Contact your Quantum Customer Support representative to arrange for service (see <a href="#">Getting More Information or Help</a> on page xxviii).



Problem	Corrective Action
One fan is not operating.	Determine which fan has failed by reading the service ticket generated by the system. Contact your Quantum Customer Support representative to arrange for service (see <a href="#">Getting More Information or Help</a> on page xxviii).
Multiple fans are not operating.	<b>Caution:</b> Turn the system off immediately! The system will overheat with multiple fans not operating. Contact your Quantum Customer Support representative to arrange for service (see <a href="#">Getting More Information or Help</a> on page xxviii).
A hard drive is not responding	Determine which drive has failed by observing the fault LED on the drive carrier. Contact your Quantum Customer Support representative for a drive carrier replacement (see <a href="#">Getting More Information or Help</a> on page xxviii).
A SAS cable is removed during normal operation.	The system will shut down as soon as it recognizes the problem. There is a potential for data loss. Power off the system, re-insert the SAS cable and restart the system. Depending on the state of the system when the SAS cable was removed, a long-running, mandatory data verification may occur.

## Ethernet Network Problems

[Table 19](#) describes corrective actions for problems occurring with the Ethernet network.

Table 19 Ethernet Network Problems

Problem	Corrective Action
<p>The Ethernet link light on the DXi4700 is not lit when a cable is connected to a hub or switch.</p>	<p>Check to make sure the Ethernet cable is not a cross-over cable. Use only "straight" CAT-6 Ethernet cables.</p> <p>Port on the hub or switch is not active or damaged.</p> <p>Port on the DXi4700 is damaged. Contact the Quantum Customer Support department (see <a href="#">Getting More Information or Help</a> on page xxviii).</p>
<p>The Ethernet link light on the switch or hub is not lit when a cable is connected to DXi4700 system.</p>	<p>Check to make sure the Ethernet cable is not a cross-over cable. Use only "straight" CAT-6 Ethernet cables.</p> <p>Port on the hub or switch is not active or damaged.</p> <p>Port on the DXi4700 is damaged. Contact the Quantum Customer Support department (see <a href="#">Getting More Information or Help</a> on page xxviii).</p>
<p>DXi4700 system is not visible on the Ethernet network.</p>	<p>Try to ping the DXi4700 system IP address from a host on the same network. If the ping reports round trip times, the DXi4700 system is active. If not, check the cables, switches, or hubs for damaged components. If everything checks out, contact the Quantum Customer Support department (see <a href="#">Getting More Information or Help</a> on page xxviii).</p>

Problem	Corrective Action
DXi4700 remote management pages are not visible.	<p>If you cannot connect to the DXi4700 remote management pages, verify that the following network settings for the DXi4700 are correct:</p> <ul style="list-style-type: none"> <li>• Hostname</li> <li>• IP addresses</li> <li>• Default gateway</li> <li>• Subnet mask</li> <li>• Domain name (optional)</li> </ul>
An Ethernet cable is removed during normal operation.	<p>The system will discontinue use of the associated Ethernet port. A Service ticket will be issued. The possibility of errors exist; data corruption will not occur.</p> <p>Reconnect the cable as soon as possible. It is not necessary to power the system off. Depending on the state of the system when the Ethernet cable was removed, replication, system management, or ingest may need to be restarted.</p>

## Replication Problems

[Table 20](#) describes corrective actions for problems occurring with the replication.

Table 20 Replication Problems

Problem	Explanation/Corrective Action
The replication was paused, but the replication is still in process.	<p>When you click <b>Pause</b>, the system will continue to replicate the current tag or block of information in process. The process of completing the current tag replication can take up to 15 minutes to complete. Once that tag has completed replication the system will pause and wait to resume.</p>

Problem	Explanation/Corrective Action
The replication was paused and a <b>Failure</b> event was generated in the <b>Replication Events</b> page.	This is normal. When a replication is paused, a failure event is generated on the <b>Replication Events</b> page. The system will continue the replication when you click <b>Resume</b> .
Replication was disabled while a replication was in process and the replication completed.	If you click <b>Disable</b> during a replication in process, the system will complete the entire replication and then disable replication on the system. The system will be unable to replicate until you click <b>Enable</b> .
Enabled replication on a NAS share and received the following Event: No destination host is specified for replication.	You must configure the target system prior to configuring the source. If the target system is not configured first, you will not be able to designate the replication target.
Able to enable and schedule replication for NAS even though no target IP configured.	It is possible to enable and schedule a replication when a target system has not been configured. The replication will not start until a target system is configured.

## Temperature Problems

Temperature problems are generally caused by incorrect room temperature, poor air circulation inside the DXi4700 rack or components, or a malfunctioning cooling fan.

Use the following procedure if a temperature problem is reported:

- 1 Check the ambient temperature of the room containing the DXi4700 system to verify that the temperature falls within the specified range.
- 2 Inspect for adequate air circulation inside the rack. Some racks may provide additional fans to improve air circulations. Check the fan for proper operation. Clean or replace any air filter as necessary.

- 3 If a component reports a temperature problem, verify that the associated fan is operating correctly. If necessary, contact Quantum customer support to replace the fan (see [Getting More Information or Help](#) on page xxviii).

Appendix B: Troubleshooting  
Common Problems and Solutions



# Glossary

---

---

## B

**Blockpool** A pool of all unique data blocks that were captured during the data deduplication cycle. When backup jobs occur, the data deduplication engine searches for new data entering the DXi4700 and uses a variable length compression type algorithm to compare this to existing data in the blockpool. Unique blocks are added to the blockpool and all known blocks are indexed.

**Byte** The basic unit of computer memory which is large enough to hold one character.

---

## C

**Compress** A process of removing fine-grained redundancy from data prior to storing or transmitting it. The granularity may vary, but generally compression deals with redundancy in grains of a few bytes.

---

## D

**Data Deduplication** A process of removing coarse-grained redundancy from data prior to storing or transmitting it. The granularity may vary, but generally data deduplication deals with redundancy in grains of several kilobytes. When you select **Enable Data Deduplication** for a NAS share or VTL partition, data deduplication is running all of the time. Backup data is

sent to the DXi4700 and data deduplication is performed on data as it is ingested.

**Disk** A fixed set of sectors with sequential numbers starting from zero, directly and independently accessible and mutable by those numbers without affecting any other sector.

---

**F**

**Filesystem** An abstraction layered over storage devices (typically disks) obscuring the physical details of the storage devices it supports in favor of a presentation oriented at storing and organizing files.

---

**H**

**Host** The device or devices to which the system is connected.

---

**I**

**Ingest** The throughput performance of data writes to the system.

---

**L**

**LSU** Logical Storage Unit. A logical storage entity defined under the Symantec OpenStorage API.

---

**N**

**NAS** Network Attached Storage is file-level computer data storage connected to a computer network providing data access to network clients.

**NDMP** Network Data Management Protocol is a protocol meant to transport data between NAS devices, also known as filers, and backup devices. This removes the need for transporting the data through the backup server itself, thus enhancing speed and removing load from the backup server.

---

**O**

**OST** OpenStorage API. An interface specific to Symantec NetBackup and Backup Exec for writing data to disk backup appliances, replicating it, and, in the case of NetBackup, writing data directly to disk, under control of the backup application.



---

**R**

**RAID** Redundant Array of Independent Disks is a technology through which several physical storage disks are grouped into an array that appears to an operating system as one or more physical devices.

---

**S**

**SNFS** StorNext® File System

**SNMP** Short for *Simple Network Management Protocol*, a set of protocols for managing complex networks.

**Sync ID** When you configure a share for Directory/File Based Replication, you specify a Sync ID for the share. The Sync ID associates the share on the source system with the share on the target system that will receive the replicated data. The Sync ID of the source share and the target share *must* be identical.

---

**T**

**Terabyte** A unit of measure for digital data equal to 1,000 gigabytes.

