

3U Rackmount Enclosure Quick Start Guide

The 3U Rackmount enclosure is provided with one or of the following supported tape drives already installed:

- LTO-5 Full-Height, SAS model TC-L53FN-AR

You can upgrade a single-drive enclosure to the two-drive configuration by installing a second tape drive using any supported model of the same type interface.

This guide references the instructions for installing the 3U Rackmount enclosure in an equipment rack, and provides the procedures for:

- Connecting the drive interface and power cables
- Installing a second tape drive into the 3U Rackmount enclosure

Contents

Connecting the Drive Interface and Power Cables	2
Installing a Second Tape Drive or Replacing a Tape Drive	3
Preinstallation Requirements	3
Installation Procedure	4
Installing the 3U Rackmount Enclosure in a Rack	10
Tools Required	10
Installation Requirements	10
Installing the 3U Enclosure	11
Class A Device Declarations.....	15

Power Requirements


Power requirements for the 3U Rackmount enclosure are as follows:

- 100 to 240 Volts AC/2 to 4 Amps
- 47 to 63 Hz

Connecting the Drive Interface and Power Cables


- 1 Shut down and turn off the host server system.
- 2 Turn off all attached accessory devices, such as printers and other SCSI devices.
- 3 On the back panel of a serial-attached SCSI (SAS) 3U Rackmount enclosure (see [Figure 1](#)):
 - a Connect one end of the supplied external SAS interface cable to the external SAS interface connector on the same side of the enclosure as the installed tape drive (see [Figure 1](#)).
 - b Connect the other end of the external SAS interface cable to the SAS connector on the host server.

Figure 1 SAS Interface Connectors

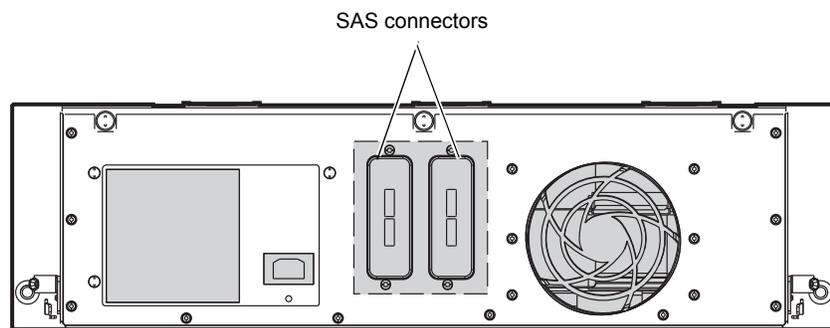


- 4 Connect the supplied AC power cable to the AC power connector on the back panel of the 3U Rackmount enclosure (see [Figure 2](#)).

Figure 2 AC Power Connector

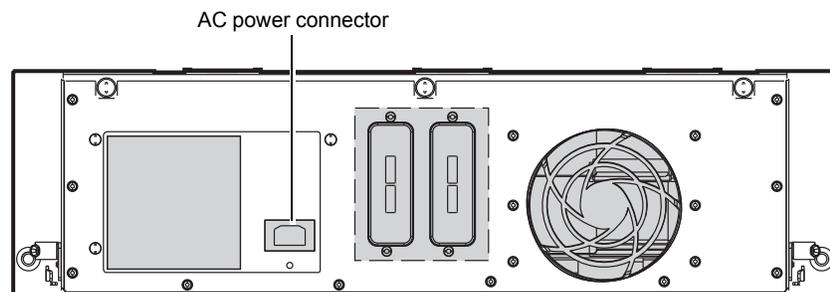

- 5 Connect the other end of the AC power cable to the rack/facility AC power receptacle.
- 6 Press the master AC power switch on the front of the 3U Rackmount enclosure to apply power to the enclosure and illuminate the power LED (see [Figure 3](#)).

Figure 3 Power Button

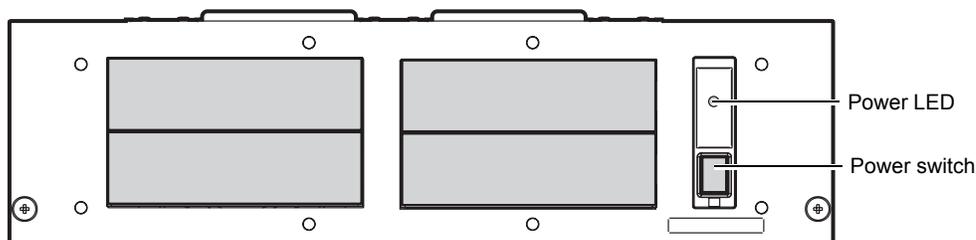

- 7 Turn on all attached accessory devices, such as printers and other SCSI devices that you turned off at step 2 of this procedure.
- 8 Turn on and restart the host server.

Installing a Second Tape Drive or Replacing a Tape Drive

Follow these instructions to install a second tape drive or to replace a tape drive after it has been removed.

Caution: Before installing a second tape drive, you must turn off the 3U Rackmount enclosure and disconnect it from its AC power source.

Preinstallation Requirements

Before installing a second tape drive in the 3U Rackmount enclosure, make sure you have the following required tools and parts:

Tools	#2 Phillips screw driver
Parts	<ul style="list-style-type: none"> • A supported model tape drive • SAS cable depending on the tape drive type

Installation Procedure

The installation procedure is divided into the following major sections:

Note: The 3U rackmount enclosure is designed for full-height tape drives, however, half-height tape drives can also be installed. Refer to the tape drive documentation for information on installation.


- [Removing the Top Panel](#)
 - [Adding a Second Tape Drive](#)
 - [Replacing a Tape Drive:](#)
- [Connecting the Tape Drive Cables](#)
- [Closing the Top Panel](#)

Removing the Top Panel

To remove the top panel:

- 1 Press the drive power switch on the front panel of the 3U Rackmount enclosure to turn off the drive power.
- 2 Disconnect the AC power cable from the AC power connector on the back panel of the 3U Rackmount enclosure.
- 3 Remove the 3U Rackmount enclosure from the equipment rack and place it on a clean, stable, flat surface.
- 4 Open the top access panel (see [Figure 4](#)):

Figure 4 Top Access Panel

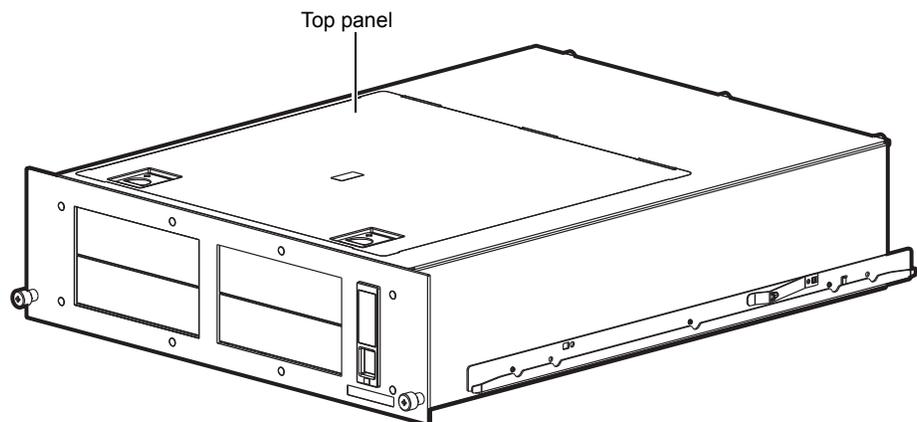

Adding a Second Tape Drive


Note: If you are replacing a tape drive, refer to [Replacing a Tape Drive:](#) on page 6.

To add a second tape drive:

- 1 Remove the shipping screw from the drive blank next to the thumbscrew.

- 2 Loosen the thumbscrew.
- 3 Remove the drive tray (see [Figure 5](#)):
 - a Push the drive tray toward the rear of the 3U enclosure.
 - b Pull the drive tray up and out at an angle.

Figure 5 Removing the Drive Blank

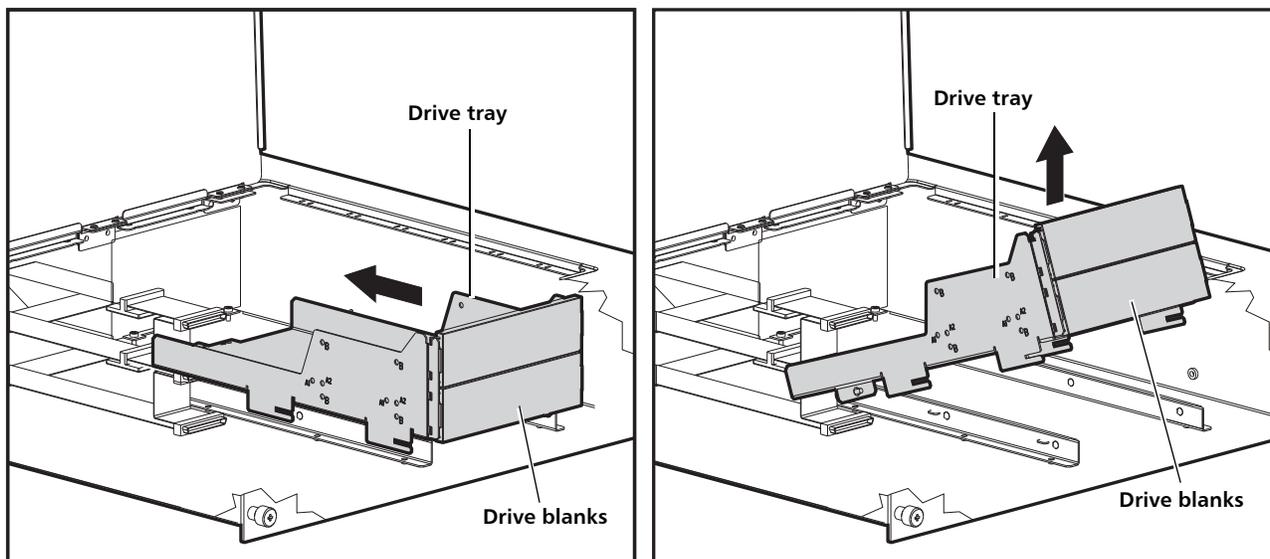

- 4 Remove the drive blanks from the front of the drive tray.
- 5 Position the tape drive in the drive tray and align mounting holes with the holes in the drive tray.


Caution: If you are installing a half-height tape drive, using screws other than the Phillips screws labeled as **General Mounting Screws** can damage the tape drive.

Do not use screws other than the **General Mounting Screws** to secure the internal LTO-5 Half-Height Tape Drive.

- 6 Secure the drive using two screws on each side of the tape drive.
- 7 Install the tape drive tray into the 3U enclosure (see [Figure 6](#)):
 - a Place the drive tray in the enclosure at an angle and then lay it flat.
 - b Slide the drive toward the front of the enclosure.

Note: Ensure that the cut outs on the drive tray line up with the tabs on the enclosure.

Figure 6 Installing the Tape Drive

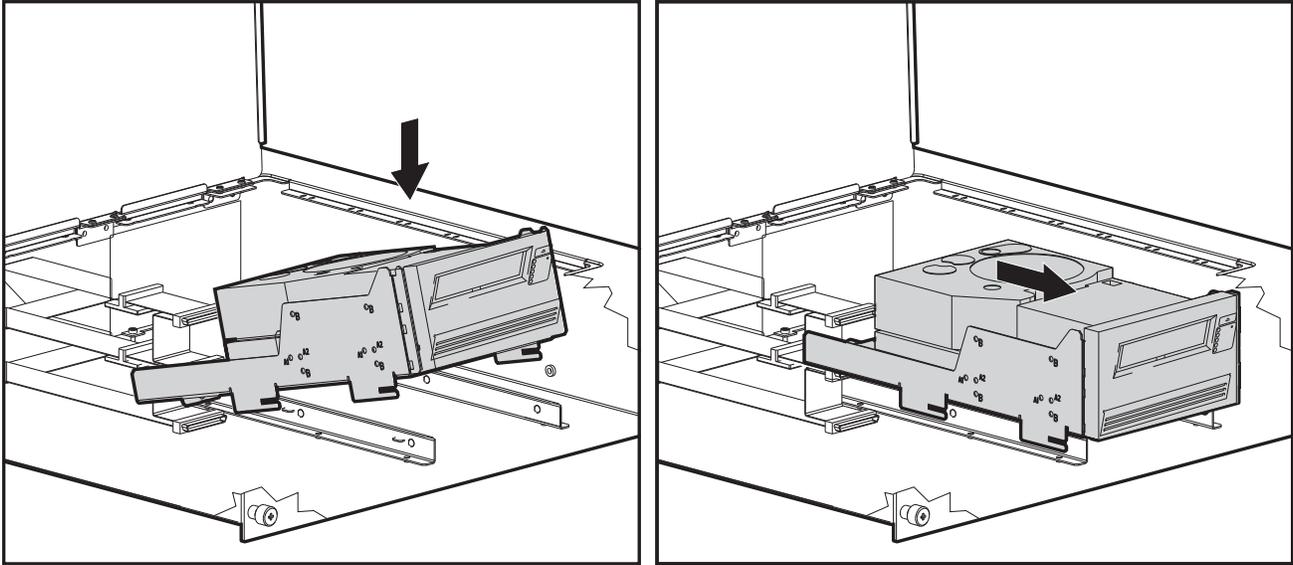


- 8 Secure the tape drive tray by tightening the thumbscrew.
Continue with [Connecting the Tape Drive Cables](#) on page 8.

Replacing a Tape Drive:

To replace a tape drive:

- 1 Remove the tape drive (see [Figure 7](#)):
 - a Disconnect all cables from the tape drive.
 - a Push the drive tray toward the rear of the 3U enclosure.
 - b Pull the drive tray up and out at an angle.

Figure 7 Removing the Tape Drive

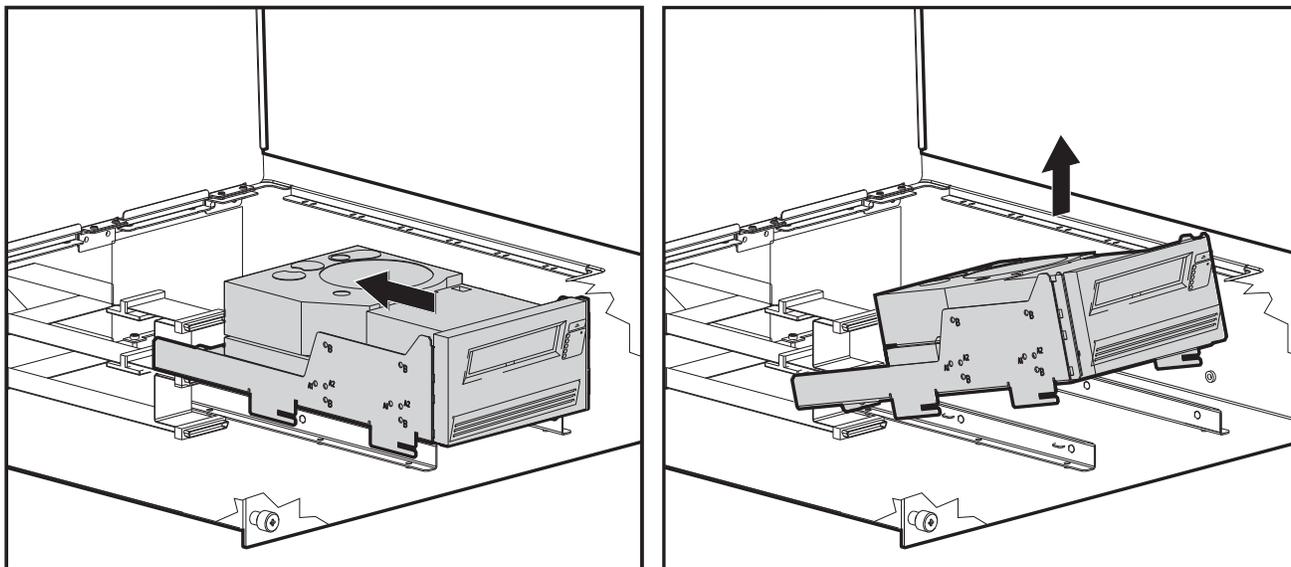

- 2 Remove the screws securing the mounting drive tray to the tape drive.
- 3 Remove the failed tape drive from the drive tray.
- 4 Position the new tape drive in the drive tray and align mounting holes with the holes in the drive tray.


Caution: If you are installing a half-height tape drive, using screws other than the Phillips screws labeled as **General Mounting Screws** can damage the tape drive.

Do not use screws other than the **General Mounting Screws** to secure the internal LTO-5 Half-Height Tape Drive.

- 5 Secure the drive using two screws on each side of the tape drive.
- 6 Install the tape drive tray into the 3U enclosure (see [Figure 8](#)):
 - a Place the drive tray in the enclosure at an angle and then lay it flat.
 - b Slide the drive toward the front of the enclosure.

Note: Ensure that the cut outs on the drive tray line up with the tabs on the enclosure.

Figure 8 Installing the New Tape Drive

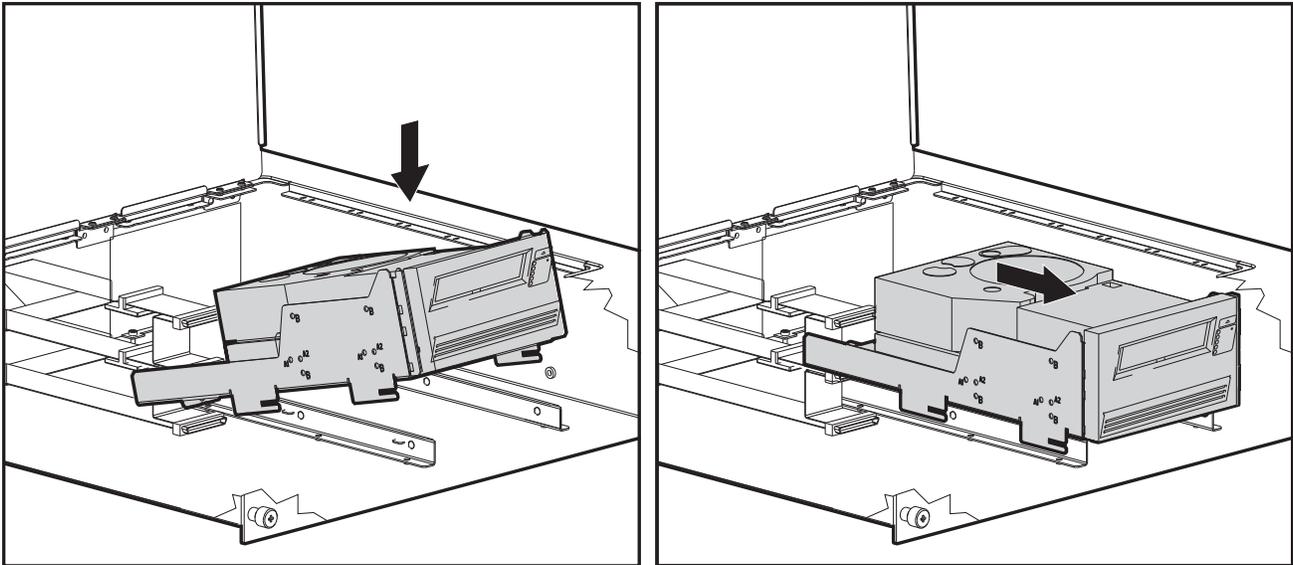


- 7 Secure the tape drive tray by tightening the thumbscrew.
Continue with [Connecting the Tape Drive Cables](#) on page 8.

Connecting the Tape Drive Cables

To connect the tape drive cables:

- 1 Connect the following cables to the back of the tape drive (see [Figure 9](#)).
 - a Connect the SAS cable to the tape drive SAS connector.
 - b Connect a power cable to the SAS cable.

Figure 9 Connecting the SAS and Power Cables

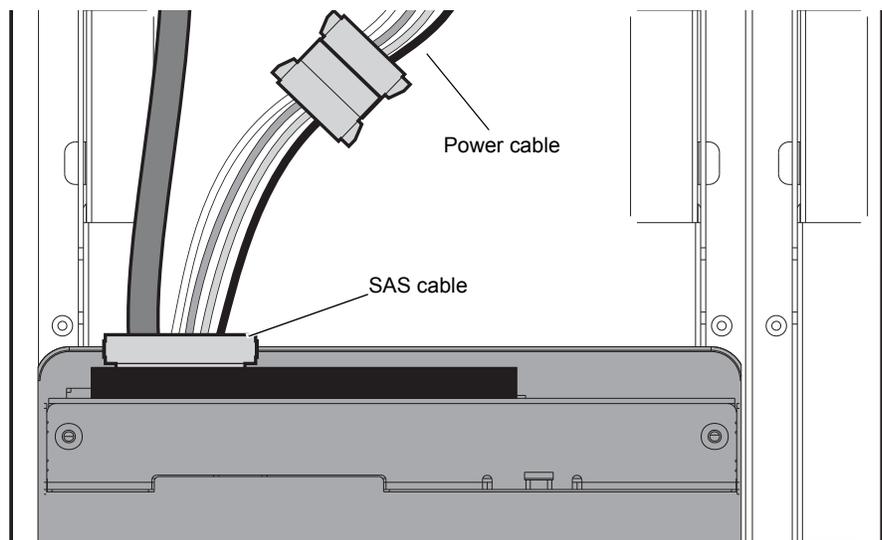


Closing the Top Panel

To close the top panel (see [Figure 10](#)):

- 1 Close the top access panel.
- 2 Install the 3U enclosure back into the rack.
- 3 Connect the AC power connector on the back panel of the 3U Rackmount enclosure.
- 4 Press the drive power switch on the front panel of the 3U Rackmount enclosure to turn on the drive power.

Figure 10 Closing the Top Access Panel

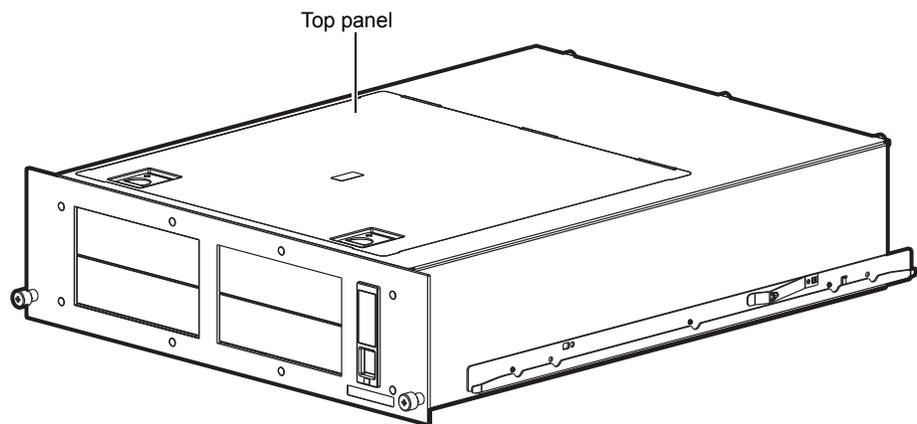

Installing the 3U Rackmount Enclosure in a Rack

The rack rails supplied with the 3U rackmount enclosure can be used to install the unit in racks that have round, square, or threaded holes in the vertical mounting bars.

The kit contains the following items:

- A template to mark the rack for proper alignment of rack-mounting brackets.
- A cable management system consisting of a cable reel and cable rack bracket.
- A pair of spring-loaded rails.

Tools Required

If you are installing the tape enclosure in a rack with unmarked holes in the vertical mounting bars the following items will make the rack installation easier:

- Pencil
- #2 Phillips screwdriver to install the cable management system.
- Two M6 x 1.0-12L Phillips screws that came with your rack.

Installation Requirements

When installing the enclosure in a rack:

- Start at the bottom of the rack, or at the top of a previously mounted component, and work upward.
- If possible, install the heaviest components at the bottom and lighter ones toward the top of the rack.
- Make sure that the rack-mounting rails are level from front to back.

WARNING: To reduce the risk of personal injury or equipment damage, be sure that:

1. The rack leveling jacks are extended to the floor.
2. The full weight of the rack rests on the leveling jacks.
3. The stabilizing feet are attached to the rack if it is a single rack installation.
4. The racks are coupled in multiple rack installations.
5. Only one component is extended at a time.
6. A rack may become unstable if more than one component is extended for any reason.

Before you begin

If you are installing the 3U rackmount enclosure in a rack with unmarked holes in the vertical mounting bars, identify and mark the correct mounting holes in the rack before you begin rail installation.


Caution: It is important to install rack components level. To ensure that the 3U rackmount enclosure is installed correctly it may be necessary to measure the height of the correct mounting holes in the front and rear vertical mounting bars.

Installing the 3U Enclosure

To install the 3U enclosure:


- 1 Attach the template to the front of the rack (see [Figure 11](#)).
- 2 Using a pencil, mark the holes for the front tabs of the spring-loaded rack rails, and mark the top and bottom edges of the template for additional installations.

Figure 11 Attaching the Template to the Rack

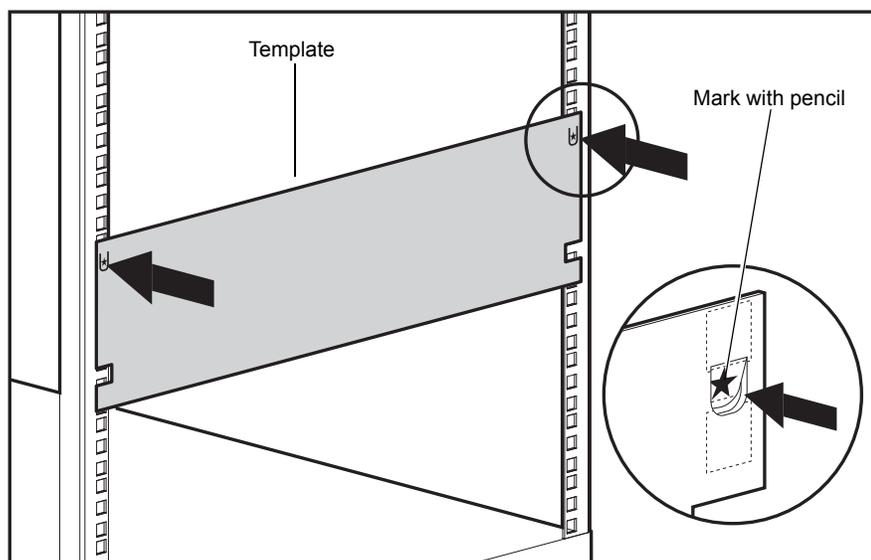


- 3 Repeat steps 1 and 2 for the back of the rack.
- 4 Install the spring-loaded rack rails (see [Figure 12](#)):
 - a From the back of the rack, insert the front tabs of the spring-laded rack rail into the proper holes.
 - b Press the rail forward and insert the rear tabs of the spring-loaded rack rail into the proper holes.
 - c The rail locks into place securely.

Figure 12 Attaching the Spring-loaded Rails

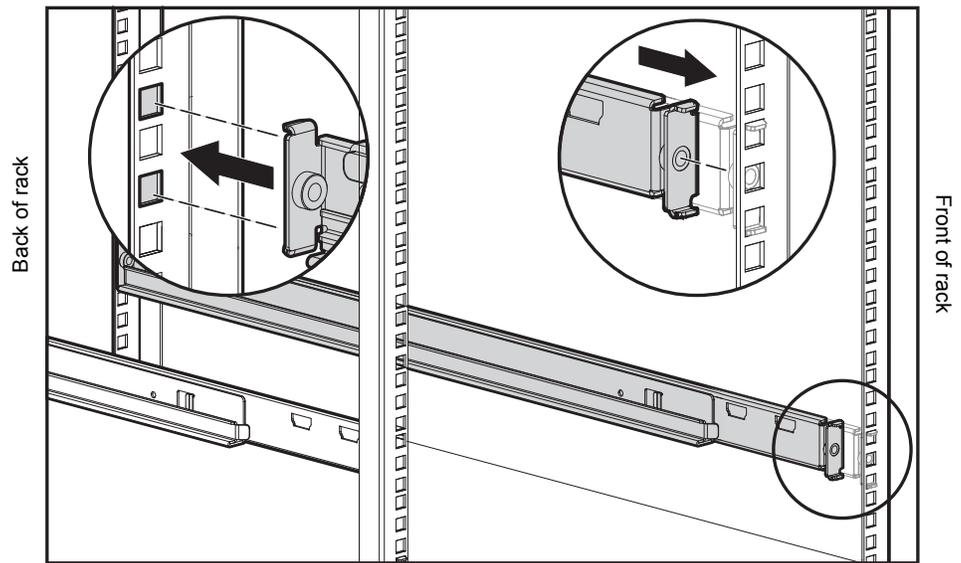


- 5 Repeat steps 4 and 5 for the second spring-loaded rack rail.
- 6 From the back of the rack, align the cable reel with the hole in the right spring-loaded rack rail and secure it with an M6 x 1.0-12L Phillips screw (see [Figure 13](#)).

Figure 13 Attaching the Spring-loaded Rails

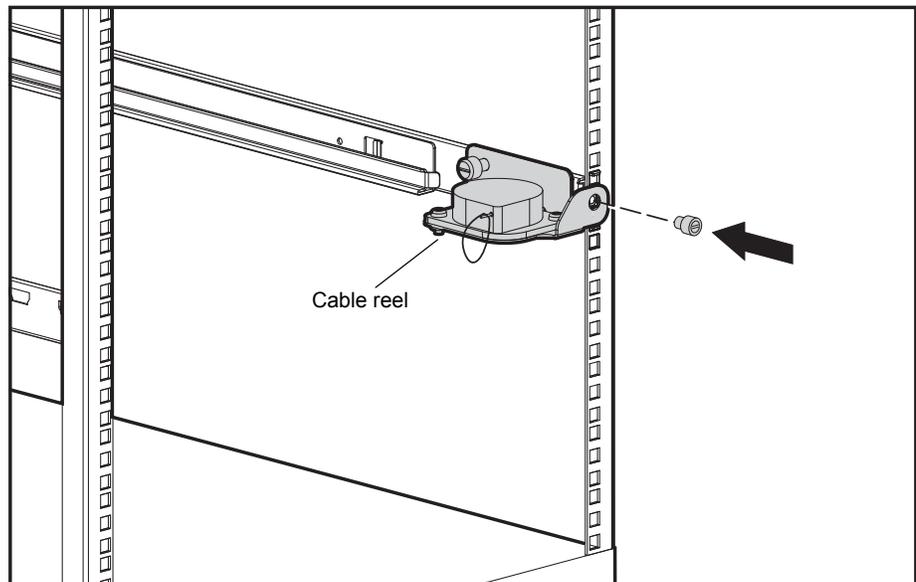

- 7 Tighten the thumbscrew into the spring-loaded rack rail.
- 8 From the back of the rack, align the cable rack bracket with the hole in the spring-loaded rack rail and secure it with an M6 x 1.0-12L Phillips screw (see [Figure 14](#)).


Figure 14 Attaching the Cable Rack Bracket

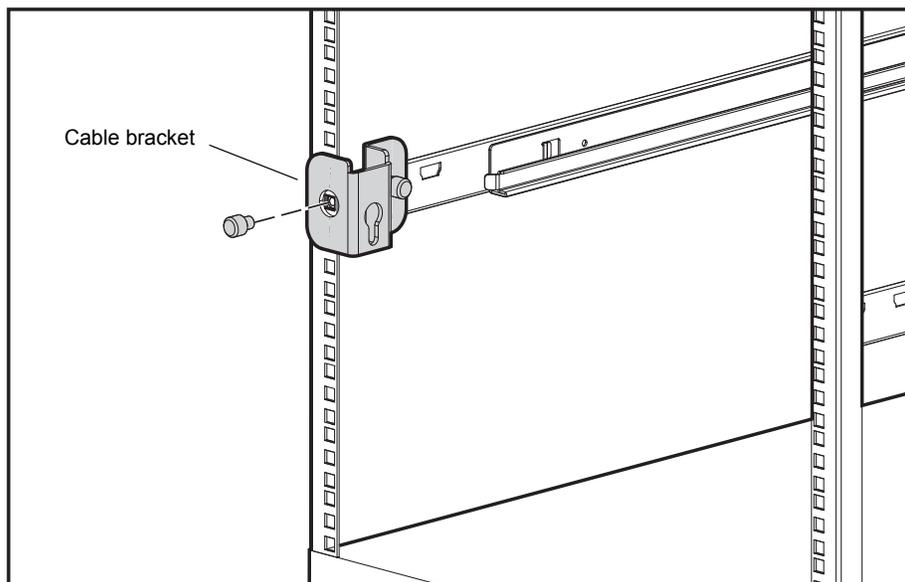

- 9 Tighten the thumbscrew into the spring-loaded rack rail.
- 10 Align the rear of the storage enclosure rails with the front end of the spring-loaded rack rails, then push it fully into the rack (see [Figure 15](#)).

Caution: Be sure to keep the component parallel to the floor when sliding the storage enclosure into the spring-loaded rack rails. Tilting the component up or down could result in damage to the rails.


Figure 15 Installing the 3U Enclosure

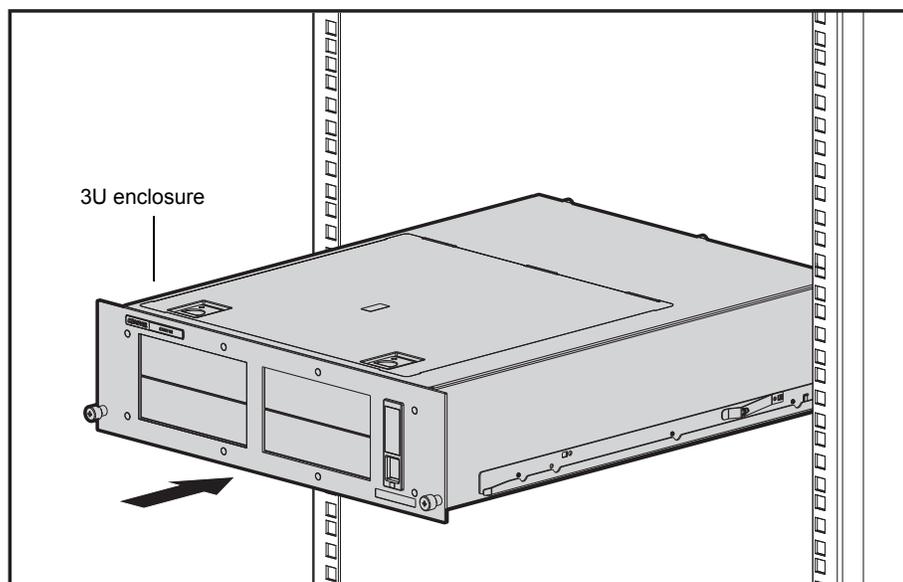

- 11 Tighten the front panel thumbscrews.

- 12 Connect a SAS cable to the back of the 3U enclosure (see [Figure 1](#) on page 2) for every SAS device in the 3U enclosure.
- 13 Connect the power cable to the back of the 3U enclosure (see [Figure 2](#) on page 2).
- 14 Secure the system cables at the back of the 3U enclosure to the cable reel and cable bracket as shown in [Figure 16](#).

Figure 16 Securing the System Cables

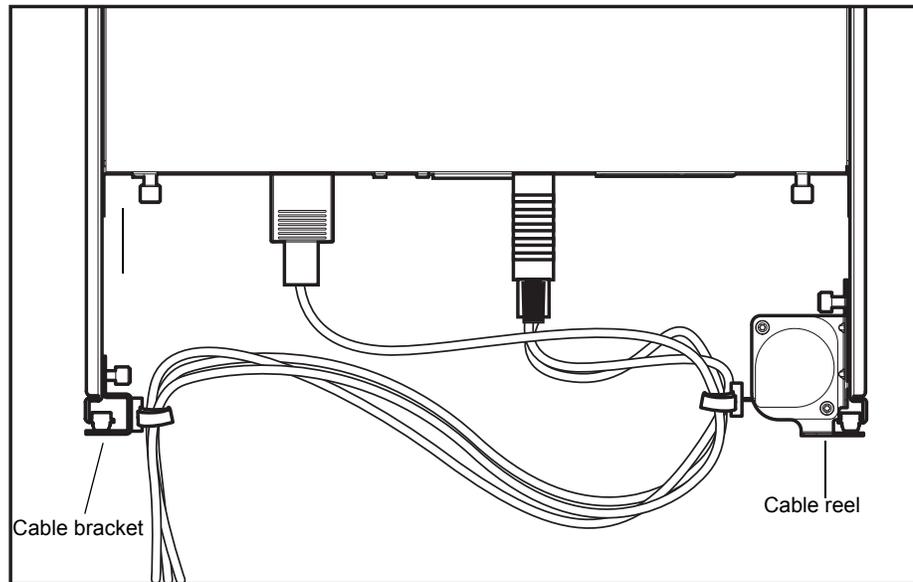

The 3U rackmount enclosure installation is complete.

Class A Device Declarations

WARNING: This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction's manual, might cause interference to radio communications. Operation of this equipment in a residential area is likely to cause interference, in which case users are required to correct the interference at their expense.

The user is cautioned that changes and modifications made to the equipment without approval of the manufacturer could void the user's authority to operate this equipment.



For assistance, contact the Quantum Customer Support Center:

USA: **800-284-5101 (toll free) or 949-725-2100**

EMEA: **00800-4-782-6886 (toll free) or +49 6131 3241 1164**

APAC: **+800 7826 8887 (toll free) or +603 7953 3010**

Worldwide: <http://www.quantum.com/ServiceandSupport>

Quantum®

Backup. Recovery. Archive. It's What We Do.

©2010 Quantum Corporation. All rights reserved. Quantum, the Quantum logo, and all other logos are registered trademarks of Quantum Corporation or of their respective owners. Protected by Pending and Issued U.S. and Foreign Patents, including U.S. Patent No. 5,990,810.

About Quantum

Quantum Corp. (NYSE:QTM) is the leading global storage company specializing in backup, recovery and archive. Combining focused expertise, customer-driven innovation, and platform independence, Quantum provides a comprehensive range of disk, tape, media and software solutions supported by a world-class sales and service organization. This includes the DXi™-Series, the first disk backup solutions to extend the power of data deduplication and replication across the distributed enterprise. As a long-standing and trusted partner, the company works closely with a broad network of resellers, OEMs and other suppliers to meet customers' evolving data protection needs.