

Quantum.



User's Guide User's Guide User's Guide User's Guide User's Guide

Quantum DX-Series

DX-Series

6513501-04 A01

Quantum DX-Series User's Guide, 6513501-04 A01, August 2005, Made in USA.

Quantum Corporation provides this publication "as is" without warranty of any kind, either express or implied, including but not limited to the implied warranties of merchantability or fitness for a particular purpose. Quantum Corporation may revise this publication from time to time without notice.

#### **COPYRIGHT STATEMENT**


Copyright 2005 by Quantum Corporation. All rights reserved.

Your right to copy this manual is limited by copyright law. Making copies or adaptations without prior written authorization of Quantum Corporation is prohibited by law and constitutes a punishable violation of the law.

#### **TRADEMARK STATEMENT**

DLT and DLTtape are trademarks of Quantum Corporation.

Quantum, the Quantum logo, and the DLTtape logo are all registered trademarks of Quantum Corporation. Other trademarks may be mentioned herein which belong to other companies.

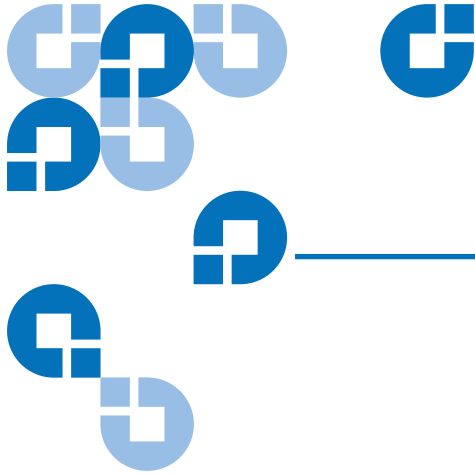

# Contents

---



---

## Preface

xiii

---

|                  |  |          |
|------------------|--|----------|
| <b>Chapter 1</b> | <b>DX-Series System Description</b>      | <b>1</b> |
|                  | Overview .....                           | 2        |
|                  | Time Required for Backup .....           | 2        |
|                  | Confidence in Completing the Backup..... | 2        |
|                  | Time to Restore Data .....               | 2        |
|                  | DX-Series System .....                   | 3        |
|                  | Features and Benefits.....               | 7        |
|                  | DX-Series Components .....               | 8        |
|                  | DX-Series Storage Array .....            | 8        |
|                  | DX-Series Controller.....                | 9        |
|                  | Fibre Channel Switch (DX100 Only) .....  | 11       |
|                  | Ethernet Switch (DX100 Only) .....       | 11       |
|                  | AC Power Sequencer (DX100 Only) .....    | 12       |
|                  | Supported RAID Configurations.....       | 13       |
|                  | RAID 5 Configuration .....               | 14       |
|                  | Typical Configurations.....              | 15       |

|                  |   |           |
|------------------|---|-----------|
| <b>Chapter 2</b> | <b>Basic Operations</b>                     | <b>17</b> |
|                  | Turning on the DX-Series Components .....   | 17        |
|                  | Turning on the DX30 .....                   | 18        |
|                  | Turning on the DX100 .....                  | 18        |
|                  | DX-Series Controller Operations .....       | 19        |
|                  | DX-Series Storage Array Operations .....    | 21        |
|                  | System Monitoring.....                      | 21        |
|                  | Relocating the DX-Series System .....       | 25        |
| <br>             |   |           |
| <b>Chapter 3</b> | <b>DX-Series Remote Management</b>          | <b>27</b> |
|                  | DX-Series Web Pages .....                   | 28        |
|                  | DX-Series Web Page Menu Items .....         | 28        |
|                  | Accessing DX-Series Web Pages .....         | 29        |
|                  | Using the DX-Series Web Pages.....          | 31        |
|                  | Configuration.....                          | 33        |
|                  | Accessing Library Configuration.....        | 33        |
|                  | Partitioning.....                           | 34        |
|                  | Write Protection.....                       | 39        |
|                  | Barcode Assignment .....                    | 40        |
|                  | Properties.....                             | 42        |
|                  | Configuring the Network .....               | 43        |
|                  | Configuring the Date and Time .....         | 45        |
|                  | Configuring the Security Options.....       | 46        |
|                  | Configuring the Fibre Channel Options ..... | 49        |
|                  | System Status .....                         | 54        |
|                  | Accessing System Status .....               | 54        |
|                  | Viewing Tape Drive Details.....             | 56        |
|                  | Viewing Robot Details.....                  | 57        |
|                  | Viewing Storage Bin Details .....           | 59        |
|                  | Viewing Hardware Status.....                | 60        |
|                  | Viewing System Performance .....            | 71        |
|                  | Remote Alerts.....                          | 72        |
|                  | Accessing Remote Alerts.....                | 72        |
|                  | Licensing.....                              | 82        |
|                  | Accessing Licensing .....                   | 82        |
|                  | Keys Tab .....                              | 83        |
|                  | End User Agreement Tab.....                 | 84        |

|   |    |
|---|----|
| Utilities .....                               | 85 |
| Accessing Utilities.....                      | 85 |
| Changing Library State .....                  | 86 |
| System Log.....                               | 86 |
| Uploading Firmware.....                       | 87 |
| System Configuration .....                    | 89 |
| Downloading the System Diagnostics File ..... | 92 |
| Rebooting the<br>DX-Series System.....        | 93 |

---

|                  |                        |           |
|------------------|------------------------|-----------|
| <b>Chapter 4</b> | <b>Troubleshooting</b> | <b>95</b> |
|------------------|------------------------|-----------|

|                                     |     |
|-------------------------------------|-----|
| Common Problems and Solutions.....  | 95  |
| Hardware Problems .....             | 96  |
| Ethernet Network Problems.....      | 97  |
| Fibre Channel Network Problems..... | 99  |
| Host Bus Adapter Settings.....      | 99  |
| JNI™ Fibre Channel HBA .....        | 100 |
| Emulex™ Fibre Channel HBA .....     | 100 |
| Q-Logic™ Fibre Channel HBA .....    | 105 |

---

|                   |  |            |
|-------------------|--|------------|
| <b>Appendix A</b> | <b>DX-Series System Specifications</b> | <b>107</b> |
|-------------------|--|------------|

|  |     |
|--|-----|
| Physical Characteristics.....                    | 108 |
| Performance and Reliability Characteristics..... | 110 |
| Environmental Specifications.....                | 110 |

---

|                   |                                |            |
|-------------------|--------------------------------|------------|
| <b>Appendix B</b> | <b>Setup CD and Setup Menu</b> | <b>113</b> |
|-------------------|--------------------------------|------------|

|   |     |
|---|-----|
| Reinstalling the Controller Operating System..... | 113 |
| Connecting to the Controller.....                 | 113 |
| Installing System Firmware .....                  | 114 |
| DX-Series Setup Menu .....                        | 115 |
| Displaying User Options .....                     | 116 |
| Configuring User Options.....                     | 117 |
| Creating Cartridges .....                         | 118 |
| Displaying Diagnostic Data .....                  | 119 |

---


|                   |   |            |
|-------------------|---|------------|
| <b>Appendix C</b> | <b>Regulatory Statements</b>                          | <b>121</b> |
|                   | Disposal of Electrical and Electronic Equipment ..... | 128        |

---

|                 |  |            |
|-----------------|--|------------|
| <b>Glossary</b> |  | <b>131</b> |
|-----------------|--|------------|

---

|              |  |            |
|--------------|--|------------|
| <b>Index</b> |  | <b>135</b> |
|--------------|--|------------|

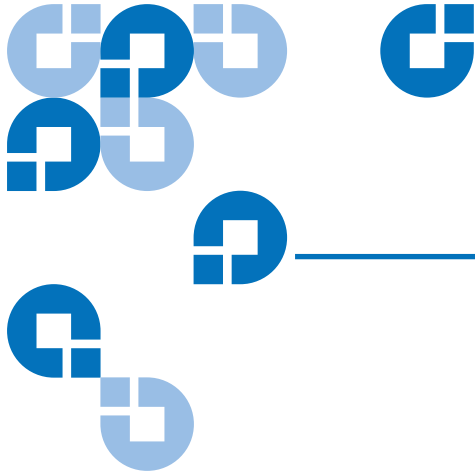

# Figures

---

|           |  |    |
|-----------|--|----|
| Figure 1  | DX-Series System Components.....             | 5  |
| Figure 2  | DX-Series Hard Drives .....                  | 6  |
| Figure 3  | DX-Series Storage Array.....                 | 9  |
| Figure 4  | DX-Series Controller .....                   | 10 |
| Figure 5  | Fibre Channel Switch.....                    | 11 |
| Figure 6  | Ethernet Switch.....                         | 12 |
| Figure 7  | AC Power Sequencer .....                     | 13 |
| Figure 8  | RAID 5 Configuration.....                    | 15 |
| Figure 9  | DX-Series System Plus a Tape Library .....   | 16 |
| Figure 10 | Power Switch Locations .....                 | 19 |
| Figure 11 | Controller Front Panel .....                 | 20 |
| Figure 12 | Storage Array LCD Location .....             | 22 |
| Figure 13 | RAID Controller Locations .....              | 23 |
| Figure 14 | DX-Series Web Page Menu Items .....          | 29 |
| Figure 15 | Login Page.....                              | 30 |
| Figure 16 | Home Page .....                              | 31 |
| Figure 17 | System Details (Graphical vs. Textual) ..... | 32 |

|           |  |    |
|-----------|--|----|
| Figure 18 | Configuration Page.....                                | 34 |
| Figure 19 | Partition Details .....                                | 35 |
| Figure 20 | Adding a Partition .....                               | 36 |
| Figure 21 | Editing a Partition.....                               | 38 |
| Figure 22 | Enabling/Disabling Write Protection.....               | 40 |
| Figure 23 | Assigning Barcode Labels.....                          | 41 |
| Figure 24 | Assigning a Library Name .....                         | 43 |
| Figure 25 | Network Configuration Page.....                        | 44 |
| Figure 26 | Date and Time Configuration .....                      | 45 |
| Figure 27 | Security Configuration.....                            | 46 |
| Figure 28 | SSL Configuration.....                                 | 48 |
| Figure 29 | Install SSL Certificate Page.....                      | 49 |
| Figure 30 | Fibre Channel Input Port Locations .....               | 50 |
| Figure 31 | Fibre Channel Configuration .....                      | 51 |
| Figure 32 | Device Mapping Configuration.....                      | 53 |
| Figure 33 | System Status Page .....                               | 55 |
| Figure 34 | Tape Drive Details .....                               | 56 |
| Figure 35 | Robot Details .....                                    | 58 |
| Figure 36 | Storage Bin Details.....                               | 59 |
| Figure 37 | Hardware Status Page.....                              | 61 |
| Figure 38 | Controller Details.....                                | 62 |
| Figure 39 | Fibre Channel Switch Details .....                     | 64 |
| Figure 40 | Fibre Channel Switch Temperature Details.....          | 65 |
| Figure 41 | Fibre Channel Switch Fan and Power Supply Status ..... | 65 |
| Figure 42 | Storage Array Details .....                            | 66 |
| Figure 43 | Storage Array Properties Link .....                    | 69 |
| Figure 44 | Storage Array Properties .....                         | 70 |
| Figure 45 | Performance Status Page .....                          | 71 |
| Figure 46 | Tape Drive Throughput.....                             | 72 |



Figure 47 Remote Alerts Page ..... 73

Figure 48 Email Tab ..... 74

Figure 49 SNMP Tab ..... 77

Figure 50 SNMP Trap Destinations ..... 78

Figure 51 SNMP Community Management ..... 79

Figure 52 Contacts Tab ..... 80

Figure 53 Licensing Page ..... 83

Figure 54 License Keys Tab ..... 84

Figure 55 End User Agreement Tab ..... 85

Figure 56 Utilities Page ..... 86

Figure 57 System Log ..... 87

Figure 58 Uploading Firmware ..... 88

Figure 59 Activating/ Removing a Firmware Image ..... 89

Figure 60 Downloading Configuration Files ..... 90

Figure 61 Activating the Configuration File ..... 92

Figure 62 Downloading Diagnostics Files ..... 93

Figure 63 Shutting Down the DX-Series System ..... 94

Figure 64 JNI Fibre Channel HBA Configuration ..... 100

Figure 65 Emulex Fibre Channel HBA ..... 101

Figure 66 Emulex Topology Setting ..... 102

Figure 67 Modify Topology Drivers Screen ..... 102

Figure 68 Emulex Frame Size Setting ..... 103


Figure 69 Emulex link Speed Setting ..... 104

Figure 70 Connecting the Service PC to the Controller ..... 114

Figure 71 DX-Series Installation Menu ..... 115

Figure 72 DX-Series Setup Menu ..... 116



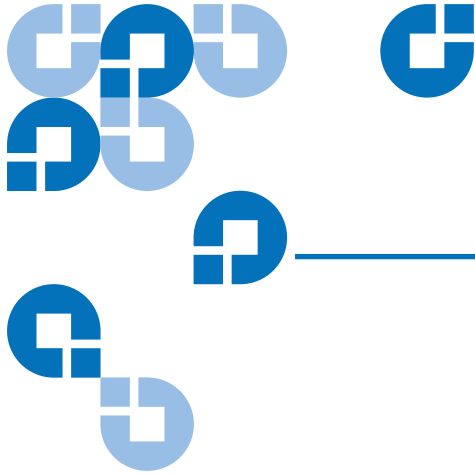


# Tables

---

|          |   |    |
|----------|---|----|
| Table 1  | DX-Series Capacity Specifications .....         | 3  |
| Table 2  | Controller Front Panel .....                    | 20 |
| Table 3  | Front LED Descriptions .....                    | 22 |
| Table 4  | RAID Controller LED Descriptions .....          | 24 |
| Table 5  | Network Configuration Fields .....              | 44 |
| Table 6  | Port Settings .....                             | 52 |
| Table 7  | Tape Drive Details .....                        | 56 |
| Table 8  | Robot Details .....                             | 58 |
| Table 9  | Storage Bin Details .....                       | 60 |
| Table 10 | Controller Temperature Details .....            | 62 |
| Table 11 | Controller Fan and Power Supply Status .....    | 63 |
| Table 12 | Controller Fibre Channel Ports Details .....    | 63 |
| Table 13 | Storage Array Hard Drive Status .....           | 67 |
| Table 14 | Storage Array Fan and Power Supply Status ..... | 67 |
| Table 15 | Storage Array Temperature Details .....         | 68 |
| Table 16 | Storage Array Properties .....                  | 70 |
| Table 17 | Email Notification .....                        | 75 |

## Tables

|          |  |     |
|----------|--|-----|
| Table 18 | Email Server Information .....             | 76  |
| Table 19 | SNMP Trap Selections.....                  | 77  |
| Table 20 | Company Information .....                  | 81  |
| Table 21 | Primary/Secondary Contact Information..... | 81  |
| Table 22 | Hardware Problems .....                    | 96  |
| Table 23 | Ethernet Network Problems.....             | 98  |
| Table 24 | Fibre Channel Network Problems.....        | 99  |
| Table 25 | Physical Characteristics .....             | 108 |
| Table 26 | Interfaces .....                           | 109 |
| Table 27 | Performance Characteristics.....           | 110 |
| Table 28 | Reliability Characteristics .....          | 110 |
| Table 29 | Environ-mental Specifications .....        | 110 |

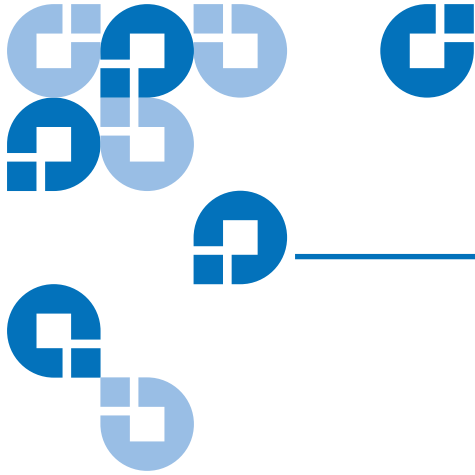

# Preface

---

This manual introduces the Quantum DX-Series enhanced data protection system and discusses:

- DX-Series system operations
- Configuration
- Web interface
- Basic troubleshooting

---

## Audience

This manual is written for DX-Series system operators and field service engineers.

---

## Document Organization

Following is a brief description of chapter contents.

- [Chapter 1, “DX-Series System Description,”](#) provides an overview of the DX-Series system.
- [Chapter 2, “Basic Operations,”](#) provides installation instructions for the DX-Series system.
- [Chapter 3, “DX-Series Remote Management,”](#) discusses using the DX-Series system management pages to control the DX-Series system remotely.

- [Chapter 4, “Troubleshooting,”](#) discusses problems you may encounter during the setup and operation of the DX-Series system.
- The Appendices provide system specifications, event handling, and regulatory statements.

---

## Notational Conventions

This manual uses the following conventions:

**Caution:** Caution indicates potential hazards to equipment or data.

**Warning:** Warning indicates potential hazards to personal safety.

**Note:** Note emphasizes important information related to the main topic.

**Tech Tip:** Tech tip provides additional technical information that may assist in installation and configuration.

- Right side of the system — Refers to the right side as you face the component being described.
- Left side of the system — Refers to the left side as you face the component being described.
- *b* — All binary numbers are succeeded by “b.”
- *h* — All hexadecimal numbers are succeeded by “h.”
- Error or attention conditions are represented in parenthesis that translate as follows:

(SK=S ASC=AA ASCQ=QQ)

where:

S — hexadecimal sense key value

AA — hexadecimal additional sense code

QQ — hexadecimal additional sense code qualifiers

## Related Documents

The following Quantum document is also available for the DX-Series system:

| Document No. | Document Title  | Document Description                                    |
|--------------|---|---|
| 6513502      | Quantum DX-Series Unpacking and Installation Instructions | Describes unpacking and installing the DX-Series System |

## Supported Internet Browsers

The Internet browser software is not supplied with the DX-Series system; you must obtain and install it independently. The DX-Series system supports the following Internet browsers:

- Microsoft Internet Explorer 6.0 SP1 or later  
You can download this software from <http://www.microsoft.com>.

**Note:** If Internet Explorer is the default browser on the client system:

- The latest security updates for Microsoft VM (virtual machine) must be installed on the client system.
- The security settings must be set no higher than “medium”. If the settings are set to “high security”, the browser will not be able to login to the DX-Series system since the system needs write access to the client.
- The “Play animations in web pages” item in the Internet Options/Advanced/Multimedia menu must be enabled.

- Mozilla Suite 1.7 on Solaris 10  
You can download this software from <http://www.mozilla.org>.
- Firefox 1.0.6 on Windows  
You can download this software from <http://www.mozilla.org>.
- Java Plug-in 1.4.2 or later  
You can download this software from <http://www.java.com>

## **SCSI-2 Specification**

The SCSI-2 communications specification is the proposed American National Standard for information systems, dated March 9, 1990. Copies may be obtained from:

Global Engineering Documents  
15 Inverness Way, East  
Englewood, CO 80112  
(800) 854-7179 or (303) 397-2740

---

## **Contacts**

Quantum company contacts are listed below.

### **Quantum**

Quantum  
P.O. Box 57100  
Irvine, CA 92619-7100  
(949) 856-7800  
(800) 284-5101

### **Technical Publications**

To comment on existing documentation send e-mail to:

doc-comments@quantum.com

**Visit the Quantum home page at:**

<http://www.Quantum.com>



## Customer Support

The Quantum Customer Support Department provides a 24-hour help desk that can be reached at:

|                            |   |
|----------------------------|---|
| North/South America:       | (949) 725-2100 or<br>(800) 284-5101         |
| Asia/Pacific Rim:          | (International Code)<br>+61 7 3862 4834     |
| Europe/Middle East/Africa: | (International Code)<br>+44 (0) 1256 848748 |


Send faxes for the Customer Support Department to:

|                            |   |
|----------------------------|---|
| North/South America:       | (949) 725-2176                              |
| Asia/Pacific Rim:          | (International Code)<br>+61 7 3862 4677     |
| Europe/Middle East/Africa: | (International Code)<br>+44 (0) 1256 848777 |

To contact the Customer Support Department use the following web/E-mail addresses:

|                            |  |
|----------------------------|--|
| North/South America:       | <a href="http://www.quantum.com/askaquestion">www.quantum.com/askaquestion</a> |
| Asia/Pacific Rim:          | <a href="mailto:apachelp@quantum.com">apachelp@quantum.com</a>                 |
| Europe/Middle East/Africa: | <a href="mailto:eurohelp@quantum.com">eurohelp@quantum.com</a>                 |



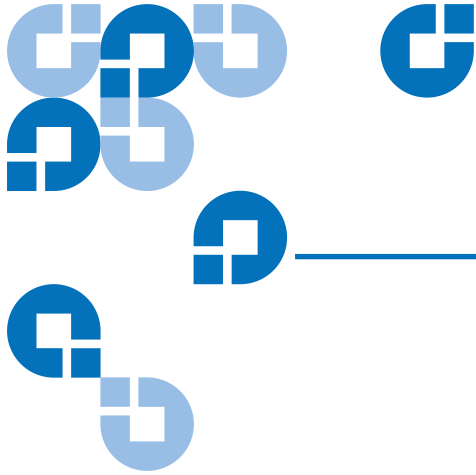

# Chapter 1

# DX-Series System

# Description

---

This chapter describes the DX-Series system and its components. The chapter consists of:

- [Overview](#)
- [Features and Benefits](#)
- [DX-Series Components](#)
  - [DX-Series Storage Array](#)
  - [DX-Series Controller](#)
- [Supported RAID Configurations](#)
- [Typical Configurations](#)

## Overview

The DX-Series Enhanced Backup Solution utilizes a disk-based backup system to complement a tape library. This solution addresses the most important problems facing Information Technology professionals:

- [Time Required for Backup](#)
- [Confidence in Completing the Backup](#)
- [Time to Restore Data](#)

---

### Time Required for Backup

Not only is the amount of data that needs to be backed up growing by nearly 100% per year, but the time window for performing the backup is shrinking due to the impact of global operational expansion. Adding more tape drives is no longer an efficient way to reduce the time required for backup.

---

### Confidence in Completing the Backup

Confidence in completing the backup job within the backup window can be very low because of time constraints or “hang ups” during the backup process due to errors generated by mechanical problems. If these types of errors could be eliminated by removing issues that are inherent in any mechanical device, confidence in the backup job completing would improve greatly.

---

### Time to Restore Data

The time required to restore data from a tape library is determined by how long it takes to mount a cartridge in a tape drive and find the proper position on the tape. This can take several minutes and then the restore time is also reduced by the tape drive transfer speed. Restoring data from hard drives (emulating tape cartridges) improves restore time by eliminating the time required to load a cartridge and transfer speed restrictions.

# DX-Series System

The DX-Series system solves these problems by separating the backup target (servers) from the backup archive (tape libraries). The DX-Series system takes advantage of high speed hard drives to greatly reduce the time required for backup/restore functions and also improve confidence in completing the backup in the time allowed. The data stored on the DX-Series system can then be migrated to a tape library without utilizing valuable network resources.

The DX-Series system consists of the DX30 and DX100 devices. Both are backup devices based upon high speed disk drives instead of tape drives.

Table 1 DX-Series Capacity Specifications

| <b>DX Model (with Drive Size)</b> | <b>Number of Storage Arrays</b> | <b>Number of Tape Drives</b>    | <b>Number of Cartridges</b>                 | <b>Usable Capacity</b> | <b>Usable Capacity (with 2:1 Compression)</b> |
|-----------------------------------|---------------------------------|---------------------------------|---|------------------------|---|
| DX30 (250 GB drives)              | 1 to 4                          | Up to 30 virtual DLT7000 drives | 160 cartridges per storage array (640 max)  | 3.25 TB to 13 TB       | 6.5 TB to 13 TB                               |
| DX100 (250 GB drives)             | 1 to 16                         | Up to 55 virtual DLT7000 drives | 320 cartridges per storage array (2560 max) | 3.25 TB to 52 TB       | 6.5 TB to 104 TB                              |
| DX30 (400 GB drives)              | 1 to 4                          | Up to 30 virtual DLT7000 drives | 320 cartridges per storage array (1280 max) | 5.2 TB to 20.8 TB      | 10.4 TB to 41.6 TB                            |
| DX100 (400 GB drives)             | 1 to 16                         | Up to 55 virtual DLT7000 drives | 320 cartridges per storage array (5120 max) | 10.4 TB to 83.2 TB     | 20.8 TB to 166.4 TB                           |

**Note:** The ATL P1000 library emulation is an inquiry string only and can be configured via the remote management interface (see [Chapter 3](#) on page 27). The ATL P1000 was selected because it operates with all backup applications allowing the DX-Series system to integrate seamlessly in a data center.


**Note:** The DX-Series storage array is shipped with the following RAID configuration:

- 1 logical drive configured in RAID 5 (7 data drives + 1 parity drive)
- 1 logical drive configured in RAID 5 (6 data drives + 1 parity drive)
- 1 global hot spare drive

To reconfigure the DX-Series storage array to either remove the hot spare or add an additional hot spare (total of two hot spares), contact Quantum customer support (see [Customer Support](#) on page xvii). Reconfiguring the storage array RAID configuration will cause all previously stored data to be lost.

Both the DX30 and the DX100 use the same system components (controller and storage arrays). The DX100 storage arrays, however, contain dual RAID controllers and the overall DX100 system can expand to sixteen storage arrays. The DX100 controller also has a full complement of Fibre Channel HBAs (two quad port HBAs and four dual port HBAs) whereas the DX30 has two Fibre Channel HBAs (a single quad port HBA and a single dual port HBA).


Figure 1 DX-Series  
System Components

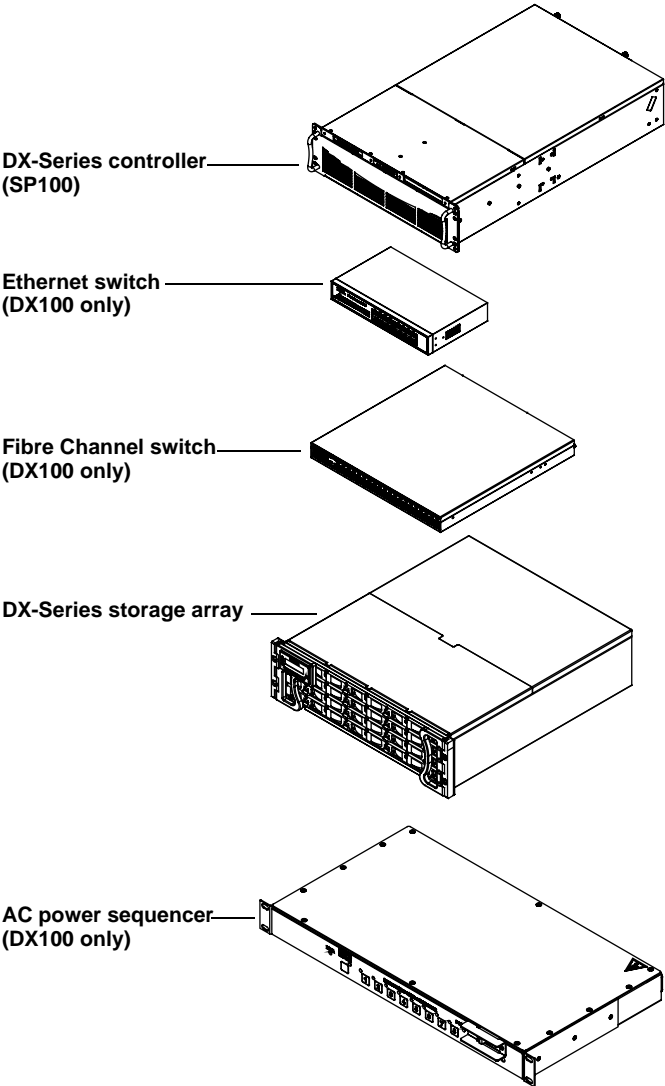

Serial ATA hard drives are the heart of the DX-Series system. These hard drives (1 drive per drive sled = 16 total drives) appear to the backup application as DLT tape cartridges (see [figure 2](#)).

Data is stored on the hard drives through an interface that appears as an ATL P1000 tape library. This allows backup applications to recognize and integrate a DX-Series system into a data center environment just like a typical tape library.

Figure 2 DX-Series  
Hard Drives

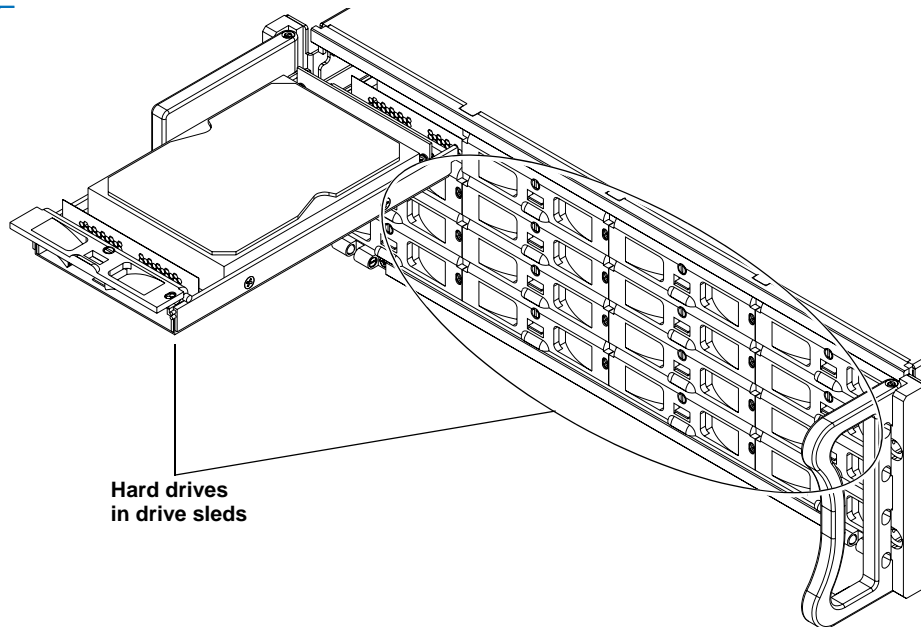

**Caution:** Removing hard drives during system operation may cause loss of data or degraded system performance. Contact Quantum customer support (see [Contacts](#) on page xvi) to report any hard drive failure.



---

## Features and Benefits

The DX-Series system provides the following features and benefits:

- Restores files 5 to 10 times faster than a conventional tape library
- High availability features:
  - RAID 5 file system with one logical drive of 7+1 and one logical drive of 6+1 with a global hot spare to ensure data protection even if one drive fails (Optional RAID 5 with zero or two hot spares)
  - Event monitoring and logging
  - Redundant cooling, power supplies, and disk parity protection
  - Global spare and hot-swappable hard drives
  - Up to two RAID controllers per storage array
  - Flexible alert notification including e-mail and SNMP traps
- Serial ATA drive technology
- Restore latency under 10 seconds
- Two 2 Gbit/sec Fibre Channel interfaces for DX30; eight for DX100
- Hardware based 2:1 compression capability
- 10/100/1000 BaseT Ethernet interface for auxiliary management functionality (web based management)
- Browser based remote management system that provides status and configuration options
- Rack space requirements:
  - DX30 base unit - 6U (15U with a maximum of 4 storage arrays)
  - DX100 base unit - 12U (58U for a maximum of 16 storage arrays, two Fibre Channel switches, eight AC power sequencers, and an Ethernet switch)
- Quantum DLT7000 and ATL P1000 emulation
- Supported by every major backup software vendor preserving software investment
- Installs in a standard rack with a minimum depth of 30 in (76.2 cm)

---

## DX-Series Components

The DX-Series system consists of the following major components:

- [DX-Series Storage Array](#)
- [DX-Series Controller](#)
- [Fibre Channel Switch \(DX100 Only\)](#)
- [Ethernet Switch \(DX100 Only\)](#)
- [AC Power Sequencer \(DX100 Only\)](#)

---


### DX-Series Storage Array

Up to four storage arrays can be installed in a DX30 system and up to sixteen storage arrays can be installed in a DX100 system. The storage array houses the following components:

- Drive sleds (16 per storage array)
- Two redundant power supplies
- Two redundant fan modules
- RAID controller(s) (contains Fibre Channel interfaces)
  - DX30 contains a single RAID controller
  - DX100 contains dual RAID controllers

These components are removed and replaced either through the front or back of the array (see [figure 3](#)).

Figure 3 DX-Series Storage Array

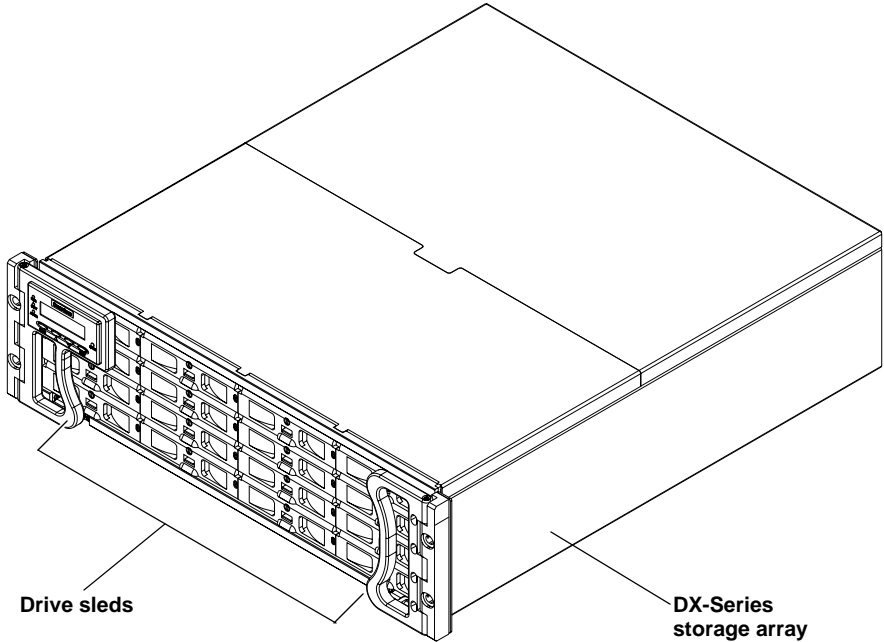

**RAID Sets**

The DX-Series storage array is divided into two RAID sets. The first RAID set is made up of the first eight drive sleds (sleds 1-8). The second RAID set is made up of the next seven drive sleds (sleds 9-15). The last hard drive (drive sled 16) is reserved as a global hot spare. Both RAID sets contain 2 LUNs or logical units. Each RAID set can sustain a single drive sled failure and can hold a maximum of 160 virtual tape cartridges (80 cartridges per LUN).


**Drive Sleds**

Each drive sled located on the front of the DX-Series storage array contains one hard drive.

**DX-Series Controller**

The DX-Series controller contains a Linux based operating system that provides the library and tape drive emulation as well as Fibre Channel and Ethernet interfaces (see [figure 4](#)).

Figure 4 DX-Series  
Controller

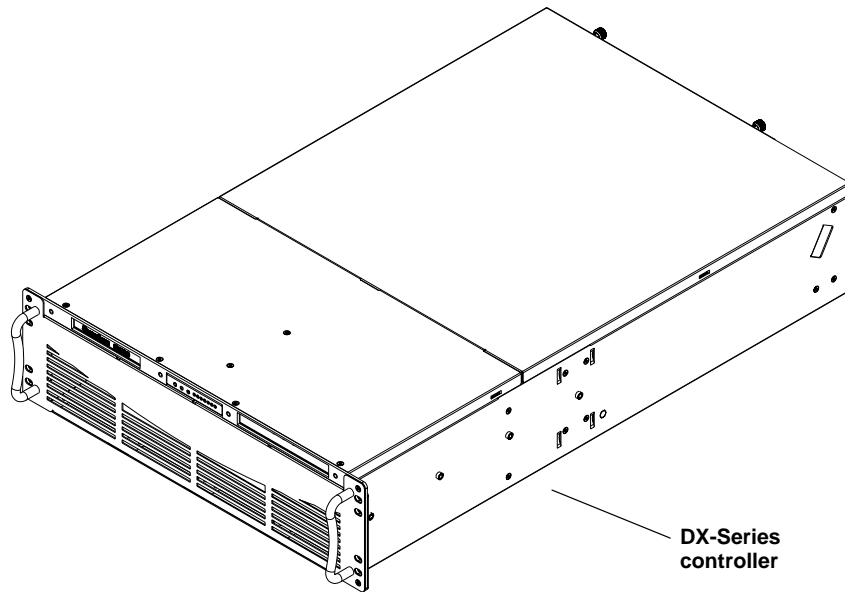

### **Ethernet Interface**

The Ethernet port is provided for remote management of the DX-Series controller via web-based configuration and management screens (see [DX-Series Remote Management](#) on page 27).

### **Fibre Channel Interfaces**

Channel network at the customer site as well as the DX-Series storage arrays in the system.

The DX30 contains the following Fibre Channel HBAs:

- A dual port Fibre Channel HBA (connects to customer Fibre Channel network)
- A quad port Fibre Channel HBA (connects to DX-Series storage arrays)

The DX100 contains the following Fibre Channel HBAs:

- Four dual port Fibre Channel HBAs (connects to customer Fibre Channel network)


- Two quad port Fibre Channel HBA (connects to DX-Series storage arrays)

This connection can be a direct connection to the Fibre Channel host or to a Fibre Channel switch. The Fibre Channel interface automatically detects the mode being used by the network and sets itself appropriately.

**Fibre Channel Switch (DX100 Only)**

The Fibre Channel switch provides twenty ports for connecting up to eight storage arrays to the DX-Series controller. Each storage array has two connections to the Fibre Channel switch for redundancy and improved performance. One Fibre Channel switch is required for two to eight storage arrays; a second Fibre Channel switch is required for nine to sixteen storage arrays (see [figure 5](#)).


Figure 5 Fibre Channel Switch

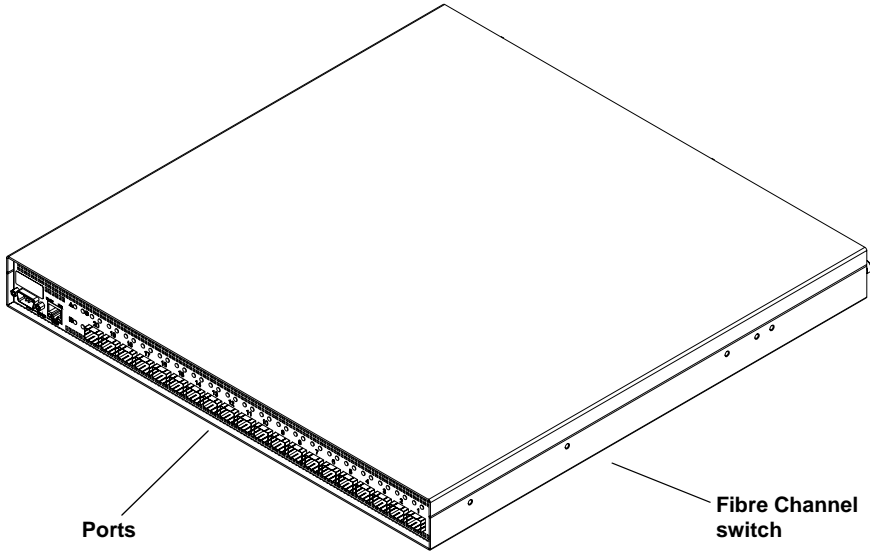

**Ethernet Switch (DX100 Only)**

The Ethernet switch provides 16 ports for connecting the AC power sequencer and Fibre Channel switch to the DX-Series controller (see [figure 6](#)).


Figure 6 Ethernet  
Switch

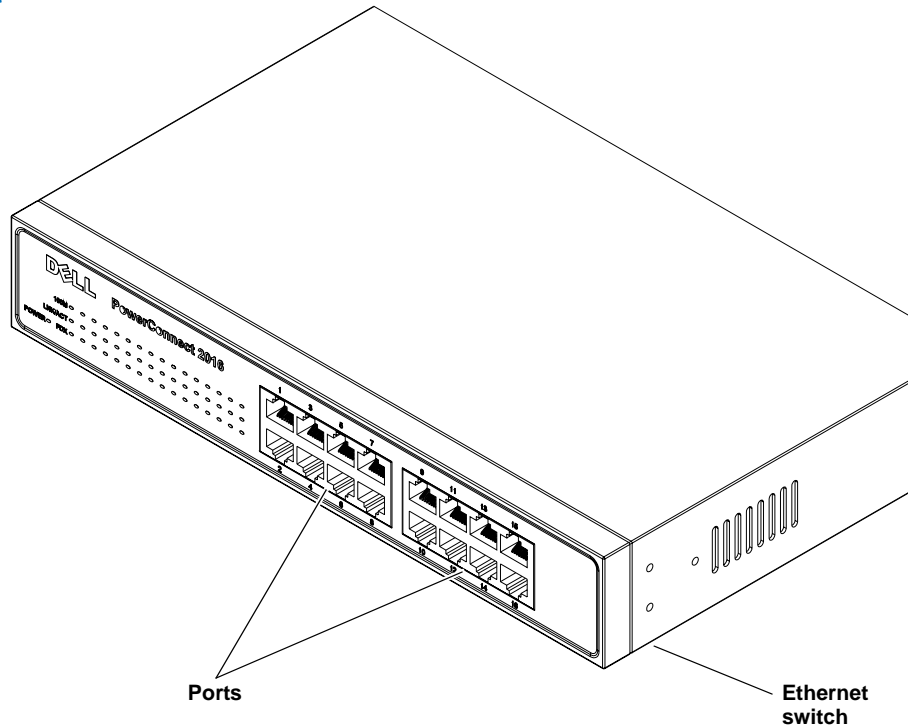

**AC Power Sequencer  
(DX100 Only)**

The AC power sequencer (two power sequencers for every four storage arrays) are programmed by the DX-Series controller to power on the storage arrays in proper order (see [figure 7](#)).

Figure 7 AC Power Sequencer

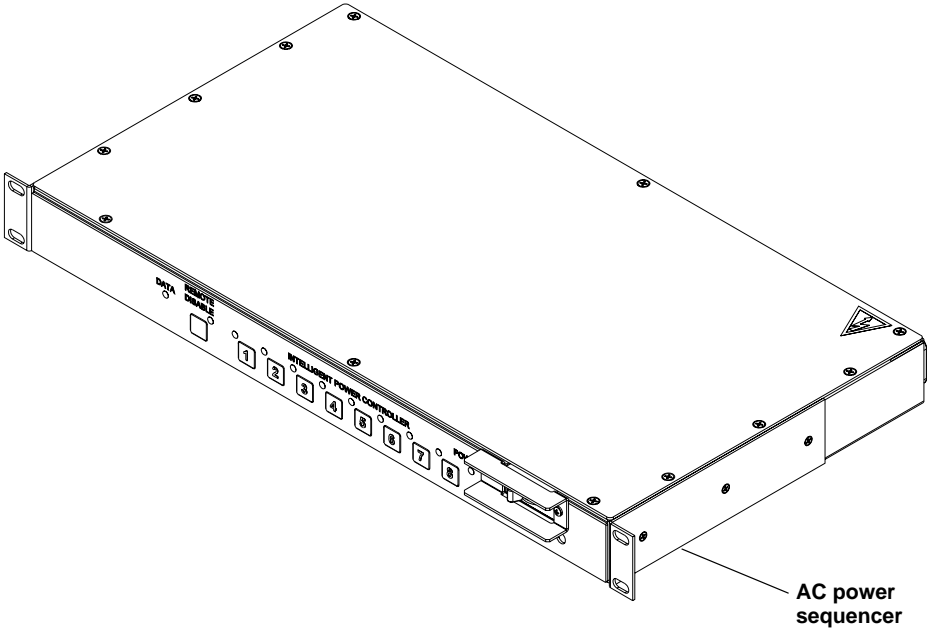

---

## Supported RAID Configurations

RAID is short for Redundant Array of Independent (or Inexpensive) Disks, which is a category of hard disk drives that employ two or more drives in combination for fault tolerance and performance. There are a number of RAID levels in use today such as 0, 1, 3, 5, and 10.

The DX-Series system supports RAID 5 in both 7+1 and 6+1 with hot spare configurations.

---

## RAID 5 Configuration

The RAID 5 configuration is the most common RAID level in use today. RAID 5 minimizes the write bottlenecks of other RAID levels by distributing parity stripes over a series of hard drives. In doing so it provides relief to the concentration of write activity on a single drive, which in turn enhances overall system performance. Instead of allowing any one drive in the array to assume the risk of a bottleneck, all of the drives in the array assume write activity responsibilities. The distribution frees up the concentration on a single drive, improving overall subsystem throughput.

The RAID 5 parity encoding scheme maintains the system's ability to recover any lost data should a single drive fail. This can happen as long as no parity stripe on an individual drive stores the information of a data stripe on the same drive. In other words, the parity information for any data stripe must always be located on a drive other than the one on which the data resides (see [figure 8](#)).


**Note:** The DX-Series storage array is shipped with the following RAID configuration:

- 1 logical drive configured in RAID 5 (7 data drives + 1 parity drive)
- 1 logical drive configured in RAID 5 (6 data drives + 1 parity drive)
- 1 global hot spare drive

To reconfigure the DX-Series storage array to either remove the hot spare or add an additional hot spare (total of two hot spares), contact Quantum customer support (see [Customer Support](#) on page xvii). Reconfiguring the storage array RAID configuration will cause all previously stored data to be lost.



Figure 8 RAID 5 Configuration

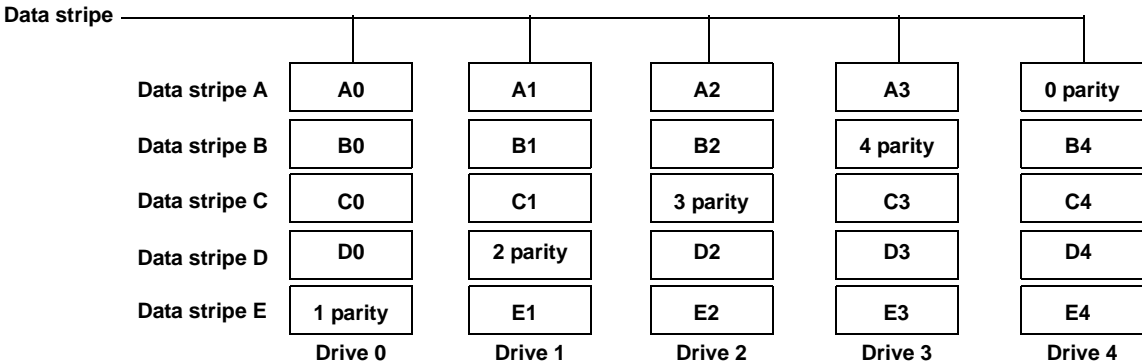



## Typical Configurations

The DX-Series system has many advantages over typical tape cartridge based systems such as faster data transfer, instant availability, and greater reliability. You can add storage arrays to the system to increase storage capacity.

To take advantage of the DX-Series systems speed and reliability and still have the safety of off-site storage, Quantum recommends exporting the data from the DX-Series system to an automated tape library (see [figure 9](#)). This configuration still allows fast backup and restores as well as the safety of off-site backups on tape cartridges. Storage management software applications often refer to this operation as “cloning” or “vaulting.” Check with your software supplier for information on enabling this feature.

Figure 9 DX-Series System Plus a Tape Library

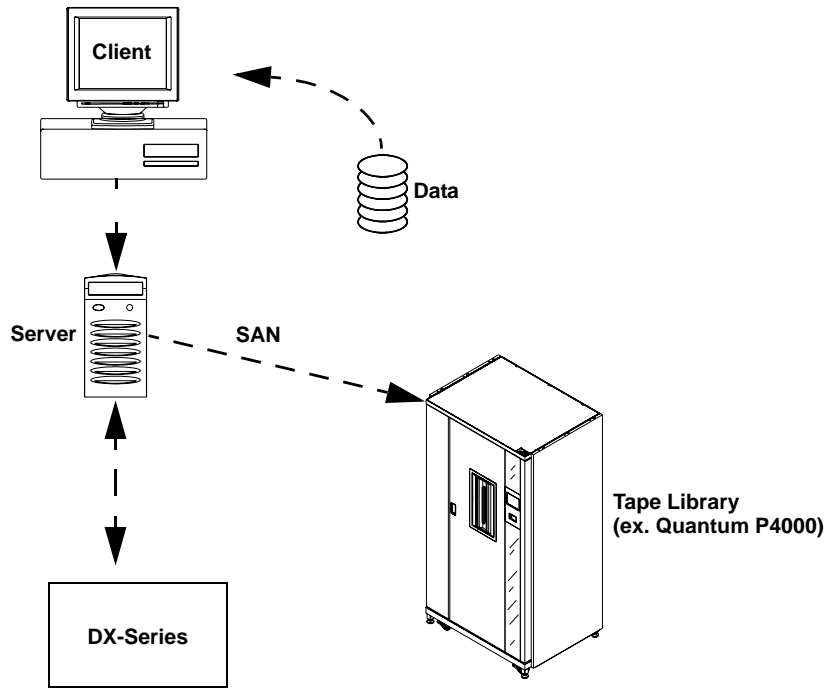

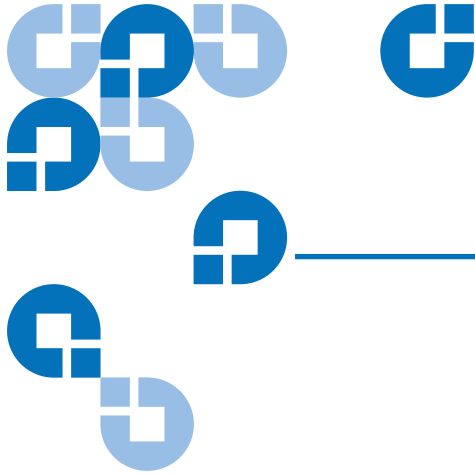

## Chapter 2 Basic Operations

---

Although the vast majority of DX-Series system operations are handled through the [DX-Series Remote Management](#) on page 27, basic DX-Series system operations include:

- [Turning on the DX-Series Components](#)
- [DX-Series Controller Operations](#)
- [DX-Series Storage Array Operations](#)
- [Relocating the DX-Series System](#)

---

### Turning on the DX-Series Components

The power on procedure differs depending on the DX-Series system (DX30 or DX100). Refer to the following section to turn on the DX-Series system:

- [Turning on the DX30](#)
- [Turning on the DX100](#)

---

### Turning on the DX30

The DX30 components must be turned on in the following order:

- DX-Series storage array(s)
- DX-Series controller

To turn on the DX30 system (see [figure 10](#)):

- 1 Turn on both power switches on all DX-Series storage arrays.
- 2 Turn the DX30 controller on by pushing the power button located on the front of the unit


---

### Turning on the DX100

The DX100 must be powered on in the following sequence (see [figure 10](#)):

- 1 Turn on both power switches on the storage arrays (they will not power on yet).
- 2 Turn on the circuit breakers of the AC power sequencers.
- 3 Turn on the DX100 controller.

Figure 10 Power  
Switch Locations

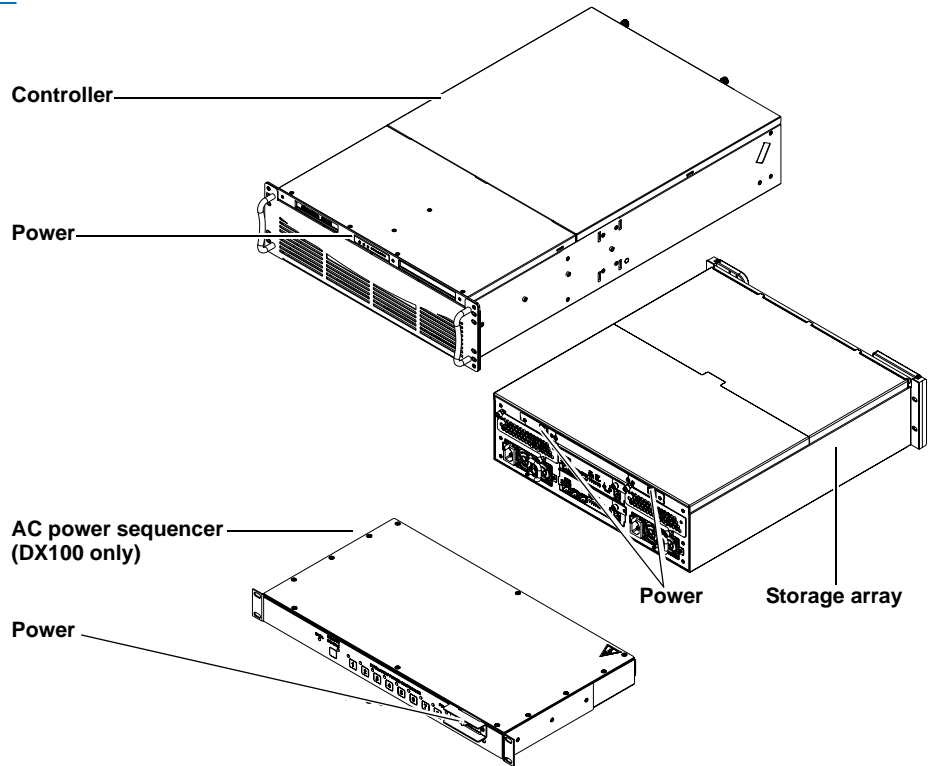

---

## DX-Series Controller Operations

The DX-Series controller contains the Linux operating system as well as the Fibre Channel HBAs connecting the unit to the storage arrays and to the customer host systems.

The front panel of the controller has a series of buttons and LED indicators (see [figure 11](#)).

Figure 11 Controller  
Front Panel

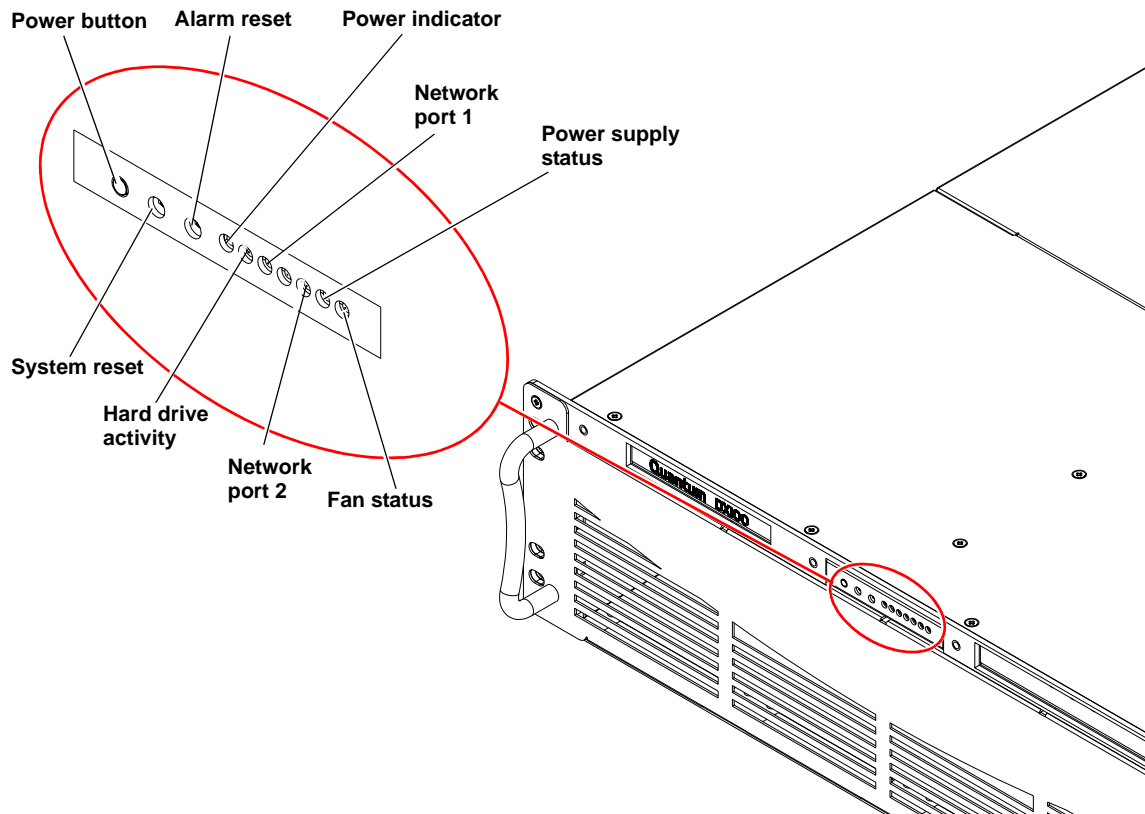


Table 2 Controller  
Front Panel

| Button/LED      | Description                               |
|-----------------|---|
| Power button    | Powers the controller on or off           |
| System reset    | Resets the controller                     |
| Alarm reset     | Resets the alarm after a failure occurred |
| Power indicator | This LED is lit when the controller is on |

| Button/LED          | Description   |
|---------------------|---|
| Hard drive activity | This LED flashes when the flash disk is active  |
| Network port 1      | This LED flashes indicating activity on the first network port                                      |
| Network port 2      | This LED flashes indicating activity on the second network port                                     |
| Power supply status | Green indicates a good status on both power supplies. Red indicates a single power supply failure   |
| Fan status          | Green indicates a good status on all internal cooling fans. Red indicates at least one fan failure. |

---

## DX-Series Storage Array Operations

This section describes how to monitor the DX-Series storage array.

---


### System Monitoring

The DX-Series storage array can be monitored either through the front LCD panel, various LEDs located on the front and back of the unit, and also through an audible alarm.

#### Storage Array LCD

The storage array LCD is located in the upper left corner of the unit (see [figure 12](#)).

Figure 12 Storage Array LCD Location

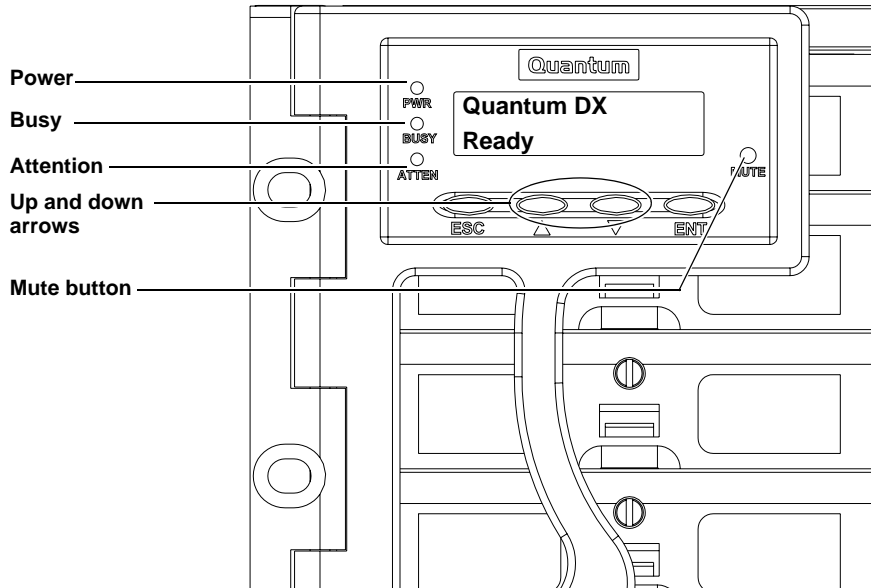

The LEDs located to the left side of the front LCD are described in [table 3](#).

Table 3 Front LED Descriptions

| LED                    | On/Off | Description  |
|------------------------|--------|--|
| Power - <i>Blue</i>    | On     | The storage array is powered on.   |
|                        | Off    | The storage array is powered off.  |
| Busy - <i>White</i>    | On     | The host or drive channel is active.   |
|                        | Off    | There is no host or drive activity.  |
| Attention - <i>Red</i> | On     | System status events have been detected by the firmware. Use the up and down arrows on the LCD to view the events. |
|                        | Off    | All system components are functioning normally.  |




| LED           | On/Off | Description                              |
|---------------|--------|--|
| <b>Button</b> |        | <b>Description</b>                       |
| Mute button   |        | Press the mute button to stop the alarm. |

**Note:** If the Attention - Red light is on, it does **NOT** necessarily mean that a component within the storage array has failed. Check the LCD display and use the up and down arrows to view the events that occurred on the storage array.

### RAID Controller LEDs

The RAID controller LEDs are located in the back of the storage array (see [figure 13](#)). The DX30 storage array contains a single RAID controller located in the upper bay and the DX100 storage array contains dual RAID controllers.

Figure 13 RAID Controller Locations

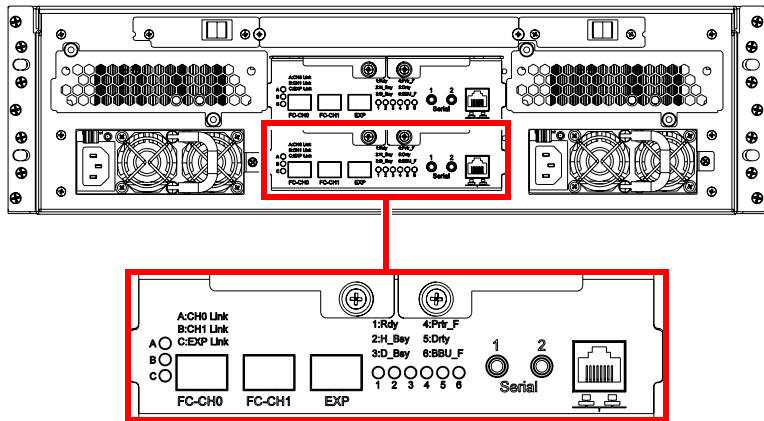

The LEDs located on the RAID controller are described in [table 3](#).

Table 4 RAID  
Controller LED  
Descriptions

| LED   | On/Flash/Off | Description   |
|---|--------------|---|
| 1: Controller Ready - <i>Green</i>            | On           | Indicates that the RAID controller is active and operating properly.              |
|   | Flashing     | The RAID controller is initializing.  |
|   | Off          | The RAID controller is not ready for operation.                                   |
| 2: FC Host Ports Active - <i>Green</i>        | Flashing     | There is activity on the Fibre Channel host.                                      |
|   | Off          | There is no activity on the Fibre Channel host.                                   |
| 3: SATA Device Ports - <i>Green</i>           | Flashing     | There is activity on the SATA drive ports.  |
|   | Off          | There is no activity on the SATA drive ports.                                     |
| 4: Partner Failed (DX100 only) - <i>Amber</i> | On           | Indicates that the partner controller failed.                                     |
|   | Off          | The partner controller is operating correctly.                                    |
| 5: Cache Dirty                                | On           | The cache memory is dirty and is being held up via the battery backup unit (BBU). |
| 6: BBU Fault - <i>Amber</i>                   | On           | The BBU cannot sustain the cache memory.  |
|   | Off          | The BBU is able to sustain the cache memory.                                      |
|   | Slow flash   | The BBU is charging.  |

| LED                           | On/Flash/Off | Description   |
|-------------------------------|--------------|---|
| A: CH0 Link<br><i>- Green</i> | On           | Channel 0 link is established.                        |
|                               | Off          | Channel 0 link is not established or is cut off.      |
| B: CH1 Link<br><i>- Green</i> | On           | Channel 1 link is established.                        |
|                               | Off          | Channel 1 link is not established or is cut off.      |
| C: EXP Link<br><i>Green</i>   | On           | Expansion port link is established.                   |
|                               | Off          | Expansion port link is not established or is cut off. |

### Audible Alarm


Whenever any of the threshold values assigned to the different components within the DX-Series storage array have been surpassed or when an active component has failed, an audible alarm is triggered. To determine what component has triggered the alarm, read the error message on the LCD screen (see [figure 12](#)).

---

## Relocating the DX-Series System

If you ever need to install the DX-Series system components in a different location, refer to the “Quantum DX-Series Unpacking and Installation Instructions” PN6513502 included on the documentation CD. These instructions include hardware installation and cabling as well as software configuration.



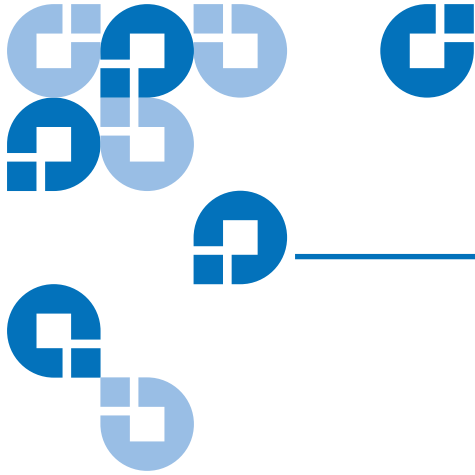

## Chapter 3

# DX-Series Remote Management

---

The DX-Series system utilizes a web-based interface which allows you to configure and manage the DX-Series system from a remote workstation on the same network. The DX-Series system is managed through the following web pages (accessible using Internet browser software installed on the host computer):

- [Home](#) allows you to view the status of all system components.
- [Configuration](#) allows you to set up information about the DX-Series system such as network, date and time, passwords, and Fibre Channel port settings and device mappings.
- [System Status](#) allows you to view the status of the emulated tape drives, cartridges, and robot, as well as system performance.
- [Remote Alerts](#) allows you to set up e-mail messages and SNMP alerts to alert you when certain events occur on the DX-Series system.
- [Licensing](#) allows you to view the license agreement as well as add license keys to enable optional product features.
- [Utilities](#) allows you to upload and activate new firmware revisions as well as configuration files.

---

## DX-Series Web Pages

The Internet browser software is not supplied with the DX-Series system; you must obtain and install it independently. The DX-Series system supports the following Internet browsers:

- Microsoft Internet Explorer 6.0 SP1 or later  
You can download this software from  
<http://www.microsoft.com>.

**Note:** If Internet Explorer is the default browser on the client system:

- The latest security updates for Microsoft VM (virtual machine) must be installed on the client system.
- The security settings must be set no higher than “medium”. If the settings are set to “high security”, the browser will not be able to login to the DX-Series system since the system needs write access to the client.
- The “Play animations in web pages” item in the Internet Options/Advanced/Multimedia menu must be enabled.


- Mozilla Suite 1.7 on Solaris 10  
You can download this software from  
<http://www.mozilla.org>.
- Firefox 1.0.6 on Windows  
You can download this software from  
<http://www.mozilla.org>.
- Java Plug-in 1.4.2 or later  
You can download this software from  
<http://www.java.com>

---

### DX-Series Web Page Menu Items

The following figure depicts the menu items available from the DX-Series Web pages.

Figure 14 DX-Series  
Web Page Menu  
Items

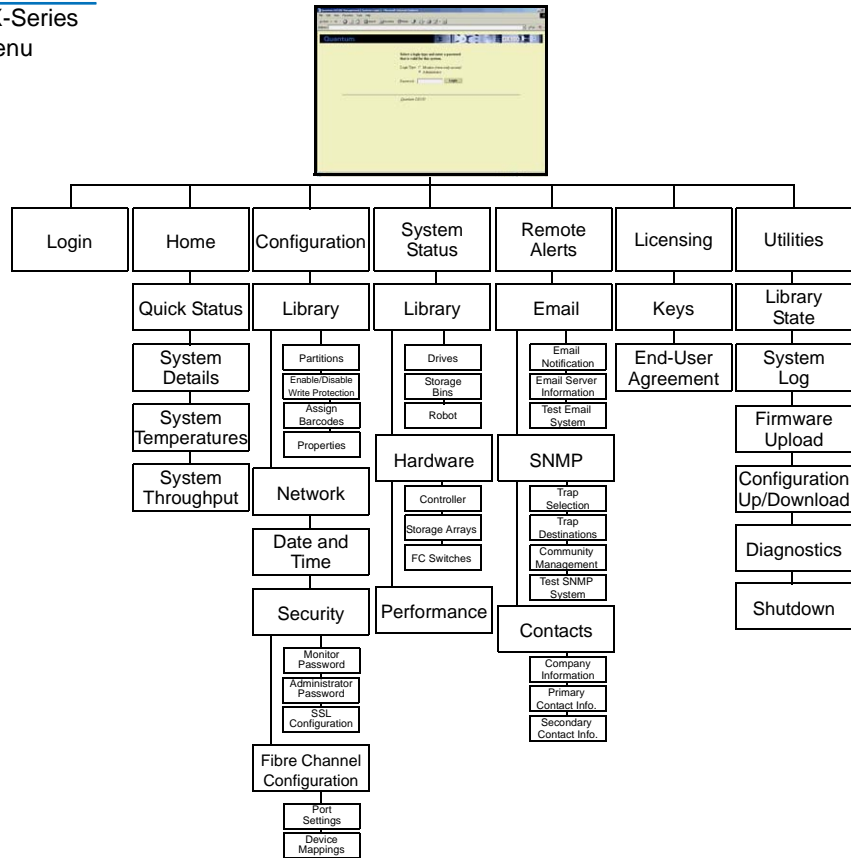


### Accessing DX-Series Web Pages

To access the DX-Series web pages:

- 1 On the host computer, open the Internet browser software.
- 2 In the **Address** field, type `http://IPaddress/` where IP address is the IP address for the DX-Series system.

The **Log In** page displays (see [figure 15](#)):

Figure 15 Login Page

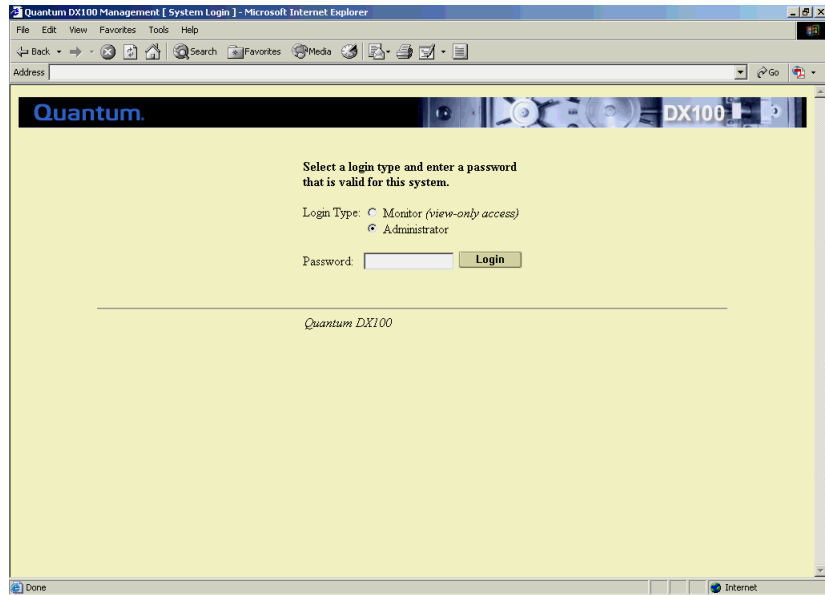

- 3 Select the login type and enter the appropriate password.

| Login Type    | Default Password | Description  |
|---------------|------------------|--|
| Monitor       | password         | The monitor user is allowed to view the DX-Series system management pages, but cannot change them. |
| Administrator | password         | The administrator user can both view and change the management pages.                              |


**Note:** The passwords must be lowercase and limited to 15 characters.

- 4 Click **Login**.

The **Home** page displays (see [figure 16](#)):



Figure 16 Home Page

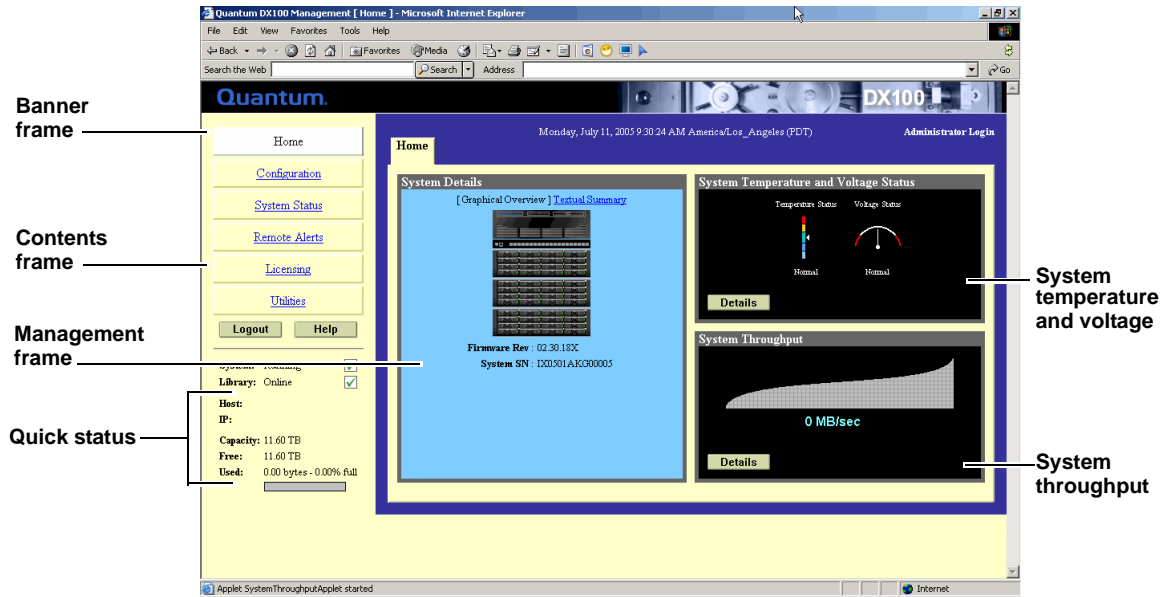

### Using the DX-Series Web Pages

The first page that displays after you login to the DX-Series web pages is the DX-Series system **Home** page (see [figure 16](#)). This page includes information on the DX-Series system status as follows:

- Quantum DX-Series is on-line
- Quantum DX-Series is off-line

The **Home** page is divided into four distinct sections:

- Banner frame
- Contents frame
- Management frame
- Quick status information

**Note:** The **Home** page display varies depending on the number of storage arrays configured in your DX-Series system.

The banner frame displays the Quantum logo and product name. The contents frame displays a list of the DX-Series web pages. To view a page,

click its corresponding link. The management frame displays the page you selected.

### Graphical View vs. Textual View

There are two options for viewing the system details from the **Home** page (see [figure 17](#)):

- Graphical view - system details are displayed in the management frame using graphical representations of the DX-Series components to describe the system status.
- Textual view - system details are displayed in the management frame using text to describe the DX-Series system status.

Figure 17 System Details (Graphical vs. Textual)



### Details Buttons (System Temperature/Voltage and Throughput)

Both the system temperature/voltage and throughput sections of the home page have a details buttons.

- **System Temperature/Voltage Details** button: Click the system temperature/voltage details button to go to the **System Status/Hardware** page. This page provides more detailed information on the system components (see [Viewing Hardware Status](#) on page 60 for more information).
- **Throughput Details** button: Click the throughput details button to go to the **System Status/Performance** page. This page provides more detailed system performance information (see [Viewing System Performance](#) on page 71 for more information).

To return to a previous web page, click the browser's **Back** button.

---

## Configuration

This information was initially configured during the installation of the DX-Series system.

---


### Accessing Library Configuration

To access the **Configuration** page, from the contents frame, click **Configuration**.

The management frame displays the **Configuration** page (see [figure 18](#)).

**Note:** The DX-Series system must be offline before making any changes to the system configuration. See [Changing Library State](#) on page 86.

Figure 18 Configuration Page

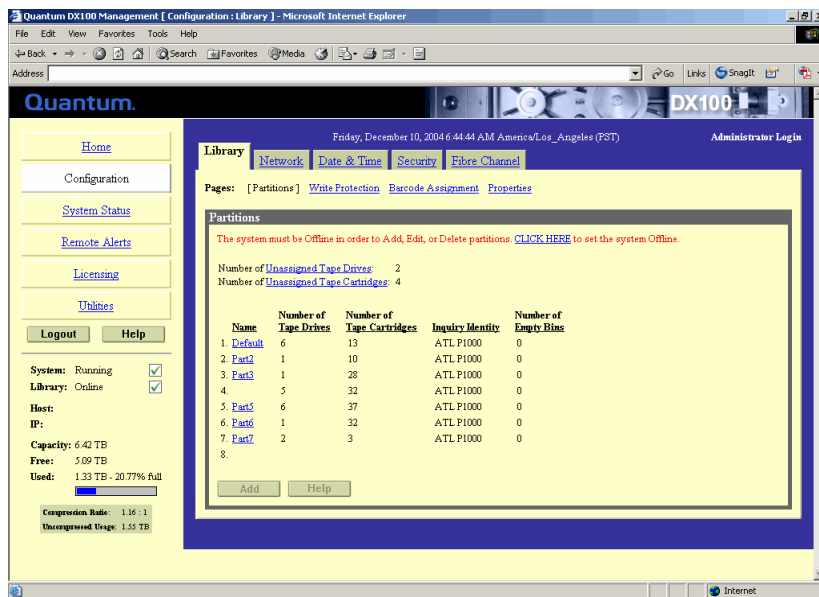


## Partitioning

Partitioning provides the capability to divide the DX-Series virtual tape drives and storage elements into separate partitions, usable by separate host computers. The **Partitions** page contains a list of unassigned tape drives and cartridges as well as all user defined partitions currently configured on the system. This page also contains the ability to add, edit, and delete partitions.

Clicking on a partition name in the **Partition** list displays a detail window listing all details for the selected partition (see [figure 19](#)). Refer to the system status pages for details on the tape drives and tape cartridges.

Figure 19 Partition Details

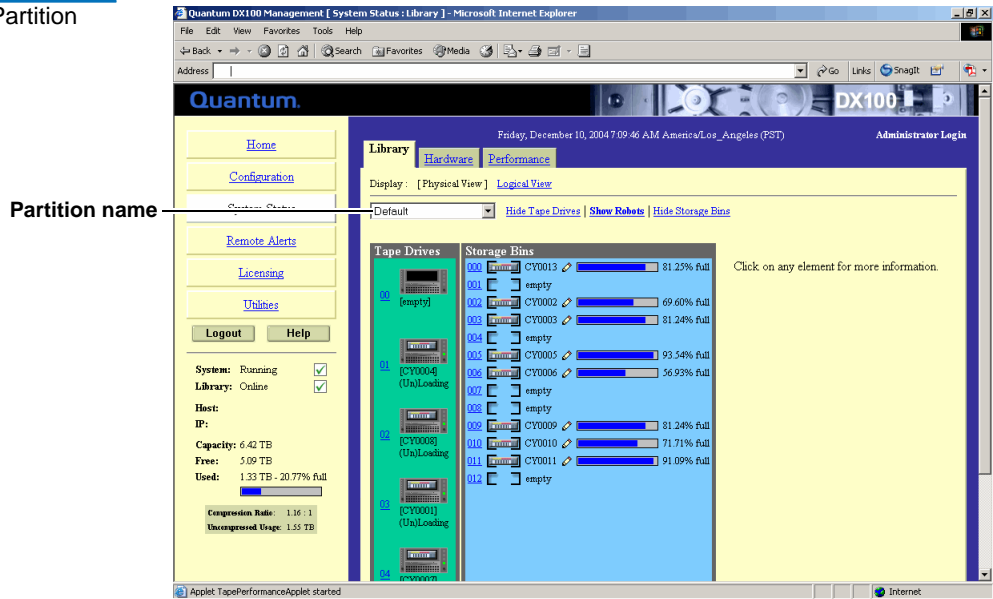

The library partitioning page is broken up into the following sections:

- [Adding a Partition](#)
- [Editing a Partition](#)
- [Deleting a Partition](#)

### Adding a Partition

Up to eight partitions can be added to a DX30 system. Up to thirty two partitions can be added to a DX100 system.


**Caution:** Ensure that your backup package is properly configured for the correct number of tape drives emulated in the DX-Series system partition. Failure to do so may cause your backup application to malfunction or cease to operate.

To add a partition:

**Note:** To add, edit, or delete a partition, the system must be offline.

- 1 From the **Partition** page, click **Add** to add a partition to the system. The **Add Partition** page displays (see [figure 20](#)).

Figure 20 Adding a Partition

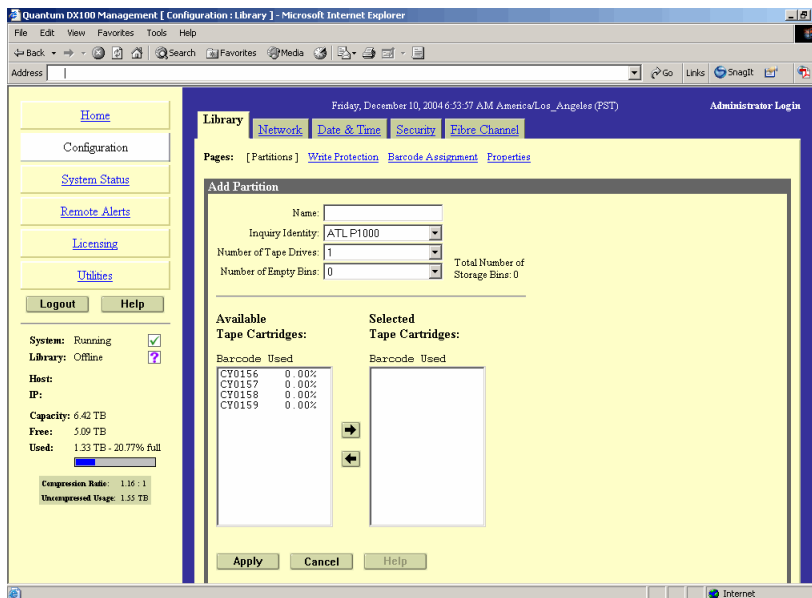

- 2 Enter a partition name that identifies it so it can be distinguished from other partitions on the DX-Series system.

**Note:** The partition name is independent of the host name in the **Network** tab (see [Configuring the Network](#) on page 43).

- 3 Select the inquiry identity to determine the inquiry string returned from the DX-Series system. If you select **ATL P1000**, the DX-Series appears as an ATL P1000 to the host and backup application. If you

select **Quantum DX30** or **Quantum DX100**, the host and backup application recognize the device as a **Quantum DX30** or **Quantum DX100** respectively.

**Note:** Quantum recommends that the device configuration be set to **ATL P1000** unless your specific backup application supports the DX-Series inquiry strings. If your backup application does support DX30 and DX100, you should select that setting for improved performance.

- 4 Select the number of tape drives (emulated DLT7000) available to the host and backup application in this partition. The Default partition contains 6 tape drives at the time of installation, however, you can change the number of drives (DX30 up to 30 tape drives; DX100 up to 55 tape drives).

**Note:** If all tape drives are assigned to other partitions, you must unassign one or more tape drives to make them available for a new partition. Be aware that in a DX30, all tape drives are assigned to the Default partition at the time of installation.

- 5 Enter the number of empty bins available in addition to the number of cartridges created in the partition. The default number of empty bins is 0 and up to 28 empty bins can be selected.
- 6 Select the number of tape cartridges from the **Available Tape Cartridge** list and click the right arrow button to move the cartridges into the partition.

**Note:** If all tape cartridges are assigned to other partitions, you must unassign one or more tape cartridges to make them available for a new partition. Be aware that all cartridges that were created at the time of installation (see [Creating Cartridges](#) on page 118) are assigned to the Default partition.

- 7 Click **Apply** to create the partition.

Map the Fibre Channel ports as described in [Configuring the Fibre Channel Options](#) on page 49.

- 8 Return the DX-Series system to the on-line state (see [Changing Library State](#) on page 86).

The partition is added to the partition list. To add another partition, repeat this procedure.

## Editing a Partition


To edit a partition:

**Note:** To add, edit, or delete a partition, the system must be offline.

- 1 From the **Partition** page, click the link for the partition you wish to edit.

The **Edit Partition** page displays (see [figure 21](#)).

Figure 21 Editing a Partition

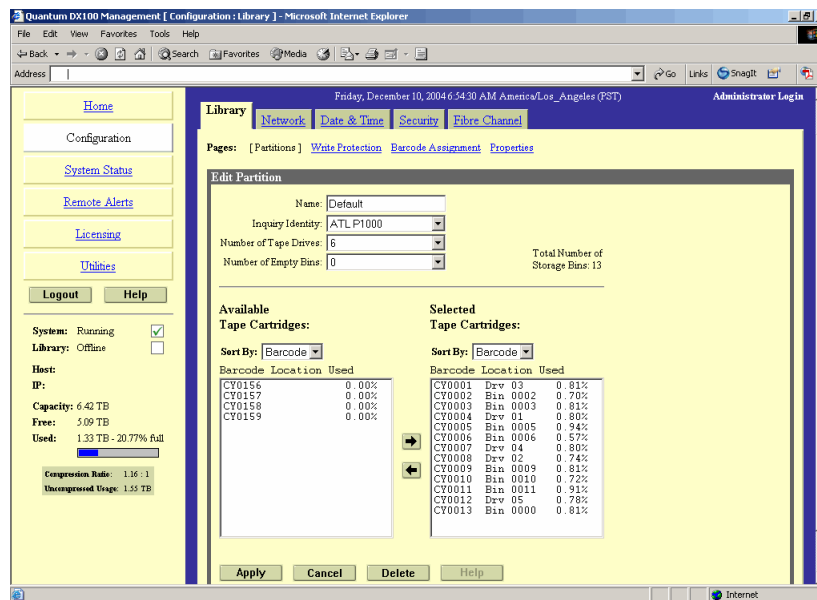

- 2 Edit the partition information as desired (see [Adding a Partition](#) on page 35 for descriptions of the fields).
- 3 Click **Apply**.



- 4 Return the DX-Series system to the on-line state (see [Changing Library State](#) on page 86).

The partition is updated.

### Deleting a Partition

To edit a partition:

**Note:** To add, edit, or delete a partition, the system must be offline.

- 1 From the **Partition** page, click the link for the partition you wish to delete.

The **Edit Partition** page displays (see [figure 21](#)).

- 2 Click **Delete** to delete the partition.

- 3 Return the DX-Series system to the on-line state (see [Changing Library State](#) on page 86).

The partition is deleted.

---

### Write Protection

Write protection, when enabled, prevents any data to be written to the tape cartridge. This protects your important data from being overwritten. The cartridge will remain unavailable for further storage until the write protection has been disabled.


**Note:** To enable or disable write protection, the system must be offline.

To enable/disable write protection:

- 1 From the **Library** page, click the **Write Protection** link.

The **Write Protection** page displays (see [figure 22](#)).

Figure 22 Enabling/Disabling Write Protection

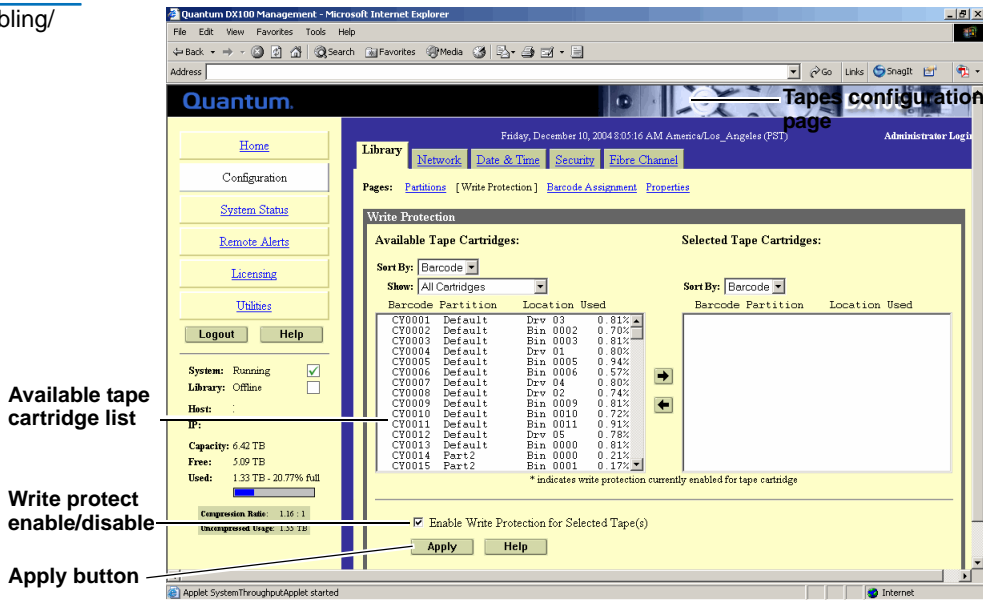

- 2 Select the tape cartridges from the **Available Tape Cartridge** list and click the right arrow button to move them into the **Selected Tape Cartridge** list. You can sort the tape cartridges by barcode, partition, location, and used. You can show all cartridges, unassigned cartridges, or by partition assignment.
- 3 Check **Enable Write-Protection Selected Tape(s)** to *ENABLE* write protection on the selected tape cartridges or un-check the Write-Protection Select Tape(s) to *DISABLE* write protection on the selected tape cartridges.
- 4 When you have selected the tape(s) and write protection status, click **Apply**.

Write protection for the selected tapes is enable/disable.

## Barcode Assignment

Barcode labels provide individual identities for each tape cartridge in the system. These labels allow the DX-Series system and third-party backup applications to track and differentiate between the tape cartridges within the system.

Barcode labels are automatically assigned during the DX-Series system initialization. These barcode labels can be over-ridden if necessary.


**Note:** To assign a barcode label, the system must be offline.

To assign a barcode label to a tape cartridge(s):

- 1 From the **Library** link of the **Configuration** page, click the **Barcode Assignment** link.

The **Barcode Assignment** page displays (see [figure 23](#)).

Figure 23 Assigning Barcode Labels

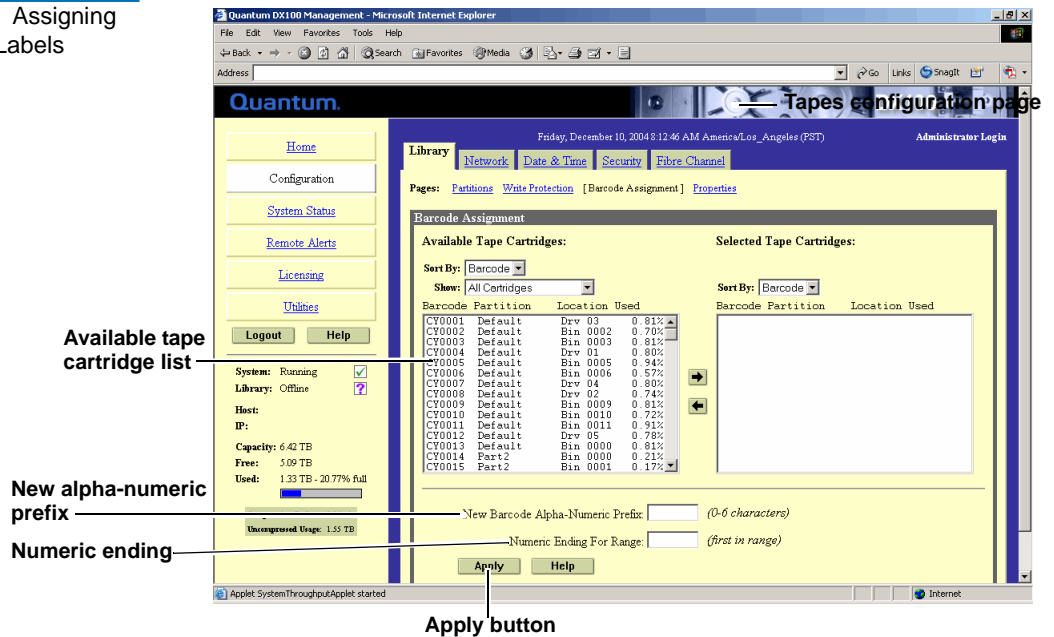

- 2 Select the tape cartridges from the **Available Tape Cartridge** list and click the right arrow button to move them into the **Selected Tape Cartridge** list.

- 3 Enter the alpha characters (0 to 6 characters) in the **New Alpha Prefix** field.

**Note:** If you are entering alpha characters for the first part of a barcode number and this is the first number in a range, no more than five characters can be used. This allows the system to assign the last character in the field.

- 4 Enter the numeric character in the **Numeric Ending** field.

**Note:** This number is used as the first number in the range of tape cartridges. The number will increment with each additional cartridge in the field.

- 5 When you have selected the tape(s) and both the alpha and numeric characters, click **Apply**.  
Barcode labels are assigned for the selected tape(s).

---

## Properties


The library name identifies the DX-Series system so it can be distinguished from other devices on the network through the SNMP interface.

To set the library name:

- 1 From the **Library** link of the **Configuration** page, click the **Properties** link.

The **Properties** page displays (see [figure 23](#)).

Figure 24 Assigning a Library Name

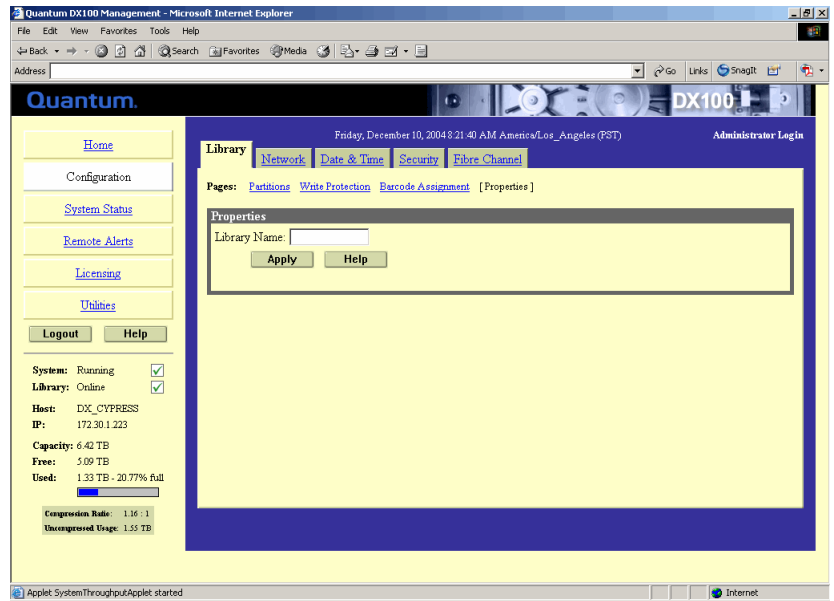

- 2 Enter a library name and click **Apply**.

The DX-Series system will use the new library name the next time the system is rebooted.

**Note:** The library name is independent of the host name in the **Network** tab (see [Configuring the Network](#) on page 43).

## Configuring the Network


The network configuration information was entered during the initial setup of the DX-Series system. Consult your network administrator prior to changing any of the information.

### Viewing/Editing Network Configuration

- 1 To access the **Network Configuration** page, from the **Configuration** page, click **Network**.

The management frame displays the **Network Configuration** page (see [figure 25](#)).

Figure 25 Network Configuration Page

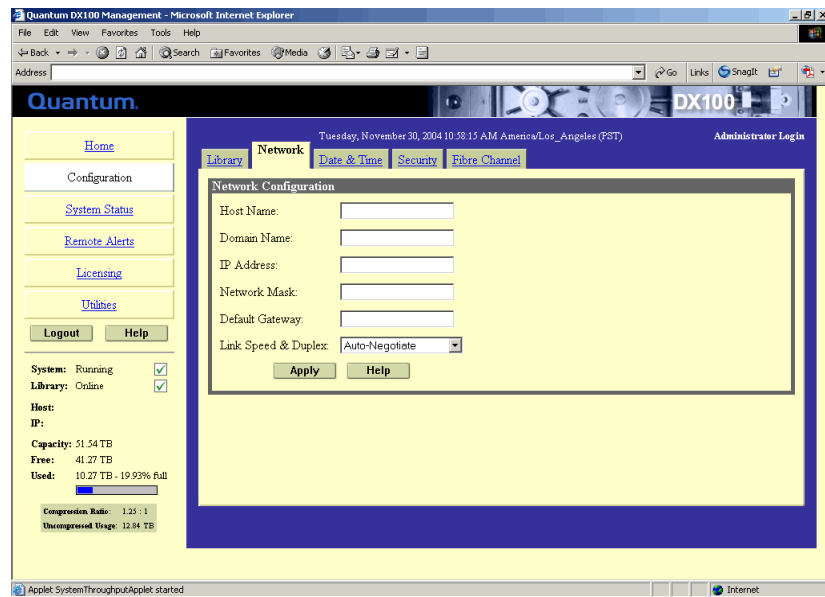

- 2 Edit the configuration information as desired (see [table 5](#) for a description of the fields).
- 3 Click **Apply**.

Table 5 Network Configuration Fields

| Field               | Description   |
|---------------------|---|
| <b>Hostname</b>     | View or set the hostname for the DX-Series system     |
| <b>Domain Name</b>  | View or set the domain name for the DX-Series system. |
| <b>IP Address</b>   | View or set the IP address for the DX-Series system.  |
| <b>Network Mask</b> | View or set the network mask for the DX-Series system |

| Field                          | Description   |
|--------------------------------|---|
| <b>Default Gateway</b>         | View or set the default gateway for the DX-Series system                                |
| <b>Link Speed &amp; Duplex</b> | View and set the link speed and duplex for the DX-Series system (10/100/half/full/auto) |

## Configuring the Date and Time

The date and time can be set from the DX-Series system web pages. Setting the correct date and time allows the DX-Series system to provide accurate reports when events occur on the DX-Series system.


### Configuring the Data and Time

To access the **Date and Time Configuration** page:

- 1 In the **Configuration** page, click **Date & Time**.

The management frame displays the **Date & Time Configuration** page (see [figure 26](#)).

Figure 26 Date and Time Configuration

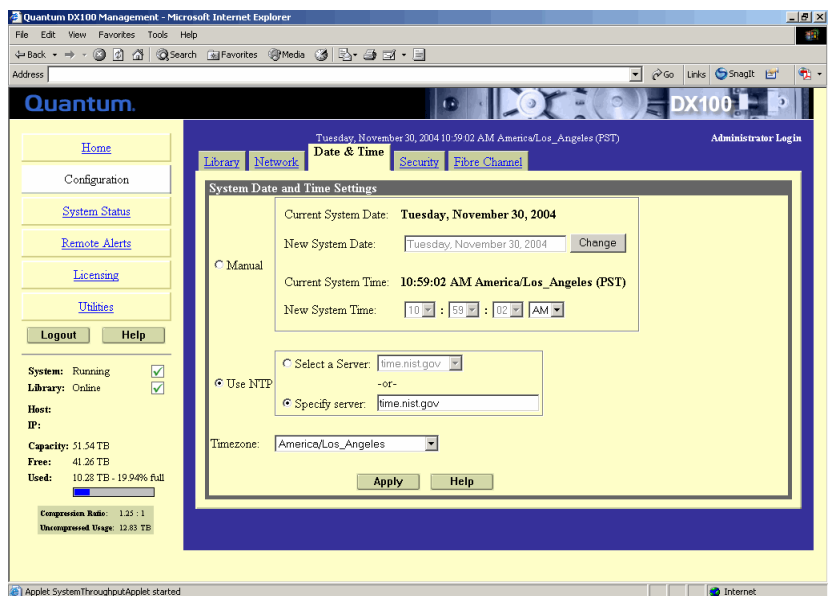

- 2 There are two options for setting the system date and time:
  - a Select **Manual** to manually set the system date and time using the **Change** button for the system date and drop down boxes for the system time.
  - b Select **Use NTP** (Network Time Protocol) to synchronize the DX-Series system to an NTP server. The “Select a Server” selection makes a list of well-known NTP servers such as the U.S. Naval Observatory Master Clocks in Washington, DC and Colorado Springs, Colorado available. The “Specify server” selection enables you to type the name or IP address of any desired NTP server. NTP sends periodic time requests to the DX-Series system, obtaining time stamps and using them to adjust the system’s clock.


## Configuring the Security Options

To access the **Security** page:

- 1 In the **Configuration** page, click **Security**.

The management frame displays the **Security** page (see [figure 27](#)).

Figure 27 Security Configuration

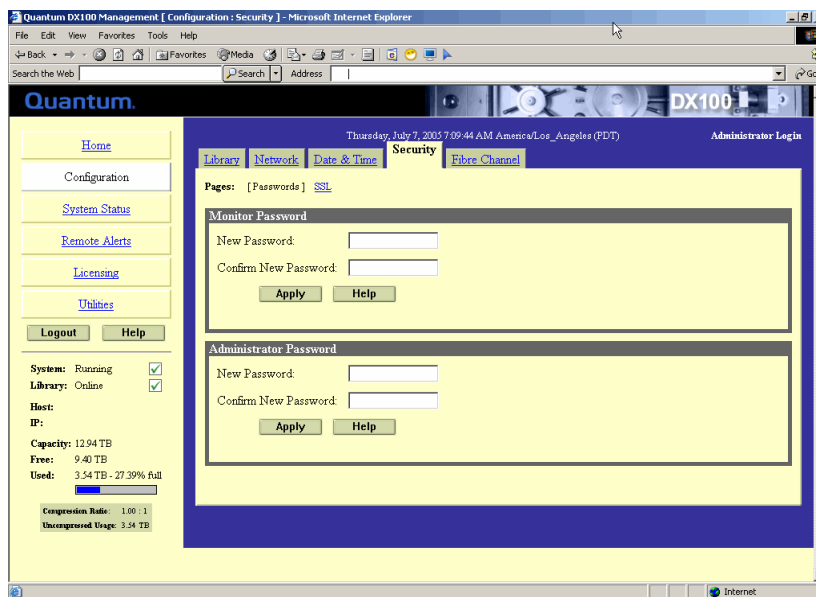



The **Security** page is divided into two sections:

- [Passwords](#)
- [SSL](#)

## Passwords

The DX-Series system has two levels of security built into the system: Monitor and Administrator. The monitor user is allowed to view the DX-Series system management pages, but not change them. The administrator user can both view and change the management pages. This section allows you to change the passwords for these accounts.

To set the monitor and administrator passwords:

- 1 Under **Monitor Password**, enter the desired password in the **New Password** field and again in the **Confirm New Password** field.

**Note:** The passwords must be lowercase and limited to 15 characters.

- 2 Click **Apply**.

A **Results** page indicates the password has been changed.

- 3 Under **Administrator Password**, enter the desired password in the **New Password** field and again in the **Confirm New Password** field.

**Note:** The passwords must be lower case and limited to 15 characters.

- 4 Click **Apply**.

A **Results** page indicates the password has been changed.

## SSL

SSL (Secure Sockets Layer) is a protocol that provides security and privacy over the Internet by negotiating encryption keys before transmitting data between a client and a server.

To establish a secure SSL connection, your DX-Series system must have an encryption key assigned to it by a Certification Authority in the form

of a certificate file, private key file, and pass phrase. Once you install these components, you can establish a secure connection using the SSL protocol. The Quantum DX-Series system comes with a SSL certificate; however, you can purchase other certificates and add them to the DX-Series SSL configuration.


To access the **SSL** page:

- 1 In the **Security** page, click **SSL**.

The management frame displays the **SSL** page (see [figure 28](#)).

**Note:** The default setting for SSL is **disabled**.


Figure 28 SSL  
Configuration

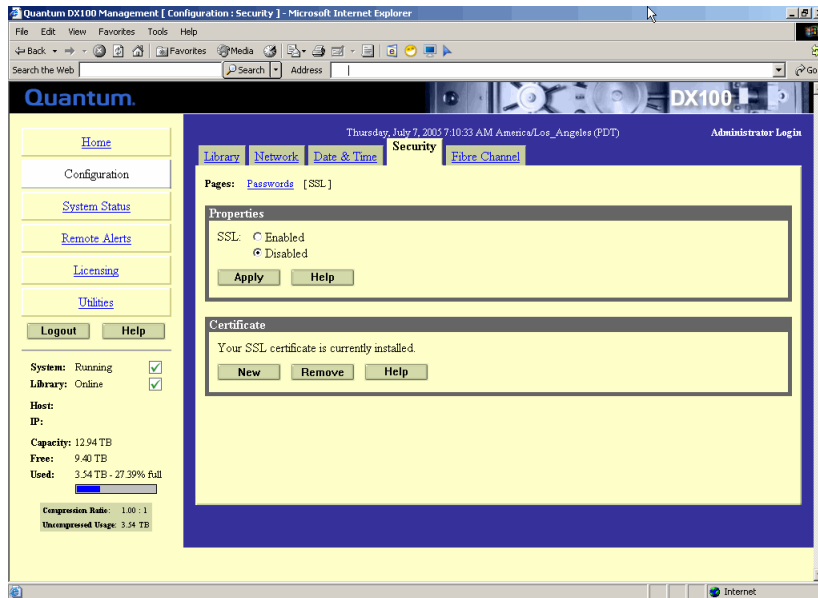

- 1 To enable SSL, select **Enable** and click **Apply**.
- 2 To add a SSL certificate, click **New**.

The **Install SSL Certificate** page displays (see [figure 29](#)).

Figure 29 Install SSL Certificate Page

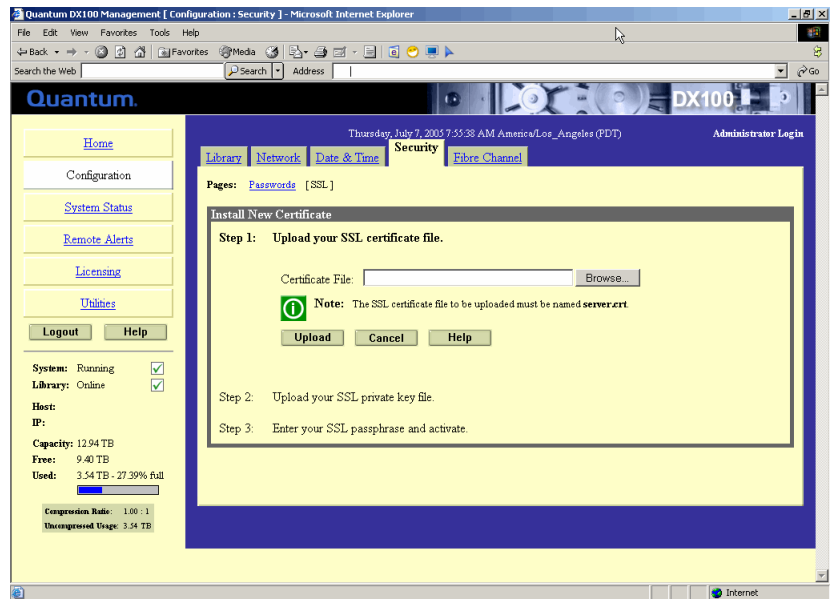

- 3 Under **Upload Your SSL certificate file**, type the location and filename of the new SSL certificate file.

**Note:** Use the **Browse** button to browse the system and locate the desired SSL certificate file. The SSL certificate file must be named **server.crt**.


- 4 Click **Upload** to install the SSL certificate file.
- 5 Type your private key and press **Enter**.
- 6 Type your pass phrase and press **Enter**.
- 7 A **Successful Upload** page displays indicating that the SSL certificate file has been installed on the system. Click **Ok** to continue.

The certificate displays in the certificate area on the SSL page.

## Configuring the Fibre Channel Options

The DX-Series system allows you to control and configure each of the Fibre Channel input ports that connect to the customer SAN. The Fibre Channel input ports are numbered 5 through 12 on the DX100 and 5 through 6 on the DX30 (see [figure 30](#)).

Figure 30 Fibre  
Channel Input Port  
Locations

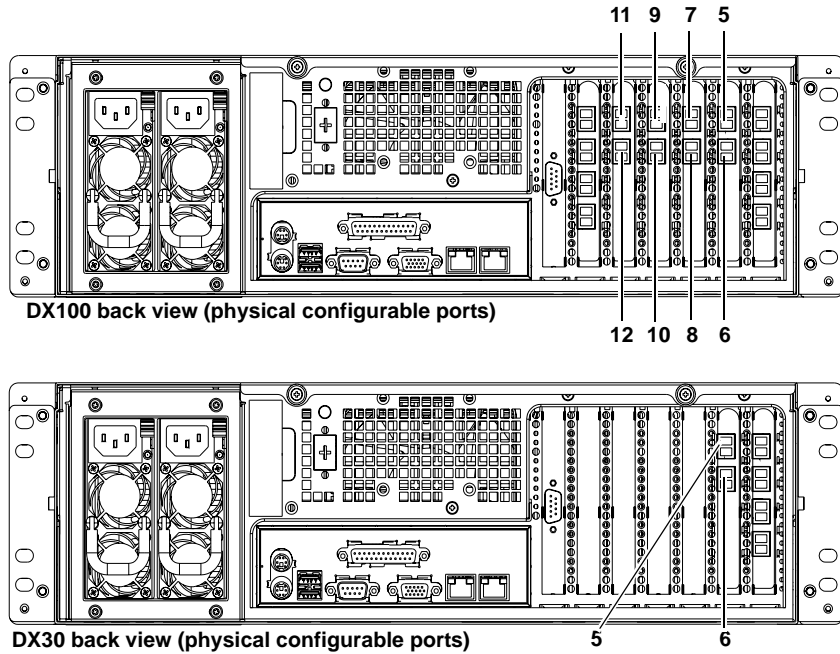


To access the **Fibre Channel** page (see [figure 31](#)):

- 1 In the **Configuration** page, click **Fibre Channel**.

The management frame displays the **Fibre Channel** Port Settings page (see [figure 31](#)).

Figure 31 Fibre Channel Configuration

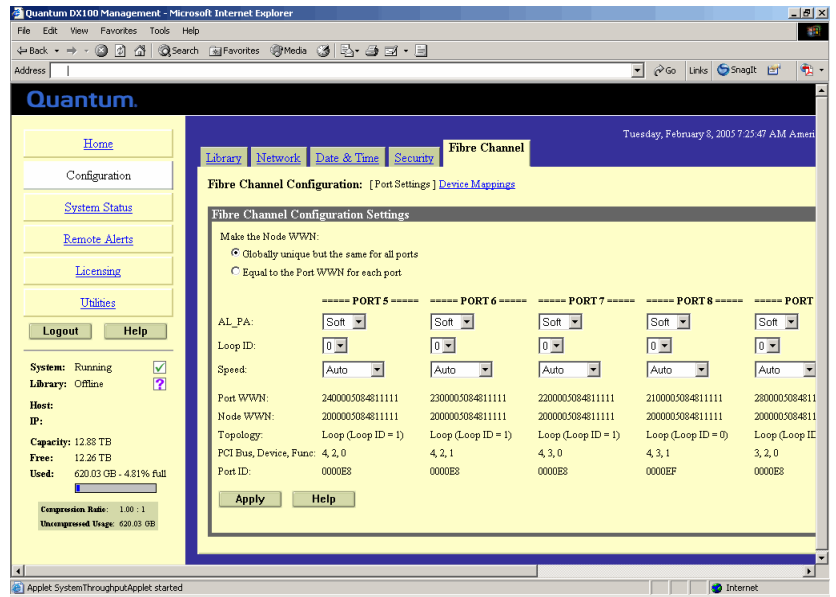

**Note:** The DX-Series system must be off-line to configure the Fibre Channel options.


- 2 While the Port WWNs are always unique, the Node WWNs can be set according to the **Make the Node WWN** section as follows:
  - a Selecting **Globally Unique but same for all ports** makes the Node WWNs the same for all Fibre Channel ports.
  - b Selecting **Equal to the Port WWNs for each port** makes the Node WWNs equal to the Port WWNs.
- 3 Selecting The **Port Settings** page (see [table 6](#) for field descriptions) allows you to set the AL\_PA, Loop ID and link speed for each Fibre Channel port connecting the DX-Series system to the customer SAN (DX30 has two ports and DX100 has eight ports).

Table 6 Port Settings

| Field                             | Description  |
|-----------------------------------|--|
| <b>Node World Wide Name (WWN)</b> | The node WWN is the overall system identification on the customer SAN. This field allows you to set the WWN in case a controller is replaced so the customer SAN will not require remapping.                                   |
| <b>AL_PA and Loop ID</b>          | This field allows you to set either a soft or hard AL_PA. Soft allows the customer SAN to automatically assign a loop ID to the DX-Series System. Hard allows you to manually assign the loop ID. The Default setting is soft. |
| <b>Speed</b>                      | This field allows you to select the maximum link speed of the Fibre Channel port (1GB/sec, 2GB/sec, or Automatic). The default setting is Automatic.   |

- 4 To map specific devices to Fibre Channel ports, click **Device Mapping**. The **Device Mapping** page displays (see [figure 32](#)).

Figure 32 Device  
Mapping Configuration

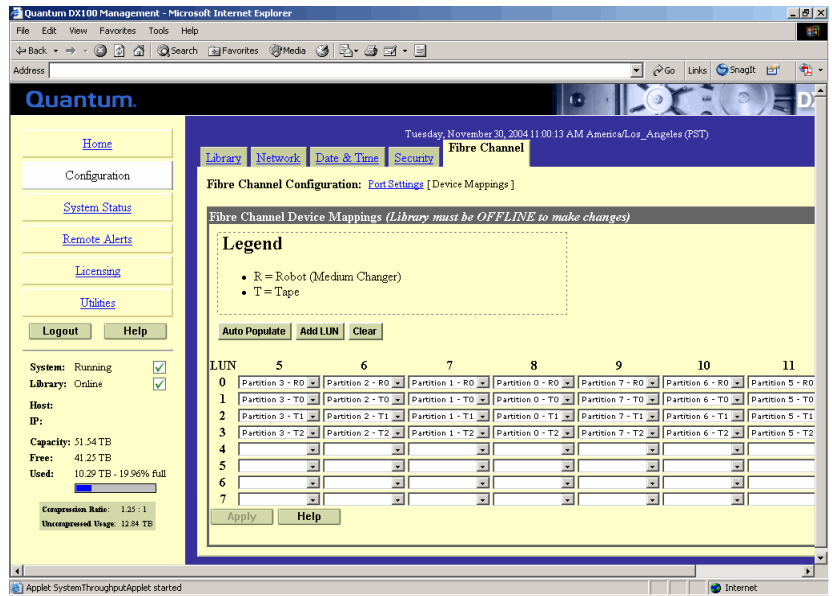

The Device Mapping page allows you to map or assign DX-Series virtual devices (robot and tape drives) to specific Fibre Channel ports. The default setting for both the DX30 and DX100:

- Port 5 is assigned the robot and tape drives 0 through 2.
  - Port 6 is assigned tape drives 3 through 5.
- 5 There are two ways to assign virtual devices to a specific Fibre Channel port:
- a Click **Auto Populate** to allow the DX-Series controller to automatically assign virtual devices to a Fibre Channel port. The controller assigns a robot and partition to each port.  
Example: A system with 1 partition would have a robot assigned to LUN 0 and all other devices within that partition assigned to additional LUNs on that port.
  - b Use the drop down boxes located under the port number to select the devices mapped to that port. Do NOT assign the same device to more than one port unless your backup application can support multiple mappings of the same device to more than one port.

Example: Assign the robot and tape drives 0 and 1 to port 5. From the host, only the robot and tape drive 0 and 1 are visible from port 5. Assign tape drive 2 and 3 to port 6. Only tape drive 2 and 3 are visible from port 6.

- 6 When all of the virtual devices have been assigned to the appropriate port, click **Apply** to accept the port settings.

**Note:** Microsoft Windows has a known issue recognizing more than eight LUNs on a single Fibre Channel port. See Microsoft Knowledge Base Article 310072: <http://support.microsoft.com/default.aspx?scid=kb;en-us;310072> for information on reconfiguring Windows to overcome this limitation.

---

## System Status

The **System Status** page allows you to view information on the emulated tape drives, robot, storage bins, and DX-Series system hardware.

---


### Accessing System Status

To access the **System Status** page, from the contents frame, click **System Status**.

The management frame displays the **System Status** page (see [figure 33](#)).



Figure 33 System  
Status Page

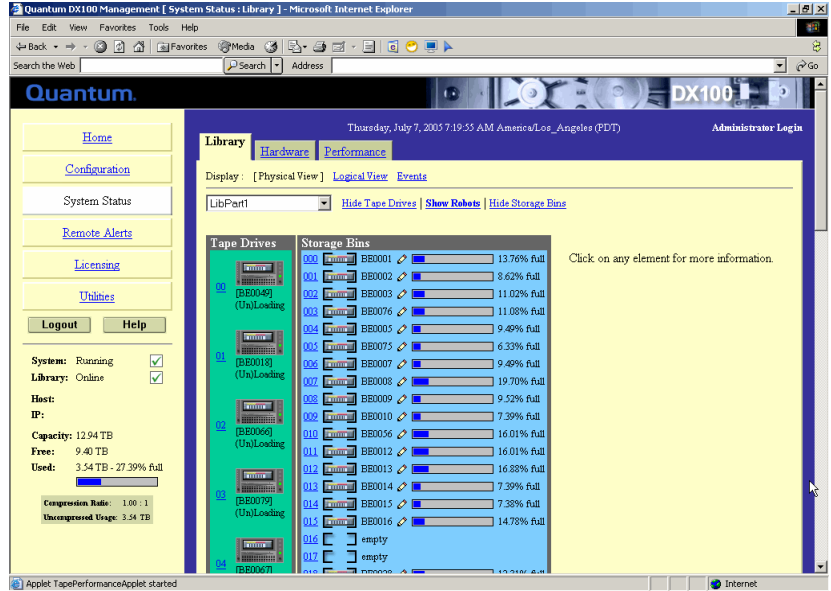

The system status page provides two views for the system hardware:

- **Physical View**

The physical view displays the physical representation of the virtual components (tape drives, tape cartridges, and robots) of the emulated tape library. Each drive and tape cartridge is displayed in the tape drive and storage bin sections. Clicking on a tape drive or cartridge displays the specific details for that device on the right hand side of the page.

Select the partition you wish to view from the drop down list. The Show/Hide links will either display or hide information on the selected tape drive, tape cartridge, or robot. Clicking on a tape drive, tape cartridge, or robot displays detailed information about the selected device.

- **Logical View**

A logical view displays the partitions within the DX-Series system. Clicking on a partition displays the specific details for that partition on the right hand side of the page.

- **Events**

The events list displays all events that have occurred on the DX-Series system.


## Viewing Tape Drive Details

To view the tape drive details:

- 1 From the **System Status** page, select the partition from the drop down list and click the tape drive you wish to view.

The tape drive details displays (see [figure 34](#)):

Figure 34 Tape Drive Details

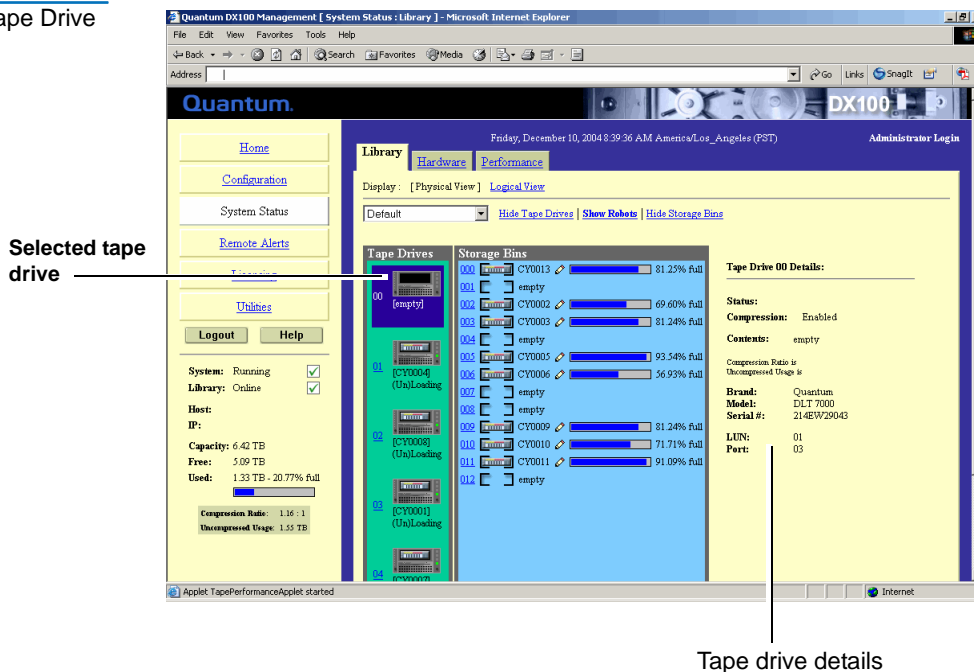

The tape drive details are shown in [table 7](#).

Table 7 Tape Drive Details

| Field              | Description  |
|--------------------|--|
| <b>Status</b>      | Displays the current drive status. The drive can be reading, writing, or idle. |
| <b>Compression</b> | Displays the compression status, either enabled or disabled.                   |

| Field                | Description  |
|----------------------|--|
| <b>Contents</b>      | Displays the current contents of the tape drive. If a tape cartridge is present in the drive, the cartridge label will display in the contents field as well as the write protect status and capacity information. |
| <b>Brand</b>         | Displays the manufacturer of the tape drive.   |
| <b>Model</b>         | Displays the model of the tape drive.  |
| <b>Serial Number</b> | Displays the tape drive serial number.   |
| <b>LUN</b>           | Displays the logical unit of the tape drive.   |
| <b>Port</b>          | Displays the port number assigned to the tape drive.   |


## Viewing Robot Details

To view the robot details:

- 1 From the **System Management** page, click **Show Robots** to view the details.

The robot details displays (see [figure 35](#)):

Figure 35 Robot  
Details

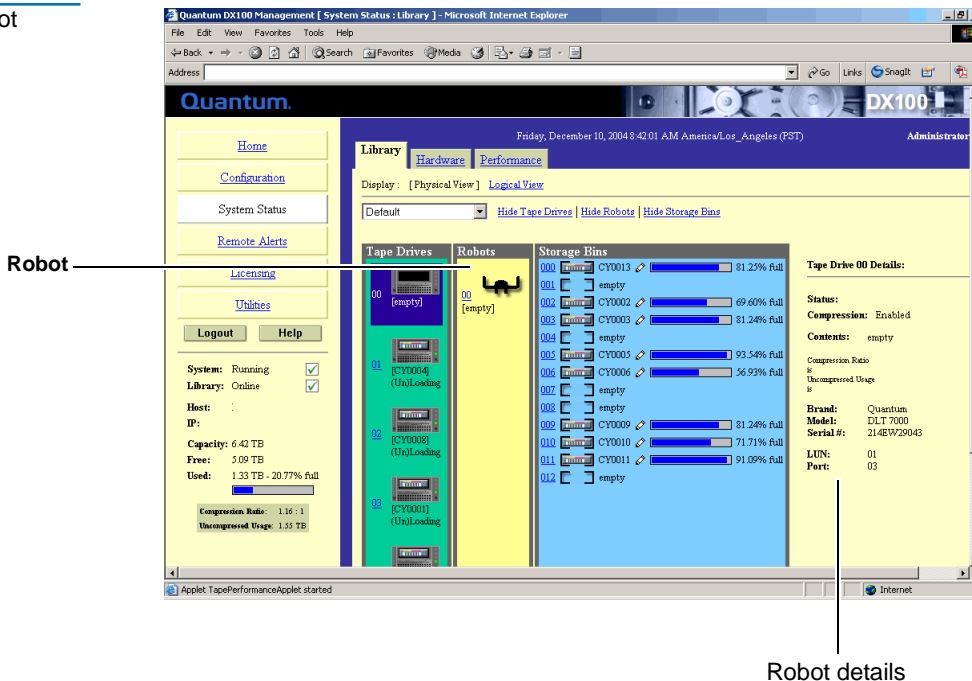

The robot details are shown in [table 8](#).

Table 8 Robot Details

| Field                | Description  |
|----------------------|--|
| <b>Status</b>        | Displays the current status of the robot.  |
| <b>Contents</b>      | Displays the current contents of the robot. If a cartridge is present, the bar code label appears in the robot contents. |
| <b>Brand</b>         | Displays the robot brand name.   |
| <b>Model</b>         | Displays the robot model number.   |
| <b>Serial Number</b> | Displays the robot serial number.  |


## Viewing Storage Bin Details

To view the storage bin details:

- 1 From the **System Management** page, click the storage bin to view the details.

The storage bin details displays (see [figure 36](#)):

Figure 36 Storage Bin Details

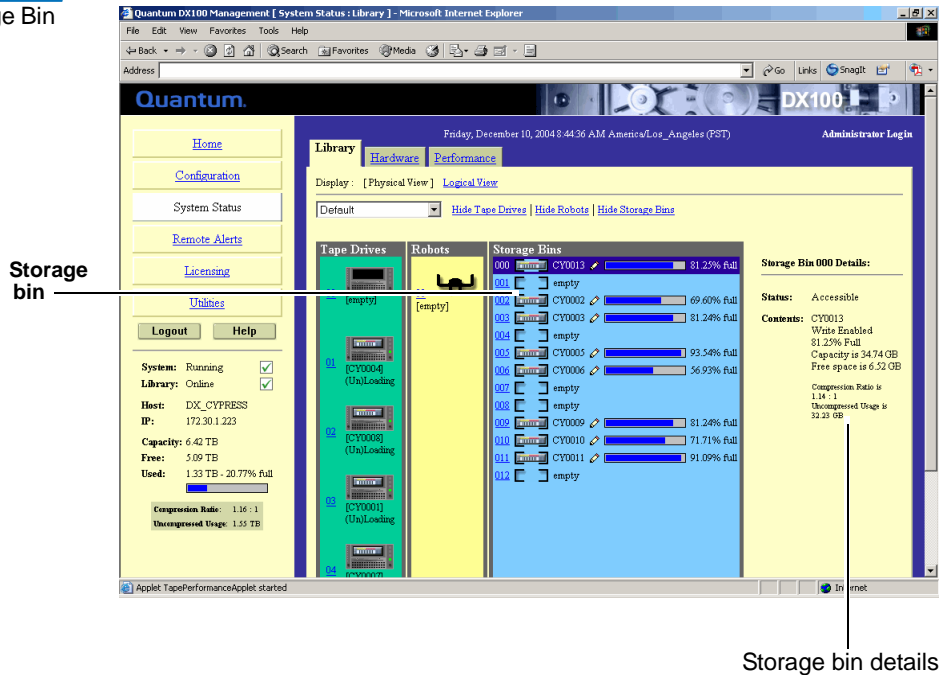

The storage bin details are shown in [table 9](#).

Table 9 Storage Bin  
Details

| Field                          | Description   |
|--------------------------------|---|
| <b>Status</b>                  | Displays the current status of the storage bin. The status is either accessible or not accessible.  |
| <b>Contents</b>                | Displays the current contents of a storage bin. If a tape cartridge is present in a bin, the cartridge label will display in the contents field as well as the write protect status and capacity information. |
| <b>Compression Information</b> | Displays the compression ratio as well as the uncompressed usage.   |

## Viewing Hardware Status

The DX-Series system provides a variety of hardware information from the **Hardware Status** page. The **Hardware Status** page gives the current status of the hard drives, power supplies, fan modules, and temperature of the controller, Fibre Channel switch and storage arrays.

To view the hardware status:

- 1 From the **System Status** page, click **Hardware** tab to view the hardware status.


The **Hardware Status** page displays (see [figure 37](#)):

Figure 37 Hardware  
Status Page

Controller

Fibre Channel switch  
(only present in DX100  
systems)

Storage arrays

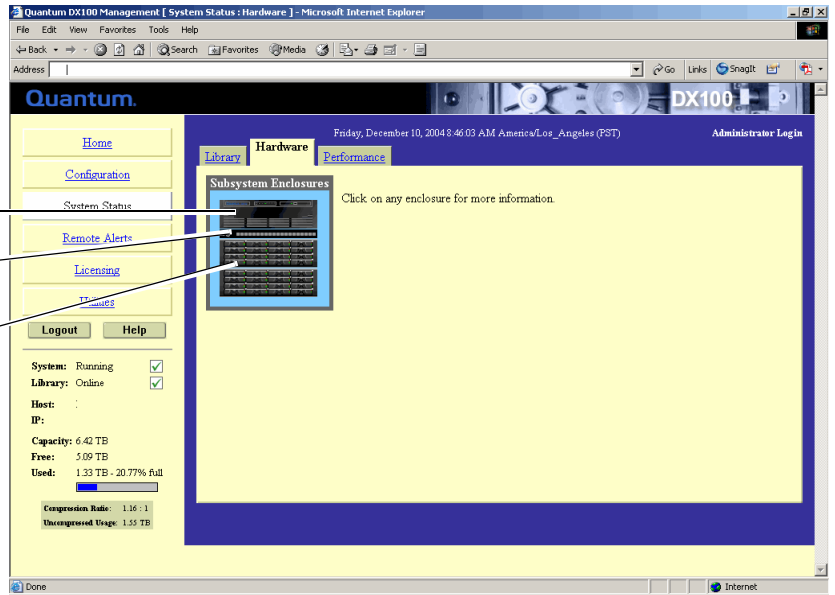

### Controller Details

To view the details or status of the controller hardware, click on the controller icon on the **Hardware Status** screen shown in [figure 37](#).

The **Controller** details display (see [figure 38](#)).

Figure 38 Controller Details

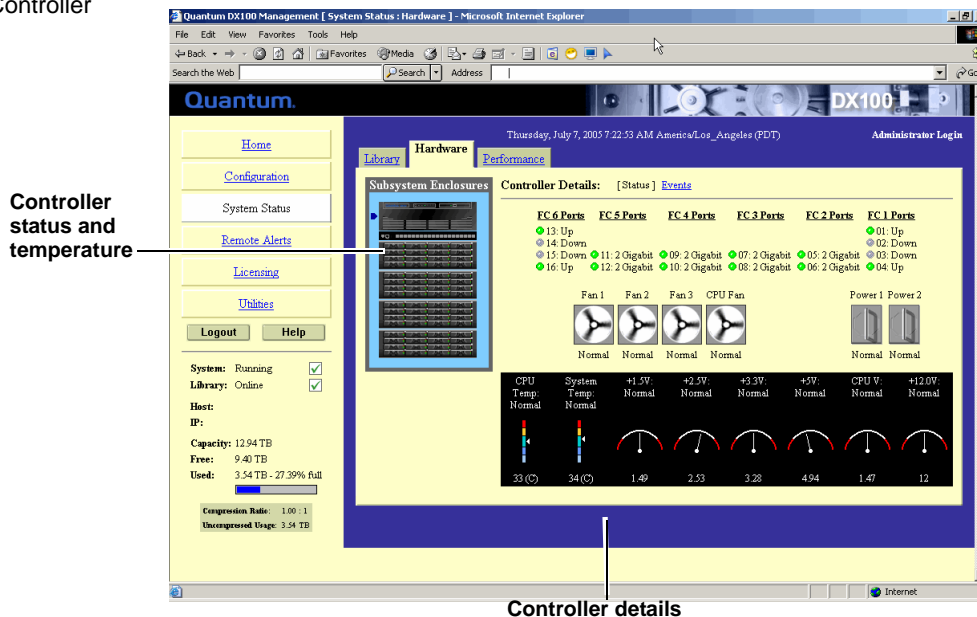


Table 10 Controller Temperature Details

| Field                         | Description   | Normal State | Warning State | Failed State |
|-------------------------------|---|--------------|---------------|--------------|
| <b>Controller Temperature</b> | Displays the current temperature of the DX-Series system's internal CPU as well as the external system temperature. There are three states displayed: normal, warning, and failed. The warning and failed states also display a flashing amber box around the temperature gauge for warning and a red box for failed. If the controller reaches 50°C (122°F), a failure is displayed. |              |               |              |



Table 11 Controller  
Fan and Power  
Supply Status



| Field                 | Description  | Failed State   |
|-----------------------|--|--|
| <b>Power Supplies</b> | Displays the current status of the power supplies. If a power supply has failed, contact Quantum Customer Support (see <a href="#">Customer Support</a> on page xvii). | <br>Power B: Failed |
| <b>Fan Modules</b>    | Displays the current status of the fan modules. If a fan module has failed, contact Quantum Customer Support (see <a href="#">Customer Support</a> on page xvii).      | <br>Fan B: Failed   |
| <b>Events</b>         | Clicking <b>Events</b> displays all log entries for the DX-Series controller. Have this information available prior to contacting Quantum Customer Support.            |  |

Table 12 Controller  
Fibre Channel Ports  
Details

| Ports                    | Description   |
|--------------------------|---|
| <b>FC 1 and FC 6</b>     | Displays the current status of the individual ports on the quad port Fibre Channel HBA(s). These are the Fibre Channel HBA(s) that connect the controller to the storage arrays via the Fibre Channel switch. The status can either be Up (green) or Down (grey). |
| <b>FC 2 through FC 5</b> | Displays the current status of the individual ports on the dual port Fibre Channel HBA(s). These are the Fibre Channel HBA(s) that connect the controller to the customer Fibre Channel SAN. The status can either be 1 Gigabit/2 Gigabit (green) or Down (grey). |


### Fibre Channel Switch Details (DX100 Systems Only)

To view the details or status of the Fibre Channel switch, click on the Fibre Channel switch icon on the **Hardware Status** screen shown in [figure 37](#).

The **Fibre Channel Switch** screen display (see [figure 42](#)).

Figure 39 Fibre Channel Switch Details

Fibre Channel switch status and temperature

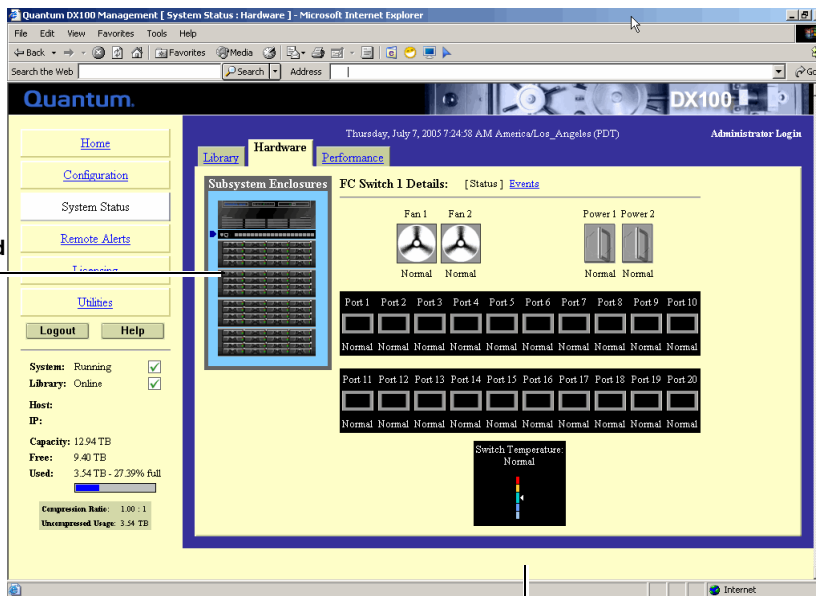

Fibre Channel switch details

Figure 40 Fibre  
Channel Switch  
Temperature Details






| Field              | Description   | Normal State  | Warning State   | Failed State  |
|--------------------|---|---|---|---|
| <b>Temperature</b> | Displays the current temperature of the Fibre Channel switch internal CPU as well as the external system temperature. There are three states displayed: normal, warning, and failed. The warning and failed states also display a flashing amber box around the temperature gauge for warning and a red box for failed. If the controller reaches 50°C (122°F), a failure is displayed. |  |  |  |
| <b>Events</b>      | Clicking <b>Events</b> displays all log entries for the Fibre Channel switch. Have this information available prior to contacting Quantum Customer Support.   |   |   |   |

Figure 41 Fibre  
Channel Switch Fan  
and Power Supply  
Status

| Field                 | Description  | Failed State  |
|-----------------------|--|---|
| <b>Power Supplies</b> | Displays the current status of the power supplies. If a power supply has failed, contact Quantum Customer Support (see <a href="#">Customer Support</a> on page xvii). |  |
| <b>Fan Modules</b>    | Displays the current status of the fan modules. If a fan module has failed, contact Quantum Customer Support (see <a href="#">Customer Support</a> on page xvii).      |  |

## Storage Array Details

To view the details or status of a storage array, click on a storage array icon on the **Hardware Status** screen shown in [figure 37](#).

The **Storage Array Details** screen display (see [figure 42](#)).

Figure 42 Storage Array Details

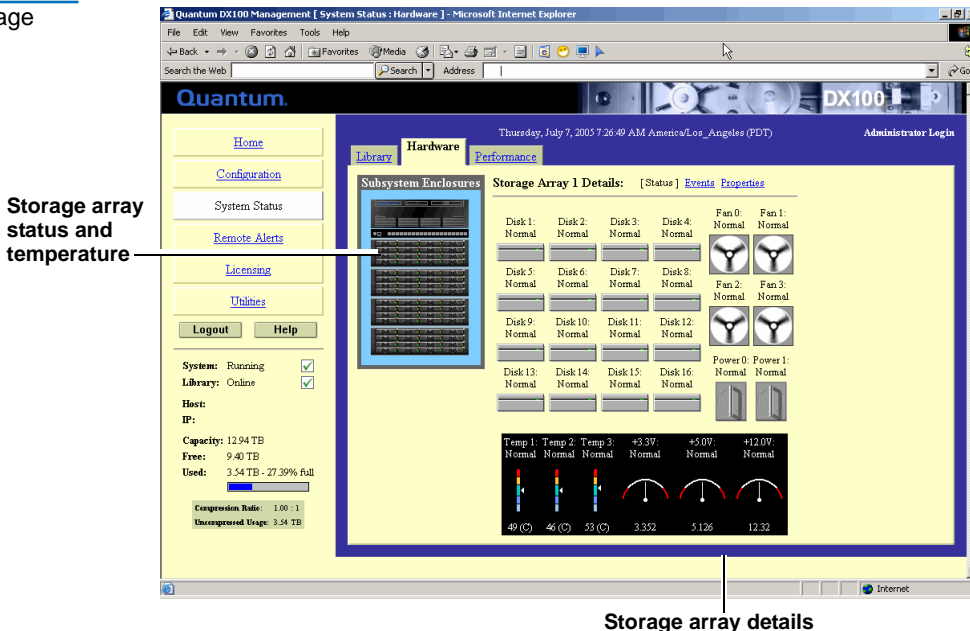


Table 13 Storage  
Array Hard Drive  
Status




| Field                            | Description   | Normal State  | Rebuild State  | Failed State  |
|----------------------------------|---|---|--|---|
| <b>Storage Array Hard Drives</b> | Displays the current status of the hard drives within the DX-Series storage arrays. The hard drive states displayed are: normal, rebuild, and failed. Rebuild indicates the array is currently rebuilding the data on a new storage array hard drive. If a hard drive has failed, contact Quantum Customer Support (see <a href="#">Customer Support</a> on page xvii). |  |  |  |

Table 14 Storage  
Array Fan and Power  
Supply Status






| Field                 | Description  | Failed State  |
|-----------------------|--|---|
| <b>Power Supplies</b> | Displays the current status of the power supplies. If a power supply has failed, contact Quantum Customer Support (see <a href="#">Customer Support</a> on page xvii). |  |
| <b>Fan Modules</b>    | Displays the current status of the fan modules. If a fan module has failed, contact Quantum Customer Support (see <a href="#">Customer Support</a> on page xvii).      |  |

Table 15 Storage  
Array Temperature  
Details


| Field                            | Description   | Normal State  | Warning State   | Failed State  |
|----------------------------------|---|---|---|---|
| <b>Storage Array Temperature</b> | <p>Displays the current storage array temperature. There are three states displayed: normal, warning, and failed. The warning and failed states also display a flashing amber box around the temperature gauge for warning and a red box for failed. If the array reaches 47°C (117°F), a high temperature warning is displayed. If the array reaches 50°C (122°F), a failure is displayed.</p> |  |  |  |

## Storage Array Properties

The **Storage Array Status** screen also provides a link to storage array properties (see [figure 43](#)).

Clicking **Events** displays all log entries for the storage array. Have this information available prior to contacting Quantum Customer Support.

Figure 43 Storage Array Properties Link

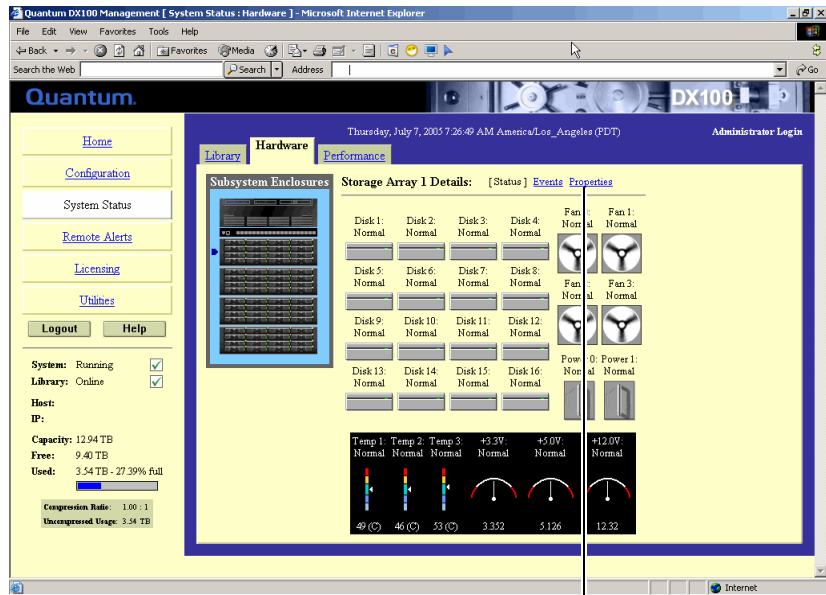


Storage array properties

To view the storage array properties, click **Properties**.

The storage array properties screen displays (see [figure 44](#)).

Figure 44 Storage Array Properties

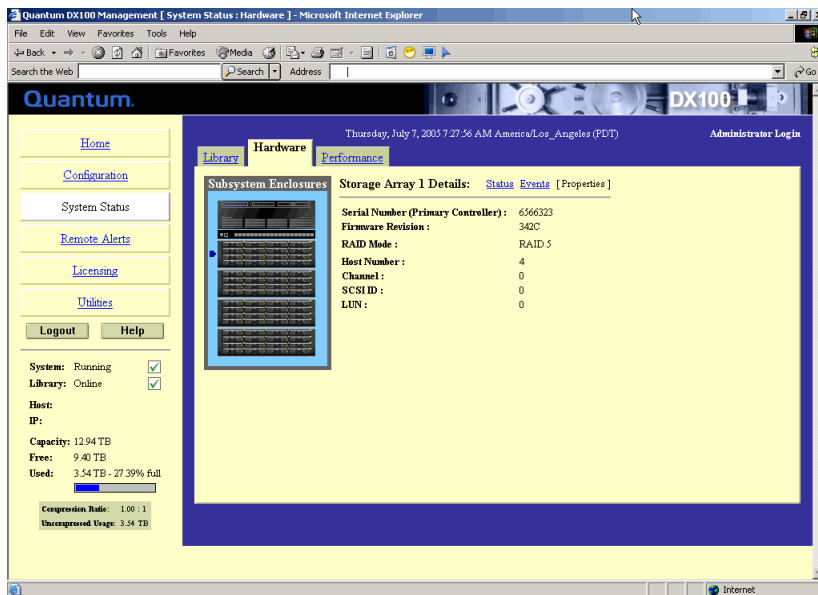

The storage array properties are shown in [table 16](#).

Table 16 Storage Array Properties

| Field                    | Description   |
|--------------------------|---|
| <b>Serial Number</b>     | Displays the serial number for the primary controller in the storage array.             |
| <b>Firmware Revision</b> | Displays the firmware revision currently running on the selected storage array.         |
| <b>RAID Mode</b>         | Displays the current RAID configuration on the storage array. Only RAID 5 is supported. |
| <b>Host Number</b>       | Displays the host number.   |
| <b>Channel</b>           | Displays the controller SCSI channel in which the selected storage array is connected.  |
| <b>SCSI ID</b>           | Displays the selected storage array SCSI ID.  |
| <b>LUN</b>               | Displays the selected storage array LUN.  |



## Viewing System Performance


The DX-Series system provides tape drive performance information on the **Performance Status** page. The **Performance Status** page gives the current throughput of the tape drives in use.

To view the performance status:

- 1 From the **System Status** page, click **Performance** tab to view the hardware status.

The **Performance Status** page displays (see [figure 45](#)):

Figure 45 Performance Status Page

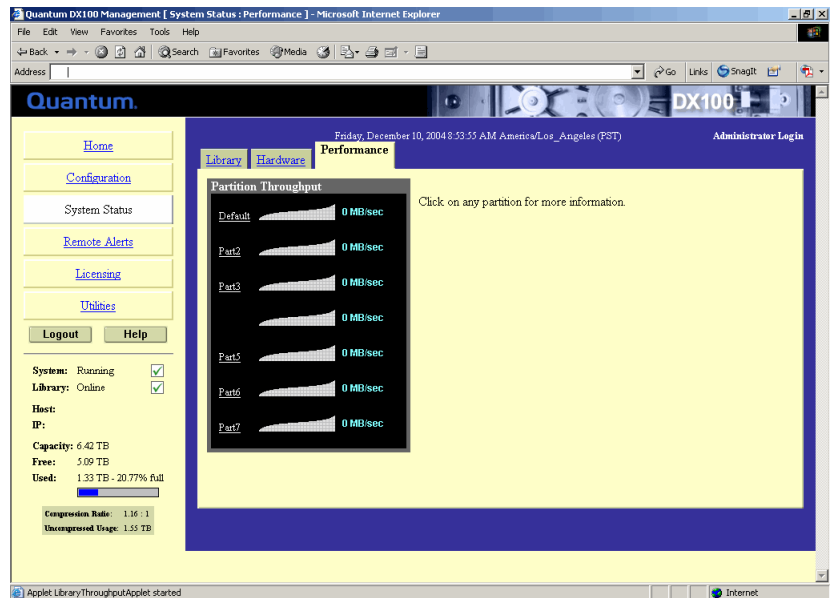


The Performance Status page displays all partitions and their individual performance information.

- 2 Select a partition to view the performance statistics of the individual devices within the partition.

The tape drives within the partition display (see [figure 46](#)).

Figure 46 Tape Drive  
Throughput

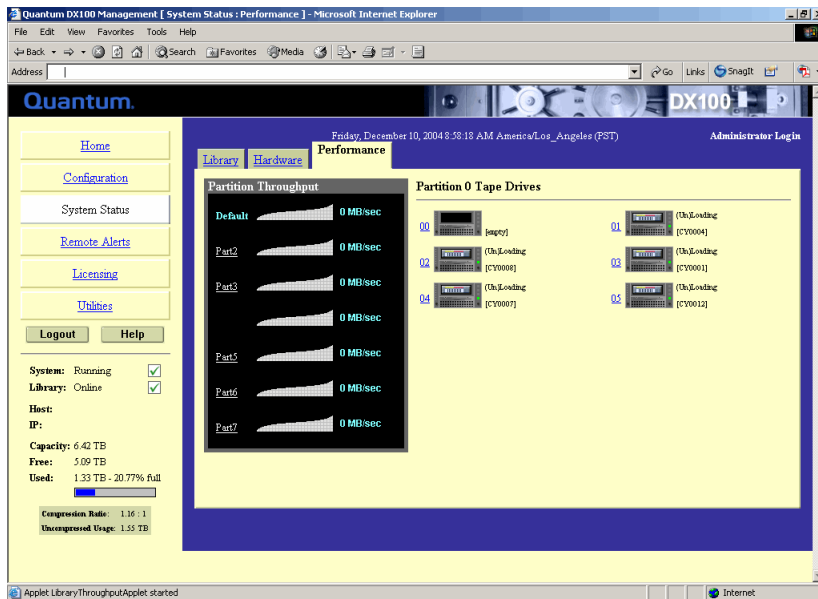

## Remote Alerts


The **Remote Alerts** page allows you to setup the DX-Series system to send email alerts when hardware or software events have occurred on the system.

### Accessing Remote Alerts

To access the **Remote Alerts** page, from the contents frame, click **Remote Alerts**.

The management frame displays the **Remote Alerts** page (see [figure 47](#)).

Figure 47 Remote Alerts Page

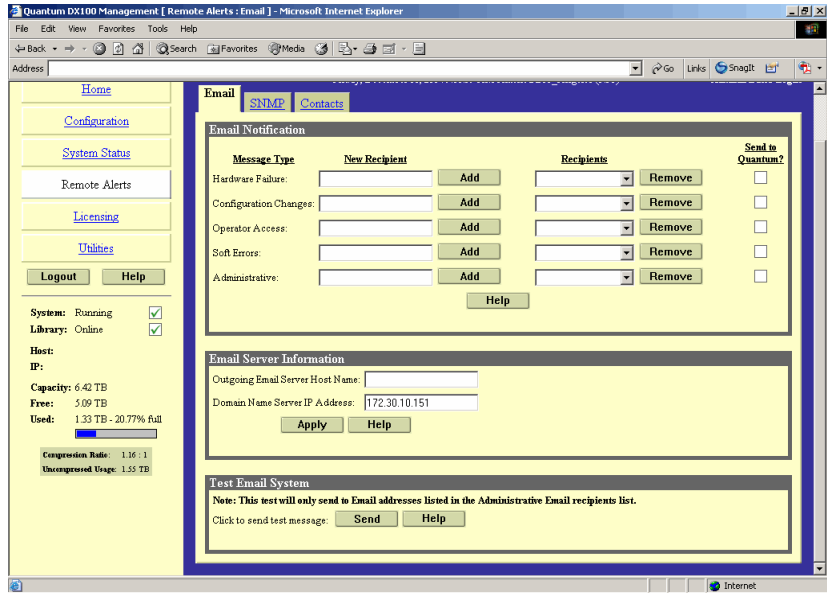

The **Remote Alerts** page is divided into three sections:


- [Email Page](#)
- [SNMP Page](#)
- [Contacts Page](#)

### Email Page

- 1 To access the **Email** page, from the **Remote Alerts** page, click the **Email** tab.

The management frame displays the **Email** tab (see [figure 48](#)).

Figure 48 Email Tab

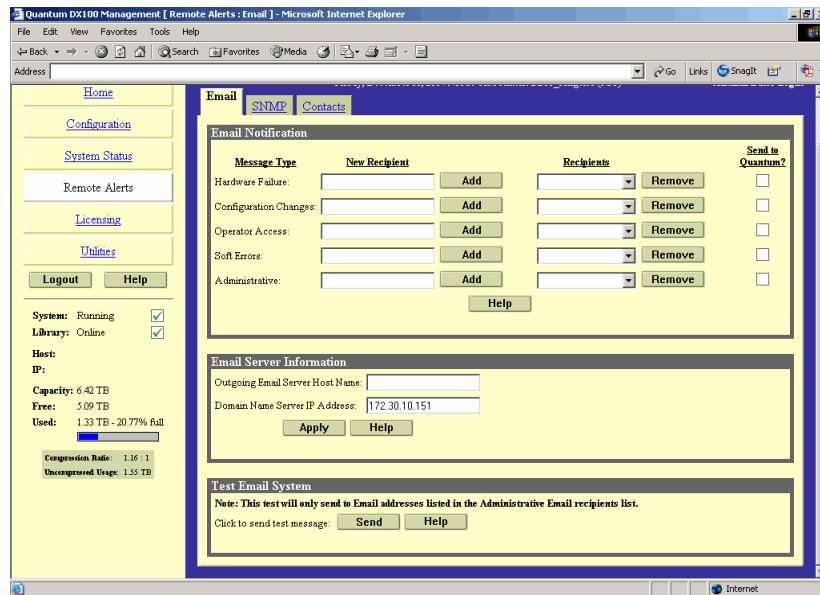

- 2 Edit the Email information as desired (see [table 5](#) for a description of the fields) and click **Apply**.
  - 3 After editing the Email information, click the **Send** button to test the notification system. A test email is sent to the administrative recipients. If the test is not successful, verify the email server information and the administrative recipients list and try again.
- The **Email** tab details are shown in [table 17](#) and [table 18](#).

Table 17 Email Notification

| Field                                      | Description   |
|--|---|
| <b>Message Type: Hardware Failure</b>      | When a hardware failure occurs on the DX-Series system such as a transition to a degraded, limited access, or failed system state, an email is sent to everyone on the hardware failure recipient list.                             |
| <b>Message Type: Configuration Changes</b> | When a configuration change is made on the DX-Series system such as changing a bar code label or network configuration, an email is sent to everyone on the configuration changes recipient list.                                   |
| <b>Message Type: Operator Access</b>       | When an operator access occurs on the DX-Series system such as starting up or shutting down the system, an email is sent to everyone on the operator access recipient list.   |
| <b>Message Type: Soft Error</b>            | When a soft error has occurred on the DX-Series system such as an attention state (high temperature warning), an email is sent to everyone on the soft error recipient list.  |
| <b>Message Type: Administrative</b>        | Used for testing the e-mail subsystem.  |
| <b>New Recipient</b>                       | To add a new recipient to a specific list, type the email address of the new recipient in the field and click <b>Add</b> .  |
| <b>Recipients</b>                          | Each message type has a recipients list that is viewed by clicking on the specific drop-down box. To remove a recipient, select the individual email address from the list and click <b>Remove</b> .                                |
| <b>Send to Quantum?</b>                    | To send an email notification to Quantum as well as the recipients list, select the Send to Quantum check box for the specific message type. The company and contact information is sent to Quantum as an attachment to this email. |

Table 18 Email  
Server Information

| Field                                  | Description  |
|--|--|
| <b>Outgoing Email Server Host Name</b> | View or set the outgoing email server hostname for the DX-Series system (for example, the DNS name). |
| <b>Domain Name Server IP Address</b>   | View or set the domain name server IP address for the DX-Series system.                              |


### SNMP Page

SNMP is short for Simple Network Management Protocol, a set of protocols for managing complex networks. SNMP works by sending messages, called protocol data units (PDUs), to different parts of a network. SNMP-compliant devices, called agents, store data about themselves in Management Information Bases (MIBs) and return this data to the SNMP requesters.

- 1 To access the **SNMP** page, from the **Remote Alerts** page, click the **SNMP** tab.

The management frame displays the **SNMP** tab (see [figure 52](#)).

Figure 49 SNMP Tab

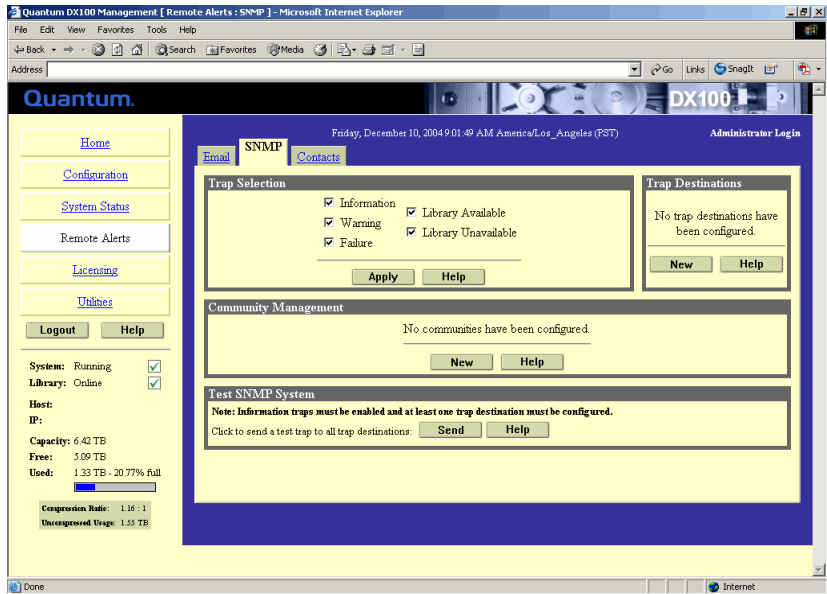

2 Enable the trap selections to be reported (see [table 19](#)):

Table 19 SNMP Trap Selections


| Field         | Description  |
|---------------|--|
| Informational | If selected, <b>Informational Traps</b> are enabled.   |
| Warning       | If selected, <b>Warning Traps</b> are enabled.   |
| Failure       | If selected, <b>Failure Traps</b> are enabled.   |
| Available     | If selected, a trap is generated every time the library transitions from an unavailable to an available state. |
| Unavailable   | If selected, a trap is generated every time the library transitions from an available to an unavailable state. |

3 Click **Apply**.

A **Results** page displays indicating the configuration has been changed.

- 4 Click **New** in the Trap Destination area (see [figure 50](#)), to set the IP addresses that are to receive the traps generated by the DX-Series system, for example, 12.34.56.78. Up to five trap destination addresses may be set. If less than five trap destinations are required, leave unused **Trap Destination** fields blank.


Figure 50 SNMP Trap Destinations

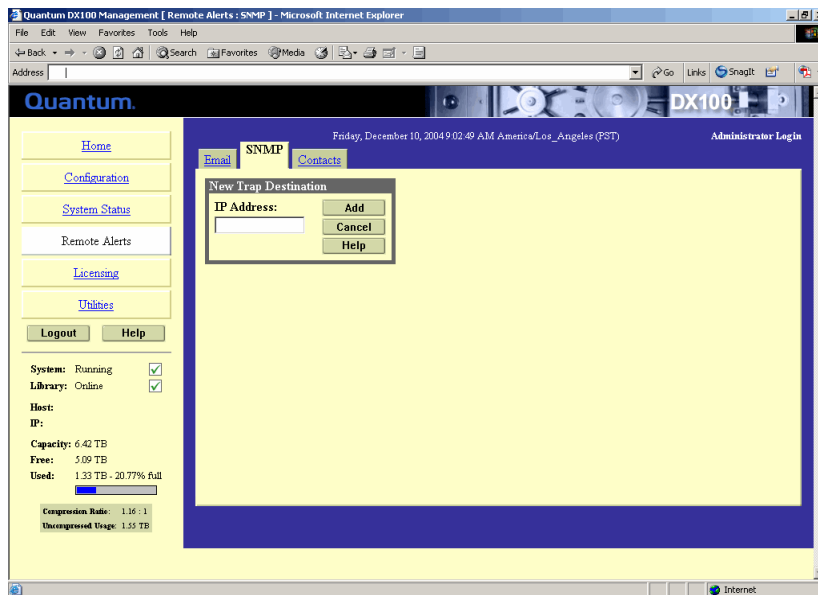

- 5 Click **Add** to add the IP address to the trap destinations and return to the SNMP tab.
- 6 Click **New** in the Community Management area to edit the SNMP communities (see [figure 51](#)).



Figure 51 SNMP  
Community  
Management

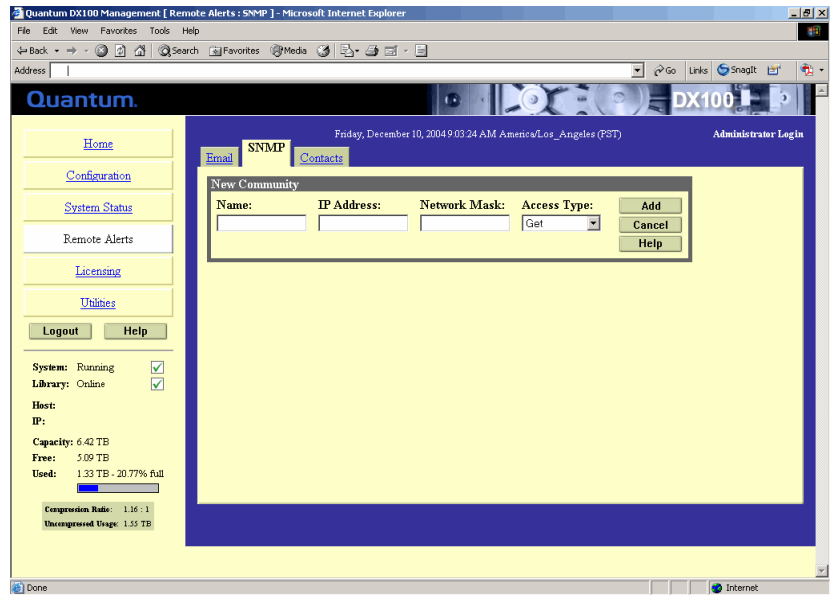

- 7 Under **New Community**, enter the new community information:
- a A unique name in the **Name** field, the field holds up to 20 characters (a-z, A-Z), no special characters or blank spaces are allowed

**Caution:** If no communities are defined, the DX-Series system is universally accessible through a “public” community (read-only).

- b IP address in the **IP Address** field, if the value in the Network Mask edit box ends in a zero, the value in the IP address edit box must also end in a zero
- c Subnet mask in the **Network Mask** field

**Note:** A single community with an IP address or network mask set to 0.0.0.0, or left blank, indicates that IP-address-based access control is disabled.

- d Access rights for the new community:
  - **Get** allows SNMP **get** operations:
  - **Get/Set** allows both SNMP **get** and **put** operations
- 8 Click **Add**.

A **Results** page displays indicating the community has been added.
- 9 Click **Send** from the SNMP tab to send a test SNMP trap.

## Contacts Page

- 1 To access the **Contacts** page, from the **Remote Alerts** page, click the **Contacts** tab.

The management frame displays the **Contacts** tab (see [figure 52](#)).

Figure 52 Contacts  
Tab

The screenshot shows a web browser window titled "Quantum DX100 Management [Remote Alerts: Contacts] - Microsoft Internet Explorer". The browser's address bar shows the URL "http://192.168.1.100:8080/remote\_alerts\_contacts.asp". The page has a blue header with "Email" and "SNMP" tabs, and a "Contacts" tab is selected. On the left, there is a navigation menu with links for Home, Configuration, System Status, Remote Alerts, Licensing, and Utilities, along with Logout and Help buttons. Below the menu, system status is shown: System: Running (checked), Library: Online (checked), Host: IP: Capacity: 6.42 TB, Free: 5.09 TB, Used: 1.33 TB - 20.77% Full, Compression Ratio: 1.36 : 1, and Uncompressed Usage: 1.55 TB. The main content area is divided into two sections: "Company Information" and "Primary Contact Information". The "Company Information" section has input fields for Company Name, Street, City, State, Postal Code, Country, DX100 Location, and Support Contact, with "Apply" and "Help" buttons below. The "Primary Contact Information" section has input fields for Name, Email Address, Phone, Fax, Pager, Street, City, and State.

- 2 Edit the configuration information as desired (see [table 5](#) for a description of the fields) and click **Apply**.

The **Contacts** tab details are shown in [table 20](#) and [table 21](#).

Table 20 Company Information

| Field                            | Description  |
|----------------------------------|--|
| <b>Company Name</b>              | View or edit the company name where the DX-Series system resides.                  |
| <b>Street</b>                    | View or edit the street name where the company is located.                         |
| <b>City</b>                      | View or edit the city where the company is located.                                |
| <b>State</b>                     | View or edit the state where the company is located.                               |
| <b>Postal Code</b>               | View or edit the postal code.  |
| <b>Country</b>                   | View or edit the country where the company is located.                             |
| <b>DX-Series System Location</b> | View or edit the physical location of the DX-Series system (example: data center). |
| <b>Support Contract</b>          | View or edit the support contract number.  |

Table 21 Primary/Secondary Contact Information

| Field                | Description  |
|----------------------|--|
| <b>Name</b>          | View or edit the primary/secondary contact name.                       |
| <b>Email Address</b> | View or edit the primary/secondary contact email address.              |
| <b>Phone</b>         | View or edit the primary/secondary contact phone number.               |
| <b>Fax</b>           | View or edit the primary/secondary contact fax number.                 |
| <b>Pager</b>         | View or edit the primary/secondary contact pager number, if available. |

| Field       | Description  |
|-------------|--|
| Street      | View or edit the primary/secondary contact street address.   |
| City        | View or edit the primary/secondary contact city location.    |
| State       | View or edit the primary/secondary contact state location.   |
| Postal Code | View or edit the primary/secondary contact postal code.      |
| Country     | View or edit the primary/secondary contact country location. |

---

## Licensing


The **Licensing** page allows you to add functionality to the DX-Series system through license key activation and also allows you to view the Quantum end user license agreement.

---

### Accessing Licensing

To access the **Licensing** page, in the contents frame, click **Licensing**. The management frame displays the **Licensing** page (see [figure 53](#)).

Figure 53 Licensing  
Page

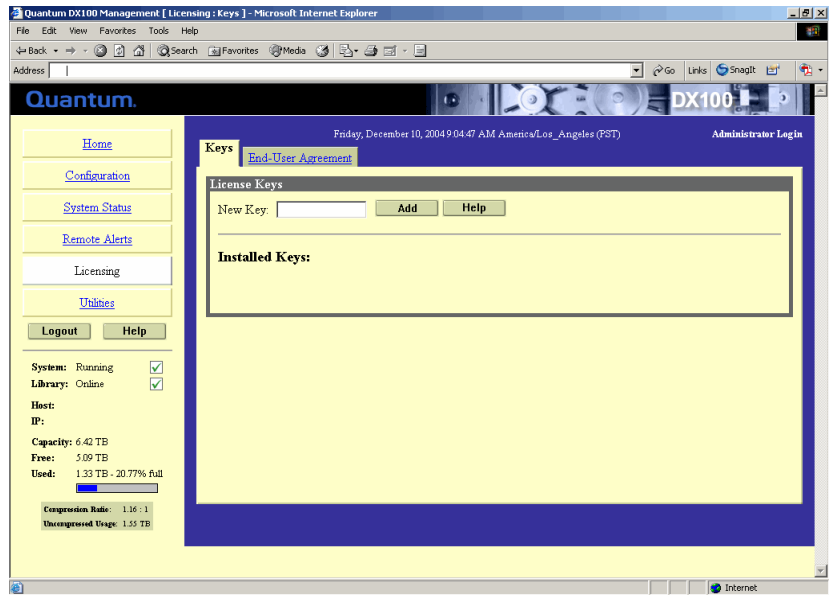

The Licensing page contains:

- [Keys Tab](#)
- [End User Agreement Tab](#)

## Keys Tab


The **Keys** page is used to enable compression on the DX-Series system. If compression is purchased with the DX-Series system, it is enabled at the time of installation. If you wish to purchase a license key to enable compression, contact Quantum to obtain a key for your system.

To activate a license key:

- 1 Access the **Licensing** page (see [Accessing Licensing](#)).
- 2 Click the **Keys** tab.

The **Keys** page displays (see [figure 54](#)).

Figure 54 License  
Keys Tab

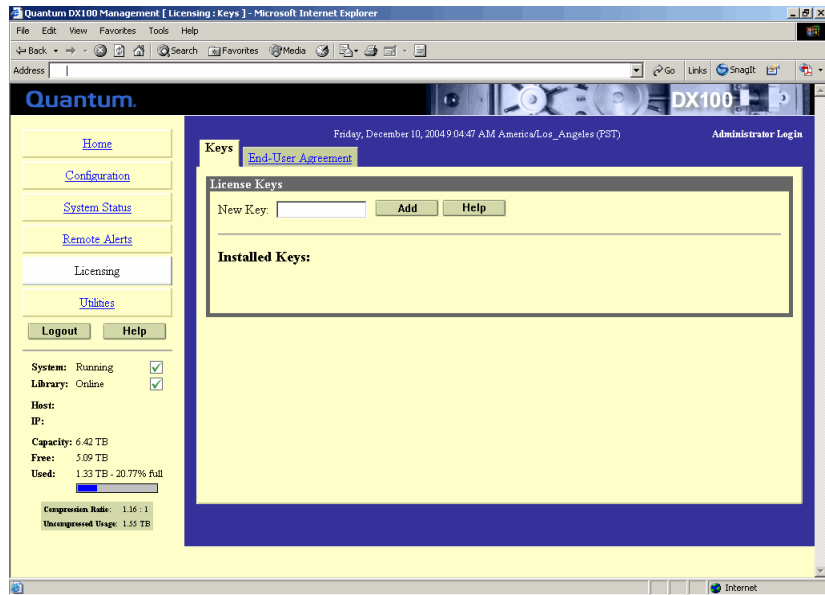

- 3 Enter the license key in the **New Key** edit box and click **Add**.  
The license key is added to the installed keys list.


## End User Agreement Tab

The **End User Agreement Tab** displays the entire end user agreement for the DX-Series system.

To view the end user agreement:

- 1 Access the **Licensing** page (see [Accessing Licensing](#)).
- 2 Click the **End-User Agreement** tab.  
The **End-User Agreement** page displays (see [figure 55](#)).

Figure 55 End User Agreement Tab

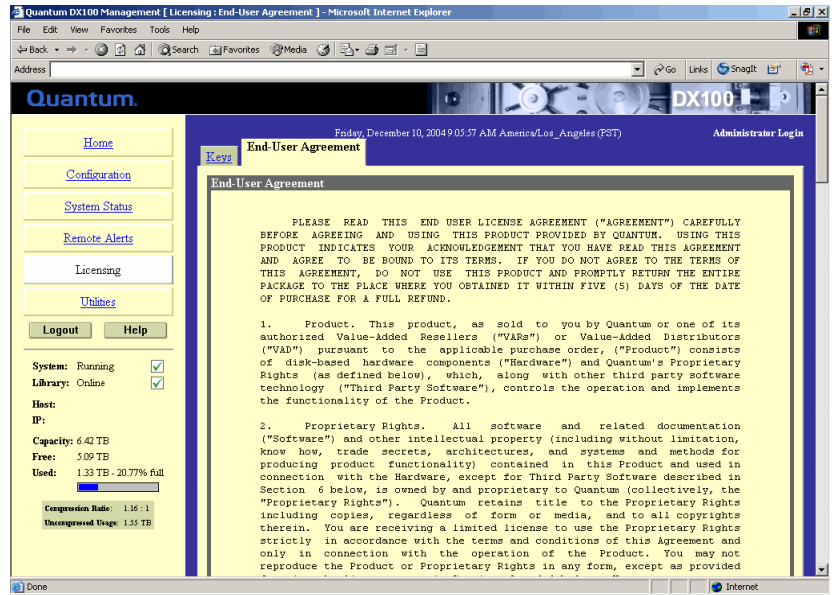

## Utilities


The **Utilities** page allows you to perform maintenance functions on the DX-Series system, including uploading and activating software images, and configuration files. The **Utilities** page also allows you to restart or shut down the DX-Series system.

### Accessing Utilities

To access the **Utilities** page, in the contents frame, click **Utilities**.

The management frame displays the **Utilities** page (see [figure 56](#)).

Figure 56 Utilities  
Page

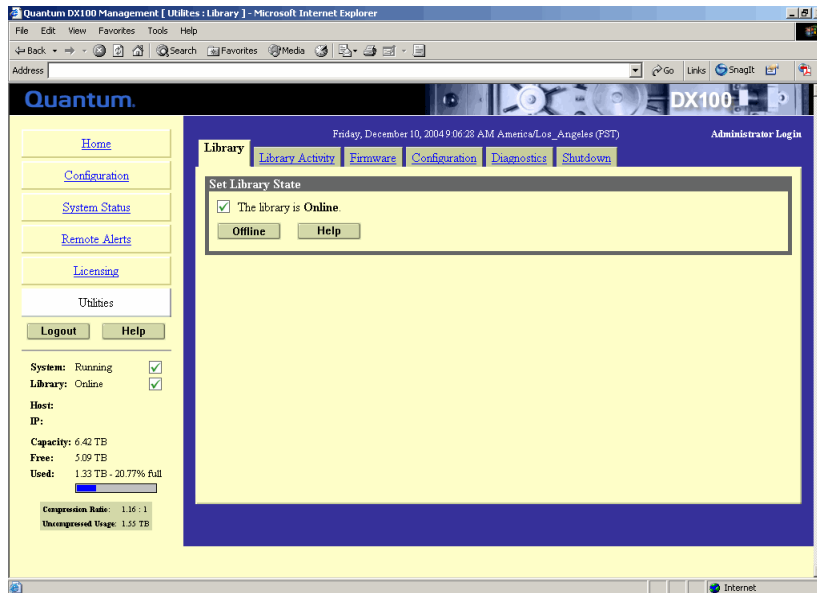

The utilities page contains:

- [Changing Library State](#)
- [System Log](#)
- [Uploading Firmware](#)
- [System Configuration](#)
- [Rebooting the DX-Series System](#)

---

## Changing Library State

The **Library State** page is used to turn the library either offline or online.

---

## System Log


To view the system log:

- 1 Access the **Utilities** page (see [Accessing Utilities](#)).
- 2 Click **System Log**.

The **System Log** page displays (see [figure 57](#)).



Figure 57 System Log

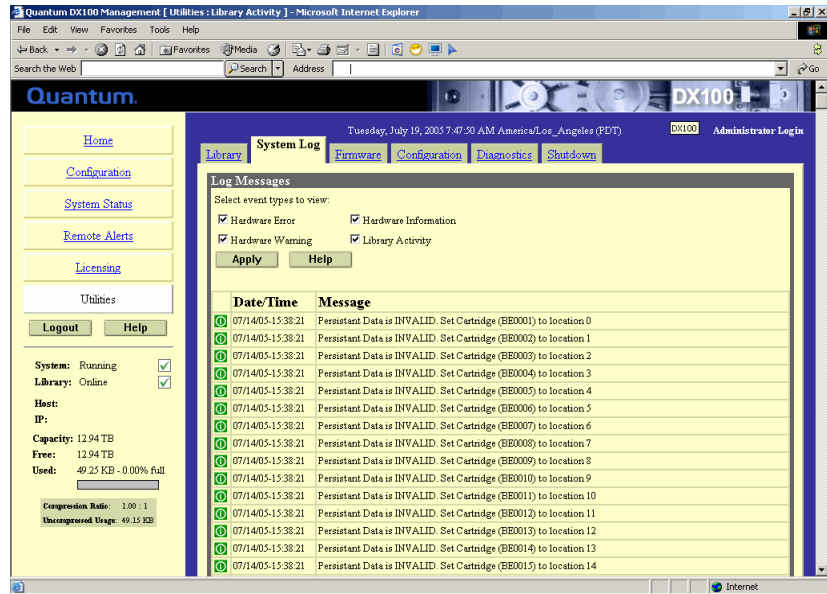

The system log allows you to sort the following types of log entries displayed:

- **Hardware Information** - Informational events are for informational purposes only and do not require any intervention on the DX-Series system such as the commencement of a hard drive rebuild.
- **Hardware Warning** - Warning events indicate that a possible error condition is imminent. These events may require attention, and give the user a chance to check the system before a failure occurs.
- **Hardware Error** - Error events indicate a failure within the DX-Series system such as a hard drive failure. Immediate attention is required.
- **Library Activity** - Library Activity indicates a change within the DX-Series system such as the recognition of new tape media.

Select the system log type(s) and click **Apply** to display the list.

## Uploading Firmware

The **Firmware Upload** page is used to upload a new firmware image to the DX-Series system.


**Note:** Firmware version 2.30 is only available from the CD installation menu (see [Setup CD and Setup Menu](#) on page 113).

To upload new firmware image:

- 1 Access the **Utilities** page (see [Accessing Utilities](#)).
- 2 Click **Firmware**.

The **Firmware** page displays (see [figure 58](#)).

Figure 58 Uploading  
Firmware

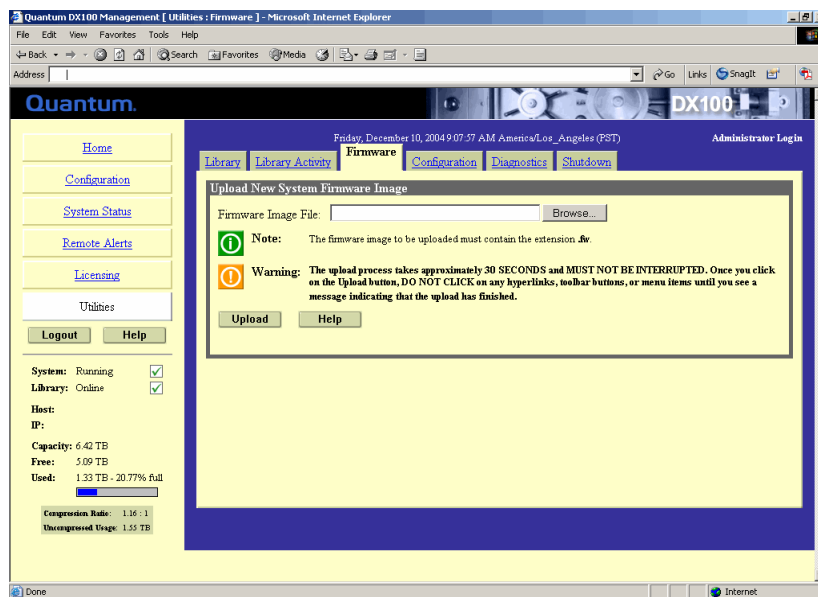

- 3 Type the location and filename of the new software image.


**Note:** Use the **Browse** button to browse the system and locate the new firmware image.

- 4 Click **Upload** to place the new software image in a temporary area of the system.

An **Successful Upload** page displays indicating that the firmware has been uploaded. Click **Ok** to continue.

- 5 Click **Activate** to activate the new firmware image or **Remove** to remove the firmware image from the system (see [figure 59](#)).

Figure 59 Activating/  
Removing a Firmware  
Image

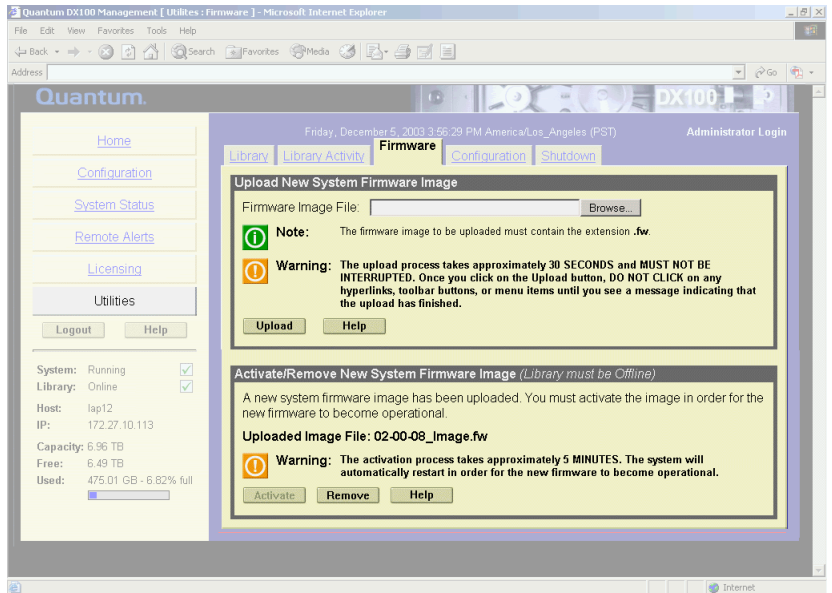

A **Results** page indicates the firmware has been either activated or removed.

- 6 Click **OK** to return to the **Utilities** page.

The DX-Series system will use the new firmware image the next time the system is rebooted (see [Rebooting the DX-Series System](#)).

## System Configuration

This option allows the current configuration to be downloaded to the administrator's system as a single file. The system configuration file contains all of the configuration information entered by the DX-Series system administrator including:

- IP configuration

- All other configured features


**Note:** For disaster recovery purposes, download the configuration file whenever there are major changes to the DX-Series system configuration.

## Downloading a System Configuration File

To download a system configuration file:

- 1 Access the **Utilities** page (see [Accessing Utilities](#)).
- 2 Click the **Configuration** tab (see [figure 60](#)).

Figure 60 Downloading Configuration Files

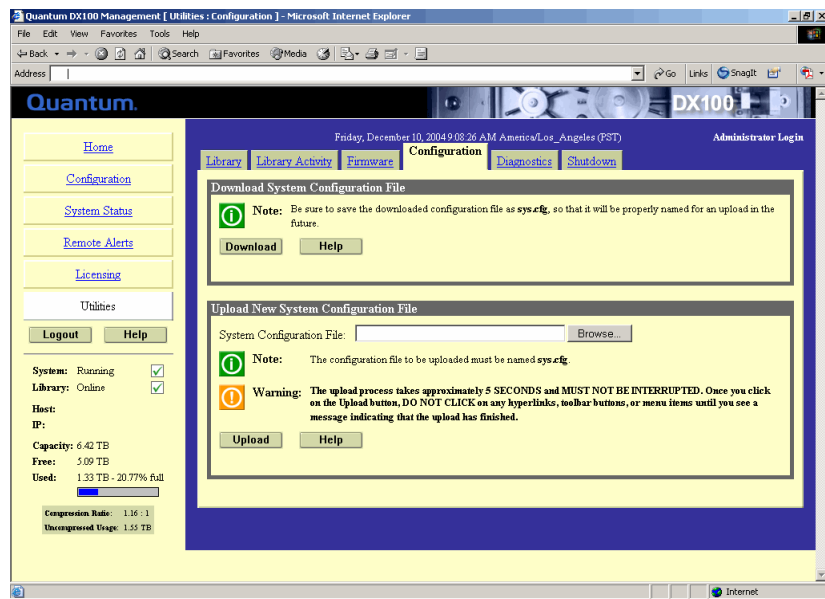

- 3 Under **Download System Configuration File**, click **Download**.

A confirmation message will display, asking whether to open or save the file.

- 4 Select **Save this file to disk**, and click **OK**.

A **Results** page indicates the configuration file has been downloaded.

- 5 Click **OK** to return to the **Utilities** page.

### Uploading System Configuration File

This option allows a saved configuration file to be uploaded to the current DX-Series system. The system configuration contains all of the configuration information entered by the DX-Series system administrator including:

- IP configuration
- All other configured features

To upload a system configuration file:

- 1 Access the **Utilities** page (see [Accessing Utilities](#)).
- 2 Click the **Configuration** tab (see [figure 60](#)).
- 3 Under **Upload New System Configuration File**, type the location and filename of the new configuration file.


**Note:** Use the **Browse** button to browse the system and locate the desired system configuration file. The configuration file must be named **sys.cfg**.

- 4 Click **Upload** to load the configuration file.

An **Successful Upload** page displays indicating that the configuration file has been placed in a temporary area of the system. Click **Ok** to continue.

- 5 Click **Activate** to activate the configuration file (see [figure 61](#)).

Figure 61 Activating  
the Configuration File

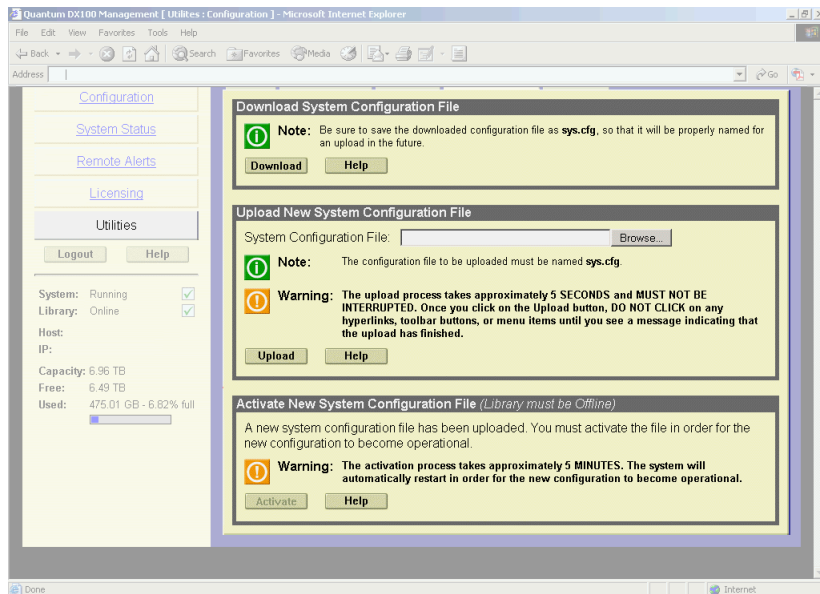

6 Click **OK** to return to the **Utilities** page.

**Note:** If the DX-Series system does not recognize the uploaded configuration file as a valid configuration file, the transfer will be aborted.


### Downloading the System Diagnostics File

The DX-Series system allows you to download a system diagnostics file to your local host which is helpful when troubleshooting problems on the system. Have this file available prior to contacting Quantum customer support.

To download the system diagnostics file:

- 1 Access the **Utilities** page (see [Accessing Utilities](#)).
- 2 Click the **Diagnostics** tab (see [figure 62](#)).

Figure 62 Downloading Diagnostics Files

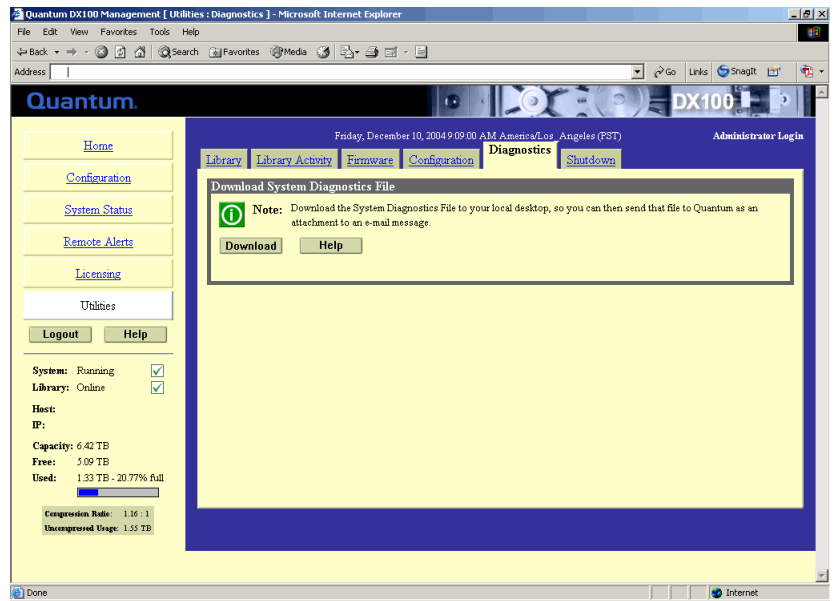

- 3 Under **Download System Diagnostics File**, click **Download**.

A confirmation message will display, asking whether to open or save the file.

- 4 Select **Save this file to disk**, and click **OK**.

A **Results** page indicates the diagnostics file has been downloaded.


- 5 Click **OK** to return to the **Utilities** page.

## Rebooting the DX-Series System

To reboot the DX-Series:


- 1 Access the **Utilities** page (see [Accessing Utilities](#)).
- 2 Click the **Shutdown** tab (see [figure 63](#)).

Figure 63 Shutting Down the DX-Series System

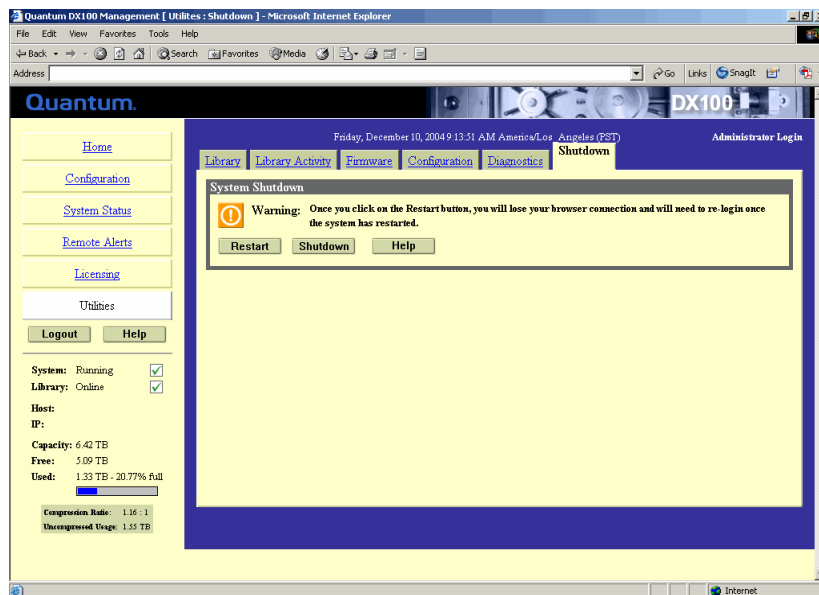

- 3 Under **System Shutdown**, click **Restart**.  
The DX-Series system reboots.



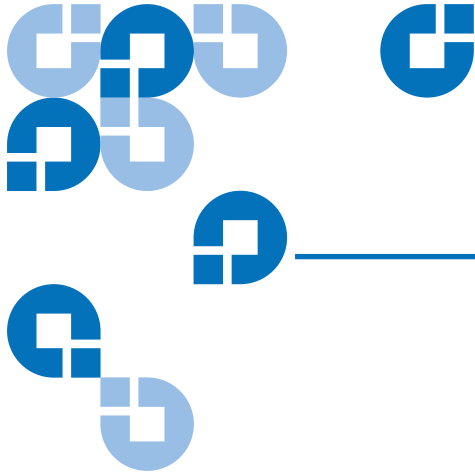

## Chapter 4 Troubleshooting

---

This chapter describes problems you may encounter during the setup and operation of the DX-Series system. Corrective information is provided to help you resolve the problems.

---

### Common Problems and Solutions

The troubleshooting information in this section covers the following topics:

- [Hardware Problems](#)
- [Ethernet Network Problems](#)
- [Fibre Channel Network Problems](#)

## Hardware Problems

[Table 22](#) describes corrective actions for problems occurring with the system hardware.

Table 22 Hardware Problems

| Problem  | Corrective Action   |
|--|---|
| The system does not power on.                        | Make sure the power cords are connected to a grounded electrical outlet and the power switches located on the back of the power supplies are on.  |
| The backup application does not see any tape drives. | You MUST accept the license agreement from the GUI prior to operating the DX-Series system, see <a href="#">Connecting to the Controller</a> on page 113. Also ensure that tape drives are properly mapped in the config, Fibre Channel, Device mappings web page (see <a href="#">Configuring the Fibre Channel Options</a> on page 49). |
| One power supply is not functioning.                 | Contact your Quantum Customer Support representative for a power supply replacement.  |
| Both power supplies are not functioning.             | Contact your Quantum Customer Support representative for a power supply replacement.  |
| One fan is not operating.                            | Contact your Quantum Customer Support representative for a fan replacement.   |

| <b>Problem</b>                 | <b>Corrective Action</b>   |
|--------------------------------|--|
| Two fans are not operating.    | <b>Caution:</b> Turn the system off immediately! The system will overheat without two fans functioning.<br><br>Contact your Quantum Customer Support representative for a fan replacement. |
| A hard drive is not responding | Determine which drive has failed by observing the red fault LED on the drive sled. Contact your Quantum Customer Support representative for a drive sled replacement.                      |

## Ethernet Network Problems

[Table 23](#) describes corrective actions for problems occurring with the Ethernet network.

Table 23 Ethernet  
Network Problems

| Problem   | Corrective Action  |
|---|--|
| <p>The Ethernet link light on the DX-Series controller is not lit when a cable is connected to a hub or switch.</p> | <p>Check to make sure the Ethernet cable is not a cross-over cable. Use only "straight" CAT-5 Ethernet cables.</p> <p>Port on the hub or switch is not active or damaged.</p> <p>Port on the DX-Series controller is damaged. Contact the Quantum Customer Support department (see the Preface for contact information).</p>                       |
| <p>The Ethernet link light on the switch or hub is not lit when a cable is connected to DX-Series system.</p>       | <p>Check to make sure the Ethernet cable is not a cross-over cable. Use only "straight" CAT-5 Ethernet cables.</p> <p>Port on the hub or switch is not active or damaged.</p> <p>Port on the DX-Series controller is damaged. Contact the Quantum Customer Support department (see the Preface for contact information).</p>                       |
| <p>DX-Series system is not visible on the Ethernet network.</p>   | <p>Try to ping the DX-Series system IP address from a host on the same network. If the ping reports round trip times, the DX-Series system is active. If not, check the cables, switches, or hubs for damaged components. If everything checks out, contact the Quantum Customer Support department (see the Preface for contact information).</p> |
| <p>Web browser stalls when using Netscape version 4.76 to access the management pages.</p>                          | <p>Upgrade your version of Netscape to 7.1 or later. You can download this software from <a href="http://www.netscape.com">http://www.netscape.com</a>.</p>  |
| <p>Java applets do not appear.</p>  | <p>Download and install the latest updates for your browser.</p>   |

## Fibre Channel Network Problems

[Table 24](#) describes corrective actions for problems occurring with the Fibre Channel network.

Table 24 Fibre Channel Network Problems

| Problem   | Corrective Action   |
|---|---|
| The Fibre Channel link lights on the DX-Series controller are not lit when a cable is connected to a hub or switch. | Check to make sure the Fibre Channel cable is not damaged: Replace the cable.<br>Fibre Channel controller, switch, or hub is damaged. |
| Windows cannot see the robot or tape drives with JNI Fibre Channel HBA.   | See <a href="#">Host Bus Adapter Settings</a> for HBA information.  |
| Windows cannot see the robot or tape drives with Emulex Fibre Channel HBA.  | See <a href="#">Host Bus Adapter Settings</a> for HBA information.  |

## Host Bus Adapter Settings

This section provides additional information on setting up your specific Fibre Channel HBA (Host Bus Adapter).

The following HBAs have specific configuration information that must be set properly to function with the DX-Series system. Refer to your specific HBA documentation for additional information.


**Tech Tip:** If your Fibre Channel HBA supports bus resets, this feature must be disabled to operate with the DX-Series controller. Fibre Channel HBAs only support bus resets.

- [JNI™ Fibre Channel HBA](#)
- [Emulex™ Fibre Channel HBA](#)
- [Q-Logic™ Fibre Channel HBA](#)

## JNI™ Fibre Channel HBA

For the DX-Series system to communicate with the JNI Fibre Channel HBA, the card must be setup correctly. JNI is configured through EZ-Fibre. Ensure that the drive mapped check boxes for the DX-Series system items are selected in the LUN-Level Zoning tab as shown in [figure 64](#).


Figure 64 JNI Fibre Channel HBA Configuration

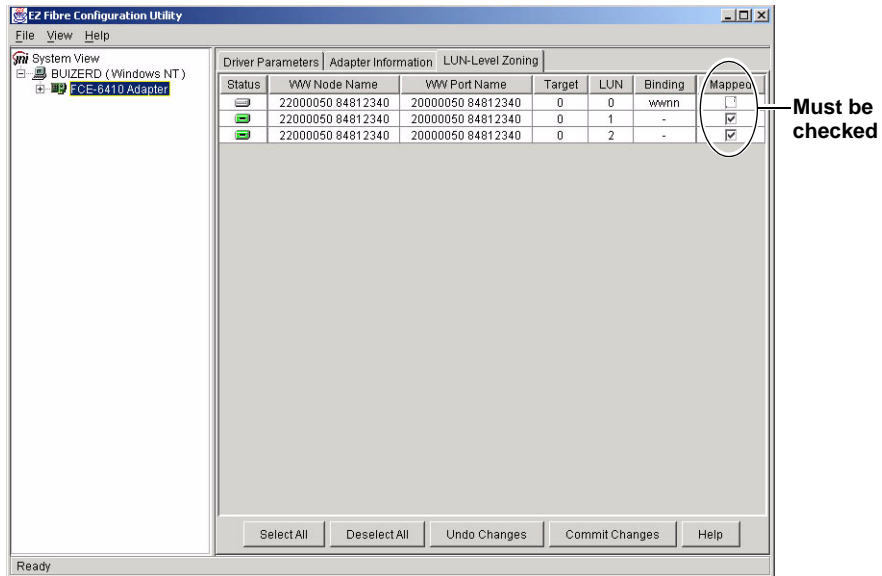

## Emulex™ Fibre Channel HBA

For the DX-Series system to communicate with the Emulex Fibre Channel HBA, the card must be setup correctly. Emulex Fibre Channel HBAs are configured through the Lightpulse Utility. Ensure that the Automap function is enabled as shown in [figure 65](#).

Figure 65 Emulex  
Fibre Channel HBA

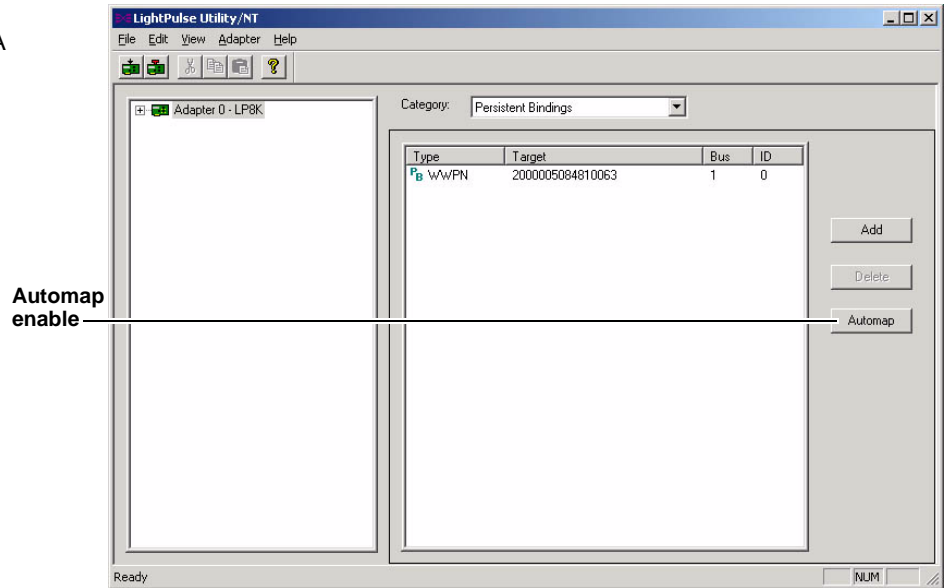

### Additional Emulex Settings


In addition to enabling automap on the Fibre Channel HBA, the following parameters must be modified:

- Topology
- Frame size
- Link speed

To modify the Emulex parameters for topology, frame size, and link speed:

- 1 Using the LightPulse utility, select the Fibre Channel HBA connected to the DX-Series system and scroll down to the **Topology** setting (see [figure 66](#)).


Figure 66 Emulex  
Topology Setting

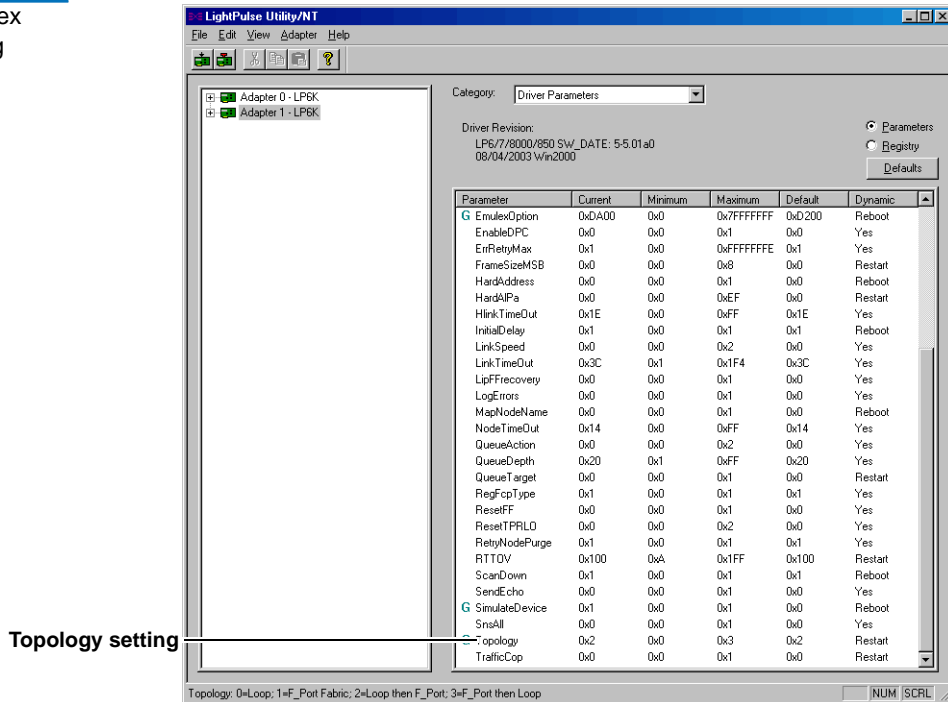

2 Double-click **Topology**.

The modify driver parameters screen displays (see [figure 67](#)).

Figure 67 Modify  
Topology Drivers  
Screen

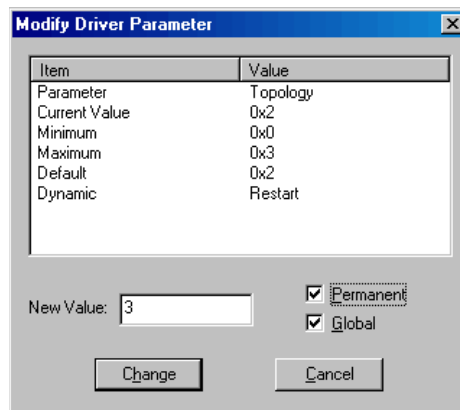




- 3 Enter **3** in the **New Value** edit box, check both the **Permanent** and **Global** check boxes, and click **Change**.

This changes the Emulex Fibre Channel HBA topology to *PT-PT fabric first, then attempt FC-AL*. The HBA will attempt a point-to-point connection (PT-PT) first and if this is unsuccessful, the HBA reverts to loop mode (FC-AL).

Other topology settings are:

- 0 = FC-AL (loop)
  - 1 = PT-PT (fabric)
  - 2 = FC-AL first, then attempt PT-PT (default setting)
- 4 Scroll down to the **FramesizeMSB** setting (see [figure 68](#)).

Figure 68 Emulex  
Frame Size Setting

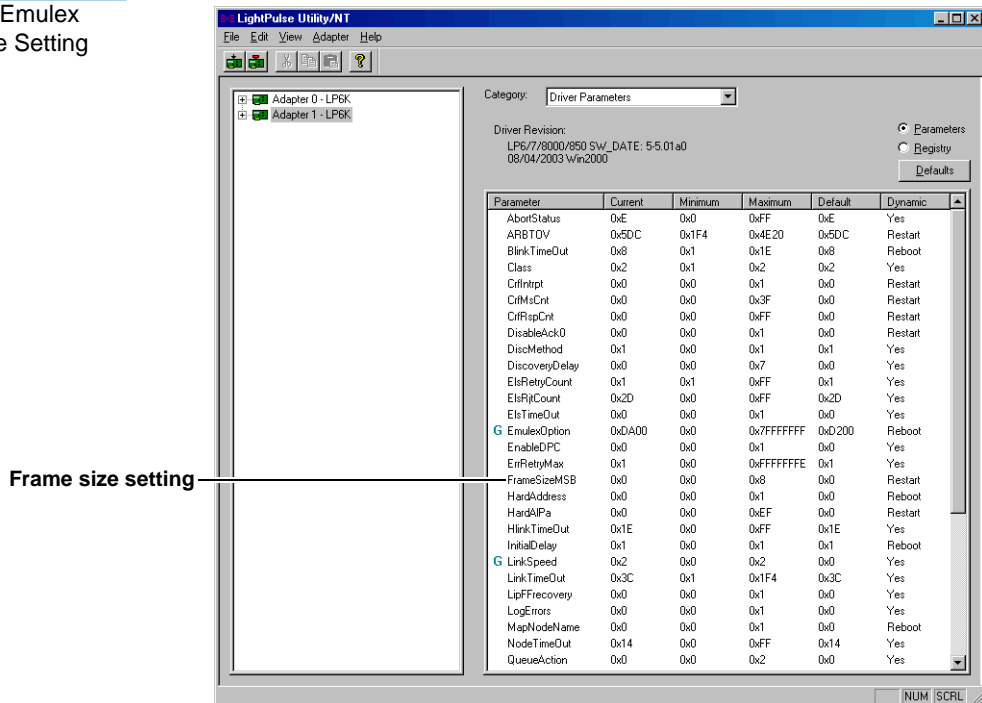

- 5 Double-click **FramesizeMSB**.


The modify driver parameters screen displays.

- 6 Enter **4** for 1 Gig Fibre Channel HBAs or **8** for 2 Gig Fibre Channel HBAs in the **New Value** edit box, check both the **Permanent** and **Global** check boxes, and click **Change**.

Entering **4** changes the Emulex Fibre Channel HBA frame size to *1024* which is recommended for 1 Gig Fibre Channel HBAs. Entering **8** changes the frame size *2048* which is recommended for 2 Gig Fibre Channel HBAs. 0 is the default setting

- 7 Scroll down to the link speed setting (see [figure 69](#)).

Figure 69 Emulex link  
Speed Setting

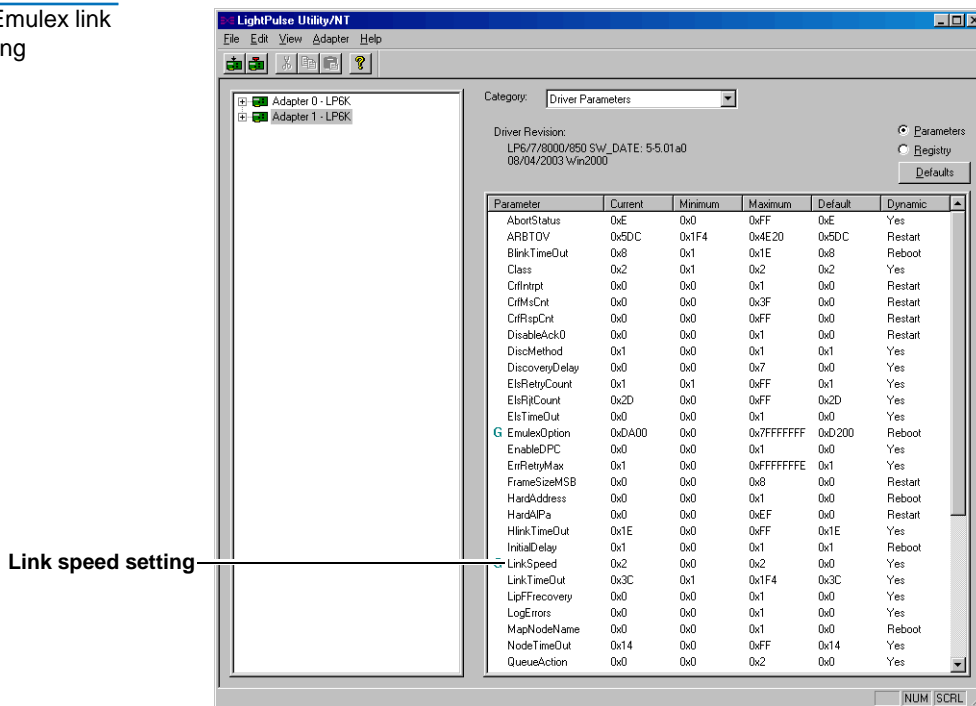

- 8 Double-click **Linkspeed**.

The modify driver parameters screen displays.

- 9 Enter **1** for 1 Gig Fibre Channel HBAs or **2** for 2 Gig Fibre Channel HBAs in the **New Value** edit box, check both the **Permanent** and **Global** check boxes, and click **Change**.

**Note:** The default setting is 0 for auto speed selection. This setting should **NEVER** be used. This could cause the HBA to fail to initialize.

---


### Q-Logic™ Fibre Channel HBA

For the DX-Series system to communicate with the Q-Logic Fibre Channel HBA, the card must be setup correctly.

To setup the Q-Logic Fibre Channel HBA:

- 1 Power on the host containing the Q-Logic HBA.
- 2 As the host boots, watch for the Q-Logic prompt that tells you to press <Control> Q to enter the HBA setup utility.
- 3 Under **Configuration Settings**, select **Host Adapter Settings**.
- 4 Under **Host Adapter Settings**, set the frame size to 2048.
- 5 Under **Extended Firmware Settings**, set the type of connection to #2 loop preferred, otherwise point-to-point.



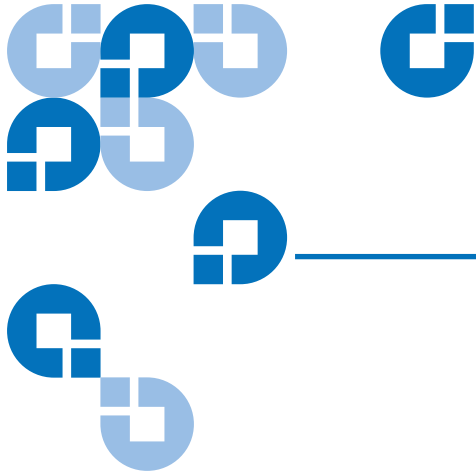

## Appendix A

# DX-Series System Specifications

---

This appendix lists characteristics and specifications both DX-Series models: DX30 and DX100. These characteristics and specifications are categorized as follows:

- [Physical Characteristics](#)
- [Performance and Reliability Characteristics](#)
- [Environmental Specifications](#)

**Note:** For hard drive specifications see the appropriate hard drive product manual.

## Physical Characteristics

[Table 25](#) provides dimensions and other physical characteristics of the DX-Series Components.

Table 25 Physical Characteristics

| <b>Controller</b> |                          |   |
|-------------------|--------------------------|---|
|                   | <b>DX30</b>              | <b>DX100</b>  |
| Bezel width       | 19.00 in. (482.6 mm)     | 19.00 in. (482.6 mm)  |
| Chassis width     | 16.88 in. (428.8 mm)     | 16.88 in. (428.8 mm)  |
| Chassis height    | 5.25 in. - 3U (133.4 mm) | 8.75 in. - 5U (222.3 mm)<br>includes FC and Ethernet switch |
| Chassis depth     | 28 in. (711.2 mm)        | 28 in. (711.2 mm)   |

| <b>Storage Array</b> |                          |                          |
|----------------------|--------------------------|--------------------------|
|                      | <b>DX30</b>              | <b>DX100</b>             |
| Bezel width          | 19.00 in. (482.6 mm)     | 19.00 in. (482.6 mm)     |
| Chassis width        | 17.50 in. (444.5 mm)     | 17.50 in. (444.5 mm)     |
| Chassis height       | 5.25 in. - 3U (133.4 mm) | 5.25 in. - 3U (133.4 mm) |
| Chassis depth        | 19.75 in. (501.7 mm)     | 19.75 in. (501.7 mm)     |
| Overall depth        | 20.50 in. (520.7 mm)     | 20.50 in. (520.7 mm)     |

| <b>AC Power Sequencer (DX100 Only)</b> |   |
|--|---|
| Panel height                           | 1.75 in. (1U) pair needed for every four storage arrays |

| <b>Weight</b> |                            |                              |
|---------------|----------------------------|------------------------------|
|               | <b>DX30 with One Array</b> | <b>DX100 with Two Arrays</b> |
| Installed     | 127 lbs. (57.6 kg)         | 312 lbs. (141.5 kg)          |
| Shipping      | 143 lbs. (64.9 kg)         | 334 lbs. (151.5 kg)          |

Table 26 Interfaces

| <b>Host to Library Interfaces</b>  |   |
|------------------------------------|---|
| Software                           | SCSI-2 medium changer command set<br>DLT 7000 command set                   |
| <b>Power Input</b>                 |   |
| Power cord                         | NEMA 5-15P to C13 connector (Qty 4)   |
| <b>Host to DX-Series Interface</b> |   |
| Hardware                           | Up to eight 2 Gb Fibre Channel (LC connector)<br>10/100/1000-BaseT Ethernet |

---

## Performance and Reliability Characteristics

[Table 27](#) and [table 28](#) list performance and reliability characteristics of the DX-Series system.

---

Table 27 Performance Characteristics

|                          |  |
|--------------------------|--|
| <b>Average Swap Time</b> | 2 seconds, consisting of two Move Medium commands          |
| <b>Inventory</b>         | Less than 10 seconds, fully loaded with labeled cartridges |

---

Table 28 Reliability Characteristics

|             |  |
|-------------|--|
| <b>MTBF</b> | Controller - 200,000 power-on hours<br>Storage Array - 2,000,000 power-on hours<br>99.999% reliability |
| <b>MTTR</b> | Less than 30 minutes   |

---

## Environmental Specifications

[Table 29](#) provides various library environmental specifications.

---

Table 29 Environmental Specifications

| <b>Power Environment</b> |                 |   |
|--------------------------|-----------------|---|
| Electrical inputs        | Voltage         | 100 VAC to 240 VAC (DX30)<br>110 VAC to 240 VAC (DX100) |
|                          | Rated Frequency | 47 to 63 Hz   |



|  |               |  |
|--|---------------|--|
|  | Rated Current | 2.4A @230 VAC (DX30)<br>4.57A @230 VAC (DX100) |
|  | Consumption   | 300 Watts (DX30)<br>360 Watts (DX100)          |


### Climatic Environment

|                   |                      |   |
|-------------------|----------------------|---|
| Temperature       | Operating            | 50° F to 95° F<br>(10° C to 35° C)              |
|                   | Shipping and storage | -4° F to 140° F<br>(-20° C to 60° C)            |
| Relative humidity | Operating            | 20% to 80%, non-condensing                      |
|                   | Shipping and storage | 15% to 95%, non-condensing                      |
| Altitude          | Operating            | 0 to 10,000 ft.<br>(0 to 3,048m)                |
|                   | Shipping and storage | 0 to 39,370 ft.<br>(0 to 12,000 m)              |
| Heat              | Operating            | 1,880 Btu/hour (DX30)<br>3,590 Btu/hour (DX100) |

### Acoustical Noise

|                            |           |          |
|----------------------------|-----------|----------|
| Sound power level          | Operating | 8.10 Bel |
|                            | Idle      | 7.83 Bel |
| Sound pressure @ bystander | Operating | 63db     |



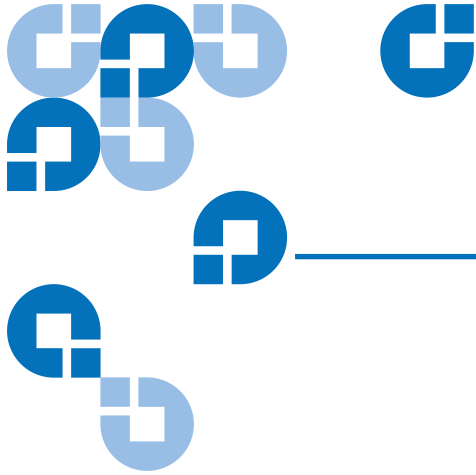

## Appendix B Setup CD and Setup Menu

---

This section contains instructions for reinstalling the controller operating system and also for accessing the installation menu available from the controller serial port.

---

### Reinstalling the Controller Operating System

If the Linux based operating system on the controller has become corrupt and unbootable, the controller operating system must be reinstalled using the setup CD included with the accessory kit.

Reinstalling the operating system on the controller consists of the following steps:

- [Connecting to the Controller](#)
- [Installing System Firmware](#)


---

#### Connecting to the Controller

To connect a service PC to the controller:

- 1 Connect a 9-pin RS-232 null modem cable to the COM port in the left-most PCI slot the back of the DX-Series controller and to a serial port on a local host system (see [figure 70](#)).

Figure 70 Connecting the Service PC to the Controller

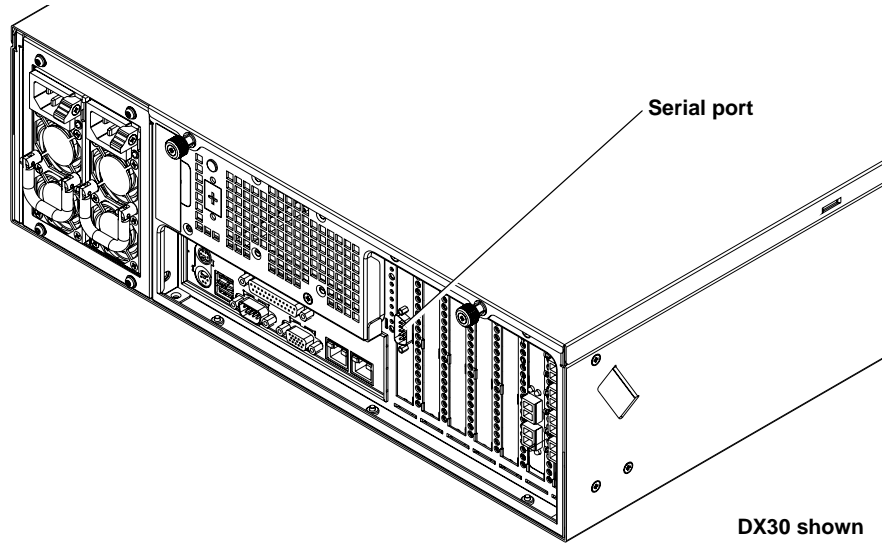

- 2 Open a terminal emulation program on your host system and set the following properties:
  - Baud rate 115200
  - Data bits 8
  - Parity none
  - Stop bits 1
  - Flow control none
  - Emulation ANSI


## Installing System Firmware

To install the system firmware (Linux operating system):

- 1 Insert the setup CD in the controller CD-ROM drive.
- 2 Reboot the controller by pressing the reset button on the front of the controller.

The controller reboots. The terminal emulation session displays the boot process on the controller. When the boot process completes, the following menu displays (see [figure 71](#)).

Figure 71 DX-Series  
Installation Menu

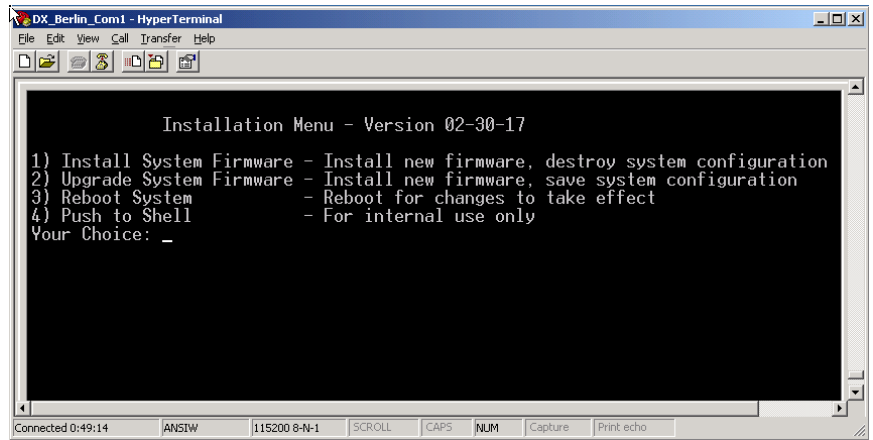

- 3 Type 2 to upgrade the system firmware and save the system configuration.

**Caution:** Selecting 1) Installing system firmware will destroy the system configuration and require a customer support call to return the DX-Series system to operation.

- 4 The system prompts for a password, enter password and press **Enter**.  
The setup CD installs the system firmware to the DX-Series controller. When the system firmware installation is complete, the DX-Series Installation Menu displays.
- 5 Type 3 to reboot the DX-Series system.  
The system reboots.

---

## DX-Series Setup Menu

The DX-Series operating system contains an embedded installation menu that is available from the DX-Series controller serial port. The DX-Series Setup Menu is used for:

- [Displaying User Options](#)

- [Configuring User Options](#)
- [Creating Cartridges](#)
- [Displaying Diagnostic Data](#)

## Displaying User Options

The DX-Series system can display the current user configuration settings through the controller serial port. To view the user options:


- 1 Connect a local host to the controller as shown in [Connecting to the Controller](#) on page 113.
- 2 At the system login prompt, type **setup** (all lower case characters) and press **Enter**.

The system prompts you for a password.

- 3 Type **password** (all lower case characters) and press **Enter**.

The DX-Series Setup Menu displays (see [figure 72](#)):

Figure 72 DX-Series Setup Menu

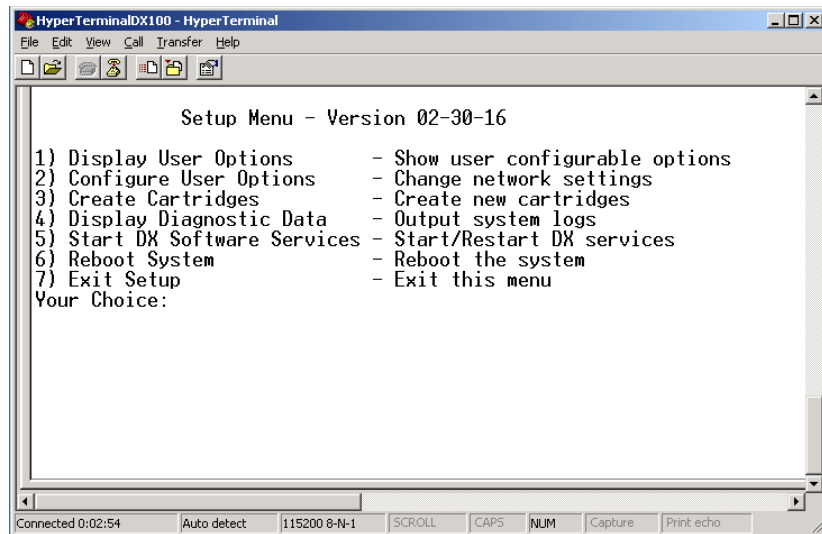

- 4 Type 1 to display user options and press **Enter**.

The current user options displays:

- System Hostname
- System IP Address

- Network Mask
- Network Gateway IP Address
- Network Domain Name
- Network DNS IP Address
- Network Link Speed and Duplex Mode

**5** Press <Enter> to return to the DX-Series Setup Menu.

## Configuring User Options

To configure the user options through the serial port:

- 1** Select **2** from the DX-Series Setup Menu to configure the user options.
- 2** The system prompts you to continue. Type **y** and the system services are shut down.
- 3** The system prompts you enter the following information:
  - System Hostname
  - System IP Address
  - Network Mask
  - Network Gateway IP Address
  - Network Domain Name
  - Network DNS IP Address
  - Network Link Speed and Duplex Mode

**Note:** All default values are shown in [ ].

The system displays the information and asks for confirmation.

- 4** If the configuration information is correct, type **y** and press **Enter**.  
The DX-Series Setup Menu displays.
- 5** Select **6** to restart the DX-Series system.  
The system reboots.

## Creating Cartridges

To create cartridges on the storage array(s):

**Caution:** Creating cartridges will destroy all data on existing storage array cartridges.

- 1 Select 3 from the DX-Series Setup Menu to configure the user options.
- 2 The system warns you that creating cartridges will destroy any existing cartridge data and prompts you to continue. Type **y** and the system services are shut down.

The cartridge creation process asks you to make the following selection:

- Type 1 to create cartridges on ALL storage arrays.
- Type 2 to create cartridges on a SPECIFIED storage array.

**Caution:** If this is an upgrade to an existing system, create cartridges ONLY on the new storage array.

- Type 3 to create cartridges on a specified RAID set.
  - Type 4 to exit create cartridges.
- 3 The system confirms your choice and asks for verification. Type **y** to continue.
  - 4 Enter the starting cartridge barcode and press **Enter**.

**Note:** The barcode format must be AANNNN, where A is any uppercase alpha-numeric character and N is any single digit (0-9). Barcodes automatically increment.

The system indicates partitioning and formatting for each RAID set on the storage arrays.

- 5 The system asks how you wish to create cartridges, by quantity or capacity:

**Note:** Creating cartridges differs depending on the size of the hard drives (250GB or 400GB).



### For 250GB Drives:

- a** If you select **By quantity**, you can create between 1 and 80 cartridges per RAID set. The capacity decreases the more tape cartridges you create. For example, if you select 1 tape cartridge per RAID set, each cartridge has approximately 1.7 TB (1.45 TB for the second RAID set) in capacity. If you select 80 tape cartridges, each cartridge has 20 GB capacity.
- b** If you select **By capacity**, you choose between 20 and 1700 GB (43 and 1450 for second RAID set) capacity per cartridge. The number of cartridges decreases with higher capacity per cartridge. For example, if you select 20 GB per cartridge, the number of cartridges per RAID set is 80. If you select 1700 GB per cartridge, the number of cartridges per RAID set is 1.

**Note:** The capacity estimates mentioned in the examples above assume a RAID 5 configuration on the storage array with “global hot” spare. If a “global hot” spare is not used, the total capacity is increased by 250GB. If two “global hot” spares are used, the total capacity is decreased by 250GB.

### For 400GB Drives:

- a** If you select **By quantity**, you can create between 1 and 80 cartridges per RAID set. The capacity decreases the more tape cartridges you create. For example, if you select 1 tape cartridge per RAID set, each cartridge has approximately 1.7 TB (1.45 TB for the second RAID set) in capacity. If you select 80 tape cartridges, each cartridge has 20 GB capacity.
- b** If you select **By capacity**, you choose between 20 and 1700 GB (43 and 1450 for second RAID set) capacity per cartridge. The number of cartridges decreases with higher capacity per

cartridge. For example, if you select 20 GB per cartridge, the number of cartridges per RAID set is 80. If you select 1700 GB per cartridge, the number of cartridges per RAID set is 1.

**Note:** The capacity estimates mentioned in the examples above assume a RAID 5 configuration on the storage array with “global hot” spare. If a “global hot” spare is not used, the total capacity is increased by 400GB. If two “global hot” spares are used, the total capacity is decreased by 400GB.

- 6 The cartridges are created on the storage arrays. Press **Enter** to continue.

The DX-Series Setup Menu displays.

- 7 Type 5 to restart the DX software services.

**Note:** Restarting DX software services does NOT reboot the DX-Series system and takes much less time to complete.

The DX-Series system is now initially configured and ready to be accessed via the management web pages. Disconnect the cable from the DX-Series controller serial port.

---

## Displaying Diagnostic Data

Displaying diagnostic data is included in the DX-Series controller software. It collects status information from the controller and the array so it can be analyzed by Quantum.

**Tech Tip:** When trouble shooting any hardware failure within the DX-Series hardware, have the diagnostic data prior to calling Quantum customer support.


To display diagnostic data:

- 1 Connect the service PC to the DX-Series controller (see [Connecting to the Controller](#) on page 113).
- 2 At the system login prompt, type **setup** (all lower case characters) and press <Enter>.

The system prompts you for a password.

- 3 Type **password** (all lower case characters) and press **Enter**.
- 4 The **DX-Series Setup Menu** displays (see [figure 72](#)).
- 5 From the **Transfer** menu at the top of Hyper Terminal, select the **Capture Text...**
- 6 Enter a file name and click **Start**.
- 7 Select 4 from the **DX-Series Setup Menu** to display the diagnostic data.
- 8 After the command has executed, select **Stop** from the **Capture Text** menu. Have this text file available when contacting Quantum customer support.



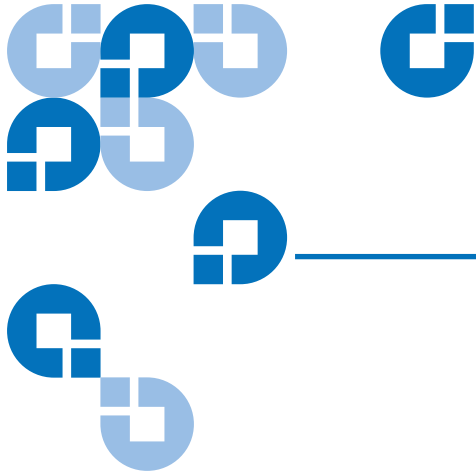

# Regulatory Statements

---

---

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Any changes or modifications made to this equipment may void the user's authority to operate this equipment.

Operation of this equipment in a residential area may cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

- 1 This device may not cause harmful interference, and
- 2 This device must accept any interference received, including interference that may cause undesired operation.

---

## Taiwan Statement

警告使用者:

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

---

## Industry Canada (Digital Apparatus)

**Reference:** *Interference-Causing Equipment Standard, ICES-003 Issue 2*

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

---

### **CISPR-22 WARNING!**

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

---

### **ACHTUNG!**

Dieses ist ein Gerät der Funkstörgrenzwertklasse A. In Wohnbereichen können bei Betrieb dieses Gerätes Rundfunkstörungen auftreten, in welchen Fällen der Benutzer für entsprechende Gegenmassnahmen verantwortlich ist.

---

### **ATTENTION!**

Ceci est un produit de classe A. Dans un environnement domestique, ce produit peut causer des interférences radioélectriques. Il appartient alors à l'utilisateur de prendre les mesures appropriées.

---

## Notice for USA and CANADA Only

If shipped to USA, use the UL LISTED power cord specified below for 100-120 V operation. If shipped to Canada, use the CSA CERTIFIED power cord specified below for 100-120V operation.

Plug Cap      Parallel blade with ground pin (NEMA 5-15P configuration)

Cord            Type: SJT, three 16 AWG (1.5 mm<sup>2</sup>) or 18 AWG (1.0 mm<sup>2</sup>) wires

LengthMaximum 15 feet (4.6 m)

RatingMinimum 10 A, 125 V

---

### ATTENTION

LIRE LA REMARQUE DANS LE MODE D'EMPLOI.

---

### REMARQUE

CETTE REMARQUE NE CONCERNE QUE LES ÉTATS-UNIS ET LE CANADA.

En cas d'envoi aux États-Unis, utiliser le cordon d'alimentation CERTIFIÉ UL et convenant pour 100-120 V.

En cas d'envoi au Canada, utiliser le cordon d'alimentation CERTIFIÉ CSA et convenant pour 100-120 V.

Fiche            Broches parallèles avec une broche de mise à la terre (configuration NEMA 5-15P)

Cordon          Type: SJT, trifilaire 16 AWG (1.5 mm<sup>2</sup>) ou 18 AWG (1.0 mm<sup>2</sup>)

LongueurMaximum 15 pieds (4.6 m)

CapacitéMinimum 10 A, 125 V

---

## Laser Statement

---

### **Class 1 Laser Product**

**CAUTION:** This system contains a laser product called an optical link module that complies with DHHS US regulation 21 CFR subchapter J and IEC 825-1.

---

### **Klasse 1 Laserprodukt**

**VORSICHT:** Dieses System enthält ein Laserprodukt, das ein optisches Verknüpfungmodul genannt wird und das der DHHS US Regel 21 CFR, Unterkapitel J und IEC 825-1 entspricht.

---

### **Laser de classe 1 Produit**

**AVERTISSEMENT :** ce système contient un produit laser appelé module de liaison optique conforme à la norme 21 CFR DHHS US sous-chapitre J et IEC 825-1.

---

### **Clase 1 Láser Producto**

**ADVERTENCIA:** Este sistema contiene un producto láser denominado módulo de enlace óptico, que cumple la normativa 21 CFR, subapartado J del Departamento de Salud y Servicios Humanos de Estados Unidos (DHHS US) y IEC 825-1

---

### **Prodotto Laser Classe 1**

**ATTENZIONE:** Il sistema contiene un prodotto laser detto modulo di collegamento ottico conforme con la direttiva 21 CFR DHHS US sotto-capitolo J e con IEC 825-1.

---

## Battery Statement

---

### **CAUTION**

This product contains a Lithium battery. Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the



instructions. Lithium may be considered a hazardous material. Dispose of this battery in accordance with local, state, and federal laws.

---

**LET OP**

Dit product bevat een Lithiumbatterij. Vervanging van de batterij door een ander type batterij kan explosies veroorzaken. Ontdoe u van de batterij in overeenstemming met de bijgeleverde instructies. Lithium kan als gevaarlijke stof worden gekenmerkt. Ontdoe u daarom van de batterij in overeenstemming met de ter plekke geldende wettelijke bepalingen.

---

**VAROITUS**

Tuote sisältää litiumpariston. Pariston vaihtaminen vääranntyyppiseen paristoon voi aiheuttaa räjähdysten. Käytetyt paristot on hävitettävä ohjeiden mukaisesti. Litiumia voidaan pitää vaarallisena aineena. Paristo on hävitettävä asianomaisten lakien ja määräysten mukaisesti.

---

**ATTENTION**

Ce produit contient une batterie au lithium. Si vous remplacez cette batterie par une batterie inadaptée, une explosion risque de se produire. Débarrassez-vous des batteries usagées en suivant les instructions du fabricant. Le lithium est une matière qui peut être dangereuse. Débarrassez-vous de cette batterie conformément à la législation en vigueur.

---

**ACHTUNG**

Dieses Produkt enthält eine Lithiumbatterie. Es besteht ein Explosionsrisiko, wenn die Batterie mit einem falschen Batterietyp ausgetauscht wird. Gebrauchte Batterien nach den Anweisungen entsorgen. Lithium könnte als Gefahrgut betrachtet werden. Diese Batterie nach den lokalen, staatlichen und bundesstaatlichen Gesetzen entsorgen.

---

**Attenzione**

Questo prodotto contiene una batteria al litio. Esiste un rischio di esplosione se la batteria viene sostituita con un modello non idoneo. Lo smaltimento delle batterie usate deve essere disposto secondo quanto previsto dalla legge. Il litio può essere considerato un materiale pericoloso. Lo smaltimento della batteria deve essere eseguito in conformità con le leggi locali, statali e federali.

---

**PRECAUCIÓN**

Este producto contiene una batería de litio. Existe riesgo de explosión si se sustituye la batería por otra del tipo incorrecto. Deseche las baterías usadas según se indica en las instrucciones. El litio puede ser considerado como un material peligroso. Deseche esta batería según las leyes locales, estatales y federales.

---

**VARNING!**

Denna produkt innehåller ett litiumbatteri. Om batteriet byts ut mot ett nytt av fel typ föreligger risk för explosion. Begagnade batterier ska hanteras i enlighet med gällande föreskrifter. Litium kan betraktas som ett riskmaterial. Kassera batteriet i enlighet med gällande lokal och nationell lagstiftning.

---

## Power Cord Statement

---

**Warning**

Disconnect all power cords before servicing.

---

**Avertissement**

Déconnectez tous les fils électriques avant d'effectuer des réparations.

---

**Warnung**

Vor der Wartung alle Netzkabel abziehen.

---

**Attenzione**

Prima di effettuare qualsiasi intervento di manutenzione, scollegare tutti i cavi di alimentazione.

---

**Advertencia**

Desconecte todos los cables de alimentación antes de dar mantenimiento.

---

**Varning**

Koppla bort alla nätsladdar innan service utförs.

警告 - サービスを開始する前にすべての電源コードを抜いてください。


경고 - 서비스전에 모든 전원 코드를 빼두십시오.

警告：检修服务前，应断开所有电源线。

警告 - 請於服務前拔除所有電源連接線



---

## Disposal of Electrical and Electronic Equipment

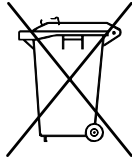


This symbol on the product or on its packaging indicates that this product should not be disposed of with your other waste. Instead, it should be handed over to a designated collection point for the recycling of electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please visit our website at: <http://qcare.quantum.com> or contact your local government authority, your household waste disposal service or the business from which you purchased the product.

# Declaration of Conformity

|  |   |
|--|---|
| <b>Quantum</b>   | <b>DECLARATION OF CONFORMITY</b><br>According to EN45014  |
| <b>Manufacturer's Name:</b>  | Quantum Corporation   |
| <b>Manufacturer's Address:</b>   | 141 Innovation Drive<br>Irvine, CA 92612-3040<br>USA  |
| <b>Declares that the Product(s):</b>   |   |
| Product Description  | Backup Device   |
| Product Name:  | DX Series   |
| Model Number(s):   | DX100, DX30, SP100  |
| Product Options:   | All   |
| <b>Conforms to the following EC Directives and EC Standards:</b>   |   |
| <b>Low Voltage Directive 73/23/EEC</b>   |   |
| Product Safety:  | EN60950:1992, + A1, A2, A3, A4, A11   |
| <b>EMC Directive 89/336/EEC</b>  |   |
| EMC:   | EN55022:1997, Class A<br>EN61000-3-2:1995, Class A<br>EN61000-3-3:1994<br>EN55024:1998<br>EN61000-4-2:1995<br>EN61000-4-3:1995<br>EN61001-4-4:1994<br>EN61000-4-5:1994<br>EN61000-4-6:1996<br>EN61001-4-8:1993<br>EN61000-4-11:1994 |
| <b>Authorizing Signature:</b>  |   |
|                                       | <b>Date Issued: 12/01/2003</b>  |
| Mitchell Gilbert<br>Manager, Regulatory  |   |
| <b>European Headquarters:</b><br>7 Lindenwood, Chincham Business Park<br>Basingstoke, Hampshire RG24 8WD, United Kingdom |    |
| Telephone: +44 (1) 256 848 713<br>Fax: +44 (1) 256 848 700   |   |



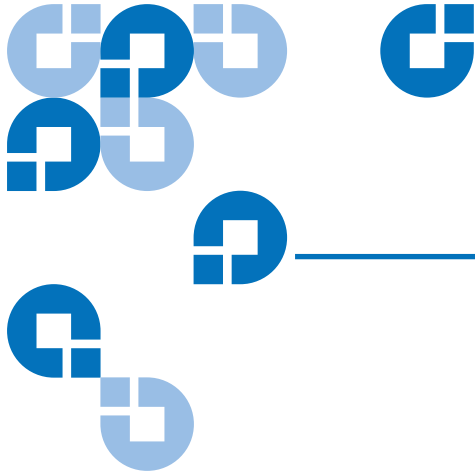

# Glossary

---

---

## B

**Bit** The basic unit of data in a binary numbering system (*binary digit*), represented by a 0 or a 1. Eight bits equals one byte.

**Byte** The basic unit of computer memory which is large enough to hold one character.

---

## C

**Class A digital device** Class A equipment is intended for Commercial installation.

**Class I laser product** Class 1 lasers are products where the power of the laser beam produced (the accessible emission) is always below the Maximum Permissible Exposure value. Therefore, for Class 1 lasers the output power is below the level at which it is believed eye damage will occur. Exposure to the beam of a Class 1 laser will not result in eye injury. Class 1 lasers may therefore be considered eye safe.

**Class II laser product** Class 2 lasers are limited to a maximum output power of 1 mW. A person receiving an eye exposure from a Class 2 laser, either accidentally or as a result of someone else's deliberate action (misuse) will be protected from injury by their natural blink reflex. This is a natural involuntary response which causes the individual to blink and avert their head thereby terminating the eye exposure.

---

**D**      **DLT** Digital Linear Tape technology is owned, developed, and manufactured by Quantum Corporation. DLT tape drives use half-inch wide tape.

---

**E**      **ESD** Electro-Static Discharge

---

**G**      **Gripper** A mechanical component of the extension axis assembly (robotics) which grips and holds a tape cartridge in transit

---

**H**      **Host** The device or devices to which the library is connected.

---

**I**      **IEC** The International Electrotechnical Commission is based in Geneva, Switzerland.

---

**M**      **MSBF** Mean Swaps Before Failure  
**MTBF** Mean Time Between Failures  
**MTTR** Mean Time To Repair

---

**N**      **NEMA** National Electrical Manufacturers Association

---

**P**      **PCI** The PCI bus typically runs at speeds of 33 MHz or 66 MHz and is usually 32 bits wide. This means that it passes 32 bits of data simultaneously as if down 32 separate wires. Some of the most recent computers include "wider" 64-bit PCI buses, and already certain very high-end video capture cards offer improved performance if connected to a 64-bit PCI bus.

---

**R**      **RAID** Redundant Array of Independent Disks is a technology through which several physical storage disks are grouped into an array that appears to an operating system as one or more physical devices.  
**RS-232C** Short for Recommended Standard-232C, a standard interface approved by the Electronic Industries Association (EIA) for connecting serial devices. This standard is for ASYNCHRONOUS TRANSFER between computer equipment and accessories. Data is transmitted bit by bit in a serial fashion. The RS-232 standard defines the function and use of all 25 pins of a DB-25 type connector.



---

**S**

**SCSI** Small Computer System Interface. An American National Standards Institute (ANSI) communications standard for attaching peripheral equipment to computers.

**SCSI-2** A second generation SCSI interface which includes command sets for magnetic and optical disks, tapes, printers, processors, CD-ROMs, scanners, medium changers, and communication devices.


**SNMP** Short for *Simple Network Management Protocol*, a set of protocols for managing complex networks.

---

**T**

**Terabyte** A unit of measure for digital data equal to approximately 1,000 gigabytes, or 1,099,511,627,776 bytes.



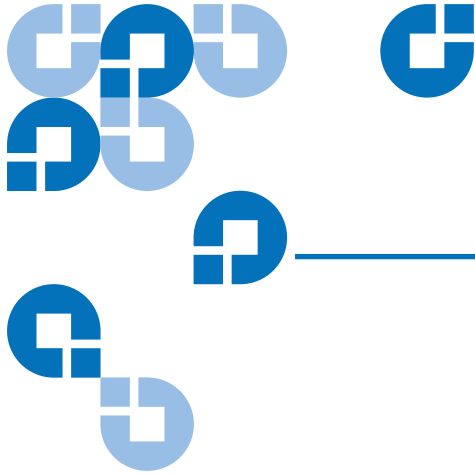

# Index

---

---

## B

- backup confidence 2
- barcode assignment 40
  - new alpha prefix 42
  - numeric ending 42
- browser, internet xv, 28

---

## C

- compression
  - Fibre Channel 7
- configuration 33
  - accessing 33
  - barcode assignment 40
  - date and time 45
  - Fibre Channel 49
  - network 43
  - partitioning 34
  - properties 42
  - security 46

- write protection 39
- controller 9
- controller operations 19

---

## D

- data storage 6
- date and time
  - configuring 45
- displayed frames 31
- DLT tape cartridges 6
- downloading a system configuration file 90
- drive sled
  - description 9
- DX100
  - turning on 18
- DX30
  - turning on 18
- DX-Series
  - controller front panel 20
  - controller operations 19

- turning on the components 17
- DX-Series components
  - power switch locations 19
- DX-Series controller
  - ethernet interface 10
  - Fibre Channel interface 10
- DX-Series remote management pages 27
- DX-Series storage array
  - audible alarm 25
  - drive sled 9
  - LCD LED descriptions 22
  - operations 21
  - RAID controller LED descriptions 24
  - RAID controller LEDs 23
  - RAID sets 9
- DX-Series system
  - rebooting 93
  - relocating 25
- DX-Series web pages
  - configuring the date and time 45
  - configuring the Fibre Channel options 49
  - configuring the network 43
  - configuring the security options 46
  - details button 33
  - graphical view 32
  - licensing 82
  - menu items 28
  - remote alerts 72
  - system status 54
  - textual view 32
  - using 31
  - utilities 85
  - viewing hardware status 60
  - viewing robot details 57
  - viewing storage bin details 59
  - viewing system performance 71

---

## E

- email message type
  - administrator 75
  - configuration changes 75
  - hardware failure 75
  - new recipient 75
  - operator access 75
  - recipients 75
  - send to Quantum 75
  - software error 75
- email notification 75
- end user agreement 84
- environmental specifications
  - acoustical noise 111
  - climatic environment 111
  - physical environment 110

---

## F

- Fibre Channel
  - AL\_PA and loop ID 52
  - compression 7
  - configuring 49
  - device mapping 52
  - port settings 51
  - speed 52
  - world wide name 52
- Firefox xv, 28
- firmware
  - uploading 87
- frames, displayed 31

---

## G

- graphical view
  - web pages 32
- gripper details 57

---

## H

- hard drives 6
  - location 6
- hardware status
  - controller details 61
  - storage array details 66
  - viewing 60

---

## I

- inquiry identity
  - ATL P1000 36
  - Quantum DX100 36
  - Quantum DX30 36
- Internet browsers, supported xv, 28

---

## J

- Java plug-in xv, 28

---

## L

- library properties
  - name 42
- licensing 82
  - access 82

- keys 83
- logical unit 57
- login type
  - administrator 30
  - monitor 30
- LUN 57

---

## M

- Mozilla Suite xv, 28

---

## N

- network configuration
  - fields 44
  - viewing/editing 43
- network time protocol (NTP) 46

---

## P

- partitioning
  - add 35–38
  - delete 39
  - edit 38
- performance specifications 110
- power switch locations 19

---

## R

- RAID
  - configurations 4
- RAID 5 7, 14
  - definition 13

- RAID controller LEDs 23
- RAID controllers 4
- RAID sets 9
- rebooting 93
- relocating
  - DX-Series system 25
- remote alerts 72
  - accessing 72
  - email page 73
- robot
  - details 57, 58

---

## S

- security options 46
- SNMP 76
  - community management 79
  - contacts 80
  - trap destination 78
  - traps 77
- specifications
  - performance 110
- SSL
  - configuration 48
- storage array
  - LCD 21
  - operations 21
  - properties 70
  - system monitoring 21
- storage bins
  - details 59, 60
  - viewing 59
- system configuration 89
  - downloading 90
  - uploading 90
- system status

- accessing 54
- hardware 60
- performance 71
- viewing tape drive details 56

---

## T

- tape cartridge 6
- tape drive
  - details 56
- textual view
  - web pages 32
- time required for backup 2
- time to restore 2
- turning on the DX-Series components 17

---

## U

- uploading a system configuration file 90
- utilities 85
  - accessing 85
  - changing library state 86
  - library activity 86
    - page 85
  - system configuration 89
  - uploading firmware 87

---

## W

- write protection 39
  - enabling/disabling 40