

**Quantum**<sup>®</sup>

# Licensing Guide

# StorNext 6 and StorNext FX 6



StorNext 6 and StorNext FX 6 Licensing Guide, 6-68083-02, July 2017, Product of USA.

Quantum Corporation provides this publication “as is” without warranty of any kind, either express or implied, including but not limited to the implied warranties of merchantability or fitness for a particular purpose. Quantum Corporation may revise this publication from time to time without notice.

## **COPYRIGHT STATEMENT**

© 2017 Quantum Corporation. All rights reserved.

Your right to copy this manual is limited by copyright law. Making copies or adaptations without prior written authorization of Quantum Corporation is prohibited by law and constitutes a punishable violation of the law.

## **TRADEMARK STATEMENT**

Artico, Be Certain (and the Q brackets design), DLT, DXi, DXi Accent, DXi V1000, DXi V2000, DXi V4000, FlexTier, GoVault, Lattus, NDX, the Q logo, the Q Quantum logo, Q-Cloud, Quantum (and the Q brackets design), the Quantum logo, Quantum Be Certain (and the Q brackets design), Quantum Vision, Scalar, StorageCare, StorNext, SuperLoader, Symform, the Symform logo (and design), vmPRO, and Xcellis are either registered trademarks or trademarks of Quantum Corporation and its affiliates in the United States and/or other countries. All other trademarks are the property of their respective owners.

Products mentioned herein are for identification purposes only and may be registered trademarks or trademarks of their respective companies. All other brand names or trademarks are the property of their respective owners.

Quantum specifications are subject to change.



# Contents

---

Preface .....	v
Chapter 1: StorNext License Types .....	1
StorNext Licenses .....	1
Licenses for Features .....	3
Information Contained within a License File .....	5
Important Information Regarding the Multi-mount Feature .....	7
Chapter 2: StorNext Licenses for Xcellis, Metadata Appliances and the G300 .....	9
StorNext Licenses .....	10
StorNext Licenses (Pre-Installed or Installed During System Installation) .....	10
Gateway Licenses .....	11
StorNext Connect License .....	12
Additional StorNext Feature Licenses .....	12
StorNext Disk Licensing/Certification .....	14

<b>Chapter 3: License Expiration and Limits</b> .....	<b>15</b>
License Expiration and Limits .....	15
For StorNext MDCs .....	15
Xsan and StorNext FX Clients .....	17
<b>Chapter 4: Auto-Generated and Evaluation Licenses</b> .....	<b>18</b>
StorNext Auto-Generated and Evaluation Licenses .....	18
Licensing and Upgrades .....	19
<b>Chapter 5: Enabling and Installing Licenses</b> .....	<b>20</b>
Obtain and Install StorNext Licenses .....	20
Installing Optional StorNext Add-on Software Features and Clients from the StorNext MDC GUI .....	26
Installing StorNext MDC Licenses from the Command Line for RPM-only Installations .....	26
Installing StorNext License Keys on a Single-Node MDC .....	27
Installing StorNext License Keys on HA Systems (with a Shared File System) .....	27
Installing StorNext License Keys on a Failover System (without a Shared File System) .....	28
Installing the StorNext FX License on Xsan MDCs .....	29
Determining License Capacity .....	30
<b>Chapter 6: StorNext Disk Licensing and Disk Certification</b> .....	<b>32</b>
StorNext Disk Licensing .....	32
Generating a Disk License Status File Using the StorNext GUI .....	33
Generating Disk License Reports Using disk_license(.exe) .....	33
Uploading a Disk License Status File to the Disk Licensing Web Form .....	34
StorNext Disk Certification Catalog (DCC) .....	35
Uploading the Disk Certification Catalog using the StorNext GUI .....	35
Installing the Disk Certification Catalog Using the disk_license(.exe) Command .....	36



# Preface

StorNext features must be licensed, and those licenses are enforced. If you do not have the appropriate license, you will not be able to use that StorNext feature.

This document describes the license types and the procedure for obtaining licenses. Licensing implications for StorNext and StorNext FX (**FX** stands for **F**ile System for **X**san) upgrades are also explained.

Unique licensing considerations for Xcellis Workflow Director, Xcellis Workflow Extender, Artico, the StorNext M660, StorNext M440, and StorNext M330 Metadata Appliances, the StorNext G300 Gateway Appliance, StorNext Pro Foundation, and StorNext FX are listed throughout the document.

---

**i Note:** All license strings reside on StorNext Metadata Controllers (MDCs) except for the StorNext Gateway License. The StorNext Gateway license only resides on the StorNext G300 Gateway Appliance and the StorNext M660 Metadata Appliance.

This manual contains the following chapters:

- [Chapter 1: StorNext License Types](#)
- [Chapter 2: StorNext Licenses for Xcellis, Metadata Appliances and the G300](#)
- [Chapter 3: License Expiration and Limits](#)
- [Chapter 4: Auto-Generated and Evaluation Licenses](#)
- [Chapter 5: Enabling and Installing Licenses](#)
- [Chapter 6: StorNext Disk Licensing and Disk Certification](#)

# Audience


This manual is written for StorNext 6 and StorNext FX 6 operators, system administrators, and field service engineers.


# Notational Conventions


This manual uses the following conventions:

Convention	Example
User input is shown in bold monospace font.	<b>./DARTinstall</b>
Computer output and command line examples are shown in monospace font.	./DARTinstall
User input variables are enclosed in angle brackets.	<b>http://&lt;ip_address&gt;/cgi-bin/stats</b>
For UNIX and Linux commands, the command prompt is implied.	./DARTinstall is the same as # ./DARTinstall
File and directory names, menu commands, button names, and window names are shown in bold font.	<b>/data/upload</b>
Menu names separated by arrows indicate a sequence of menus to be navigated.	<b>Utilities &gt; Firmware</b>

The following formats indicate important information:

 **Note:** Note emphasizes important information related to the main topic.

 **Caution:** Caution indicates potential hazards to equipment or data.



 **WARNING:** Warning indicates potential hazards to personal safety.

- Right side of the system - Refers to the right side as you face the component being described.
- Left side of the system - Refers to the left side as you face the component being described.
- Data sizes are reported in base 10 (decimal) rather than base 2 (binary). For example:  
10,995, 116,277,769 Bytes are reported as 11.0 TB (decimal/1000). In binary, this value is 10 TiB (binary/1024).

# Product Safety Statements

Quantum will not be held liable for damage arising from unauthorized use of the product. The user assumes all risk in this aspect.

This unit is engineered and manufactured to meet all safety and regulatory requirements. Be aware that improper use may result in bodily injury, damage to the equipment, or interference with other equipment.

-  **WARNING:** Before operating this product, read all instructions and warnings in this document and in the *Quantum Products System, Safety, and Regulatory Information Guide*.
-  **ADVARSEL:** Læs alle instruktioner og advarsler i dette dokument og i *Informationsvejledning vedrørende system-, sikkerheds- og lovbestemmelser for Quantum produkter, før produktet betjenes*.
-  **AVERTISSEMENT :** Avant d'utiliser ce produit, lisez toutes les instructions et les avertissements de ce document et du *Guide d'informations sur le système, la sécurité et la réglementation de Quantum*.
-  **WARNUNG:** Lesen Sie vor der Inbetriebnahme dieses Produkts alle Anleitungen und Warnungen in diesem Dokument und im *System-, Sicherheits- und Betriebsbestimmungen-Handbuch für Quantum-Produkte*.
-  **ADVERTENCIA:** Antes de hacer funcionar este producto, lea todas las instrucciones y advertencias de este documento y de la *Guía de información normativa, del sistema y de seguridad de los productos de Quantum*.
-  **VARNING:** Läs igenom alla instruktioner och varningar i detta dokument och i *Quantums produktsystem, säkerhet och reglerande informationsguide* innan denna produkt används.
-  **ВНИМАНИЕ!** Перед началом эксплуатации данного изделия прочтите все инструкции и предупреждения, приведенные в настоящем документе и в *Руководстве по системе, технике безопасности и действующим нормативам компании Quantum*.
-  警告：本製品を使用される前に、本書と『Quantum製品システム、安全、規制情報ガイド』に記載されているすべての説明と警告をお読みください。
-  경고: 본 제품을 작동하기 전에 본 문서와 *Quantum 제품 시스템, 안전 및 규제 정보 설명서*에 있는 모든 지침과 경고를 참조합니다.
-  警告：在操作本产品之前，请阅读本文档和 *Quantum 产品系统、安全和法规信息指南*中的所有说明和警告。
-  警告：操作此產品前，請閱讀本檔案及 *Quantum 產品系統、安全與法規資訊指南*中的指示與和警告說明。

 **אזהרה:** לפני ההפעלה של מוצר זה, קרא את כל ההוראות והאזהרות הכלולות במסמך זה וכן במדריך המידע בנושא מערכת, בטיחות ותקינה עבור מוצרי Quantum.

For the most up to date information on StorNext 6 and StorNext FX 6, see:

<http://www.quantum.com/serviceandsupport/get-help/index.aspx#contact-support>

## Contacts

For information about contacting Quantum, including Quantum office locations, go to:

<http://www.quantum.com/aboutus/contactus/index.aspx>

## Comments

To provide comments or feedback about this document, or about other Quantum technical publications, send e-mail to:

[doc-comments@quantum.com](mailto:doc-comments@quantum.com)

## Getting More Information or Help

StorageCare™, Quantum’s comprehensive service approach, leverages advanced data access and diagnostics technologies with cross-environment, multi-vendor expertise to resolve backup issues faster and at lower cost.

Accelerate service issue resolution with these exclusive Quantum StorageCare services:

- **Service and Support Website** - Register products, license software, browse Quantum Learning courses, check backup software and operating system support, and locate manuals, FAQs, firmware downloads, product updates and more in one convenient location. Get started at:

<http://www.quantum.com/serviceandsupport/get-help/index.aspx#contact-support>

- **eSupport** - Submit online service requests, update contact information, add attachments, and receive status updates via email. Online Service accounts are free from Quantum. That account can also be used to access Quantum’s Knowledge Base, a comprehensive repository of product support information. Get started at:

<http://www.quantum.com/customercenter/>

For further assistance, or for training opportunities, contact the Quantum Customer Support Center:

Region	Support Contact
North America	1-800-284-5101 (toll free) +1-720-249-5700
EMEA	+800-7826-8888 (toll free) +49 6131 324 185



Region	Support Contact
Asia Pacific	+800-7826-8887 (toll free) +603-7953-3010

---

For worldwide support:

<http://www.quantum.com/serviceandsupport/get-help/index.aspx#contact-support>

---

## Worldwide End-User Product Warranty

For more information on the Quantum Worldwide End-User Standard Limited Product Warranty:

<http://www.quantum.com/serviceandsupport/warrantyinformation/index.aspx>



# Chapter 1: StorNext License Types

---

This chapter contains the following topics:

StorNext Licenses .....	1
Important Information Regarding the Multi-mount Feature .....	7

---

## StorNext Licenses

License Type	Description
<b>Certified Disk</b>	A <b>Certified Disk</b> license allows a Metadata Controller (MDC) to use a specified amount of Quantum-certified disks. For additional information, see <a href="#">StorNext Disk Licensing and Disk Certification on page 32</a> .
<b>Encryption</b>	An <b>Encryption</b> license is required to create encryption keys and use them in storage manager policies for client-side encryption.
<b>FlexTier™ Private Cloud Subscription</b>	A FlexTier™ Private Cloud Subscription allows StorNext Storage Manager to store data onto a supported non-Quantum private cloud or object storage platform. <b>i Note:</b> FlexTier™ licenses are purchased and renewed periodically. If your FlexTier™ license expires prior to being renewed, or if you exceed the amount of licensed capacity, Storage Manager does not store new files to the destination.

License Type	Description
<b>FlexTier™ Public Cloud Subscription</b>	<p>A FlexTier™ Public Cloud Subscription allows StorNext Storage Manager to store data onto a supported public cloud destination such as Amazon S3 or Microsoft Azure.</p> <p><b>Note:</b> FlexTier™ licenses are purchased and renewed periodically. If your FlexTier™ license expires prior to being renewed, or if you exceed the amount of licensed capacity, Storage Manager does not store new files to the destination.</p>
<b>LAN Client</b>	<p>StorNext <b>LAN Clients</b> use IP protocols to read and write data to the StorNext File System through Quantum appliances that can operate as StorNext LAN Gateways (Xcellis Workflow Director, Xcellis Workflow Extender, M662, and G300 systems). You must have a LAN Client license for each LAN Client you intend to use with StorNext (in addition to any SAN Client licenses).</p> <p><b>Note:</b> For Quantum appliances that can operate as StorNext LAN Gateways, LAN Clients are referred to as Gateway Clients, and are not licensed on a "per-seat" basis. See the <a href="#">StorNext LAN Gateway License on page 12</a>.</p>
<b>Maintenance</b>	<p>A Maintenance license is associated with the expiration date of your current service contract. A valid Maintenance License is required to enable StorNext software upgrades. This license is a time-based license key which expires at the same date as the maintenance contract. Each time the maintenance contract is extended, a new maintenance license key is generated.</p> <p><b>Note:</b> License enforcement is based on the date of the software to which you are upgraded, regardless of the current date. For example, if your maintenance license key was valid between January 16th, 2010 and January 16th, 2011, you could upgrade to a software version that was released prior to the maintenance license (and associated underlying service contract) expiration date, but not to a version released after January 16th, 2011.</p> <p>See <a href="#">StorNext Licenses for Xcellis, Metadata Appliances and the G300 on page 9</a> for information about Maintenance Licenses on StorNext appliances.</p>
<b>Object Storage</b>	<p>The Object Storage license specifies the amount of data that StorNext Storage Manager can place onto a Quantum Lattus object store platform.</p> <p>The Object Storage license must be installed on supported Quantum appliances and MDC systems with dedicated 10GbE NIC connections in order to configure StorNext to use Object Storage as a storage destination. Prior to StorNext 5 Release 5.1, this license was called <b>SNSM Wide Area Storage</b>, which was first supported in StorNext 4.6. This license name was deprecated in StorNext 5 Release 5.1, and is superseded by the <b>Object Storage</b> license.</p>
<b>SAN Client</b>	<p>A StorNext <b>SAN Client</b> enables a host computer to mount a StorNext File System with direct block level access to the disk arrays via Fibre Channel or iSCSI connectivity. (SAN Clients have direct block-level access to the disk arrays via SAN Fibre Channel or iSCSI connectivity.) The StorNext File System is licensed on a per-client basis. Any machine which directly mounts the file system is considered a client, including the metadata controllers (MDCs).</p>

License Type	Description
<b>SNSM Wide Area Storage</b>	<p>The StorNext Storage Manager (SNSM) for Wide Area Storage (WAS) license was used to enable Object Storage access for supported Quantum appliances and WAS-capable MDCs configured for use with Lattus systems. <b>This license is deprecated in StorNext 5 release 5.1.</b> For systems running StorNext 5 release 5.1 or later, see the <b>Object Storage</b> license.</p> <p>The <b>SNSM Wide Area Storage</b> license is installed but not enabled by default as part of StorNext 4.6.x until StorNext 5 release 5.1, and from StorNext 5 release 5.1 forward the <b>Object Storage</b> license for supported Quantum Appliances and MDCs. A license key must be applied through the StorNext GUI in order to enable the license.</p>
<b>Storage Manager</b>	<p>For StorNext 5 releases up to 5.3.x, a Storage Manager license provides full access to the data management capabilities of Storage Manager. StorNext Storage Manager is licensed based on the capacity of data stored to secondary tiers of storage (Tape or Storage Disk).</p> <p>For StorNext 5 releases 5.4 and later, a Storage Manager <i>manager</i> license provides full access to the base functionality of StorNext Storage Manager. Support for non-Quantum object storage on public or private clouds are licensed using the annual capacity-based subscription model (refer to the <b>FlexTier™</b> subscription licenses).</p>
<b>StorNext FX</b>	<p>A <b>StorNext FX</b> license enables a StorNext FX client, or a StorNext SAN client, to connect to a Apple Xsan MDC and mount an Xsan file system with direct block level access to disk arrays via Fibre Channel or iSCSI connectivity. StorNext FX is licensed on a per-client basis. Any machine which directly mounts the file system is considered a client. StorNext FX licenses are applied on the Xsan MDC.</p>
<b>StorNext LAN Gateway</b>	<p>A StorNext LAN Gateway license is a StorNext SAN Client which allows LAN-based client connectivity to a StorNext File System.</p>
<b>Uncertified Disk</b>	<p>An <b>Uncertified Disk</b> license allows a Metadata Controller (MDC) to use a specified amount of non-Quantum-certified disks. For additional information, see <a href="#">StorNext Disk Licensing and Disk Certification on page 32</a>.</p>

## Licenses for Features

- Note:** The **Checksum** license key is no longer required in order to enable Generation and Validation of checksums within a Policy. Existing checksum license keys will be ignored, and new license should not include checksum licenses keys.

Feature License	Description
<b>Alternate Store Location</b>	An <b>Alternate Store Location</b> license is required for the automated copying of files from a main instance of StorNext to a remote instance of StorNext. For additional information, see the section " <b>Alternate Store Location</b> " in the <i>StorNext User's Guide</i> .
<b>Deduplication</b>	A deduplication license is required if you want to use the StorNext Data Deduplication (blockpool) feature. This license is available for either File System only or Storage Manager environments. Deduplication is licensed per terabyte (TB) of the blockpool.
<b>Distributed Data Mover (DDM)</b>	<p>A DDM license is required if you plan to retrieve data using additional servers besides the MDC. Supported appliances includes the Xcellis Workflow Extender, and the secondary node of Xcellis Workflow Director, M660, M440 or M330M660M440 systems. This license is available only for Storage Manager environments, and is required for each DDM host. The license must be applied to the MDC (HA pair), not the DDM host, unless the host is an Xcellis Workflow Director, Xcellis Workflow Extender, M660, M440, or M330 system.</p> <p><b>Note:</b> Each DDM host also requires one File System SAN Client license in addition to the DDM license.</p>
<b>Dynamic Application Environment (DAE)</b>	<p>A Dynamic Application Environment (DAE) license allows you to use guest operating systems on an Xcellis system.</p> <p><b>Note:</b> DAE allows one (1) virtual machine with one (1) application to run on the secondary node of an Xcellis system.</p>
<b>Failover (HA)</b>	A Failover HA (High Availability) license enables automated failover from the primary metadata controller (MDC) to the secondary MDC, in the event of a primary MDC failure. This license is available for either File System only or Storage Manager environments. One HA license is required for each MDC pair. This single HA license is applied to both server nodes in the MDC pair. In addition to the client licenses applied to each MDC, a third client is also required to ensure proper failover functionality. This client can be one that is already accessing a StorNext file system. However, in an MDC-only environment, this third client must be purchased separately.
<b>FlexSpace™</b>	A FlexSpace license allows one or many FlexSpace clients to exploit cloud-based storage to create shareable archives or collaborative work-flows distributed across several or more StorNext systems. See the <b>FlexSpace Licensing Guidelines</b> section available on the <a href="#">FlexSpace Documentation Center</a> for additional details.
<b>FlexSync™</b>	FlexSync is a licensed feature that utilizes advanced metadata capabilities to create local or remote replicas of an entire file system, or any portion of a file system. FlexSync solutions are easily configured using a simple, but powerful user interface, deliver sustained scalable performance, and are very resource efficient. Whether protecting files locally or across a network connection, FlexSync creates file replicas in near real time to ensure file data is protected and easily recoverable. See the <b>FlexSync Licensing Guidelines</b> section available on the <a href="#">FlexSync Documentation Center</a> for additional details.

Feature License	Description
<b>NAS</b>	<p>A <b>NAS</b> license is used to enable Network File Sharing (NFS) and Server Message Block (SMB) sharing of StorNext file systems using Quantum-supplied NFS and SMB software.</p> <p>For StorNext Connect configuration, see the StorNext Connect Documentation Center at: <a href="http://www.quantum.com/sncdocs">www.quantum.com/sncdocs</a></p>
<b>Partial File Retrieval (PFR)</b>	<p>A StorNext Partial File Retrieval (PFR) license enables you to quickly retrieve and utilize segments of large media files— rather than the entire file—based on timecode parameters. PFR licenses are not included in the license.dat file. PFR uses a different licensing and installation process, as described in the <a href="#">StorNext PFR 1.2 Users Guide</a>.</p>
<b>Replication</b>	<p>A replication license is required if you want to use the StorNext Data Replication feature. Replication is licensed on a per-MDC (or MDC pair) basis. If replication is used between multiple M660 systems, each systemMDC sets, each MDC set must have a replication license. If deduplication is used in conjunction with replication, a separate deduplication license is also required.</p> <p><b>i Note:</b> There are two types of replication licenses - the File System only Replication license, and the Storage Manager replication license. If Storage Manager is in use on the MDCs, tThe Storage Manager replication license must be purchased even if the file system being replicated is not managed.</p>
<b>Storage Disk</b>	<p>You must have a Storage Disk (SDISK) license to be able to configure and use StorNext storage disks. This license enables the SDISK feature, but data written still counts toward the per TB capacity of the Storage Manager.</p>
<b>Vaulting</b>	<p>A Vault Option license provides the ability to move seldom-used media from a Quantum or supported third-party library to a manual archive vault, freeing room for media in the managed archives. This license is available only for Storage Manager environments.</p>

## Information Contained within a License File

[Table 1 below](#) illustrates the type of information contained within a license file.

**Table 1:** Parameters and Values Found Within a License File

License Parameter	License Value
<b>Product</b>	server
<b>System</b>	Your System Name
<b>Company</b>	Your Company Name
<b>Serial Number</b>	Your Serial Number

License Parameter	License Value
Identifier	C201F8620
Number Clients	1
Expiration	mm-dd-yyyy
License	AAAAA/DAAAE/AJCLJ/9S2WA/M7RA9/9NH4W/XTL7T/5ARNQ/TYYRJ/4J222/RS
Authorization String	server 1 C201F8620 1 AAAAADAAAEAJCLJ9S2WAM7RA99NH4WXTL7T5ARNQTYRJ4J222RS <Your System Name> <Your Company Name> <Your Serial Number>

**Note:** The **Authorization String** license value includes a prefix applicable to the type of license. In the example below, it is server.

```
Authorization String: server 1 C201F8620 1
AAAAADAAAEAJCLJ9S2WAM7RA99NH4WXTL7T5ARNQTYRJ4J222RS <Your System Name> <Your Company Name> <Your Serial Number>
```

[Table 2 below](#) provides a conversion table illustrating the type of license and its equivalent prefix as shown in the **Authorization String** license value.

**Table 2:** Authorization String License Value Conversion

License Type	License Name in Authorization String
Certified Disk	disk_certified
Checksum	checksum
Deduplication	dedup
Distributed Data Mover (DDM)	ddm
Dynamic Application Environment (DAE)	dae
Encryption	encryption
Failover (HA)	failover
FlexSpace	flexspace
FlexSync	flexsync
FlexTier Private Cloud Subscription	flex_private_cloud
FlexTier Public Cloud Subscription	flex_public_cloud

License Type	License Name in Authorization String
Gateway Licensed MDC	gateway
LAN Client	proxy
Maintenance	maintenance
NAS	nas
Object Storage	object_storage
Replication	replication
SAN Client	server
SNFS Wide Area Storage	snfs_was
SNSM Wide Area Storage	snsnsm_was <b>i Note:</b> The <b>SNSM Wide Area Storage</b> license was deprecated in StorNext 5 release 5.1, and renamed to the <b>Object Storage</b> license.
Storage Disk	sdisk
Storage Manager	manager
Uncertified Disk	disk_uncertified
Vaulting	vaulting

---

## Important Information Regarding the Multi-mount Feature

The Multi-mount feature enables StorNext File System SAN or LAN clients to mount file systems from multiple StorNext Metadata Controllers (MDCs). Multi-mounting is sometimes referred to as cross-mounting. A Multi-mount feature is actually a package of features to enable clients to mount multiple MDCs.

**i Note:** A Multi-mount feature is a mechanism for purchasing a single set of client features for more than one StorNext MDC set (single or pair), rather than purchasing a separate set of client features for each StorNext MDC set. There is no Multi-mount item in the license list, and there is no Multi-mount specific configuration.

The multi-mount fee covers the administrative costs of having multiple MDC sets (single MDCs or failover pairs of MDCs) presenting file systems to one or more common StorNext clients. For each MDC set (single or pair) beyond the first MDC set, a multi-mount option is required. For example, if there are 20 clients that need to access file systems on 3 sets of MDC pairs, two multi-mount options are required, one for each of the second and third MDC pairs.



- i Note:** Additional StorNext features are not included with the multi-mount feature. If additional features are needed, they must be purchased separately. In particular, multi-mount does not cover the Group Logic LAN clients, Group Logic Archive connect, which are licensed on the Group Logic LAN server, rather than the StorNext MDC. All environments participating in multi-mount must be at the same software support level, and have the same support contract termination date.
- i Note:** The **Partial File Retrieval** (PFR) feature must be installed separately. For information about installing and licensing Partial File Retrieval, refer to Chapter 3 and Chapter 4 in the [StorNext PFR 1.2 Users Guide](#).



## Chapter 2: StorNext Licenses for Xcellis, Metadata Appliances and the G300

---

This chapter contains the following topics:

StorNext Licenses .....	10
-------------------------	----

# StorNext Licenses

The following StorNext Licenses apply to Xcellis Workflow Director, Xcellis Workflow Extender, Artico, Pro Foundation, M660, M440, M330, and G300 systems.

## StorNext Licenses (Pre-Installed or Installed During System Installation)

The following permanent StorNext licenses are factory-installed, factory-licensed, and included in the base price of Xcellis Workflow Director (WFD), M660, M440, M330, Pro Foundation, Artico, and G300 systems. No further action is required to enable these factory-installed licenses.

- 
- Note:** Do not mix auto-generated/evaluation and permanent licenses. When one or more permanent licenses are entered in StorNext, all auto-generated/evaluation licenses are deleted. If an auto-generated or evaluation license period is used to evaluate new features, be aware that any remaining time on those licenses is lost as soon as one or more permanent licenses is entered. Maintenance and LAN Client licenses can be mixed with other types of licenses. After permanent licenses are entered, do not install an evaluation license.

### SAN Client License

Includes 10 file system SAN clients available to the user for any supported OS. This count includes one SAN client required for each server node. Additional licenses may be purchased separately.

Includes one SAN client license for the Xcellis Workflow Director, Xcellis Workflow Extender, Artico, Pro Foundation, M660, M440, M330, and G300 system.

### LAN Client License

StorNext **LAN Clients** use IP protocols to read and write data to the StorNext File System through Quantum appliances that can operate as StorNext LAN Gateways (Xcellis Workflow Director, Xcellis Workflow Extender, M662, and G300 systems). You must have a LAN Client license for each LAN Client you intend to use with StorNext (in addition to any SAN Client licenses).

- 
- Note:** For Quantum appliances that can operate as StorNext LAN Gateways, LAN Clients are referred to as Gateway Clients, and are not licensed on a "per-seat" basis. See the [StorNext LAN Gateway License on page 12](#).

### Failover (HA) License

Includes one HA license. The HA license enables automated failover from the server node operating as the primary to the server node operating as secondary, in the event of a primary server node failure.

## Distributed Data Mover (DDM) License

A DDM license is required if you plan to retrieve data using additional servers besides the MDC. Supported appliances includes the Xcellis Workflow Extender, and the secondary node of Xcellis Workflow Director, M660, M440 or M330M660M440 systems. This license is available only for Storage Manager environments, and is required for each DDM host. The license must be applied to the MDC (HA pair), not the DDM host, unless the host is an Xcellis Workflow Director, Xcellis Workflow Extender, M660, M440, or M330 system.

---

**i Note:** Each DDM host also requires one File System SAN Client license in addition to the DDM license.

---

**i Note:** The DDM license cannot be applied to G300, or Pro Foundation systems. However, the server nodes may offload processing activities to another StorNext SAN client configured and supported to operate as a Distributed Data Mover host.

Includes one DDM license, which allows the secondary server node to function as a DDM host.

## Storage Manager License

For StorNext 5 releases up to 5.3.x, a Storage Manager license provides full access to the data management capabilities of Storage Manager. StorNext Storage Manager is licensed based on the capacity of data stored to secondary tiers of storage (Tape or Storage Disk).

For StorNext 5 releases 5.4 and later, a Storage Manager *manager* license provides full access to the base functionality of StorNext Storage Manager. Support for non-Quantum object storage on public or private clouds are licensed using the annual capacity-based subscription model (refer to the **FlexTier™** subscription licenses).

Xcellis Workflow Director systems include a 10TB Storage Manager license. StorNext Storage Manager for Xcellis Workflow Director is licensed based on the capacity of data stored to secondary tiers of storage (Tape or Storage Disk) and provides full access to the base StorNext Storage Manager functionality. Object Storage and Q-Cloud use Storage Manager technology, but are licensed separately.

## Gateway Licenses

The following two gateway license types, Appliance Controller and StorNext LAN Gateway are supported as described below:

### NAS License

A **NAS** license is used to enable Network File Sharing (NFS) and Server Message Block (SMB) sharing of StorNext file systems using Quantum-supplied NFS and SMB software.

For StorNext Connect configuration, see the StorNext Connect Documentation Center at:  
[www.quantum.com/snccdocs](http://www.quantum.com/snccdocs)

## StorNext LAN Gateway License

This license, which is enabled (manual configuration, not done in the factory) during system configuration of the Xcellis Workflow Extender (WFE) or by default on the StorNext G300 Gateway Appliance, allows the system to operate as a StorNext LAN Gateway. Once the license is installed and gateway configuration on the system is done, on Xcellis Workflow Director (WFD), Xcellis WFE, and M660 systems, the system can operate as a StorNext LAN Gateway; the servers operating as a pair of active-active StorNext SAN clients (for Xcellis WFD and M660 systems) or the system acts as a single LAN Gateway server (for Xcellis WFE and G300 systems) that provides StorNext LAN client access to StorNext File Systems (snfs).

The Gateway license allows adding LAN-based clients to the StorNext configuration without having to purchase additional "per-seat" licenses. This license allows as many LAN client connections as can be accommodated by the throughput of the Gateway system itself.

- 
- i Note:** The StorNext GUI provides a Gateway metrics report on an Xcellis WFD system or an metadata appliance monitoring the gateway for systems configured as StorNext LAN Gateways.

---

  - i Note:** The M662 may only operate as a StorNext LAN Gateway when not connected to a Lattus system.

---

  - i Note:** There is a maximum of one StorNext LAN Gateway License supported per StorNext cluster that contains one or more Xcellis WFD systems.

## Licenses Page in the StorNext GUI

The two parts of the Gateway license displayed in the StorNext GUI are:

**Gateway Licensed MDC** - This is the Gateway license as shown on the license page of the GUI. The Gateway license used on Xcellis, and M662 systems is identical to the license on Xcellis Workflow Extenders and the G300, with the same features and restrictions. The license is shown as active (green indicator) only when the Gateway functionality has been enabled on the Xcellis, and M662 systems.

**Gateway Client** - All installed Gateway LAN clients used in conjunction with the Gateway license are displayed as "Gateway client" in the **Gateway Metrics report** in the StorNext GUI of the system operating as or monitoring the Gateway.

## StorNext Connect License

StorNext Connect can be deployed and licensed on M660M440 systems. StorNext Connect runs on the secondary server node for monitoring and management of the StorNext environment.

## Additional StorNext Feature Licenses

The following licenses are optional and the licensed separately:

## Data Deduplication License

The StorNext Deduplication license is not supported on Xcellis Workflow Director, Xcellis Workflow Extender, Artico, Pro Foundation, M660, M440, M330, and G300.

---

**i Note:** Do not purchase or try to install the Deduplication license for these systems.

## Data Replication License

Replication is only supported for Xcellis Workflow Director, M660 and M330 systems.

Replication is not supported on Xcellis Workflow Extender, M440, Pro Foundation, Artico, or G300 systems. The system is not designed for Replication, so the StorNext Replication license is not supported.

A replication license is required if you want to use the StorNext Data Replication feature. Replication is licensed on a per-MDC (or MDC pair) basis. If replication is used between multiple M660 systems, each system MDC sets, each MDC set must have a replication license. If deduplication is used in conjunction with replication, a separate deduplication license is also required.

**i Note:** There are two types of replication licenses - the File System only Replication license, and the Storage Manager replication license. If Storage Manager is in use on the MDCs, the Storage Manager replication license must be purchased even if the file system being replicated is not managed.

## Object Storage/SNSM Wide Area Storage License

The Object Storage license specifies the amount of data that StorNext Storage Manager can place onto a Quantum Lattus object store platform.

The Object Storage license must be installed on supported Quantum appliances and MDC systems with dedicated 10GbE NIC connections in order to configure StorNext to use Object Storage as a storage destination. Prior to StorNext 5 Release 5.1, this license was called **SNSM Wide Area Storage**, which was first supported in StorNext 4.6. This license name was deprecated in StorNext 5 Release 5.1, and is superseded by the **Object Storage** license.

## Vaulting License

A Vault Option license provides the ability to move seldom-used media from a Quantum or supported third-party library to a manual archive vault, freeing room for media in the managed archives. This license is available only for Storage Manager environments.

If a vaulting license is purchased, any data that is stored in a vault does not apply to the Storage Manager capacity license.

## Other Licenses Supported on Appliance Systems

With the exception noted in the next section, all other optional StorNext features are supported, but must be purchased separately.

## StorNext Disk Licensing/Certification

in this document for information about Quantum Branded, Quantum Certified and Quantum Uncertified Storage requirements.



# Chapter 3: License Expiration and Limits

---

This chapter contains the following topics:

License Expiration and Limits .....	15
-------------------------------------	----

---

## License Expiration and Limits

Each StorNext feature license has a license expiration date (shown in the **Expires** column) and a limit shown in the **Limit** column of the Licenses page of the StorNext GUI. The number displayed is the licensed capacity for files being managed by the StorNext software.

### For StorNext MDCs

Following is an explanation of the limit for each feature as it pertains to licensing on StorNext MDCs:

- **File System:** The number displayed is the maximum number of SAN clients allowed.
- **LAN Clients:** The number displayed is the maximum number of LAN clients allowed.
- **Gateway:** The Gateway License does not have an associated capacity.
- **Storage Manager:** All data that is written to a Storage disk and/or non-AEL tape library, and is retrievable by any means applies to the Storage Manager capacity license. Raw file capacity is used for these calculations even if the tape drive compresses the data or if the target Storage Disk file system uses deduplication (see the Data Deduplication license). Each copy and each file version applies to the Storage Manager capacity license. Deleted data and expired versions do not automatically free up space



towards the licensed capacity. Deleted files and expired versions do not reclaim licensed space until the space is recovered using administrative functions.

The Storage Manager capacity license does not include the primary file system capacity or any data stored on tapes that reside in a vault. Disk-to-disk-relocation stores all data in the primary file system, and therefore there is no impact to the Storage Manager capacity license for using disk-to-disk-relocation as defined in the Storage Manager Policy Class.

---

**i Note:** The capacity for storage disks does not include “dead space” but does include *all* data on the file system where the storage disk has been configured, not just files copied to the file system by the Storage Manager. To maximize the licensed Storage Manager capacity, the storage disk file systems should be restricted to Storage Manager data only. If your storage disk contains user data you should consider moving that data to an alternate location prior to performing a StorNext upgrade.

If you are unsure about the location of the Storage Manager data on a file system run the command `fsdiskcfg` with no arguments. This command produces a report on the configured storage disks and the location of the managed data on each file system. The “Path” column in the command output indicates the directory containing the managed data.

- **Replication:** The Replication license, if present, enables the use of replication and does not have an associated capacity (component). You must have a license for both the source and target machines.
- **Deduplication:** Data deduplication is licensed based on the disk space used for the deduplication repository not on the raw size of the files that are deduplicated. The number displayed on the StorNext License screen is the size of the blockpool. The capacity is tracked to the nearest terabyte.
- **Vaulting:** If a vaulting license is purchased, any data that is stored in a vault does not apply to the Storage Manager capacity license.

---

**i Note:** Vaulting works with Quantum and supported third-party libraries.

- **Storage Disk:** Data stored in a Storage Disk is also “charged” against the Storage Manager license capacity.
- **Object Storage:** Data stored in a Lattus system is only “charged” against the Object Storage license capacity, and does not apply the Storage Manager capacity license.
- **Distributed Data Mover (DDM):** The number displayed is the maximum number of DDM servers that can be used to run mover processes.
- **Failover (HA):** If present, a Failover license does not have an associated capacity.
- **Maintenance:** The date displayed is when your Maintenance license expires. You cannot upgrade to a version of software whose release date is later than the Maintenance license expiration date. You can, however, upgrade if the release date is **prior** to your expiration date.

For example, if your maintenance license expires in December, 2010 and a new version of StorNext is released in November 2010, you can upgrade to this new version at any time, even if you don't get around to upgrading until some time in 2011.

## Xsan and StorNext FX Clients

For Xsan environments, the following applies:

- 
- **Note:** StorNext FX clients are not displayed in the Xsan Admin tool.
  - **Xsan Clients:** An Xsan customer can use an unlimited number of Xsan clients when connected to an StorNext MDC.
  - **StorNext FX Clients:** StorNext FX clients require a “per-seat” license.



# Chapter 4: Auto-Generated and Evaluation Licenses

---

This chapter contains the following topics:

StorNext Auto-Generated and Evaluation Licenses .....	18
Licensing and Upgrades .....	19

---

## StorNext Auto-Generated and Evaluation Licenses

A permanent license (as opposed to an evaluation or auto-generated license) allows use of the licensed StorNext feature until it expires. If the `license.dat` file does not contain permanent licenses, StorNext produces an auto-generated license with an expiration date for all StorNext products and features except Deduplication. In some cases Quantum may provide evaluation licenses for features. Evaluation licenses also have a fixed expiration date.

Beyond the evaluation period, a permanent license is required to configure or use StorNext features.

**i Note:** Do not mix auto-generated and evaluation license keys with permanent license keys. When one or more permanent license keys are entered in StorNext, ensure all auto-generated and evaluation licenses are deleted. If an auto-generated or evaluation license period is used to evaluate new features, be aware that any remaining time on those licenses is lost as soon as one or more permanent licenses is entered. One exception to note, Maintenance license keys are tied to the service contract and will always have an expiration date, even if the other license keys are permanent. After permanent licenses are entered, do not install an evaluation license.

Once a license expires (either auto-generated or evaluation) access to the licensed feature is suspended. In general, this means access to the feature is no longer available, with the following exceptions:

- When the Manager license expires, read-only access is still provided to any previously stored data
- When the Maintenance license expires, access to all licensed features remains intact but the site cannot upgrade to a version of the StorNext software released after the expiration date

---

**i Note:** When one license expires they all expire, with the exception of the Maintenance and LAN Client licenses.

---

## Licensing and Upgrades

Be aware of the following upgrade-related licensing implications and plan accordingly:

- A Maintenance license with an expiration date newer than the release date of the StorNext software is required to perform a StorNext upgrade.
- The Maintenance license provided by Quantum Technical Support must be put into place prior to the upgrade, or you will not be allowed to proceed with the upgrade. This step is done by importing the `license.dat` file on the **Configuration > Licenses** screen of the StorNext GUI.
- You will still be allowed to run StorNext if the Maintenance license expires. However, no future upgrades will be allowed.
- The Maintenance license must remain in place even after expiration to allow the StorNext software to run. Do not remove the Maintenance license.
- If you are ready to upgrade and then notice that the Storage Manager capacity has been exceeded, you must either upgrade your capacity license or free up space in the relevant media. This can be done by removing unneeded data, or possibly through defragmentation of the tape media. See the *StorNext 5 User's Guide* for details on tape media defragmentation.



# Chapter 5: Enabling and Installing Licenses

---

This chapter contains the following topics:

Obtain and Install StorNext Licenses .....	20
Installing Optional StorNext Add-on Software Features and Clients from the StorNext MDC GUI .....	26
Installing StorNext MDC Licenses from the Command Line for RPM-only Installations .....	26
Installing the StorNext FX License on Xsan MDCs .....	29
Determining License Capacity .....	30

---

## Obtain and Install StorNext Licenses

StorNext and some StorNext feature licenses are pre-installed on your system, and others must be purchased and then enabled by installing a license.dat file on the system. If your system is using a 30-day auto-generated license, you should upload a license file containing permanent licenses as soon as it is convenient, so that the **Maintenance** expiration date and the (**FlexTier™**) subscription date for the license is set correctly on the system.

**i Note:** You can determine the current license limits for many StorNext features, such as SAN clients, LAN clients, DDM, and Storage Manager licenses, on the **Configuration > Licenses** page of the StorNext GUI and on the Quantum **License Key Management** page available online at <http://www.quantum.com/licensekeys>.

## Obtain StorNext Licenses

### Prerequisites

In order to receive a license file (`license.dat`) to enable StorNext features or capacity, you will need the following:

- The **System Serial Number** or the **StorNext Software Serial Number**.

System serial numbers and StorNext software serial numbers are alphanumeric. The table below provides examples of serial numbers.

Type of Serial Number	Example(s) of Serial Number(s)
<b>System Serial Number</b>	AV1607CKH12345 CX1306CKB12345 EW1450CKD12345
<b>StorNext Software Serial Number</b>	SN12345

- The `cvfsid` string for each server node. See [How to Generate a cvfsid for Linux and Unix Configurations on the next page](#), [How to Generate a cvfsid for Windows Configurations on page 23](#), or [How to Generate a cvfsid for Xsan Configurations on page 23](#), depending on your configuration.

Example: `ECF4BCEECC0E linux 0 xcellis13`

The table below provides information regarding which configurations require one `cvfsid` string or two `cvfsid` strings.

Configurations Requiring One <code>cvfsid</code> String	Configurations Requiring Two <code>cvfsid</code> Strings
<ul style="list-style-type: none"><li>• Customer-configured MDC without an HA license</li><li>• Xcellis Workflow Extender</li><li>• G300</li><li>• StorNext FX</li></ul>	<ul style="list-style-type: none"><li>• Customer-configured MDC with an HA license</li><li>• Xcellis Workflow Director</li><li>• Artico</li><li>• Pro Solutions</li><li>• M660</li><li>• M440</li><li>• M330</li></ul>

### How to Obtain a New StorNext license.dat File

1. Visit the Quantum **License Key Management** page at <http://www.quantum.com/licensekeys>. If you cannot access the web page or need additional help, contact Quantum Support at <http://www.quantum.com/ServiceandSupport>.
2. Enter your serial number in the **Serial Number** field.

3. Click **Submit**. The license(s) associated with the serial number you entered in **Step 2** are displayed in the **License Details** section.

---

**i Note:** If you have not previously entered a `cvfsid` for the serial number, enter the strings in the **CVFSID 1** or **CVFSID 2** fields and then click **Set CVFSID**. See [How to Generate a cvfsid for Linux and Unix Configurations below](#), [How to Generate a cvfsid for Windows Configurations on the next page](#), or [How to Generate a cvfsid for Xsan Configurations on the next page](#), depending on your configuration. The **CVFSIDs** sub-section under **License Details** is updated with the `cvfsid` value (s) for the serial number.

---

**! Caution:** Ensure your `cvfsid` value(s) are correct. Once entered and submitted, they cannot be changed.

---

**i Note:** At any time after you have submitted your serial number, you may enter another serial number by clicking **Choose Another**.

4. Click **Generate License Key File** once the `cvfsid` value(s) have been entered.

---

**i Note:** There may be some cases where the Quantum **License Key Management** site will not be able to generate a license file. In this case, you are re-directed to an alternate web page to continue the process.

5. Save the `license.dat` file to a temporary location on your computer. You will upload this file on the **Licenses** page of the StorNext GUI. To install the licenses in the `license.dat` file, use the [Install a StorNext License from the GUI for non-HA Installations](#) procedure if you have a single-node StorNext MDC, or use the [Install/Update Licenses from the GUI for HA Installations](#) procedure if you have a High Availability (HA) StorNext MDC pair.

## How to Generate a `cvfsid` for Linux and Unix Configurations

Follow this procedure to generate the `cvfsid` on the command line of the MDC node:

1. Open an SSH connection to the appropriate server node and use the IP address assigned to the node on the Management or LAN Client network. If connected to the Service Port use the Service Port IP address.

Default Service Port IP address:

- Node 1 : 10.17.21.1
- Node 2 : 10.17.21.2

---

**i Note:** Node 2 used for dual-node systems only.

2. Enter **stornext** for the username.
3. Enter the password for the **stornext** user account. The default password is “password”, but may have been changed from the default values during or after initial system configuration.

4. Enter **sudo rootsh** to gain root user access.
5. Enter the password for the **stornext** user account again.
6. Enter the **cvfsid** command.

The **cvfsid** string provides the following:

```
<node MAC address> <node OS> <node name>
```

Example:

```
ECF4BCDECC0E linux 0 xcellis13
```

7. Close the SSH session for the node.
8. **(Optional)** If your system is configured for HA, repeat for the other node.

### How to Generate a **cvfsid** for Windows Configurations

Follow the procedure below to generate the **cvfsid** on the command line of the MDC node:

1. On the **Start** menu, click **Programs**, click **StorNext File System**, and then click **License Identifier**.
2. The **cvfsid** string appears in a popup.


### How to Generate a **cvfsid** for Xsan Configurations

Follow the procedure below to generate the **cvfsid** on the command line of the MDC node:

1. Navigate to `/Library/Filesystems/Xsan/bin`.
2. Execute the command **sudo cvfsid**.

## Install/Update StorNext Licenses From the GUI for Dual-node (HA) Installations


---

 **Caution:** At the end of this procedure, exiting Config Mode will restart StorNext services on both server nodes. This will cause a disruption in client operations. Quantum strongly recommends halting I/O operations for connected StorNext clients before beginning the process.

1. If you are logging into StorNext for the first time, read the end-user license agreement (EULA) carefully, and then click **Accept** (you will not see the EULA page if you have previously logged into StorNext).



Figure 1: EULA (Configuration > Licenses > Agreement) Page

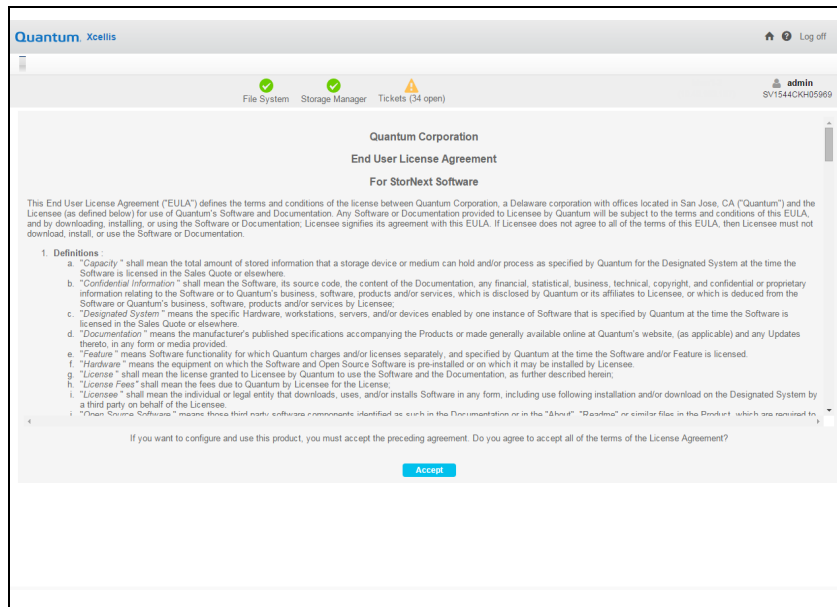

2. For new installations, the **Configuration > Licenses Entry** screen appears. Skip to step 4.  
For operational systems, place the system into config mode by navigating to **Tools > High Availability > Manage** to halt StorNext client I/O operations.
3. Click **Enter Config Mode**. This will pop up a confirmation to lock the HA cluster configuration. Click **Yes**.  
(See the **High Availability Systems** section in the appendix of the current *StorNext User's Guide* for further information about HA systems.)
4. Select **Configuration > Licenses > Import**. Use this option to install and/or update StorNext licenses.

---

**Note:** Beginning with StorNext 5 release 5.4, the option to upload the `license.dat` file using the **Configuration > Licenses > Enter/Update** option on the StorNext Licenses page has been removed.

---

**Note:** For StorNext releases prior to 5.4, licenses for HA systems must be applied to both server nodes. Enter the appropriate license string(s) you received from Quantum into the appropriate field (s) for both the Primary and Secondary server nodes, and click **Apply**.

5. Click **Choose File**, select the `license.dat` file provided for your system from the temporary location where you downloaded it, and click **Open**.

---

**Caution:** Importing a license file overwrites the existing license file and all existing licenses. Licenses not present in the imported license file are removed from StorNext.

You will know that the licenses have been applied to your system when you see the confirmation “**License file license.dat imported successfully.**” appear at the top of the page. The status indicator for the licensed features is displayed as a green check mark icon.

6. If the system is in config mode, navigate to **Tools > High Availability > Manage** and click **Exit Config Mode**. You will be prompted for confirmation that you want to unlock the cluster. Click **Yes** to exit config mode.


The procedure is complete.

## Install StorNext Licenses From the GUI for Single-node (non-HA) Installations

**i Note:** Use these steps to install the license keys on a single-node system, or one that has not been configured as HA. For HA systems, see [Obtain and Install StorNext Licenses on page 20](#).

1. If you are logging into StorNext for the first time, read the end-user license agreement (EULA) carefully, and then click **Accept** (you will not see the EULA page if you have previously logged into StorNext).

**Figure 2:** Configuration > Licenses > Agreement Screen

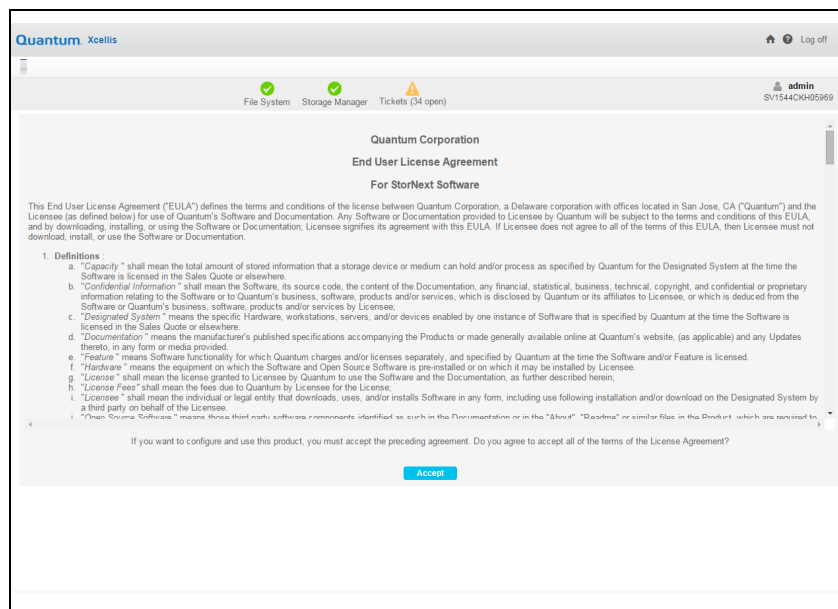

2. For new installations, the **Configuration > Licenses Entry** page appears. Skip to step 5.
3. For operational systems, halt StorNext client I/O operations. Stop the StorNext filesystem by navigating to **Tools > System Control**, and selecting **Stop** in the **File System** section of the page.
4. Select **Configuration > Licenses > Import**. Use this option to install and/or update StorNext licenses.

**i Note:** Beginning with StorNext 5 release 5.4, the option to upload the `license.dat` file using the

---

**i** **Configuration > Licenses > Enter/Update** option on the StorNext Licenses page has been removed.

5. Click **Choose File**, select the **license.dat** file provided for your system from the temporary location where you downloaded it, and click **Open**.

---

**!** **Caution:** Importing a license file overwrites the existing license file and all existing licenses. Licenses not present in the imported license file are removed from StorNext.

You will know that the licenses have been applied to your system when you see the confirmation “**License file license.dat imported successfully.**” appear at the top of the page. The status indicator for the licensed features is displayed as a green check mark icon.

6. After you install your licenses, restart the StorNext filesystem by navigating to **Tools > System Control**, and selecting **Start** in the **File System** section of the page. StorNext may not recognize some feature licenses until you restart services.

The procedure is complete.

## Install a StorNext License on a Windows MDC

For help installing Windows MDC licenses, refer to the StorNext help, which can be found at: **Windows Start menu > All Programs > StorNext File System > StorNext Help**.

---

# Installing Optional StorNext Add-on Software Features and Clients from the StorNext MDC GUI

Client software installers and Optional Add-on Software features can be downloaded from the StorNext GUI. Downloads are available on the **Tools > Client Download** screen.

---

## Installing StorNext MDC Licenses from the Command Line for RPM-only Installations

For File System installations, or in instances where there is no available StorNext GUI, StorNext license keys for the system can be installed manually. This section describes how to install licenses from the

command line in those situations.

---

**i Note:** Licenses must be installed “by hand” on RPM-only installations because there is no GUI to lead you through the steps.

Before installing a **license.dat** file ensure that exactly one key is present in the file for each licensed feature, and that a Maintenance license key is present. The new license file must be complete before proceeding to the next steps. If you are updating a license file, ensure that old keys are removed so that they do not interfere with the updated license keys.

If you are installing a license file for HA MDCs, make sure that the keys for both MDCs are present in the **license.dat** file before proceeding.

Depending on the configuration of the system you are updating, you will use a different set of installation steps to install the license keys for StorNext and components for RPM installations from the command line. Here are the possible installation scenarios:

- [Installing StorNext License Keys on a Single-Node MDC below](#)
- [Installing StorNext License Keys on HA Systems \(with a Shared File System\) below](#)
- [Installing StorNext License Keys on a Failover System \(without a Shared File System\) on the next page](#)

## Installing StorNext License Keys on a Single-Node MDC

1. From the command line of the MDC, type the following command:

```
service cvfs stop
```

---

**! Caution:** The command **service cvfs stop** will stop all StorNext services on the MDC.

2. Navigate to the temporary location where you stored the new **license.dat** file.
3. Copy the **license.dat** file to the **/usr/cvfs/config/** directory on the MDC.
4. Type the following command on the MDC:

```
service cvfs start
```

## Installing StorNext License Keys on HA Systems (with a Shared File System)

---

**i Note:** Stop the StorNext service on the **secondary** node of the HA system **before** stopping the StorNext service on the **primary** node.


1. From the command line of the **secondary** node of an HA MDC (both File System and Storage Manager), type:

```
service cvfs stop
```

 **Caution:** The command `service cvfs stop` will stop all StorNext services on the MDC.


2. From the command line of the **primary** node of an HA MDC, type:

```
service cvfs stop
```

 **Caution:** The command `service cvfs stop` will stop all StorNext services on the MDC.

3. Navigate to the temporary location where you stored the new **license.dat** file.

4. Copy the **license.dat** file to the `/usr/cvfs/config/` directory on the **primary** node of the MDC.


 **Note:** Start the StorNext service on the **primary** node of the HA system **before** starting the StorNext service on the **secondary** node.

5. From the command line of the **primary** node of an HA MDC, type:


```
service cvfs start
```

6. From the command line of the **secondary** node of an HA MDC, type:

```
service cvfs start
```

 **Note:** Wait up to 2 minutes for the **license.dat** file to propagate to the secondary node of the MDC. After 2 minutes, display the file and verify the license has been propagated on the secondary node.

## Installing StorNext License Keys on a Failover System (without a Shared File System)

 **Note:** Stop the StorNext service on the **secondary** node of the HA system **before** stopping the StorNext service on the **primary** node.

1. From the command line of the **secondary** node of an HA MDC, type:

```
service cvfs stop
```

 **Caution:** The command `service cvfs stop` will stop all StorNext services on the MDC.

2. From the command line of the **primary** node of an HA MDC, type:

```
service cvfs stop
```

 **Caution:** The command `service cvfs stop` will stop all StorNext services on the MDC.

3. Navigate to the temporary location where you stored the new **license.dat** file.

4. Copy the **license.dat** file to the **/usr/cvfs/config/** directory on the **primary** node of the MDC.
5. Copy the **license.dat** file to the **/usr/cvfs/config/** directory on the **secondary** node of the MDC.

**i Note:** Start the StorNext service on the **primary** node of the HA system **before** starting the StorNext service on the **secondary** node.

6. From the command line of the **primary** node of an HA MDC, type:

```
service cvfs start
```

7. From the command line of the **secondary** node of an HA MDC, type:

```
service cvfs start
```

---

## Installing the StorNext FX License on Xsan MDCs

The StorNext FX license is installed on an Xsan MDC (metadata controller). To install the StorNext FX license on Xsan 3.0 and later MDCs:

**i Note:** If you are upgrading from a previous version of StorNext FX, after the upgrade your StorNext FX license remains valid. There is no need to request a new license unless your system ID changes.

1. Log on to the Apple Xsan MDC.
2. Obtain the CVFS ID from the Xsan MDC.

**i Note:** If you have more than one Xsan MDC, obtain CVFS ID outputs from each Xsan MDC.

From the command line, type:

```
sudo cvfsid
```

3. When you are prompted, type your user password.

Output similar to the following displays:

```
B0D0B10D33 MAC 0 susie
```

4. To obtain a permanent license, complete License Request form at <http://www.quantum.com/licensekeys>.

**i Note:** You will need to provide the StorNext FX serial number and the **cvfsid** outputs obtained from the Xsan MDCs.

5. From the command line change to the correct directory. Type:

```
sudo cvadmin
```

6. Enter your user password.
7. Stop the volume(s) on the Xsan MDC. Type:

```
stop <volume>
```

**⚠ Caution:** The command `stop <volume>` will stop all StorNext services on the MDC.

Where `<volume>` is the name of the volume on the Xsan MDC.

**i Note:** Repeat for all volumes you would like to mount on StorNext FX clients.

8. Apply the license on the Xsan MDC. To apply the license, copy the `license.dat` file into the `/Library/Preferences/Xsan/` directory on the Xsan MDC. The `license.dat` file can be found on the Metadata Controller at `/usr/cvfs/config/license.dat` for UNIX systems, and `C:\Program Files\StorNext\config\license.dat` for Windows systems.

```
cvadmin -e stop <volume>
```

Where `<volume>` is the name of the volume on the Xsan MDC.

**i Note:** Repeat for all volumes you would like to mount on StorNext FX clients.

9. To display the list of volumes that are in use in this cluster, type:

```
select
```

**i Note:** The command `select` is executed at the `cvadmin` prompt.

---

## Determining License Capacity

The numbers displayed on the StorNext License screen represent *licensed capacity*, not *utilized capacity*. You can determine the actual capacity for the File System, LAN Clients, Deduplication, Replication, Failover and Maintenance licenses by running the following command from the command line:

```
# snlicense -v <license type>
```

When running this command, do not use capital letters or include the angled brackets around the license type.

To obtain capacities for the Storage Manager, Vaulting, Storage Disk, Checksum, DDM and Maintenance features, run the following command from the command line:

```
# sntsm -l -v <feature name>
```

Note that character after the dash in the preceding command is the letter L, not the numeral 1. As before, when running this command do not use capital letters or include the angled brackets around the feature name.

For more information, see the man pages for both of these commands.





# Chapter 6: StorNext Disk Licensing and Disk Certification

---

This chapter contains the following topics:

StorNext Disk Licensing .....	32
StorNext Disk Certification Catalog (DCC) .....	35

---

## StorNext Disk Licensing

Disk licensing has been added to StorNext in order to help quantify customers' configurations. There are three levels of disk certification:

- **Quantum Branded**
- **Quantum Certified**
- **Quantum Uncertified** (all other disks)

The vendor and model of each disk are checked against the disk catalog supplied by Quantum to determine to which category each disk belongs.

---

**i Note:** Disk licenses should be updated after completion of StorNext installation or upgrade.

Licenses are available for free from Quantum that specify the amount of **Quantum Certified** and **Quantum Uncertified** disks that can be configured. For **Quantum Branded** disks, the amount of disk capacity is not specified by a license - it is unlimited.

There is also a new command line tool called **disk\_license** (`disk_license.exe` on Windows) that can be used to create Disk License Status file, interrogate disk capacity, display license status, import catalogs and perform other disk licensing tasks.

To obtain disk licenses:

1. Generate a **Disk License Status** file using one of the following methods:
  - a. Using the StorNext GUI. See [Generating a Disk License Status File Using the StorNext GUI below](#).
  - b. Using the `disk_license(.exe)` command line tool. See [Generating Disk License Reports Using disk\\_license\(.exe\) below](#).
2. Submit the **Disk License Status** file to Quantum. See [Uploading a Disk License Status File to the Disk Licensing Web Form on the next page](#).
3. Install **Disk Licenses** received from Quantum, or install a new **Disk Catalog** (if there is one). See [StorNext Disk Certification Catalog \(DCC\) on page 35](#).

## Generating a Disk License Status File Using the StorNext GUI

---

**i Note:** The Configuration GUI is not available on Windows MDCs. **Disk License Reports** on Windows can only be generated manually with the `disk_license(.exe)` tool. For an HA pair, the Configuration GUI will generate a file which contains the reports for both MDCs in the HA pair.

The **Disk License Status** file contains the licensing status of all the disks within your StorNext environment.

1. Log into the StorNext GUI.
2. On the **Configuration** menu, click **Licenses**.
3. On the **Configuration > Licenses** page, click **Download DLS....**

---

**i Note:** The **Disk License Status** file will need to be accessible from a computer with Internet/Web access as an attachment to a Quantum web page. Follow the instructions for your particular browser and operating system.

1. Click **Done** to return to the **Licenses** page. Once the file is saved, it can be submitted to Quantum. See [Uploading a Disk License Status File to the Disk Licensing Web Form on the next page](#).

## Generating Disk License Reports Using `disk_license(.exe)`

If you need to use the CLI, then this method can be used. However, the preferred method is to generate the **Disk License Status** file using the StorNext GUI. See [Generating a Disk License Status File Using the StorNext GUI above](#).

---

**i Note:** If you use the StorNext GUI to generate a **Disk License Status** file, skip this section.

If you are using the `disk_license(.exe)` tool to obtain a **Disk License Status** file for a High Availability (HA) pair, this procedure will need to be run on both MDC computers.

1. Execute the command below (`disk_license.exe` on Windows).

---

**i Note:** The **Disk License Status** file (`quantum_disk_license_report.xml`) will need to be accessible from a computer with Internet/Web access as an attachment to a web page.

```
disk_license_gather quantum_disk_license_report.xml
```

2. Once the **Disk License Status** file (`quantum_disk_license_report.xml`) is created, it can be submitted to Quantum to request new disk licenses as described in [Uploading a Disk License Status File to the Disk Licensing Web Form below](#).

---

**i Note:** This command `disk_license_gather` will be removed in a future release of StorNext, when the functionality is included in the command `disk_license`.

## Uploading a Disk License Status File to the Disk Licensing Web Form

StorNext 5 release 5.2 and later use a free per-TB license to track disks managed by StorNext. This allows Quantum to provide better support. A StorNext MDC that needs a license will generate a warning message.

Follow the procedure below to upload the **Disk License Status** file on-line, and Quantum will generate the appropriate disk licenses for the MDC.

---

**i Note:** The MDC will continue to operate while licenses are generated.

1. In a new browser window navigate to <http://www.quantum.com/StorNextDiskLicense>.
2. In the **Customer Contact Information** section, complete the form by providing your **First Name**, **Last Name**, **Company Name**, **Telephone**, and **Email**.
3. In the **Disk Usage File** section, click **Choose File** and then navigate to the destination folder on your local system where you saved the **Disk License Status** file from section [Generating a Disk License Status File Using the StorNext GUI on the previous page](#) or [Generating Disk License Reports Using `disk\_license\(.exe\)` on the previous page](#). For example, `/tmp/quantum_disk_license_report.xml`.
4. Click **Submit** to upload the **Disk License Status** file.
5. **(Optional)** Click **Reset** to discard your changes.

---

**i Note:** New disk licenses will be emailed to you automatically. When you receive them, follow the normal instructions for installing new licenses into `license.dat`. See [Enabling and Installing Licenses on page 20](#).

**i Note:** You may also receive a new `quantum_disk_catalog.dat`. For instructions on installing a new Quantum **Disk Certification Catalog**, see [StorNext Disk Certification Catalog \(DCC\) below](#).

---

## StorNext Disk Certification Catalog (DCC)

A StorNext **Disk Certification Catalog**, also known as the disk array catalog, is a file named `quantum_disk_catalog.dat` located in the StorNext file system's configuration directory. It defines the Quantum certification level for various makes and models of disks. Disks not listed in the file are considered uncertified. This catalog resides on the MDC and is not required on the StorNext Client hosts.

You may receive an updated catalog from Quantum when requesting disk licenses, via the StorNext GUI or by direct download from Quantum.

The catalog can be installed or updated by either of the following methods:

- Using the StorNext GUI. See [Uploading the Disk Certification Catalog using the StorNext GUI below](#).
- Using the `disk_license(.exe)` command. See [Installing the Disk Certification Catalog Using the `disk\_license\(.exe\)` Command on the next page](#).

## Uploading the Disk Certification Catalog using the StorNext GUI

**i Note:** The StorNext GUI is not available on Windows systems. You must use the `disk_license.exe` command to install a **Disk Certification Catalog** on Windows computers.

**i Note:** If you have a High Availability (HA) pair, the GUI will install the catalog on both nodes.

The latest **Disk Certification Catalog** can be downloaded on-line at:  
[http://downloads.quantum.com/StorNext5/quantum\\_disk\\_catalog.dat](http://downloads.quantum.com/StorNext5/quantum_disk_catalog.dat)

1. Log into the StorNext GUI.
2. On the **Configuration** menu, click **Licenses**. Download the latest **Disk Certification Catalog** file from the link above.  
There is also a link located in the help text at the bottom of the **Licenses** page to the latest **Disk Certification Catalog**.
3. On the **Configuration > Licenses** page, click **Upload DCC...**
4. Click **Browse**, and then locate the directory containing the catalog.
5. Select the `quantum_disk_catalog.dat` file. This will open the dialog to save the file.

After the catalog has been imported, you will see a status message at the top of the license page. For example:

Information: Disk Certification Catalog version 1 generated on "mm/dd/yyyy hh:mm:ss GMT" was uploaded successfully.

## Installing the Disk Certification Catalog Using the `disk_license(.exe)` Command

**i Note:** If you have a High Availability (HA) pair, you must install the catalog on both MDCs.

Execute the command `disk_license` (`disk_license.exe` on Windows) using the `-i <catalog file>` option. For example:

```
disk_license -i /tmp/quantum_disk_catalog.dat
```